


PLEXTALK®

PTX1 Quick Reference

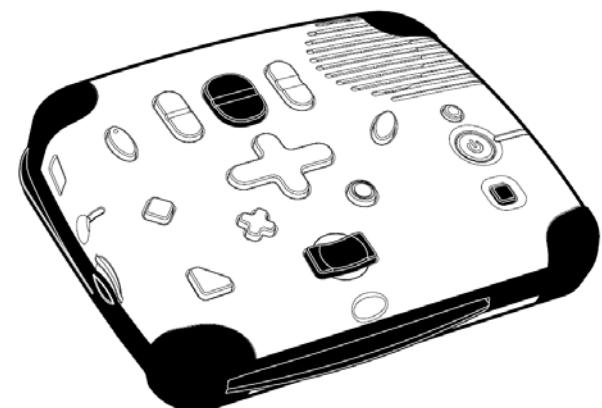

SHINANO KENSHI CO.,LTD.  PLEXTOR

6-15-26, Chuo, Ueda-Shi

Nagano-ken, 386-0012 JAPAN

Fax +81-268-22-5476

www.plectalk.com

E-mail:sales@plextalk.com

 PLEXTOR

127-3956900

2008/12

PLEX TALK®

Quick Reference

This document describes the main functions needed to operate the player.

1. You should find the following items in the package:

A PlexTalk
An AC adaptor with power cable
Plastic bag containing documentation;
This Quick Reference
Safety Instruction
User Guide CD

2. Connecting PlexTalk to mains outlet

Insert the small round plug on the end of AC adaptor into back of the PlexTalk 1). Ensure the supplied power cable is connected to the AC adaptor firmly before plugging 3 - pin mains plug into a mains outlet.

3. Power On/Off, setting sleep timer

Press and hold power On/Off button 19).
Press the sleep timer key 13) to select the timer setting.

4. Insert the playback media


Disc; Insert the disc into the slot 3) at front of the unit until automatically taken into the player.
SD card; Insert the SD card into the card slot 6) on the left side of the unit.
USB memory; Insert the USB memory into the USB slot 4) on the left side of the unit.

5. Playback and stop

To start playback, press the play/stop 17), to stop the playing, press the play/stop key 17) again.

6. Adjusting the volume, speed and tone

Volume; Press the upper side of the volume key 9) to increase, press the down side to decrease.
Speed; Press the upper side of the speed key 10) to increase, press the down side to decrease.
Tone; Press the upper side of the tone key 8) to increase, press the down side to decrease.

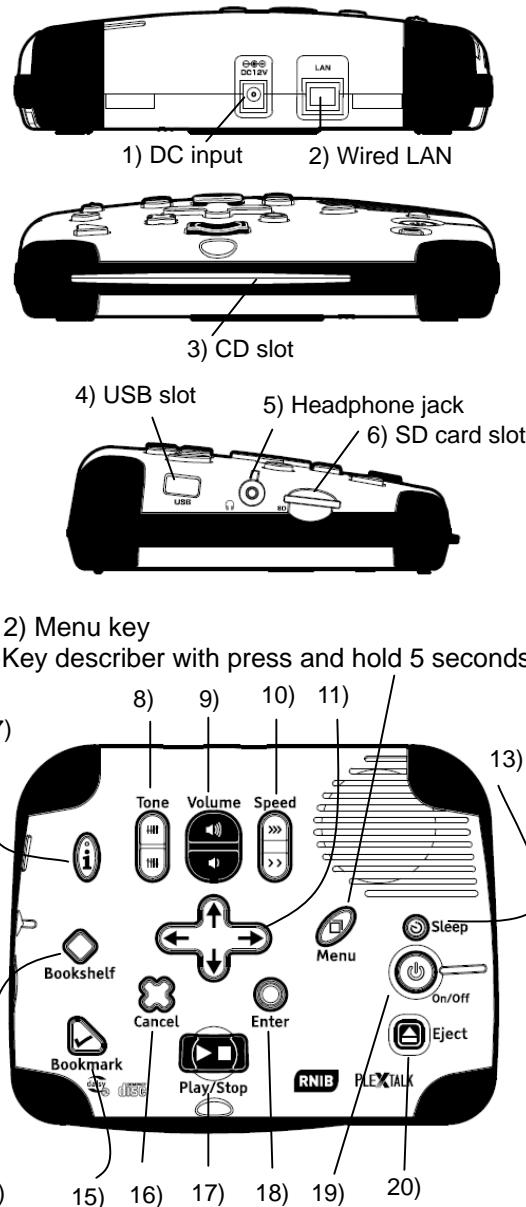

7. Remove the playback media

Disc; Press the eject key 20) to remove, disc will be automatically ejected.
SD card; Push the SD card inwards then the card should pop out for removal.
USB memory; Remove the USB memory from the unit.

8. Rewinding /Fast forward

Press and hold the left side of the cross shape key 11) to rewind.
Press and hold the right side of the cross shape key 11) to forward.

9. Selecting media and title

Press the bookshelf key 14) to select the playback media, then press the left or right side of the cross shape key 11) to select the title.

10. Moving by Level (bookmark)

Press the upper side or down side of the cross shape key 11) to select the navigation level (bookmark), then press the left or right side of the cross shape key 11) to move within the required level (bookmark).

11. Setting the bookmarks

Press the bookmark key 15) at the desired position, then press the enter key 18) to confirm.

12. Select the menu

Press the menu key 12), then press the left or right side of the cross shape key 11) to select the menu and press enter key 18). Or cancel by cancel key 16).

13. Get book information

Press the information key 7) to get the book information.