

# GV6025/6650

## USER'S GUIDE



SSC-GV6025/6650

# GV6025/6650

## User's Guide



**Go-Video/Sensory Science**  
7835 East McClain Drive  
Scottsdale, Arizona USA 85260  
[www.sensoryscience.com](http://www.sensoryscience.com)  
[www.govideo.com](http://www.govideo.com)

## WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not open the cabinet; dangerous high voltage is present. Refer servicing to qualified personnel only. This video cassette recorder should only be used with 120V, 60Hz (standard U.S. household) current.

Federal law provides severe civil and criminal penalties for the unauthorized reproduction, distribution, or exhibition of copyrighted motion pictures and video tapes. (Title 17, United States Code, Sections 501 and 506).

## USER/INSTALLER CAUTION:

Your authority to operate this FCC certified equipment could be voided if you make changes or modifications not expressly approved by the manufacturer, who is responsible for compliance with Part 15 FCC rules.

## NOTE TO CATV SYSTEM INSTALLER:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electronic Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## CAUTION:

To prevent fire, shock hazard, or annoying interference, use only the recommended accessories.

To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

To reduce the risk of electric shock, do not remove the unit cover or back. There are no serviceable parts inside. Refer servicing to qualified personnel only.

## CUIDADO:

Para prevenir incendio, riesgo de choque, o interferencia enérgica, use solamente los accesorios recomendados.

Para prevenir electrochoque, no use este enchufe (polarizado) con un cordón de extensión, toma de corriente, o cualquier otra toma a menos que los dientes puedan ser completamente insertados para prevenir exposición de los dientes.


Para reducir el riesgo de descarga eléctrica, no remueva la cubierta o la parte posterior del VCR. Dentro del VCR no hay partes que requieran servicio. Diríjase solamente a personal calificado cuando requiera servicio.

## ATTENTION:

Pour éviter les incendis, risque de chocs, ou interférences fâcheuses, employer seulement les accessoires recommandés.

Pour éviter les chocs électriques, ne pas employer cette prise (polarisée) avec une rallonge, une prise de courant ou une autre sortie de courant à moins que les lames peuvent être insérées à fond pour l'exposition des lames.

Pour réduire les risques de chocs électriques, ne pas retirer le couvercle ou l'arrière du module. Il n'y a pas de pièce utilisable à l'intérieur. Ne faire effectuer l'entretien que par un personnel qualifié.

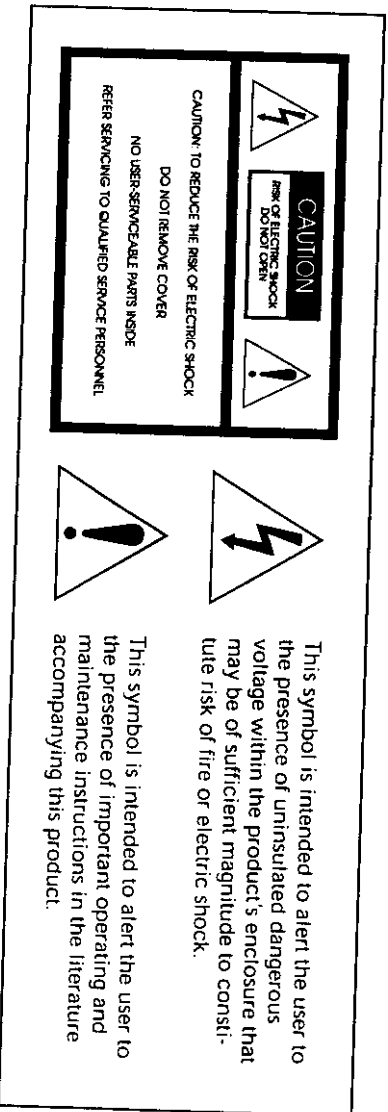

# Table of Contents

---

## Safety v

Important Safety Instructions .....	v
-------------------------------------	---

## 1 - Basic Connections 1

First Things First .....	1
Connect Antenna/Basic Cable .....	2

## 2 - Initial Settings 5

Auto Setup .....	5
Set Language Manually .....	6
Set Clock Manually .....	7
Set Daylight Savings .....	9
Set Time Zone .....	10
Set Auto Clock Set Channel .....	11

## 3 - The Dual-Deck System 13

Remote Control Overview .....	13
Front Panel - Door Closed .....	15
Front Panel - Door Open .....	16
Front Panel Display .....	17
Front Panel Display Settings .....	18
Child Lock .....	19
Remote Eject .....	20
Main Menu Tree .....	21
Setup Menu Tree .....	22
Menu Navigation - Remote Control .....	23
Menu Navigation - Front Panel .....	24
Restore Factory Settings .....	25
On-Screen Display Overview .....	26
On-Screen Display Elements .....	27
On-Screen Display Settings .....	28

*Go-Video is a registered trademark of Sensory Science Corporation. Copy Tape, Video Sequencing, and Dual-Deck VCR are trademarks of Sensory Science Corporation. All other brand and product names are trademarks or registered trademarks of their respective companies.*

<b>4 - Tuner &amp; Channel List</b>	<b>29</b>
Tuner Band .....	29
Auto Channel Search .....	29
Add Channel .....	30
Remove Channel .....	31
Show Weak Channels .....	32
Tuner Audio (GV6650 only) .....	33
Tuner Audio (GV6650 only) .....	34

<b>5 - Copy Features</b>	<b>37</b>
Basic Copying .....	37
EZ Copy .....	37
Copy Mode .....	38
Speed Matching .....	39
Copy Audio Insert .....	40
Copy Audio Insert .....	41

<b>6 - Playback Features</b>	<b>43</b>
Basic Playback .....	43
Special Playback Features .....	43
Tracking .....	44
Sequential/Loop Playback .....	44
Auto Play/Rewind .....	45
Playback Audio Settings (GV6650 only) .....	46
Playback Audio Settings (GV6650 only) .....	47
Playback Audio Settings (GV6650 only) .....	48

<b>7 - Recording Features</b>	<b>49</b>
Basic Recording .....	49
Recording Options .....	49
One-Touch Recording (OTR) .....	50
Record Speed .....	51
Record Source .....	52
Sequential/Loop Recording .....	53
Date/Time Stamp .....	54
Date/Time Stamp .....	55

---

## **8 - Timer Recording 57**

How to Set a Timer Recording .....	57
Timer Recording Errors .....	62

## **9 - Editing Features 63**

8-Scene Editor .....	63
Sync Editing .....	66
How to Cut Commercials with Skip Edit .....	68
On-Screen Titler .....	69
Recording Titler Message .....	70

## **10 - Search/Index Features 71**

Overview .....	71
Placing Index Marks .....	72
Index Scan .....	73
Index Search .....	74
Blank Search .....	75
Direct Time Search .....	76
Return to 0:00:00 .....	77

## **11 - Advanced Connections 79**

Cable Box Hookup .....	79
Stereo Audio Connections (GV6650 only) .....	81
TV Monitor Connections .....	82
Connecting Other Video Equipment .....	83

## **Appendix A 85**

Multi-Brand Remote Setup .....	85
Multi-Brand Remote Operation .....	86

---

**Appendix B - Help 87**

Frequently Asked Questions (FAQs) ..... 87

Technical Specifications ..... 92


Dual-Deck VCR Limited Warranty ..... 93

**Index 95**

# Safety

## Important Safety Instructions

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the unit is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the unit and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating and maintenance instructions should be followed.
5. **CLEANING** - Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for dusting cabinet.
6. **ATTACHMENTS** - Do not use attachments not recommended by the video product manufacturer, as they may be hazardous.
7. **WATER & MOISTURE** - Do not use this video unit near water—for example, near a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool or the like.
8. **ACCESSORIES** - Do not place this video unit on an unstable cart, stand, tripod, bracket or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
- 8a. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. **VENTILATION** - Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place your VCR on a bed, sofa, rug or other similar surface, on or near a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

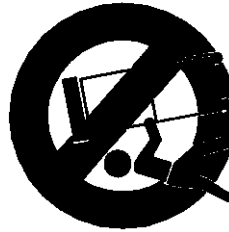

### PORTABLE CART WARNING

(Symbol provided by RETAC)



**10. POWER SOURCES** - This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.


**11. GROUNDING OR POLARIZATION** - This video unit may be equipped with either a polarized 2-wire AC line plug (a plug having one blade wider than the other) or a 3-wire grounding plug having a third (grounding) pin.

The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**12. POWER-CORD PROTECTION** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.

**13. OUTDOOR ANTENNA GROUNDING** - If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSIN/FPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure below.

**14. LIGHTNING** - For added protection of this video unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power line surges.

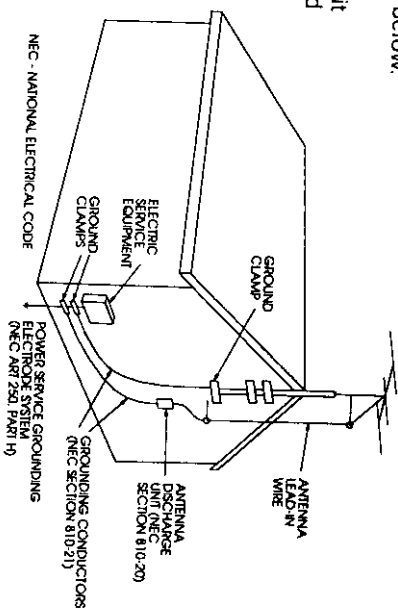

- 
- 15. POWER LINES** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 16. OVERLOADING** - Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 17. OBJECTS AND LIQUIDS** - Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquids of any kind onto the unit. Should spillage occur, unplug unit and have it checked by a technician before use.
- 18. SERVICING** - Do not attempt to service this video unit yourself as opening or removing covers may expose you to a dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 19. DAMAGE REQUIRING SERVICE** - Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a. When the power supply cord or plug is damaged.
  - b. If any liquid has been spilled onto or objects have fallen into the video unit.
  - c. If the video unit has been exposed to rain or water.
  - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
  - e. If the video unit has been dropped or the cabinet has been damaged.
  - f. When the video unit exhibits a distinct change in performance—this indicates a need for service.

---

**20. REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or those having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

**21. SAFETY CHECK** - Upon completion of any service or repairs to this video unit ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

**22. HEAT** - This video unit should be situated away from heat sources such as radiators, stoves, or other products (including amplifiers) that produce heat.


# 1 - Basic Connections

## First Things First

### 1 Unpack your Dual-Deck VCR


As you unpack, please check that the following items are included in your Dual-Deck VCR packing case:

- Dual-Deck VCR
- User's Guide
- Warranty/Registration Card
- Read Me First/Quick Reference Guide
- Remote Control
- 2 "AA" Batteries
- 1 RF (Radio Frequency) Antenna Cable

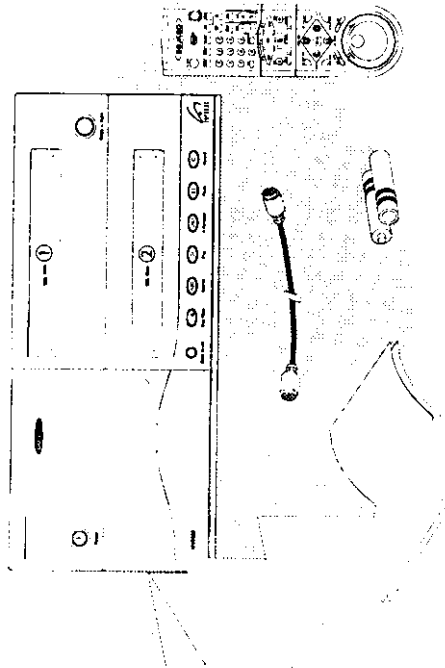

### 2 Insert Remote Control Batteries

Remove the battery cover in the direction of the arrow as shown. Insert 2 AAA batteries, paying attention to the correct polarities (+/-). Replace the cover.

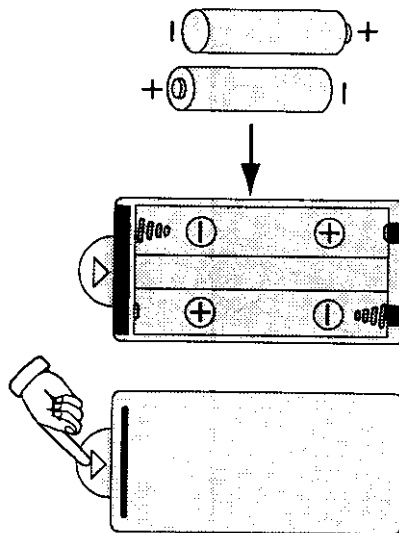

# Connect Antenna/Basic Cable

Follow these steps only if you are using an indoor/outdoor antenna or basic cable. If you have a:

- cable box
  - stereo receiver
  - TV monitor
  - third VCR
  - laserdisc player
  - DVD player
  - camcorder
  - satellite receiver
  - video game
- ...or other advanced connection, please refer to Chapter 11.

## 1 Connect Antenna to VCR

Connect the RF antenna cable from your indoor/outdoor antenna or cable wall outlet to the IN FROM ANT. Jack on the back panel of the VCR.

## 2 Connect VCR to TV


Connect the supplied RF cable from the OUT TO TV Jack on the back panel of the VCR to your television's ANTENNA IN Jack.

## 3 Set VCR Output Channel

Set the channel switch on the back panel of the VCR to 3 or 4, whichever is not an active channel in your area.

## 4 Plug In VCR

Connect the VCR power cord to a standard 120V/60Hz wall outlet.

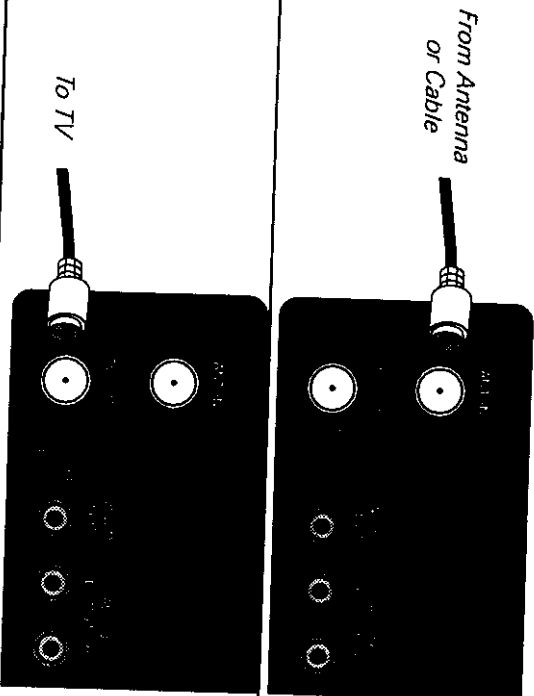

---

## 5 Turn On VCR

Press the power button on the remote control or on the VCR's front panel.



---

## 6 Turn On TV

Press the power button on the TV.

ON

---

## 7 Tune TV to Channel 3 or 4


Be sure to use the same channel you used in Step 3.

CH3/4

---

## 8 Basic Connection is Complete!

The Set Language menu will appear on your television screen. Please proceed with Auto Setup in Chapter 2.

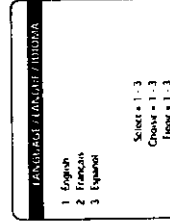



## 2 - Initial Settings

# Auto Setup

*The first time you hook up and turn on your Dual-Deck VCR, it will run Auto Setup. First, you will be prompted to select the on-screen language, then the Dual-Deck VCR will automatically search for channels and set the VCR's internal clock.*

### 1 Set Language

Press 1, 2, or 3 to select English, French, or Spanish. To change the language at any other time, see page 6.

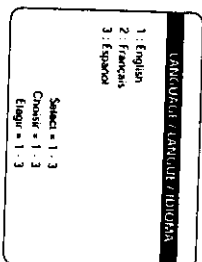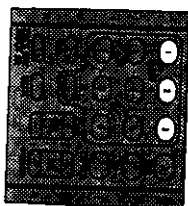


### 2 Run Auto Setup

As soon as you set the language, the VCR will automatically perform the following steps:

- **Auto Channel Search** — Automatically detects whether you have an antenna or cable, then searches for all channels in your area. If Auto Setup is unable to search for channels in your area, you may do so at any time; see page 30.
- **Auto Time Set** — Sets the VCR's internal clock. If Auto Setup is unable to find a clock set channel in your area, you can set the clock manually; see page 7.

This procedure may take a few minutes to complete, at which point it will tune the VCR to the lowest channel found.

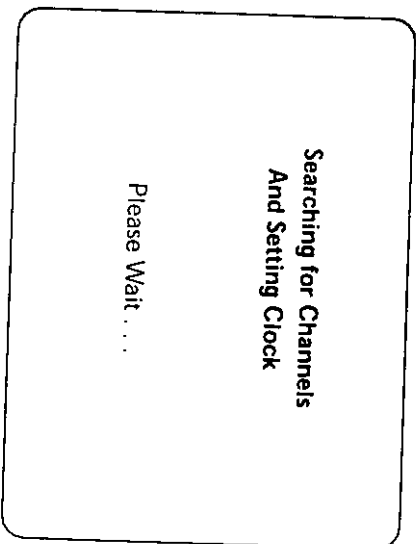

### 3 Auto Setup is Complete!



For an overview of the Dual-Deck System, please refer to Chapter 3.

# Set Language Manually

*If you want to change the on-screen language at any time, follow these steps.*



## 1 Open "Main Menu"

Press the menu button on the remote control.

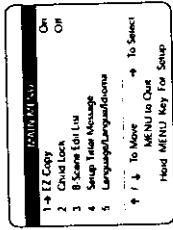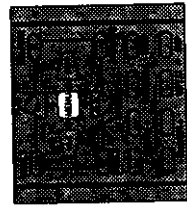


## 2 Select On-Screen Language


Press 5 repeatedly to cycle among English, French, and Spanish. As you do this, the entire Main Menu will be translated into English, French or Spanish.

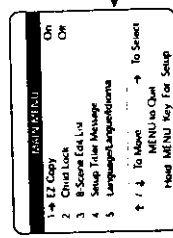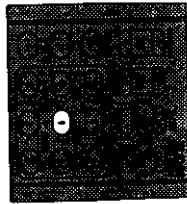

English

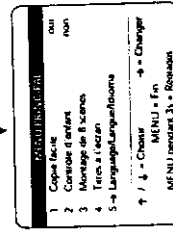

French

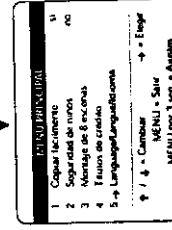

Spanish





# Set Clock Manually

*If Auto Clock Set is not available in your area, follow these steps to set the clock manually. If Auto Clock Set has set the time incorrectly, try adjusting Daylight Savings Time (page 9) and Time Zone (page 10) before setting the clock manually.*


## 1 Open "Set Clock Menu"

Press Set Clock on the remote control.

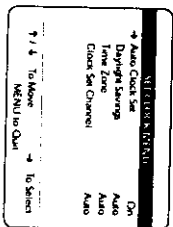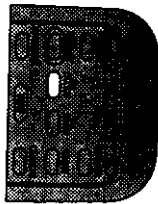



## 2 Turn Off "Auto Clock Set"

Press the right arrow key once. The menu choices will change when you turn this feature off.

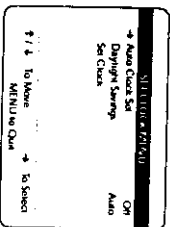



## 3 Move to "Set Clock"

Press the down arrow key until "Set Clock" is selected.

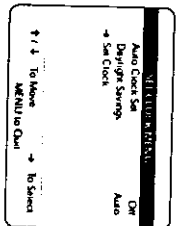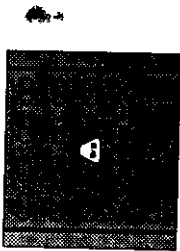

## 4 Select "Set Clock"

Press the right arrow key to select "Set Clock".


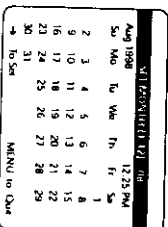
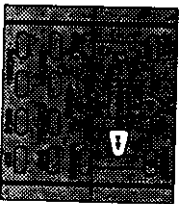


**Y2K Compliant**  
 Go-Video Inc. hereby certifies  
 that this Dual-Deck VCR is  
 fully compliant with the  
 calendar year 2000. Note that  
 the year 2000 is a leap year.

## 4 Set the Time


Use the number keys or the up/down arrow keys to adjust the following items. To skip an item, press the right arrow key:

- **Set Month** — Enter the month as 2-digit number; i.e. August = "08"
- **Set Year** — Enter the year as 2-digit number; i.e. 1999 = "99"
- **Set Day** — Enter the day as 2-digit number; i.e. the ninth = "09"
- **Set Hour** — Enter the hour as 2-digit number; i.e. 12:xx = "12"
- **Set Minute** — Enter the minute as 2-digit number; i.e. xx:25 = "25"
- **Set AM/PM** — Press "1" for AM, "2" for PM

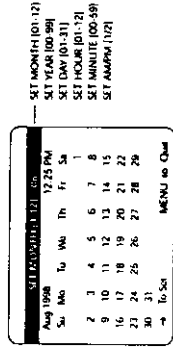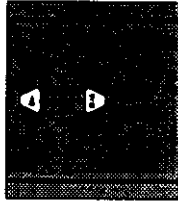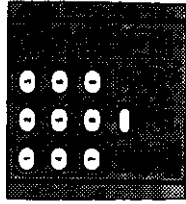

## 5 Save Settings

The Clock is set! Press the Menu button at any time to save and quit.


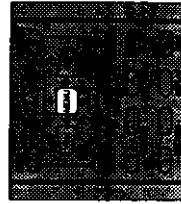


# Set Daylight Savings

From the Set Clock Menu, you may also choose to manually set Daylight Savings, Time Zone, or Auto Clock Set channel.



## 1 Open "Set Clock Menu"

Press Set Clock on the remote control.

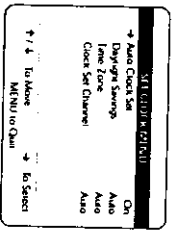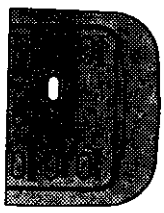

## 2 Move to "Daylight Savings"



Press the down arrow key until "Daylight Savings" is selected.

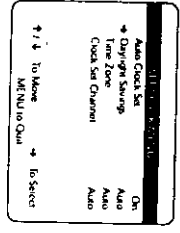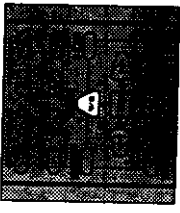

## 3 Set "Daylight Savings"

Press the right arrow key to select among:

- **Auto** — Uses local channel info to determine Daylight Savings Time status.
- **Off** — Turns off Daylight Savings permanently, i.e. the time never changes.
- **On** — Enables Daylight Savings at 2:00 AM on the first Sunday of April and disables it at 2:00 AM on the last Sunday in October.

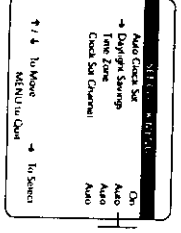
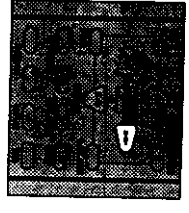


# Set Time Zone

You can set your Time Zone manually to one of the six preset choices. Use this feature if Auto Clock Set has set the time incorrectly by detecting a nearby time zone. Note: If you are an Arizona resident, choose Mountain Standard Time and turn Daylight Savings Time off.


## 1 Open "Set Clock Menu"

Press Set Clock on the remote control.

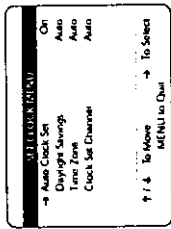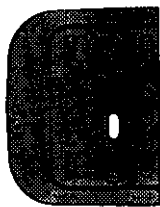

## 2 Move to "Time Zone"

Press the down arrow key until "Time Zone" is selected.

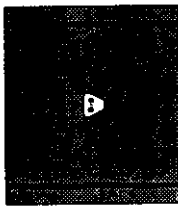

## 3 Set "Time Zone"

Press the right arrow key to select among:

- **Auto** — The Time Zone is selected automatically.
- **Eastern** — Eastern Standard Time
- **Central** — Central Standard Time
- **Mountain** — Mountain Standard Time
- **Pacific** — Pacific Standard Time
- **Alaska** — Alaska Standard Time
- **Hawaii** — Hawaii Standard Time





# Set Auto Clock Set Channel

*If you know a station in your local area that broadcasts time information, you can set it manually. For example, your local PBS station usually will transmit the time and date. Use this feature only if Auto Clock Set has set the time incorrectly.*



## 1 Open "Set Clock Menu"

Press Set Clock on the remote control.

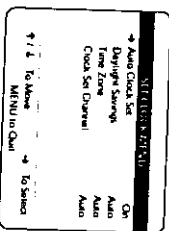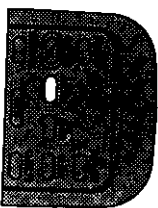

## 2 Move to "Clock Set Channel"



Press the down arrow key until "Clock Set Channel" is selected.

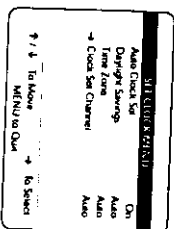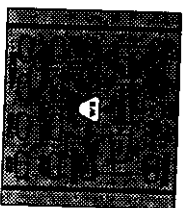

## 3 Set "Clock Set Channel"

Press the right arrow key repeatedly to select among:

- **Auto** — Automatically searches for channels broadcasting the time via XDS (Extended Data Services)
- **Ch #** — Allow you to manually set a channel which you know to receive XDS information
- **Aux** — allows the clock to be set from another AV (Audio/Video) device attached to your VCR's front line inputs

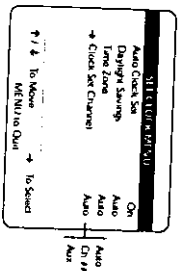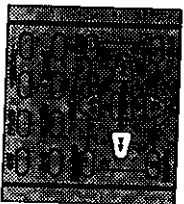



## 3 - The Dual-Deck System

### Remote Control Overview

**Set Clock** — Allows you to bypass the menu system and jump directly to the VCR's Set Clock Menu.

**\*Power** — Turns the VCR on and off. Note: Power will come on automatically when you insert a videotape.

**Display** — Turns the On-Screen Display (tuner, audio, and deck status) on and off.

**Search/Idx** — From Stop, Play, Fwd, or Rewind, opens the Search/Index Menu. While recording, places an index mark on the tape.


**Deck 1** — Sets Deck 1 as the active deck. All deck control buttons (Play, Rewind, etc.) will only affect Deck 1.

**Play** — Plays the tape in the active deck. Press twice for double-speed playback.

**Rew** — From Stop mode, rewinds the tape. From Play mode, visually searches the tape in reverse (Review).

**Deck 2** — Sets Deck 2 as the active deck. All deck control buttons (Play, Rewind, etc.) will only affect Deck 2.

**Menu** — Opens the Main Menu. Press and hold for three seconds to open the Setup Menu.

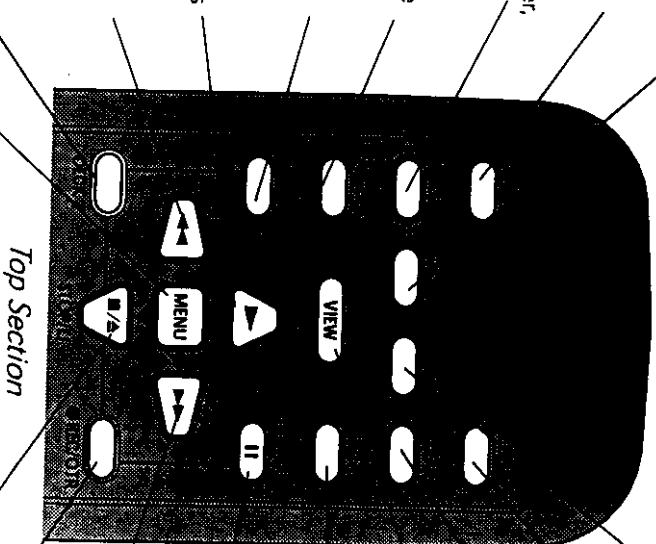

**Set Timer** — Allows you to bypass the menu system and jump directly to the Timer Recording Menu.

**Copy Tape** — Copies the tape in Deck 1 to the tape in Deck 2.

**Clear** — Resets the tape counter to 0:00:00. In the menu system, clears entries.

**View** — Switches the TV display among the Tuner, Deck1, Deck2, and Aux.

**Clk/Ctr** — Switches the front panel display among the clock, tape counter, and time remaining.

**Still/Frame** — In Play or Record mode, pauses the tape in the active deck. In Play Still mode advances the tape on frame at a time.

**FF** — From Stop mode, fast-forwards the tape. From Play mode, visually searches the tape forward (Cue).

**Rec/OTR** — Starts recording in the active deck. Press twice to activate One-Touch Recording.

**Stop/Ej.** — Stops the tape in the active deck. Press twice to eject the tape.

**Shuttle +/-** — In Play mode, Shuttle + gradually increases the cue speed from double-speed playback to picture search to jet search. Shuttle - gradually slows down the tape, pauses, then goes into reverse picture search and reverse jet search.

**Tracking +/-** — Allows you to manually adjust tracking. For Auto Tracking, see page 45.

**Slow +/-** — In Play mode, plays the tape at varying speeds of slow motion.

**\*0-9** — Selects channels directly. In the menu system, selects menu items.

**100+** — Selects cable channels 100 and above.

**\*Prev. Ch/Input Sel** — (Previous Channel/Input Select) Displays the last channel you were watching. In TV mode, switches among all inputs connected to your television.

**\*Mute** — Turns audio on and off.

**\*Vol +/-** — Turns the sound up and down.

**SP/EP** — Sets the record speed to SP (Standard Play) or EP (Extended Play). EP is three times longer than SP.

**Edit/Title** — Marks the beginning and ending edit points of scenes in the 8-Scene Editor (see page 63). Also press to record On-Screen Titles (see page 70).

**Skip** — In Play mode, jumps ahead 1 minute for every press (up to 5 minutes). In Copy mode, skip edits 1 minute for every press (up to 5 minutes).


**Repeat** — Instantly replays the last 30 seconds of tape.

**VCR** — Sets the remote to operate your VCR.

**TV** — Sets the remote control to operate your television. To program the remote, see Appendix A.

**TV/VCR** — Switches between the TV's tuner and the VCR's tuner.

**\*Ch +/-** — Changes channels up and down.

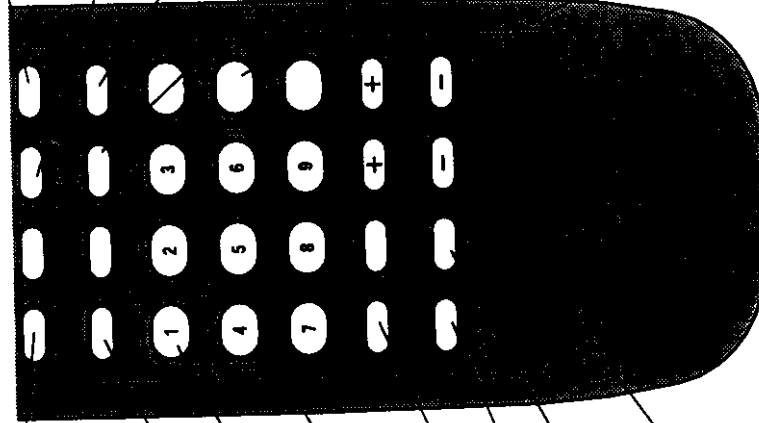

*Bottom Section*

\*These keys can be used to operate both your TV and VCR; see Appendix A to program your remote control.




# Front Panel - Door Closed

**Power** — Turns the VCR on and off.  
**Note:** Power will come on automatically when you insert a videotape.

**Deck Select Indicators** — Shows which deck is currently active.

**Copy Tape** — Copies the tape in Deck 1 to Deck 2.

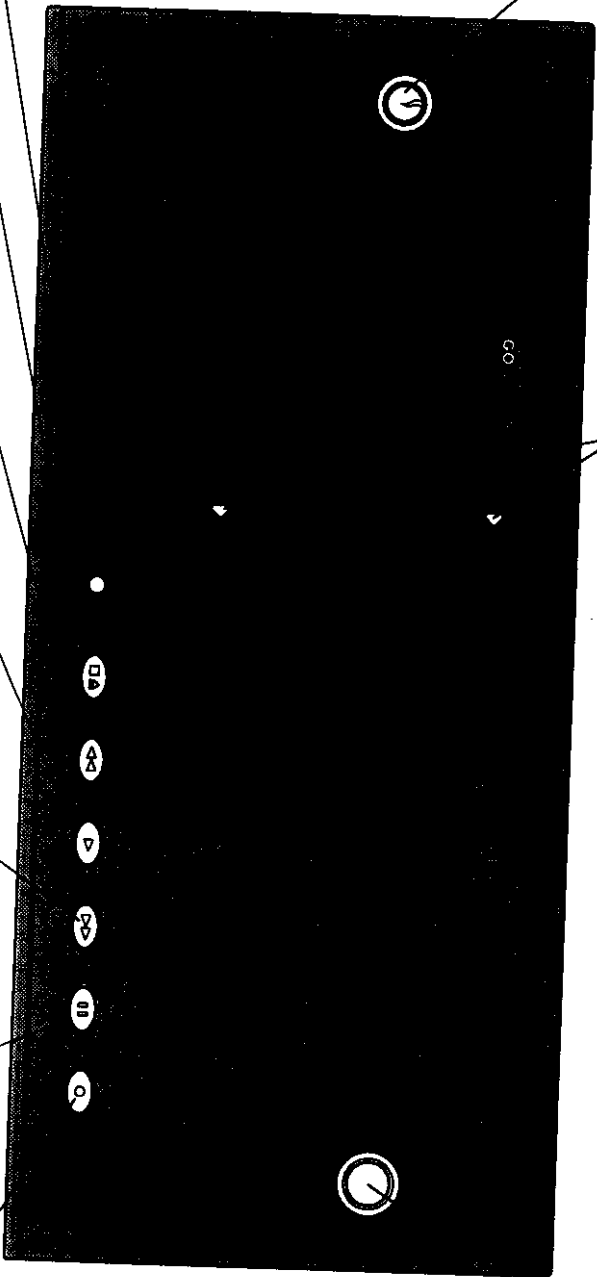

**Deck Select** — Switches control between Deck 1 and Deck 2.

**Stop/Eject** — Stops the tape in the active deck. Press twice to eject the tape. In menus, moves selection arrow down.

**Rewind** — In Stop mode, rewinds the tape. In Play mode, visually searches the tape in reverse (Review). In menus, backs up one menu.

**Play** — Plays the tape in the active deck. Press twice for double-speed playback. In menus, moves selection arrow up.


**F.Fast Forward** — In Stop mode, fast-forwards the tape. In Play mode, visually searches the tape forward (Cue). In menus, selects and cycles through menu items.

**Pause** — Pauses the tape in the

**Record** — Starts recording in the active deck. Press repeatedly to activate One-Touch Recording.

# Front Panel - Door Open


Use the Front Panel Inputs for easy connection to a camcorder or video game. The front panel input is labeled Aux in the menu system and can be accessed with the Channel +/- buttons.

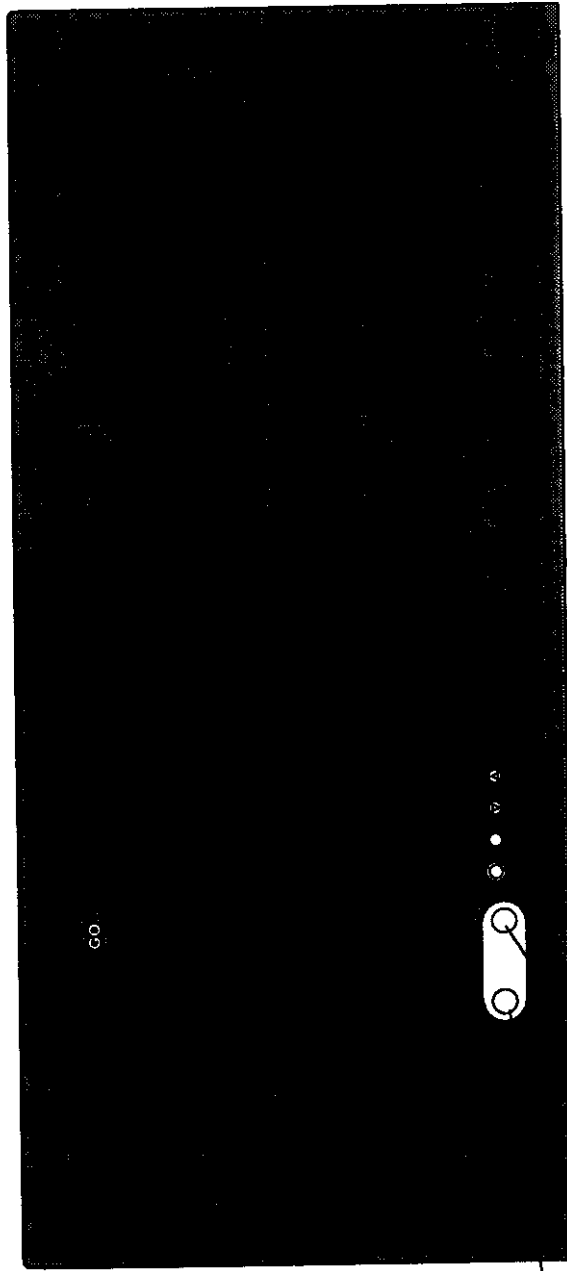

**Video Input — (Yellow)** Use to connect the video signal from your external device with an RCA cable.

**Audio Mono Input — (White)** Use to connect the mono audio signal from your external device with an RCA cable.

**Audio Stereo Inputs — (Red & White)** Use to connect the left and right stereo signals from your external device with RCA cables. (GV6650 only).

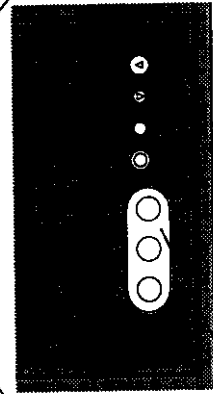

GV6025

GV6650

**Menu** — Opens the Main Menu. Press and hold for 3 seconds to open the Setup Menu.

**TV/VCR** — Switches between the TV's tuner and the VCR's tuner.

**Channel Up/Down** — Changes channels up and down.

# Front Panel Display

**Digital Tracking**— Blinks when Auto Digital Tracking is in progress. Lights to show Tracking is optimized. Turns off when Tracking is set manually.

**Timer** — Lights to show you that a Timer Recording or a One Touch Recording is stored or in progress. Blinks if there is a Timer Recording error.


**Hi-Fi/Stereo Indicators** — Light when you play a Hi-Fi videotape or watch a TV show broadcast in stereo.

**VCR** — Lights to show you that the Dual-Deck is in VCR mode; i.e. what you see on screen is coming from the VCR and NOT the television, as set by the TV/VCR button.

**Record Indicator** — Lights when any recording is in progress. Blinks when tape is in Pause mode.

**Tape Speed** — (SP, LP, EP) Shows you the current Playback or Record Speed for the active deck.

**Child Lock** — Lights to indicate that the Child Lock is activated, i.e. the front panel buttons are disabled (see page 19).

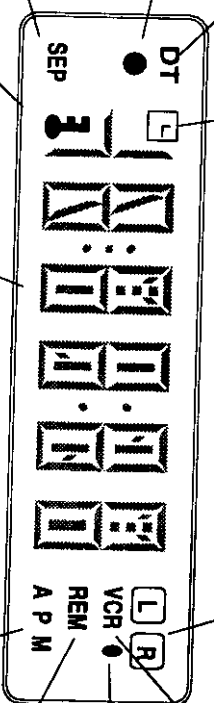

**00:00:00** — Shows you the current time, tape counter, or time remaining until the end of the tape in the active deck, as set by the CLK/CTR button. Also briefly displays the active deck function (Stop, Play, Rewind, etc.).

**Power On** — Displays when the VCR's power is turned on.

**REM** — Lights when Time Remaining is displayed.



**AM/PM** — Indicates AM or PM when the Time is displayed.

# Front Panel Display Settings

You can set the Front Panel Display to dim at night so it doesn't keep you awake.



## 1 Open "Setup Menu"

Press and hold the menu button for 3 seconds.

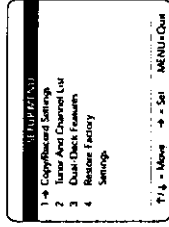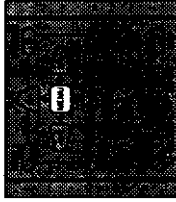

## 2 Select "Dual-Deck Features"



Press 3.

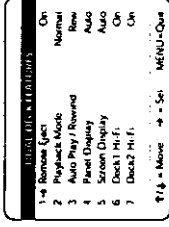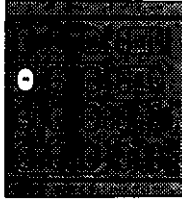

## 3 Set "Panel Display"

Press 4 repeatedly to turn Panel Display to:

- **Auto** — Dims automatically between 10:00 PM and 6:00 AM
- **Off** — Disables Front Panel Display
- **On** — Makes Front Panel Display bright at all times.

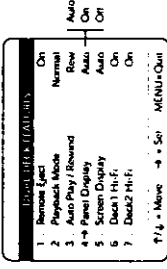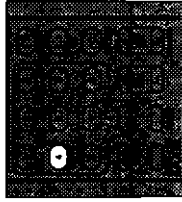


# Child Lock

To prevent children from using the VCR when you are away, you can activate the Child Lock. This feature disables Auto Power On, Auto Play, and all front panel buttons. You will need the remote control to operate the VCR.

## 1 Open "Main Menu"



Press the menu button on the remote control.

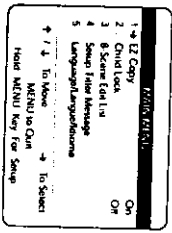

## 2 Set "Child Lock"

Press 2 repeatedly to turn Child Lock on or off. With Child Lock set to "On":

- The VCR will not power on automatically when a tape is inserted.
- Tapes will not play automatically when you insert them, regardless of the Auto Play setting (see page 47).
- All front panel buttons are disabled.
- You will still be able to use the remote control to operate all VCR functions.
- To disable the Child Lock, set it to Off using the remote control.

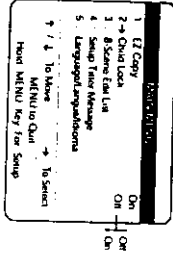
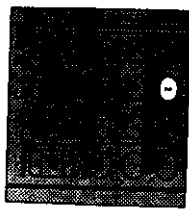


# Remote Eject

*Remote Eject allows you to eject tapes by pressing Stop on the remote control.*



## 1 Open "Setup Menu"

Press and hold the menu button for 3 seconds.

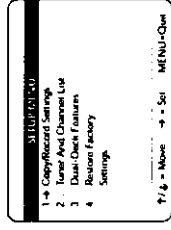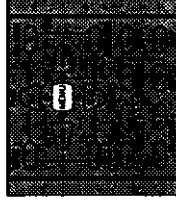


## 2 Select "Dual-Deck Features"

Press 3.

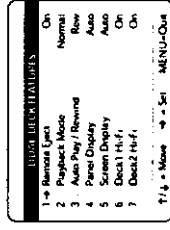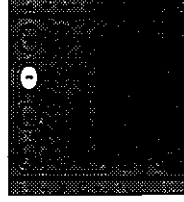

## 3 Set "Remote Eject"


Press 1 repeatedly to turn Remote Eject on or off. The default setting is "On."

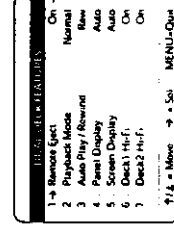



# Setup Menu Tree

Press the **MENU** Button and Hold for 3 Seconds

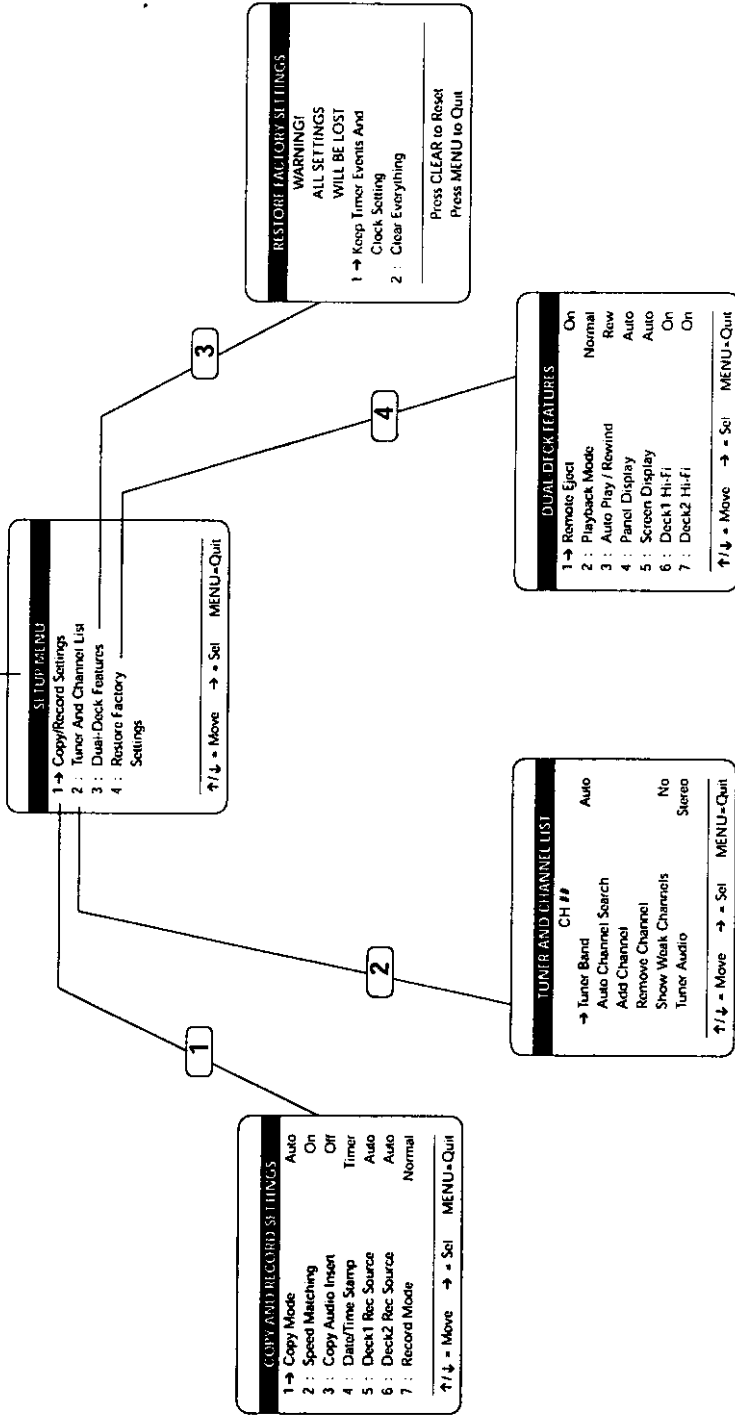




# Menu Navigation - Remote Control

Use the following buttons to enter and navigate within the menu system.


## Menu

Press and release to enter the Main Menu and adjust everyday functions. When you are in the menu system, press to save settings and exit.

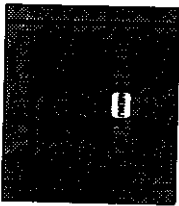


## Menu (3 seconds)

Press and hold for 3 seconds to enter the Setup Menu and adjust "set and forget" functions.

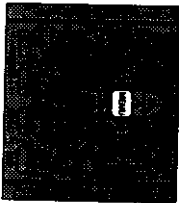


## Up/Down Arrows

Moves up or down the list of menu items.

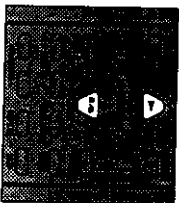

## Left Arrow

When you are in the menu system, press to back up to the previous menu.

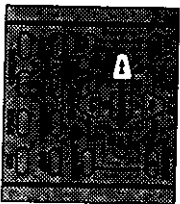


## Right Arrow

Selects and cycles through menu items.




## 0-9

Direct method of selecting and changing menu items (used in the examples throughout this manual).

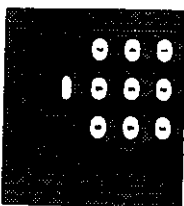

## Clear

Cancel certain selections in the menus.

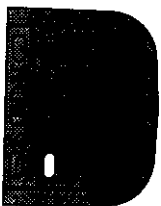


# Menu Navigation - Front Panel

*The following front panel buttons can also be used to enter and navigate within the menu system.*


## Menu

Press and release to enter the Main Menu and adjust everyday functions. When you are in the menu system, press to save settings and exit.

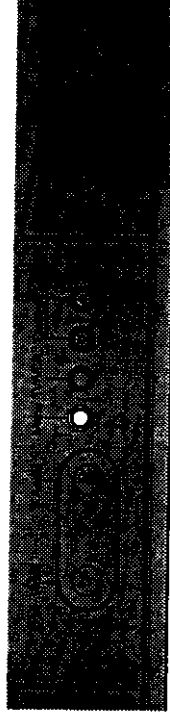


## Menu (3 seconds)

Press and hold for 3 seconds to enter the Setup Menu and adjust "set and forget" functions.

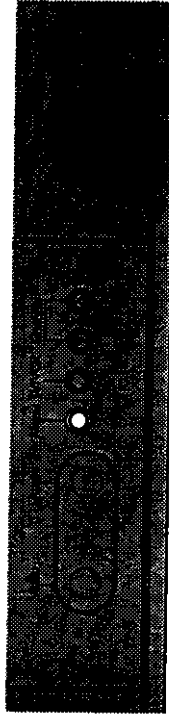

## Stop/Eject & Play

Press Stop/Eject to move down and Play to move up the list of menu items.

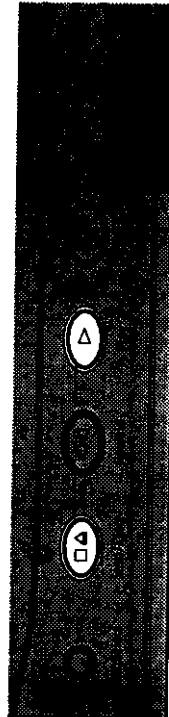


## Rewind

When you are in the menu system, press to back up to the previous menu.



## F.Forward

Selects and cycles through menu items.


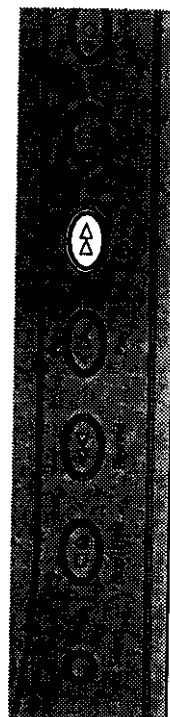


# Restore Factory Settings

If you make changes to the Dual-Deck VCR default settings, you can always restore the original factory settings.



## 1 Open "Setup Menu"

Press and hold the Menu button on the remote control for 3 seconds.

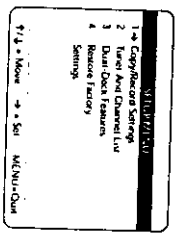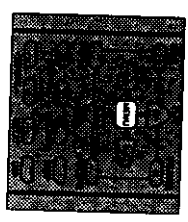



## 2 Select "Restore Factory Settings"

Press 4.

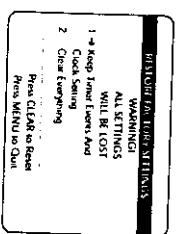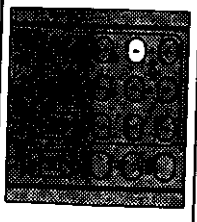



## 3 Decide What to Reset

Press 1 if you want to reset everything except the clock and any saved Timer Recordings. Press 2 if you want to clear all settings.

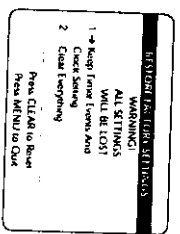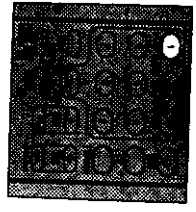

## 4 Restore Settings

Press the Clear button to confirm your decision and restore factory settings.

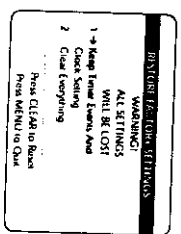
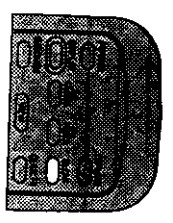


# On-Screen Display Overview

The On-Screen Display (OSD) keeps you posted on the status of the Tuner, Decks, and Line inputs. It also communicates important Copy, Timer Record, and Error messages.

## Bring up On-Screen Display

Press Display. The OSD will also appear whenever you activate a Deck function, i.e. Play a tape, change channels, etc. The OSD will turn off automatically after 5 seconds.

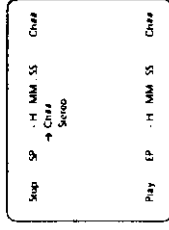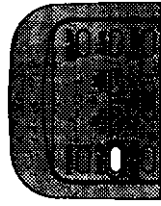


## Change View

Press View to change the OSD among the 3 display views:


- Tuner/Aux
- Deck 1
- Deck 2




*Tuner/Aux View*

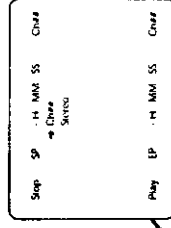

*Deck 2 View*

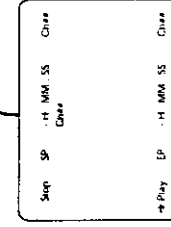

*Deck 1 View*

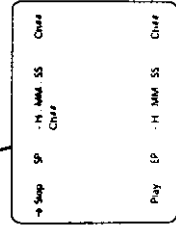

# On-Screen Display Elements

**Deck Status** — Shows current tape status in each deck: Stop, Play, Rew, Fwrd, Eject, Cue, Review, Slow, Still, Pause, Rec, OTR, ATR, Index, or ERROR.

**Deck Record Source** — Shows the current record source for each deck: Ch#, Aux, Deck 1, or Deck 2.

**View** — Shows the source you are currently watching (Tuner/Aux, Deck 1, Deck 2). The arrow will point to the active source.


**Date and Time** — Press the Display key twice to view the Date and Time in the middle of the screen.

**Display Message** — Provides feedback on your Dual-Deck, including Copy, Timer Recording, Sequential/Loop Play & Record, and Error Messages.

**Deck Play/Record Speed** — Shows current playback speed (SP, LP, EP) or record speed (SP, EP).

**Deck Counter Position** — Shows the current tape position or time remaining as set by the Clk/Ctr button.

**Audio Status** — Shows the current audio source: VCR Mute, Simulcast (all models); Stereo, Mono, SAP, TV+SAP, SAP (GV6650 only).


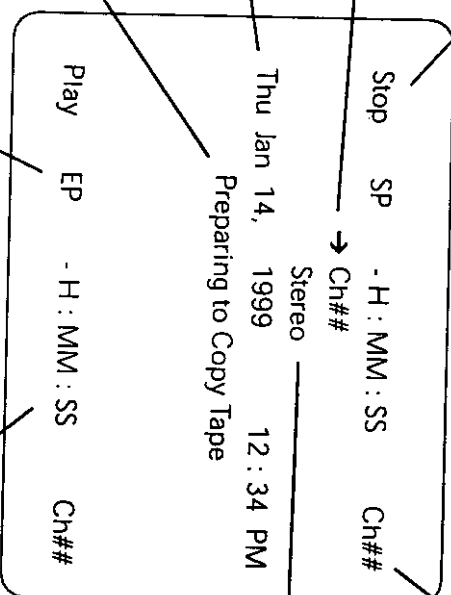


# On-Screen Display Settings

You can customize the OSD to come up automatically whenever you change channels or press a Deck function key, or you can turn it off permanently unless you press the Display button.



## 1 Open "Setup Menu"

Press and hold the Menu button on the remote control for 3 seconds.

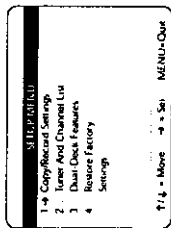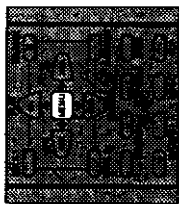

## 2 Select "Dual-Deck Features"



Press 3.

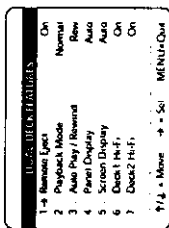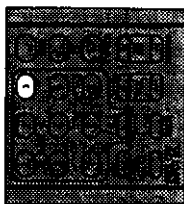

## 3 Set "Screen Display"

Press 5 repeatedly to turn Screen Display to:

- **Auto** — Default setting. This will bring up the OSD automatically whenever a Deck function is activated (i.e., Play, Stop, Channel +/-, etc.)
- **Off** — The OSD will be off permanently unless you press the Display button.

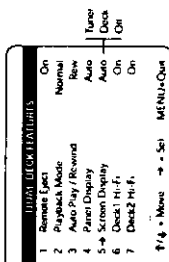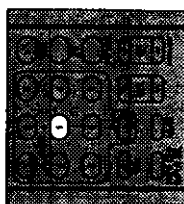



# 4 - Tuner & Channel List

## Tuner Band

Broadcast television comes into your home in one of two ways: over the air via antenna or through a cable via a local CATV (Community Antenna Television) provider or Satellite. The Tuner Band setting allows you to specify which source you are using. Use this setting only if Auto Setup detected the incorrect band, i.e. channels are coming in on the wrong channel numbers.



### 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

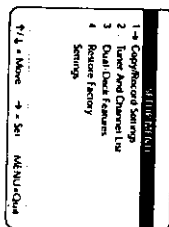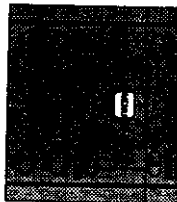

### 2 Select "Tuner & Channel List"



Press 2.

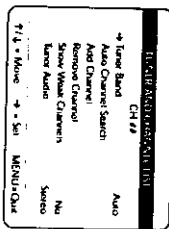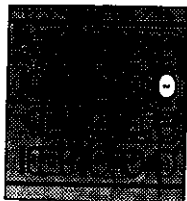

### 3 Set "Tuner Band "

Press the right arrow repeatedly to switch the Tuner Band among:

- **Auto** — Automatically detects Tuner Band.
- **Antenna** — Indicates that you are using an indoor or outdoor VHF/UHF antenna.
- **Cable** — Indicates that you are using CATV (Community Antenna Television), i.e. cable TV.

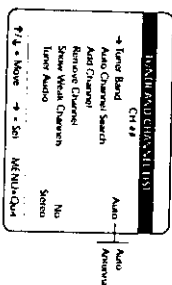
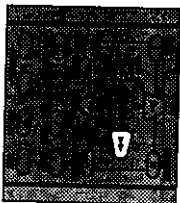


# Auto Channel Search

You can perform Auto Channel Search at any time to store only those channels which are active in your area.



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

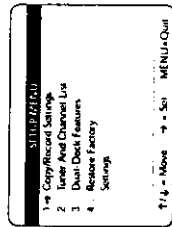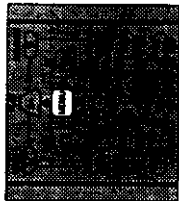



## 2 Select "Tuner & Channel List"

Press 2.

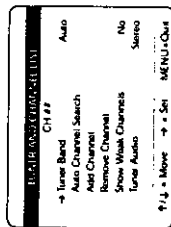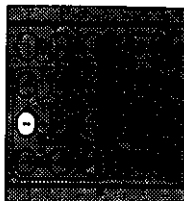



## 3 Move to "Auto Channel Search"

Press the down arrow until Auto Channel Search is selected.

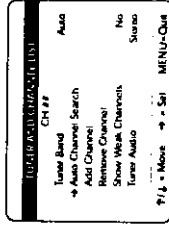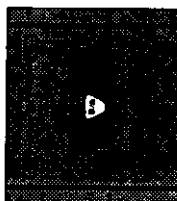

## 4 Start "Auto Channel Search"

Press the right arrow to begin searching for all available channels in the selected Tuner Band. This procedure may take a few minutes to complete. When Auto Channel Search is finished, it will display the lowest channel found.

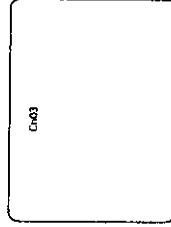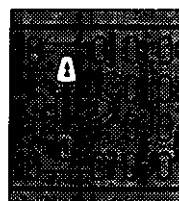




# Add Channel

Follow these steps to add a channel that was not detected during Auto Channel Search.


## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

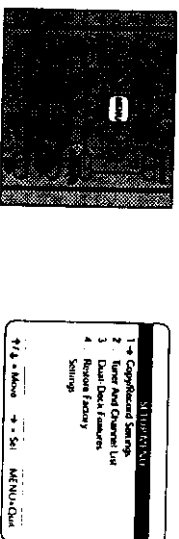


## 2 Select "Tuner & Channel List"

Press 2.

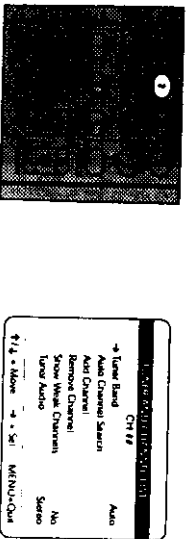


## 3 Move to "Add Channel"

Press the down arrow until Add Channel is selected.

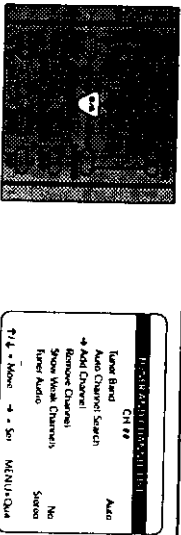


## 4 Tune the Channel

Use the number keys (0-9) to enter the channel number, e.g. "1.1" for Channel 11.

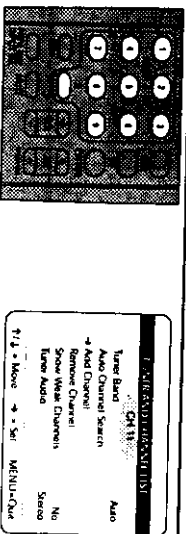

## 5 Add the Channel

Press the right arrow to add the channel to your channel list. Repeat steps 4 and 5 to add more channels.


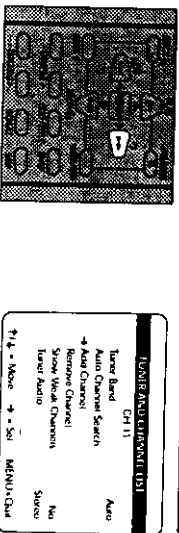


# Remove Channel

Follow these steps to remove a channel that was stored during Auto Channel Search.



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

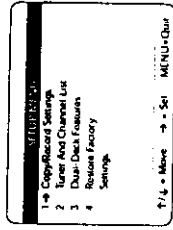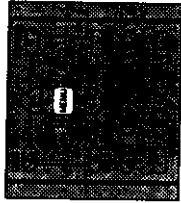



## 2 Select "Tuner & Channel List"

Press 2.

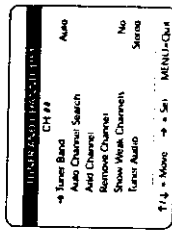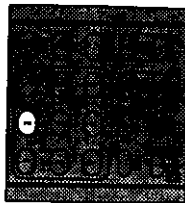



## 3 Move to "Remove Channel"

Press the down arrow until Remove Channel is selected.

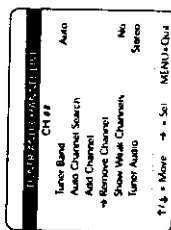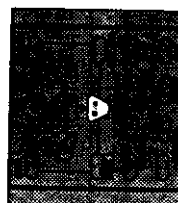



## 4 Tune the Channel

Use the Ch +/- buttons or the number keys (0-9) to enter the channel number.

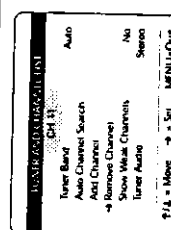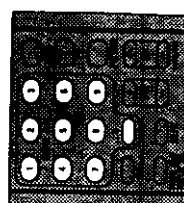

## 5 Remove the Channel

Press the right arrow to remove the selected channel from your channel list. Repeat steps 4 and 5 to remove additional channels.

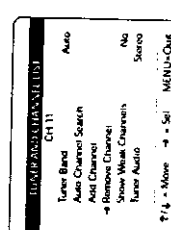
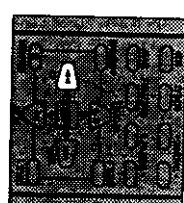


# Show Weak Channels

When you run Auto Channel Search, it will skip channels with weak signals, i.e. poor picture quality. With Show Weak Channels, you can add more channels to your list by lowering the cutoff point at which a picture is acceptable to view. Even with Show Weak Channels turned on, some channels may still be too weak to display and a blue screen will appear.



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

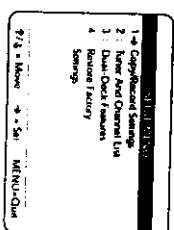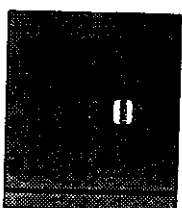



## 2 Select "Tuner & Channel List"

Press 2.

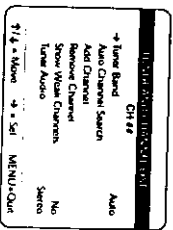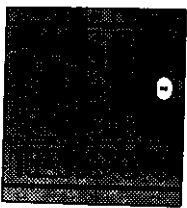



## 3 Move to "Show Weak Channels"

Press the down arrow until Show Weak Channels is selected.

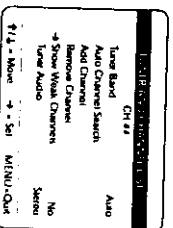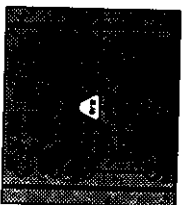

## 4 Set "Show Weak Channels"

Press the right arrow to set Show Weak Channels to Yes. You can then run Auto Channel Search again to view more channels; see page 30.

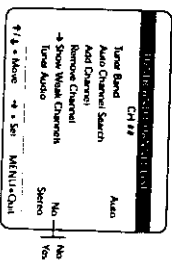
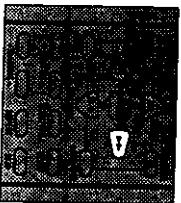


# Tuner Audio *(GV6650 only)*

*Most television programs are broadcast in stereo. However, in certain circumstances, you may wish to set the Tuner Audio to mono, SAP, TV+SAP, or Simulcast.*



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

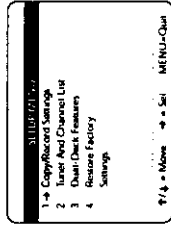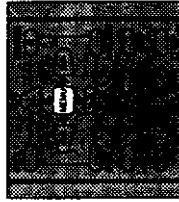



## 2 Select "Tuner & Channel List"

Press 2.

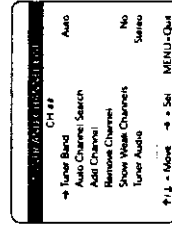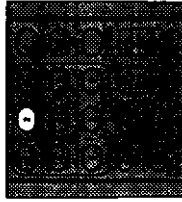

## 3 Move to "Tuner Audio"


Press the down arrow until Tuner Audio is selected.

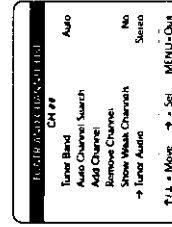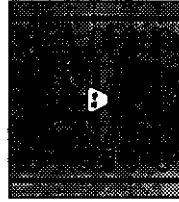

## 4 Set "Tuner Audio"

Press the right arrow repeatedly to set Tuner Audio to:

- **Stereo** — Two-channel Hi-Fi sound split into left and right channels. When a show is not broadcast in stereo, the sound reverts to Mono.
- **Mono** — Monaural, or single-channel, audio. Combines left and right audio signals. Use when connecting the VCR to a Mono output device, such as a monitor.

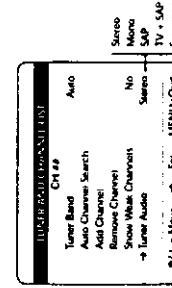

- 
- **SAP** — Second Audio Program. Optional audio signal, often used to transmit a second language, news, or weather broadcasts. SAP will appear on the front panel display if it is available.
  - **TV+SAP** — Broadcasts Mono sound out of the left channel and SAP out of the right channel. This is useful if you want to listen to a second language with headphones while the primary language is played through the speakers.
  - **Simulcast** — Sometimes a broadcaster will transmit a television program and an FM radio broadcast of the same program simultaneously. When Turner Audio is set to Simulcast, the audio signal will come from the rear line inputs, usually connected to a stereo system. Simulcasts are usually reserved for live musical performances; however, they are becoming less frequent because most televisions have built-in stereo sound.



# 5 - Copy Features

## Basic Copying


*To copy a tape, simply put your source tape in Deck 1, your blank tape in Deck 2, and press Copy Tape. The tape in Deck 1 will begin copying to Deck 2.*

### 1 Insert Source Tape

Put the tape you wish to copy in Deck 1.

### 2 Insert Target Tape



Put your blank tape in Deck 2.

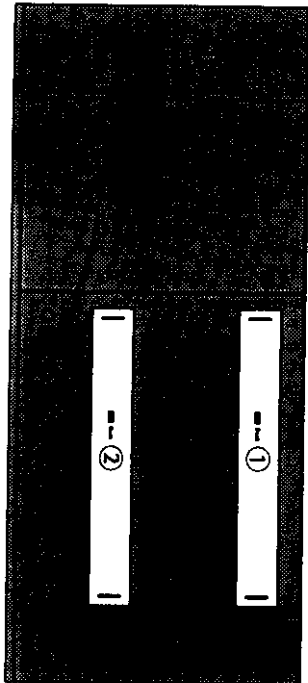

### 3 Copy Your Tape

Press the Copy Tape button on either the remote control or the front of the VCR. The tape in Deck 1 will begin to copy to Deck 2.

- To pause copying, press Copy Tape.
- To resume copying, press Copy Tape again.
- To Stop copying, press Stop/Eject on both decks; see Sync Editing on page 66.

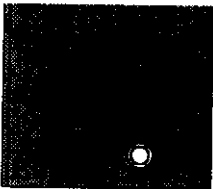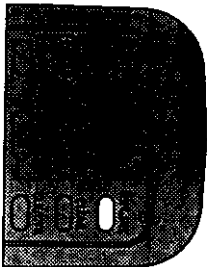


# EZ Copy

*EZ-Copy automates the entire copy process so you can copy an entire tape at the touch of a button. Just press the Copy Tape button, and the VCR will rewind both decks completely, copy the source tape to the target tape, rewind both decks again and eject the tapes.*

**Complete Program Record**  
*When EZ Copy is selected, the source tape begins to copy in SP, the VCR then calculates how much time is remaining on the target tape and adjusts the copy speed to EP if necessary to copy the entire tape. If there is not enough room to copy the entire source tape, the VCR will copy in EP until the end of the target tape is reached.*

## 1 Open "Main Menu"

Press the Menu button on the remote control.


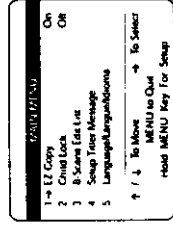


## 2 Set "EZ Copy"

Press 1 repeatedly to turn EZ Copy on or off:

- **On** — When Copy Tape is pressed, both decks will rewind, the tape in Deck 1 will be copied to Deck 2, both decks will rewind again, and the tapes will be ejected.
- **Off** — When Copy Tape is pressed, the tape in Deck 1 will begin copying to Deck 2 immediately from the current position of both decks. To stop copying, activate Deck 2 and press Stop. The tapes will not be rewound or ejected.

**Note:** If the target tape ends before the source tape, neither tape will rewind to alert you that a problem occurred.

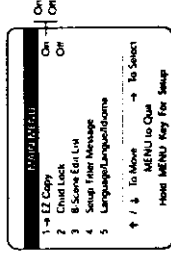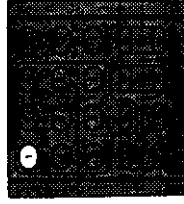





# Copy Mode

There are two methods of copying a tape from Deck 1 to Deck 2. HQ1 (High Quality 1) and HQ2 (High Quality 2). HQ1 is best if your source tape is recorded in SP. HQ2 is best if your source tape is recorded in LP or EP. The Auto setting will make this choice for you.



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

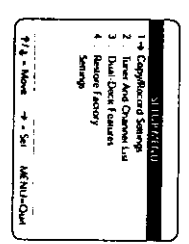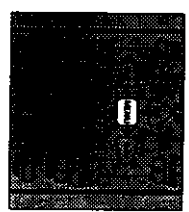

## 2 Select "Copy/Record Settings"



Press 1.

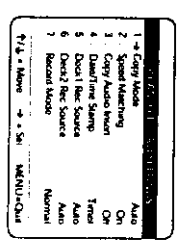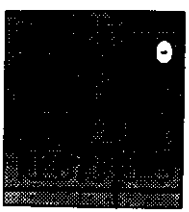

## 3 Set "Copy Mode"

Press 1 repeatedly to set Copy Mode to:

- Auto — Automatically sets the Copy Mode.
- HQ1 — High Quality 1. Best if source tape is in SP.
- HQ2 — High Quality 2. Best if source tape is in LP or EP.

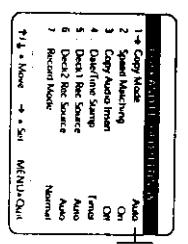
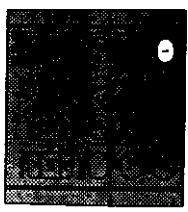


# Speed Matching

Speed Matching automatically sets the Deck 2 record speed to be the same as the Deck 1 playback speed when copying a tape. You will typically get the best results with this feature turned on. You must disable this feature to copy multiple movies onto a single blank tape.



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

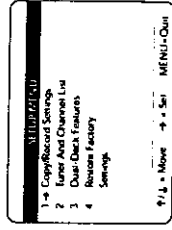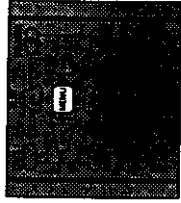



## 2 Select "Copy/Record Settings"

Press 1.

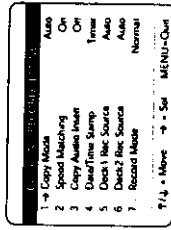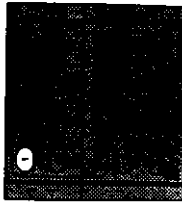

## 3 Set "Speed Matching"

Press 2 repeatedly to turn Speed Matching on or off. Turn Speed Matching off only if you want to record two or three SP tapes onto one EP tape. If you do this, you will need to set the Record Speed manually using the SP/EP button on the remote control.

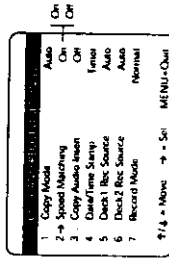
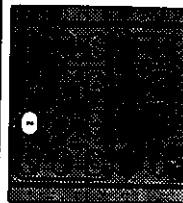


# Copy Audio Insert

*You can insert a new audio track, such as music or voice-overs, while you are copying a tape. The audio track will be inserted in place of the original audio track on the source tape.*



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

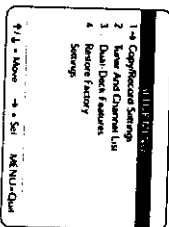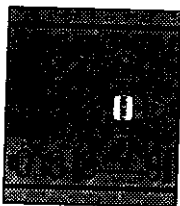

## 2 Select "Copy/Record Settings"



Press 2.

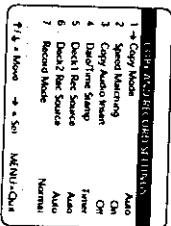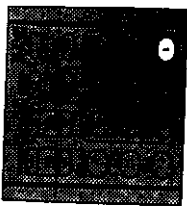

## 3 Set "Copy Audio Insert"

Press 3 repeatedly to set Copy Audio Insert to:


- **On** — During Copy Tape session, audio will be recorded from a device connected to the front audio jacks (Aux).
- **Off** — Copy Audio Insert is disabled.

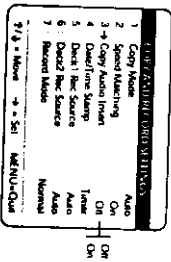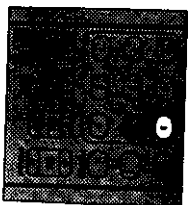

---

## 4 Connect Audio Source

Connect the external audio source to the front line inputs.

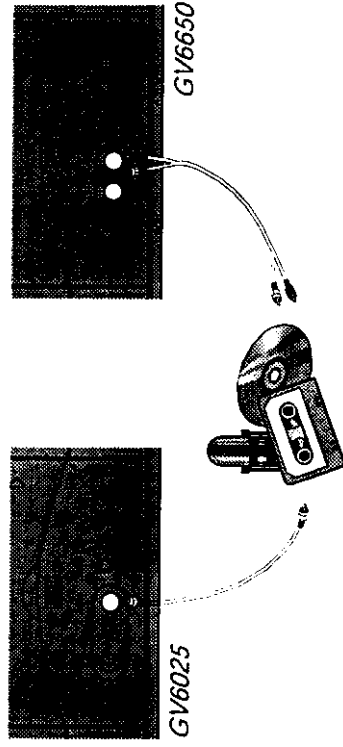

---

## 5 Copy New Audio Track

Insert tapes in both decks and press Copy Tape. At the same time, play the audio source.



Notes:

- The new audio signal replaces the tape's original audio track.
- If there is no audio source playing, the audio track will be blank.
- Copy Audio Insert automatically reverts to off when the VCR is turned off.


# 6 - Playback Features

## Basic Playback

To play a videotape, simply insert it in either deck and press the Play button. If the record safety tab has been removed and Auto Play is turned on, the tape will begin to play automatically; see page 47.


### 1 Insert Tape

Insert a standard VHS tape into Deck 1 or Deck 2.

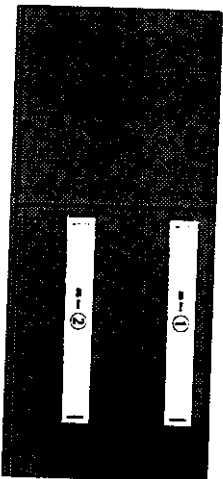


### 2 Play Tape

Press Play on the remote control or the front panel.

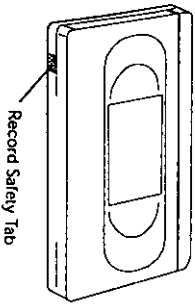

Notes:

- If Auto Play is on and the tape is missing the Record Safety Tab, the tape will begin to play automatically; see page 47.

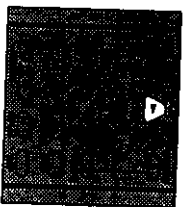

Or



# Special Playback Features

*While a tape is playing, you can enjoy a variety of special playback features, including Freeze, Scan, Skip, Slow Motion, and more. Press the Play button again to resume normal playback.*

## Freeze Frame

From Play mode, press Still/Frame to freeze a single frame.



## Frame Advance

From Still mode, press Still/Frame again to advance to the next frame.



## Double Speed

From Play mode, press Play again for double-speed playback.



## Slow Motion

From Play mode, press Slow +/- for Slow Motion playback at variable speeds.



## Cue

From Play mode, press F.Forward to cue at two speeds:

- **Picture Search** — Press and release F.Forward to advance the tape at 5 times normal speed.
- **Jet Search** — Press and hold F.Forward to advance the tape at 9 times normal speed.



## Review

From Play mode, press Rewind to review at two speeds:

- **Picture Search** — Press and release Rewind to review the tape at 5 times normal speed.
- **Jet Search** — Press and hold Rewind to review the tape at 9 times normal speed.




## Skip

From Play mode, press Skip repeatedly up to 5 times to cue ahead 1-5 minutes.




## Repeat

From Play mode, press Repeat to review the last 30 seconds of tape.

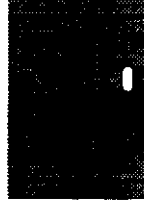

## Shuttle

In Play mode, Shuttle + gradually increases the cue speed from double-speed playback to picture search to jet search. Shuttle - gradually slows down the tape, pauses, then goes into reverse picture search and reverse jet search.

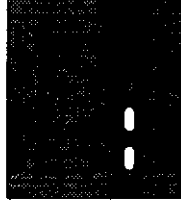


# Tracking

*Adjusting the Tracking removes the lines that sometimes appear during playback because of slight differences in recording decks. Your Dual-Deck VCR will automatically align the recorded tracks with the playback heads to solve this problem. You may also set tracking manually.*

## 1 Adjust Tracking Manually

Press the Tracking up/down arrow keys to move the white lines out of the picture.

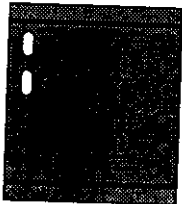


## 2 Activate Auto Tracking

The VCR will perform Auto Tracking when:

- You load a cassette and press Play
- The record speed of a tape in Play changes, i.e. from SP to EP

Note: Auto will flash on the front panel and ATR (Auto Tracking) will flash on the on-screen display when Auto Tracking is in progress. DT (Digital Tracking) will flash on the front panel display and remain lit when Auto Tracking is finished.


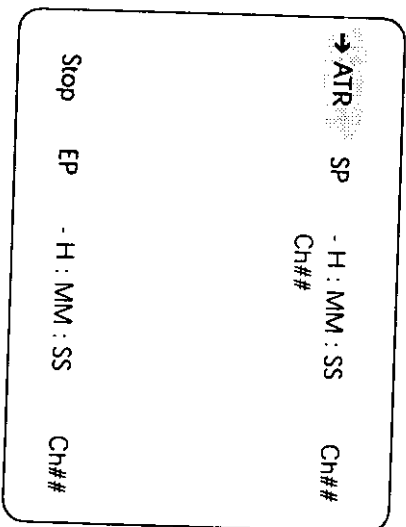


# Sequential/Loop Playback

You can insert two tapes in your Dual-Deck VCR and have them play sequentially or in a continuous loop. For example, you may rent a movie that comes on two videotapes and watch them seamlessly one after the other. You may also set two sales or training tapes to loop continuously.



## 1 Open "Setup Menu"

Press and hold the menu button on the remote control for 3 seconds.

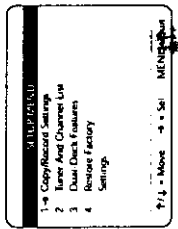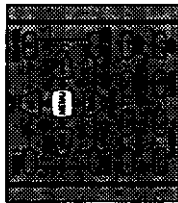

## 2 Select "Dual-Deck Features"



Press 3.

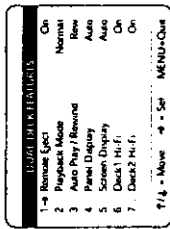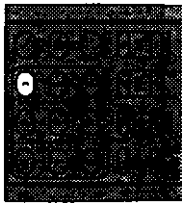

## 3 Set "Playback Mode"

Press 2 repeatedly to set Playback Mode to:


- **Normal** — Tapes play normally (default setting).
- **Seq** — The tape in Deck 1 will play to the end, then the tape in Deck 2 will play to the end.
- **Loop** — The tape in Deck 1 will play to the end, then the tape in Deck 2 will play to the end. While Deck 2 is playing, the tape in Deck 1 will rewind to the beginning. This process will repeat continuously until you press Stop on the deck in Play.

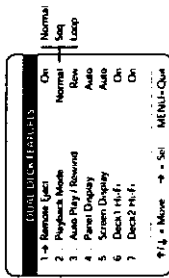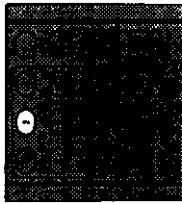




# Auto Play/Rewind

*Auto Play will play tapes without record safety tabs automatically when they are inserted. Auto Rewind will rewind tapes when they reach the end during playback.*

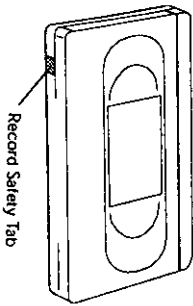

## 1 Open "Setup Menu"


Press and hold the menu button on the remote control for 3 seconds.

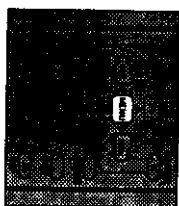

1-4 Copy/Record Safety	On	Normal
2 Turn Off Channel Lock	Off	Normal
3 Record Safety	Auto	Auto
4 Record Safety Settings	On	Auto

## 2 Select "Dual-Deck Features"

Press 3.

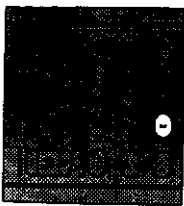


1-4 Remote Eject	On	Normal
2 Playback Mode	Auto	Auto
3 Auto Play/Rewind	Auto	Auto
4 Panel Display	On	Auto
5 Screen Display	On	Auto
6 Deck 1 H-Fi	On	Auto
7 Deck 2 H-Fi	On	Auto

## 3 Set "Auto Play/Rewind"

Press 3 repeatedly to set Auto Play/Rewind to:

- **Rew** — Tapes will rewind automatically when they reach the end during playback (default setting).
- **Both** — Auto Play and Rewind will both be enabled.
- **Play** — Tapes without record safety tabs will play automatically when they are inserted.
- **Off** — Auto Play and Rewind will both be disabled.

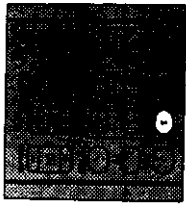



1-4 Remote Eject	On	Normal
2 Playback Mode	Auto	Auto
3 Auto Play/Rewind	Auto	Auto
4 Panel Display	On	Auto
5 Screen Display	On	Auto
6 Deck 1 H-Fi	On	Auto
7 Deck 2 H-Fi	On	Auto

# Playback Audio Settings (GV6650 only)

Your Dual-Deck VCR will playback tapes in Hi-Fi stereo sound. Occasionally, you may wish to turn Hi-Fi sound off and listen to the linear audio track only.



## 1 Open "Setup Menu"

Press and hold the menu button on the remote control for 3 seconds.

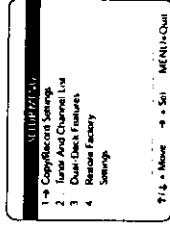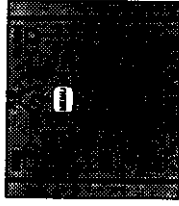


## 2 Select "Dual-Deck Features"

Press 3.

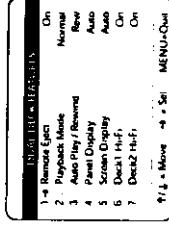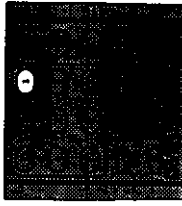



## 3 Set "Deck 1 Hi-Fi"

Press 6 repeatedly to turn Deck 1 Hi-Fi on or off. When set to off, you will hear the linear mono track when you play tapes in Deck 1.

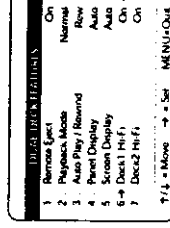


## 4 Set "Deck 2 Hi-Fi"

Press 7 repeatedly to turn Deck 2 Hi-Fi on or off. When set to off, you will hear the linear mono track when you play tapes in Deck 2.

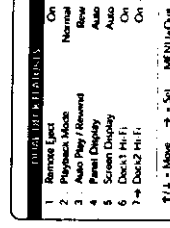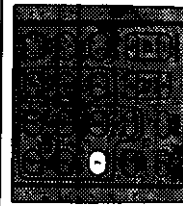


## Basic Recording

You can record your favorite TV shows at the touch of the Record button. Be sure your videotape has a Record Safety Tab. If it is missing, you can cover the opening with a small piece of tape. Warning: Do not cover this opening unless you are sure you want to record over the tape.

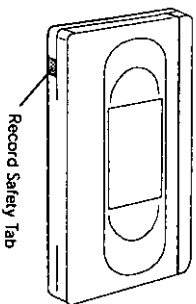


### 1 Insert Tape

Insert a blank tape into either deck.

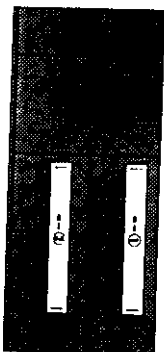


### 2 Select a Channel to Record

Use the 0-9 buttons or the Channel Up/Down arrow keys to select the desired channel.

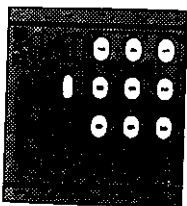


Or

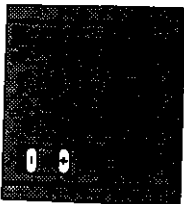

### 3 Start Recording

Press the Record/OTR button. For options while a recording is in progress, see Record Options on the next page.

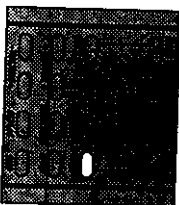

#### Notes:

- Be sure the TV is set to channel 3 or 4 (whichever the switch is set to on the back of the VCR).
- Make sure the TV/VCR button is set to VCR (the VCR icon will appear on the front panel display).
- Be sure the tape is long enough to record the entire program. To change the recording speed, see page 52.

# Recording Options

---

*While a recording is in progress, you can watch a different channel, watch a videotape in the other deck, or add recording time in 30-minute increments.*

## To Stop Recording...

Press Stop.




## To Pause Recording...

Press Still/Frame. To resume recording, press Record.



## To Watch a Different Channel...

Press TV/VCR to switch to TV mode (the VCR icon will disappear from the front panel display), then select a different channel using your TV's tuner.

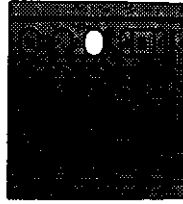

## To Watch Another Videotape...

Insert a tape in the second deck and press Play. The TV View will change automatically.



## To Add Recording Time...

See One-Touch Recording (OTR) on page 51.

# One-Touch Recording (OTR)



OTR allows you to add recording time in 30 minute increments at the touch of a button.

## 1 Start Recording

Follow the instructions on page 49.



## 2 Activate OTR

While in Record mode, press Record again to activate One-Touch Recording. OTR 0:30 will appear on the On-Screen Display and the VCR will record for exactly 30 minutes.

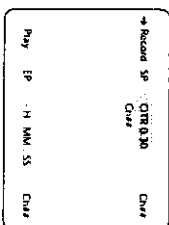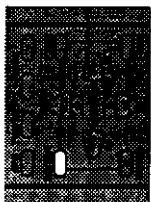

## 3 Add Recording Time



While in OTR mode, press Record again to increase recording time in 30 minute increments up to 9 hours and 30 minutes.

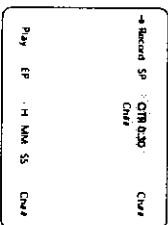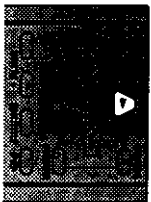

OTR 0:30  
OTR 1:00  
OTR 1:30  
OTR 2:00  
OTR 9:00  
OTR 9:30

## 4 Activate Loop Record

When you reach OTR 9:30, press Record again to enter Loop Record. The active Deck will record over and over again in a continuous loop until you press Stop. This can be used for continuous recording of security cameras.

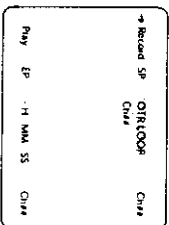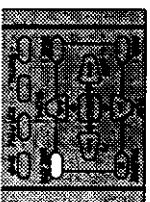

Notes:

- If you press Power during an OTR session, the Dual-Deck VCR will turn off automatically when the recording time has elapsed.
- When the recording time has elapsed, the VCR will stop automatically.

# Record Speed

*You can adjust the speed at which your Dual-Deck VCR records, e.g. to fit more than 2 hours of programming on a T-120 tape.*

## 1 Start Recording

Follow the instructions on page 49.

## 2 Set Record Speed

Press the SP/EP button on the remote control to switch the record speed between:

- SP — Standard Play.
- EP — Super Long Play (3 times SP).



### Maximum Record Time



Tape Length	SP (Standard Play)	EP (Extended Play)
T-120	2 hr	6 hrs
T-160	2 hrs 40 min	8 hrs
T-180	3 hrs	9 hrs

# Record Source

*You can set the Dual-Deck VCR to record from the Turner, Decks or Auxiliary input. The Auto setting will record whatever is currently visible on-screen.*



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

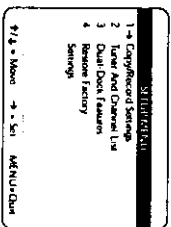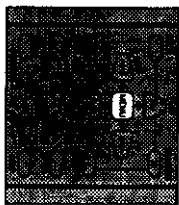

## 2 Select "Copy/Record Settings"



Press 1.

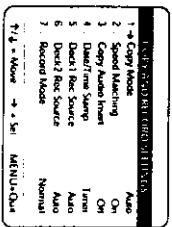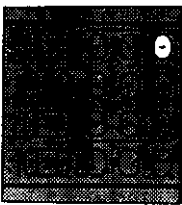

## 3 Set "Deck 1 Rec Source"

Press 5 repeatedly to set Deck 1 Rec Source to:



- **Auto** — The current TV View (whatever you currently see on-screen).
- **Aux** — Source connected to front line inputs.
- **Deck2** — Tape playing in Deck 2.
- **Tuner** — Current television program.

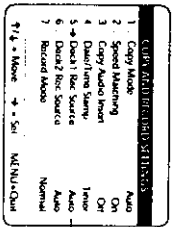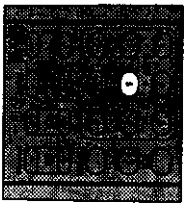

## 4 Set "Deck 2 Record Source"

Press 6 repeatedly to set Deck 2 Rec Source to:

- **Auto** — The current TV View (whatever you currently see on the screen).
- **Aux** — Source connected to front line inputs.
- **Deck1** — Tape playing in Deck 1.
- **Tuner** — Current television program.

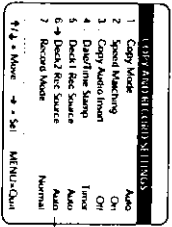
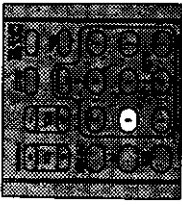


# Sequential/Loop Recording

*You can insert two tapes in your Dual-Deck VCR and have them record sequentially or in a continuous loop. This will allow you to record up to 18 hours of programming in EP mode. Loop recording is useful for continuous recording of security cameras.*



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

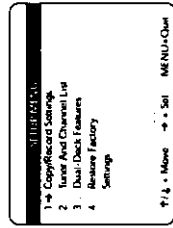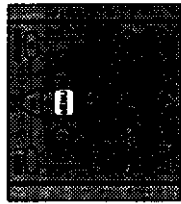

## 2 Select "Copy/Record Settings"



Press 1.

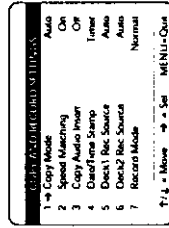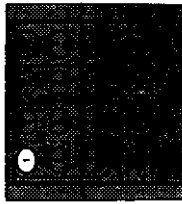

## 3 Set "Record Mode"

Press 7 repeatedly to set Record Mode to:

- **Normal** — Tapes record normally (default setting).
- **Sequential** — The tape in Deck1 will record to the end, then the tape in Deck2 will record to the end.
- **Loop** — The tape in Deck 1 will record to the end, then the tape in Deck 2 will record to the end. While Deck 2 is recording, the tape in Deck 1 will rewind to the beginning. This process will repeat continuously until you press Stop on the deck in Record.

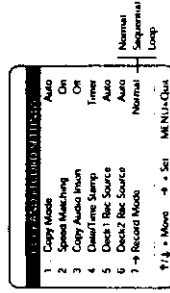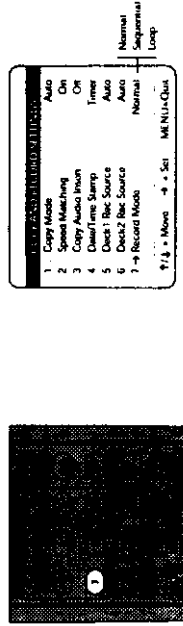





# Date/Time Stamp

The Date/Time Stamp allows you to overlay the date, time, and record source at the start of, or continuously throughout, your recordings. You can use the stamp on all recordings or on timer recordings only. The stamp will not appear, however, when you copy a tape.



## 1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

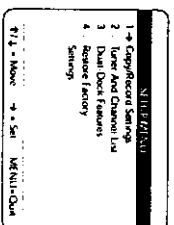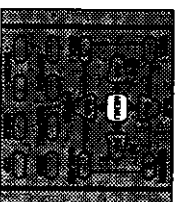

## 2 Select "Copy/Record Settings"



Press 1.

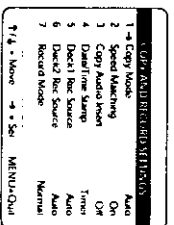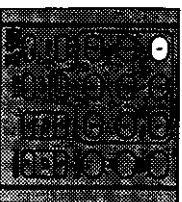

## 3 Set "Date/Time Stamp"

Press 4 repeatedly to set Date/Time Stamp to:

- **Timer** — The date, time, and record source will appear briefly at the start of all timer recordings only (default setting).
- **Cont (Continuous)** — The date, time, and record source will appear continuously over all recordings. The On-Screen Display and Menu system will be disabled if this setting is on. Press Stop on the recording deck to restore normal on-screen functions.
- **All** — The date, time, and record source will appear briefly at the start of all recordings except copies.
- **Off** — The Date/Time Stamp is disabled.

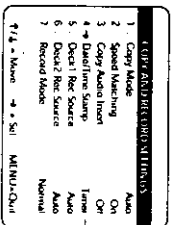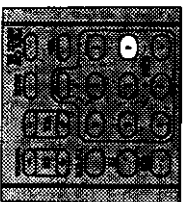

Timer  
Cont  
All  
Off



# 8 - Timer Recording

## How to Set a Timer Recording



*Sometimes you may wish to record a television show when you're not home. Or you may want to create a library of your favorite TV shows. The Timer Recording Feature allows you to set up to 16 events at a time up to 1 year in advance.*

*Simply press the Set Timer button and you're on your way.*

### 1 Open Timer Record Menu

Press Set Timer on the remote control.



Note: If you haven't set the clock, the Set Clock menu will appear. You must set it before you can program a Timer Recording; see page 7.

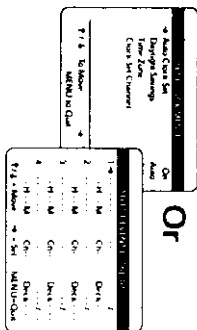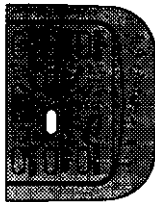

OR

### 2 Choose Event Number



Use the number keys to enter the next available event number; i.e., for "1", press "0-1".

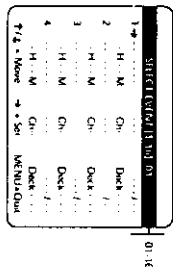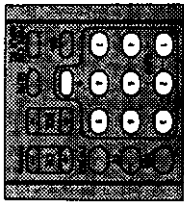


### 3 Set Event Date & Time

Use the number keys to set the date and time of the event. The default setting is the current date and time. To leave an entry unchanged, press the right arrow key. If you enter an invalid number, you will be prompted to reenter a valid one.

- **Set Month** — Enter the month as a 2-digit number; i.e. for August, press "08".
- **Set Day** — Enter the day as a 2-digit number; i.e. for the ninth, press "09".
- **Set Hour** — Enter the hour as a 2-digit number; i.e. for 12:00, press "12".
- **Set Minute** — Enter the minute as a 2-digit number; i.e. for 00:25, press "25".
- **Set AM/PM** — Enter 1 for AM or 2 for PM.

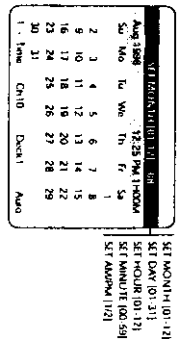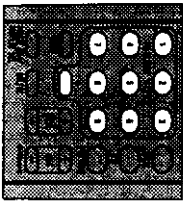

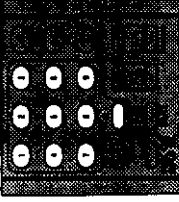


SET LENGTH (H) (M) (S)						
Su	Mo	Tu	We	Th	Fr	Sa
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					
1 - Time	Ch10	Deck1				Auto

## 4 Set Event Length

Use the number keys to set the length of the event. The default setting is 0 Hours and 30 Minutes.

- **Set Length (H)** — Enter the hours as a 2-digit number; i.e. for 1 hour, press "01".
- **Set Length (M)** — Enter the minutes as a 2-digit number; i.e. for 30 minutes, press "30".

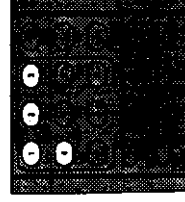

SET TYPE (1-4)						
Su	Mo	Tu	We	Th	Fr	Sa
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					
1 - Time	Ch10	Deck1				Auto

## 5 Set Event Type

Use the number keys (1-4) to set how often the event will be recorded. The default setting is one time.


- 1 **1 - Time** — The event will be recorded once only.
- 2 **Weekly** — The event will be recorded every week.
- 3 **Monday-Friday** — The event will be recorded every weekday.
- 4 **Always** — The event will be recorded every day.

**Cable Box Recording—**  
*If you are programming a timer recording with a cable box, set the Record Source to Channel 2, 3, or 4—whichever your cable box uses—and select the channel you wish to record on the cable box.*

## 6 Set Recording Source

Use the number keys (1-3) to set the record source. The default setting is the current tuner channel.

- 1 Channel** — Records video and audio from the Tuner. Use the number keys (0-9) or up/down arrow keys to set the channel number.
- 2 Aux** — Records video and audio from the front line inputs.
- 3 Channel Simulcast** — Records video from the Tuner and audio from Aux (usually connected to an FM stereo).

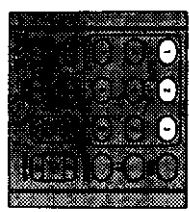


1	2	3	4	5	6	7	8	9	0	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan	Chan

## 7 Set Recording Deck

Use the number keys (1-2) to set the deck in which you would like to record. The default setting is the currently selected deck.

- 1 Deck 1** — Sets the Timer Recording to record in Deck 1.
- 2 Deck 2** — Sets the Timer Recording to record in Deck 2.

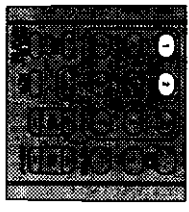


1	2	3	4	5	6	7	8	9	0	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1	Deck1

**Complete Program Record**  
 When Auto is selected, the Timer event begins to record in SP; the VCR then calculates how much time is remaining on the tape and adjusts the record speed to EP if necessary to fit the entire event. If there is not enough tape to record the entire event, the VCR will record in EP until the end of the tape is reached.

## 8 Set Recording Speed

Use the number keys (1-3) to set the recording speed. The default setting is Auto.

- 1 **Auto** — Complete Program Record (see note at left).
- 2 **SP** — Standard Play. Delivers best quality. A T-120 tape will record 2 hours.
- 3 **EP** — Super Long Play. Delivers maximum recording time. A T-120 tape will record 6 hours.

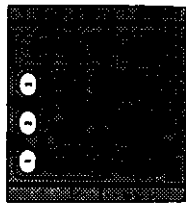

SET SPEED (1-3)


Day	Mo	Tu	We	Th	Fr	Sa	Su
2	3	4	5	6	7	8	
9	10	11	12	13	14	15	
16	17	18	19	20	21	22	
23	24	25	26	27	28	29	
30	31						

1 Time Ch10 Deck1 Auto


## 9 Confirm Settings

When all settings are complete, press Menu to confirm the Timer event and view a summary of all programmed events.

- To program another event, select the next available event number.
- To edit an existing event, select an event number that has already been programmed.
- To delete an event, use the up/down arrow keys to select it, then press Clear.
- To exit the Event Summary screen, press Menu.

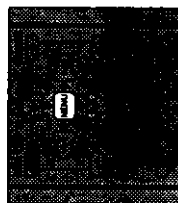

*Be sure your videotape has a Record Safety Tab. If it is missing, you can cover the opening with a small piece of tape. Warning: Do not cover this opening unless you are sure you want to record over the tape.*

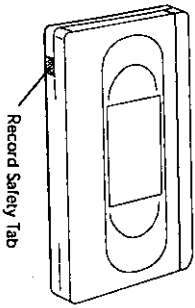

## 10 Insert Tape

Insert a blank tape with a Record Safety Tab into the deck you designated in Step 7.




## 11 Timer Recording is Complete!

The event is stored in memory and will record at the scheduled time. A Timer icon will appear on the front panel display.

Notes:

- If there is a problem with your Timer Recording, the Timer icon will flash and a Timer Record Error will appear on the screen; see page 62.
- The Power will come on automatically when the Timer Recording begins.
- To stop an event in progress, press Stop for the recording deck. A warning message will appear on-screen. Press Stop again to cancel the event.

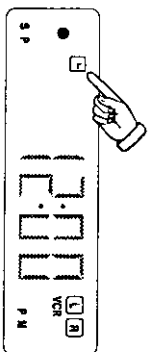


# Timer Recording Errors

*If there is a problem with your Timer Recording, the word Panel Display and an error message will appear on the On-Screen Display. Once you correct the error, the event will begin if there is still time remaining for that event.*



## Tape Missing

- No videotape in recording deck.
- Insert a videotape in the recording deck.

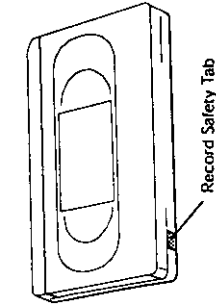


## Tape Missing Tab

- No record safety tab in videocassette.
- Insert a video cassette with the record safety tape intact, or place a small piece of adhesive over the opening to permit recording.


## Not Ready

 - The recording Deck is not in Stop mode (i.e. it is playing, rewinding, etc.).
- Stop the recording deck.



## Overlapping Events

- Two or more events are programmed to occur at the same:
- When you program a new event, the VCR checks all timer events for conflicts. If two events overlap, you will be prompted to either delete one of the events, or allow them to overlap.
  - If events overlap, the first event will be completely recorded, then the next event starts and the remainder of that event is recorded.

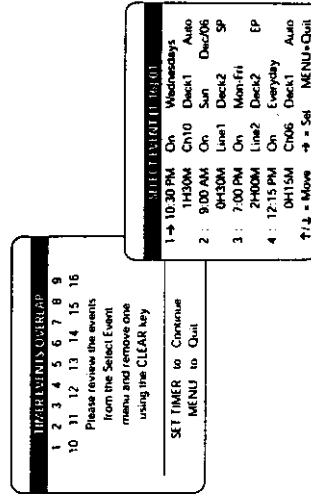



# 9 - Editing Features

## 8-Scene Editor


There are two ways to edit your movies with the Dual-Deck VCR. You can use the 8-Scene Editor, which automatically assembles up to 8 scenes when you mark their beginning and ending points. Or you can use the Sync Edit feature, which allows you to manually cut unwanted scenes while copying a tape.

### 1 Insert Source Tape

Put the tape with your source material in Deck 1.

### 2 Insert Target Tape

Put your blank tape in Deck 2. To ensure quality edits, it is best to record on blank or pre-formatted tapes. You can format your tapes by recording the line input over the entire tape with no signal.


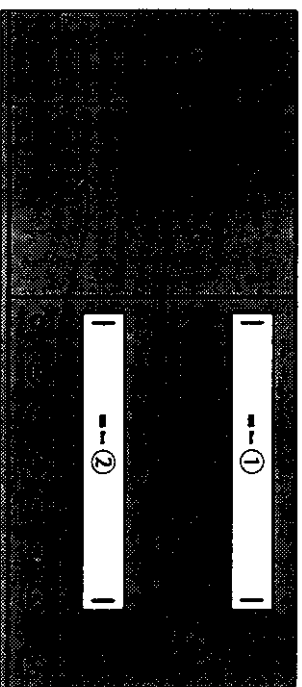


### 3 Review Source Tape

Make a list of the scenes you wish to use in your final movie with their beginning and ending tape counter positions. Reorder the scenes if desired.



### 4 Open "Main Menu"

Press Menu.

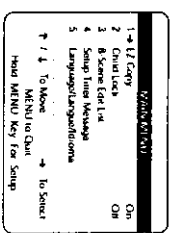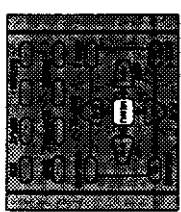



## 5 Select "8-Scene Edit List"

Press 3 to open the 8-Scene Edit List menu.

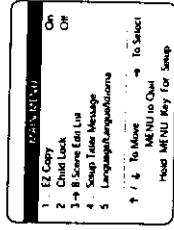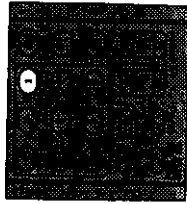


## 6 Select Scene Number

Choose a scene number from 1 to 8. You can enter scenes in any order.

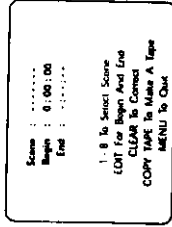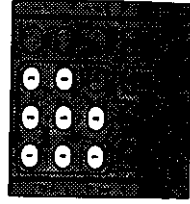



## 7 Mark Beginning of Scene

Play the tape to the beginning of the desired scene and press the Edit/Title button. Use the special playback functions to quickly find the position you want; see page 44.

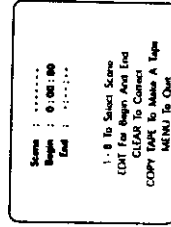

## 8 Mark End of Scene

Play the tape to the end of the desired scene and press the Edit/Title button. Use the Clear button to correct your entries. Repeat Steps 8-10 to load up to 8 scenes at a time.

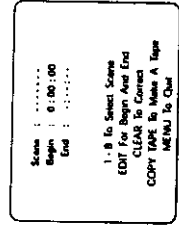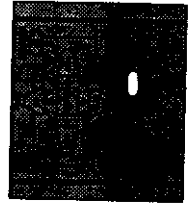


---

## 9 Make a Tape

When you are satisfied with the order and length of each scene, press Copy Tape to begin assembling the tape.

Notes:

- The Dual-Deck VCR will automatically copy each scene in order from the source tape to the target tape.
- When the process is finished, return to Step 6 to add more scenes, or press Menu to quit.

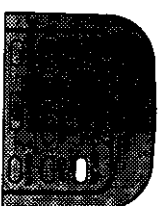

# Sync Editing


*The second way to edit movies is to use Sync (short for Synchronized) Editing. This method is useful if you want to copy part of a tape, or if you want to cut commercials while copying a TV show. The Copy Tape button is the key to synchronizing the playback deck with the recording deck.*

## 1 Before You Begin —

- Turn off Auto Play; see page 47.
- Turn off EZ Copy; see page 38.

## 2 Insert Source Tape

Put the tape with your source material in Deck 1.

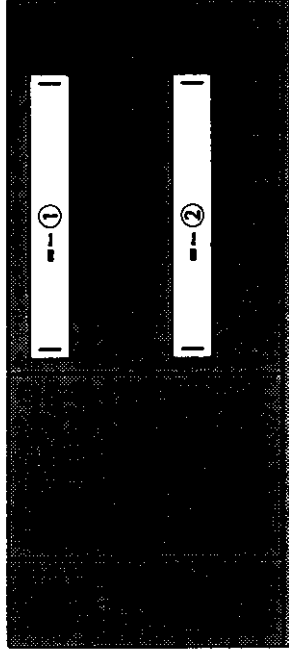

## 3 Insert Target Tape

Put your blank tape in Deck 2.


## 4 Position Target Tape

Play the tape in Deck 2 to where you want the copied material to start, then press Still. Leave at least 1 minute of blank tape at the beginning of a tape to ensure a crisp edit.



## 5 Set Target Tape to Record/Pause

While the target tape is in Play/Still mode, press Record for Deck 2. This puts the deck in Record/Pause mode.

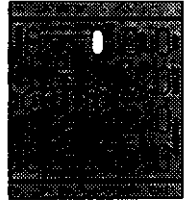


---

*To automatically cut commercials when performing a Sync Edit, see Skip Edit on the following page.*


## 6 Position Source Tape

Play the tape in Deck 1 to the beginning of the segment you wish to copy, then press Still. Use the special playback functions to quickly find the position you want; see page 44. Copy Tape will flash on the front panel display.

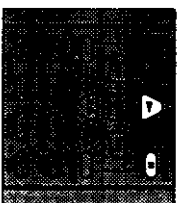


## 7 Start Sync Edit

Press the Copy Tape button. The tape in Deck 1 will begin copying to Deck 2.

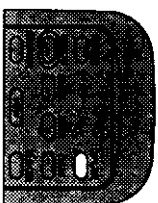


## 8 Pause Sync Edit

Press the Copy Tape button to pause the Sync Edit. Copy Tape will flash on the front panel display. While Sync Edit is paused, you can reposition the source tape in Deck 1, e.g. to fast-forward over a commercial.

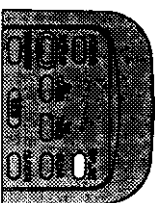


## 9 Resume Sync Edit

To resume the Sync Edit, press the Copy Tape button again. To stop the Sync Edit process, press Stop on both decks.

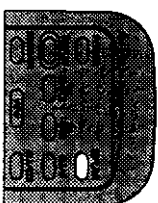

OR

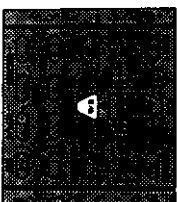

# How to Cut Commercials with Skip Edit

---

*The Skip Edit feature allows you to remove commercials during a Sync Edit at the touch of a button. Commercials typically run from 1 to 5 minutes in length. Each time you press Skip Edit, you will automatically cut 1 to 5 minutes of source tape from your target tape.*

## **1** Set Up a Sync Edit

Follow Steps 1-6 on page 66.

## **2** Preview Commercials

As you position your source tape, note how many minutes the commercials are that you wish to cut.


## **3** Start Sync Edit

Press Copy Tape to begin copying the source tape from Deck 1 to Deck 2.



## **4** Cut the Commercials

When the commercials start, press Skip once for every minute of commercials to be deleted. The Dual-Deck VCR will automatically edit out the commercials on the target tape, then resume copying.


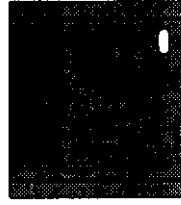


# On-Screen Titler

You can add titles or credits to your movies with the On-Screen Titler. Create your message from over 100 letters, numbers and symbols. There are two steps to using the titler: Setting up the Titler Message and Recording the Title.



## 1 Open "Main Menu"

Press Menu on the remote control.

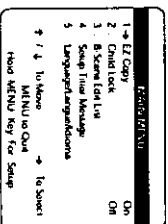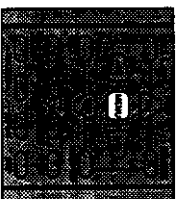



## 2 Select "Setup Titler Message"

Press 4.

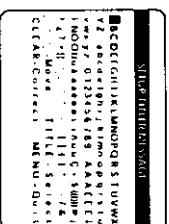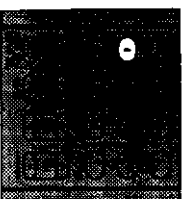


## 3 Compose Your Message

Use the up, down, left, & right arrow keys to select each character in your message, pressing Edit/Title after each to insert the character at the current cursor position. If you make a mistake, press Clear to backspace to the previous character.

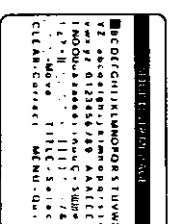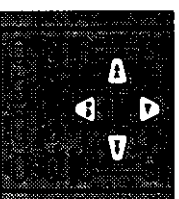

## 4 Save Your Message

When you are satisfied with your message, press Menu to save and quit.

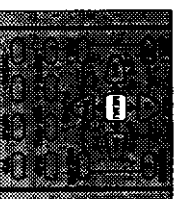


# Recording Titler Message

---

*Once you have set up your Titler Message, you can record it by pressing the Edit/Title button while a tape is recording in Deck 2. You can record the title for up to 20 seconds in 5-second increments.*

## 1 Start Recording


Insert your target tape in Deck 2 and initiate any Record mode, i.e., Record, One-Touch Record, Copy Tape, or Timer Record. See the corresponding chapters to activate any of these modes. Note: You must use Deck 2 to record Titler Messages.

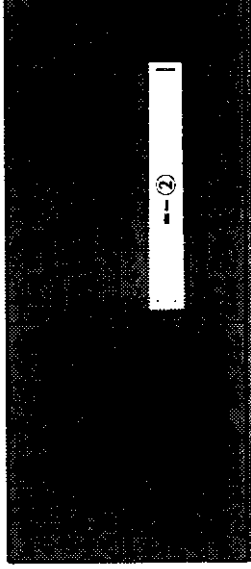

## 2 Record Titler Message

While in Record mode, press Edit/Title repeatedly to record your Titler Message on-screen for 5, 10, 15, or 20 seconds.

Note: You must be recording a video signal when you record your Titler Message, i.e. you cannot record a title on blank tape.

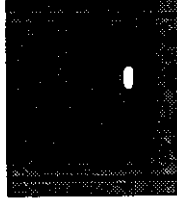



# 10 - Search/Index Features


## Overview

---

*The Dual-Deck VCR Search/Index features allow you to scan and search for Index Marks, quickly find blank tape, search for exact tape counter positions, and return to 0:00:00. The real-time tape counter gives you real-time feedback on the precise position of your tapes.*

### CLK/Ctr Button

Press the CLK/Ctr button repeatedly to change the view on the front panel display among the following:

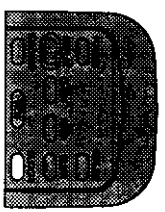

### Clock

Shows you the time as set in the Set Clock Menu.



### Real-Time Tape Counter

Shows you the tape position in the active deck in hours, minutes, and seconds.



### Time Remaining


Shows you the amount of time left on the tape in the active deck, computed by subtracting the current tape position from the total tape length in hours and minutes.



Note: The Clock/Counter/Time Remaining display will not appear if there is a deck status message on the front panel display, such as Copy, Play, Stop, etc.

# Placing Index Marks

*Index Marks are like book-marks on your videotapes. They are inserted automatically at the start of every recording, or you can place them manually anywhere on a tape.*


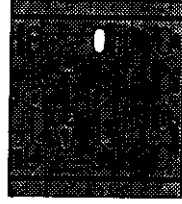


## Automatic Index Marks

Index Marks are placed automatically whenever you start recording. This includes normal recording, OTR (One Touch Recording), timer recording, copying, or sync editing.

## Manual Index Marks

You can place an Index Mark manually any time a tape is recording by pressing Search/Index on the remote control. "Index" will flash briefly on the On-Screen Display while the mark is recorded.

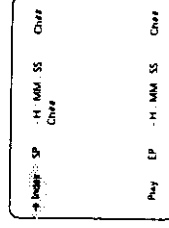
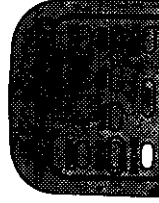


# Index Scan

*Index Scan will fast-forward or rewind to the nearest Index Mark, play a few seconds of tape, and then fast-forward or rewind to the next Index Mark. When you find the show you want to watch, press Play. Use this feature with the Date/Time Stamp to quickly find Timer Recordings on your tapes.*



## 1 Open "Search Menu"

From Stop or Play mode, press Search/Index.

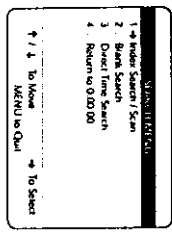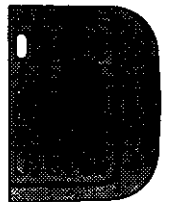



## 2 Select "Index Search/Scan"

Press 1.

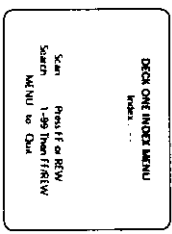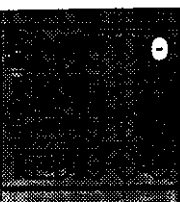


## 3 Scan for Index Marks

Press FF or Rewind to begin scanning for Index Marks forwards or backwards.

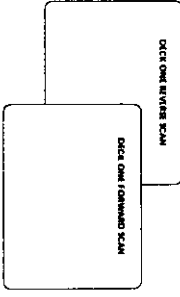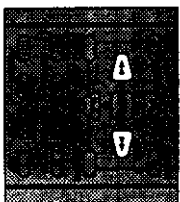

## 4 Review the Tape

When the Index feature locates an Index Mark, it will play the tape for 5 seconds. If it is the scene you want to watch, press Play. If it is not, the VCR will automatically search for the next Index Mark.


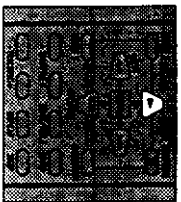


# Index Search

*Index Search will fast-forward or rewind a specific number of Index Marks from 1 to 99. When it reaches the desired Index Mark, it will play the tape. Use Index Search when you know the exact Index Mark you want to locate.*



## 1 Open "Search Menu"

From Stop or Play mode, press Search/Index.

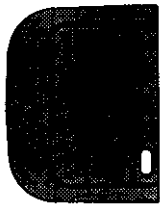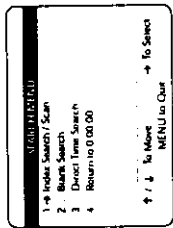


## 2 Select "Index Search/Scan"

Press 1.

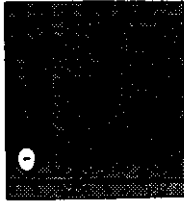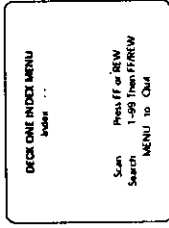



## 3 Enter # of Marks to Search

Enter a number from 1 to 99; i.e. press "0-5" for "5".

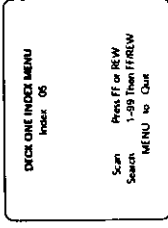

## 4 Search for Index Marks

Press FF or Rewind to begin searching for Index Marks forwards or backwards. When the VCR locates the Index Mark, it will play the tape.

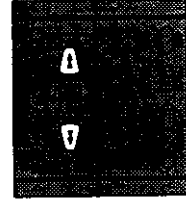
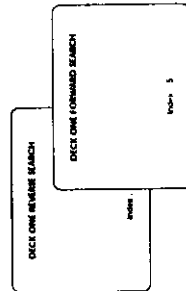


# Blank Search

You can automatically find the next blank section of your videotape with Blank Search. This is useful when a videotape has been used but still has open space left for recording.


## 1 Open "Search Menu"

From Stop or Play mode, press Search/Index.

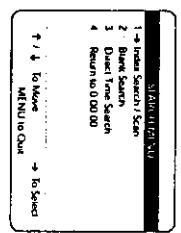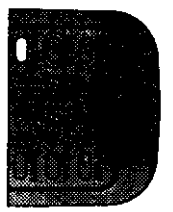

## 2 Select "Blank Search"

Press 2. The Dual-Deck VCR will automatically search for the next available section of blank tape and stop. If no blank tape is found, the tape will eject.


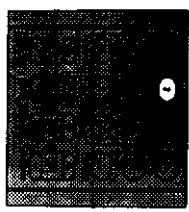


# Direct Time Search

*Use Direct Time Search to locate a specific tape location in hours, minutes, and seconds. This is especially useful when you have taken a careful inventory of the contents of your tape for editing—you can advance the tape directly to the beginning of the desired scene.*



## 1 Open "Search Menu"

From Stop or Play mode, press Search/Index.

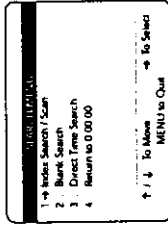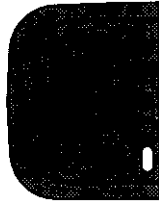


## 2 Select "Direct Time Search"

Press 3.

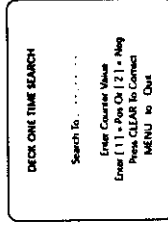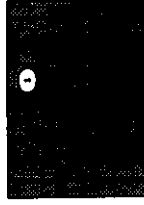



## 3 Select +/- Counter Value

Press 1 for positive or 2 for negative counter values.

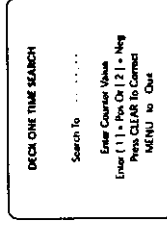



## 4 Enter the Time

Use the number keys (0-9) to enter the time in hours, minutes, and seconds. Press Clear to correct your entry.

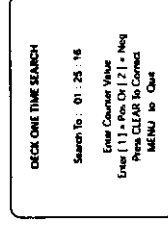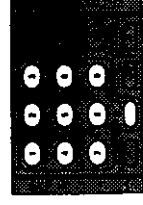

## 5 Start the Search

Press Search/Index to advance the tape to the specified time.

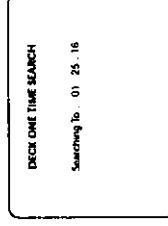
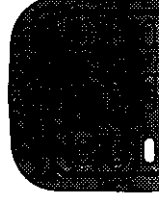


# Return to 0:00:00

You can advance your video-tapes to tape counter position 0:00:00 at the touch of a button. This feature is useful when editing from a baseline counter value of 0:00:00.



## 1 Open "Search Menu"

From Stop or Play mode, press Search/Index.

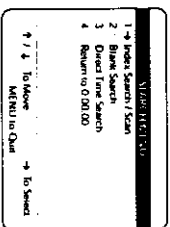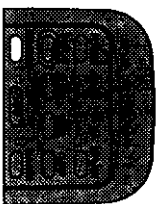

## 2 Select "Return to 0:00:00"

 Press 4. The tape will rewind or fast-forward to tape counter position 0:00:00.

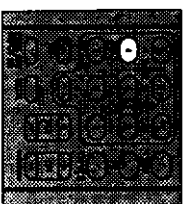





# 11 - Advanced Connections

## Cable Box Hookup


*This chapter will show you how to connect external devices, such as a cable box, stereo, or satellite receiver, to your Dual-Deck VCR.*

### 1 Connect Cable to Cable Box

Connect an RF antenna cable from your cable wall outlet to the "In from Cable" jack on the Cable Box.


### 2 Connect Cable Box to VCR

Connect a second RF cable from the "Out to TV" jack on the Cable Box to the "In from Antenna" jack on the back panel of the VCR.

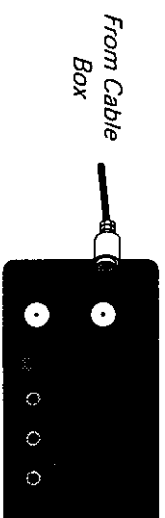

### 3 Connect VCR to TV

Connect the supplied RF cable from the "Out to TV" jack on the back panel of the VCR to your television's "Antenna In" jack.

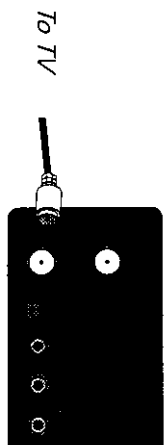



### 4 Plug In VCR

Connect the VCR power cord to a standard 120V/60Hz wall outlet.



### 5 Turn On TV, VCR & Cable Box

Press the power buttons on the remote control, TV, and Cable Box.

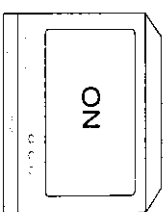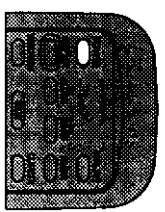

---

## 6 Set VCR Output Channel


Set the channel switch on the back panel of the VCR to 3 or 4, whichever is NOT used by your cable box.



---

## 7 Tune TV to the Same Channel

Select the channel you used in step 6.

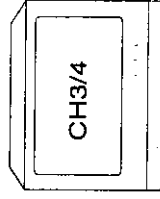


---

## 8 Connection is Complete!

The Set Language menu will appear on your television screen. Please proceed with Auto Setup in Chapter 2.

Notes:

- Use your cable box to select channels.
- If you are not getting a good picture, repeat steps 6 and 7 using the other channel; i.e. channel 4 instead of channel 3.

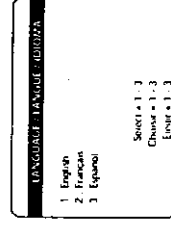


# Stereo Audio Connections (GV6650 only)

*You can enjoy stereo sound when watching movies and TV shows by connecting your Dual-Deck VCR to your home stereo system or stereo TV.*


## 1 Connect VCR to Stereo

Connect RCA cables from the Left & Right Audio Outputs on the back of the VCR to the Auxiliary Inputs on your stereo receiver. If you are using a stereo television, connect the Video Output as well.

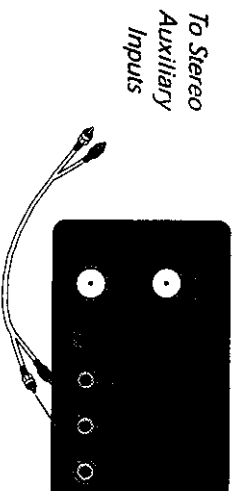


## 2 Set Playback Audio to Hi-Fi

Make sure that Deck 1 Hi-Fi and Deck 2 Hi-Fi are turned on in the Dual-Deck Features menu; see page 48.

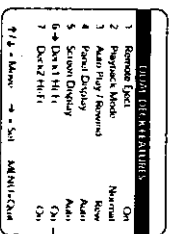

And

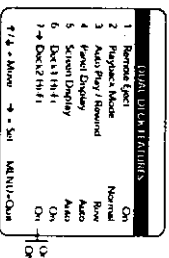


## 3 Set Stereo to Auxiliary Mode

Set your stereo receiver or television to "Aux" or "Tape," whichever selects the line input for your brand of stereo.

## 4 Play a Tape

Insert a videotape in your VCR and adjust the volume on your stereo receiver or television. You should hear the audio through your stereo speakers!

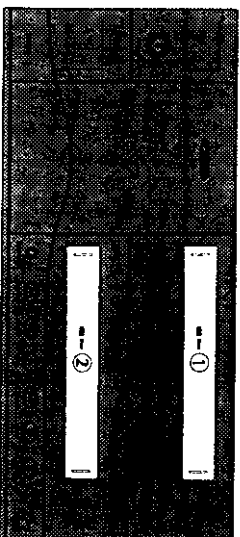


# TV Monitor Connections

*Monitor-style televisions offer improved sound and picture than regular televisions because they receive the audio and video signals directly from the VCR through the line inputs. Note: A TV monitor is not the same as a computer monitor.*


## 1 Connect VCR to TV Monitor

Connect RCA cables from the Audio and Video Outputs on the back of the VCR to the Audio and Video Inputs on your TV monitor. *GV6025 has mono out only.*

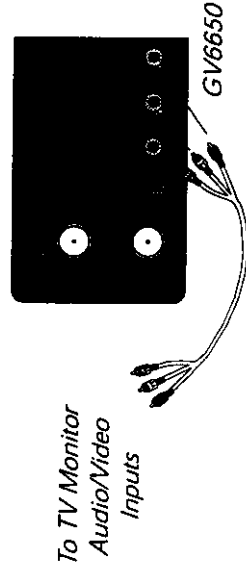


## 2 Set TV to Auxiliary Mode

Set your TV monitor to "Aux," "Video," or "Line." Refer to your monitor's owner's manual for the correct setting.

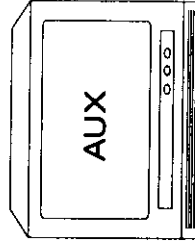

## 3 Connection is Complete!

Note: With this connection, the TV/VCR button has no effect. It is as if the TV/VCR button were always set to VCR.

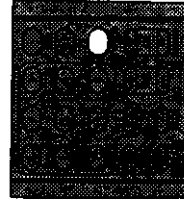

# Connecting Other Video Equipment

You can connect a wide variety of audio/video equipment to your Dual-Deck VCR, including:

- A Third VCR
- Laser Disc Player
- DVD Player
- Camcorder
- Satellite Receiver
- Video Game

Since all of these devices use essentially the same connections, they will be described together.


## 1 Connect Device to VCR

Connect RCA cables from the Audio and Video Outputs of your external device to the Audio and Video Inputs on the front of the VCR.




## 2 Watch Device

Press the TV View button until the playback from Aux (front panel inputs) appears on your TV screen.

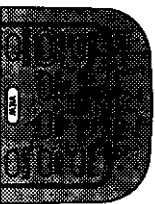


## 3 Record Device

Press the TV View button until the playback from Aux (front panel inputs) appears on your TV screen, then press Record.

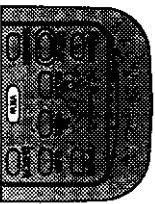

## 4 Timer Record From Device

Select Aux as your record source in the Timer Record menu. All other Timer Record settings should be set in the usual manner; see page 57.

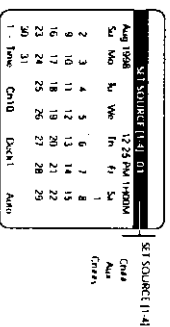




# Appendix A

## Multi-Brand Remote Setup

*You can program your remote control to operate many popular brands of televisions. Find your TV on the list at right and follow the instructions for setup. To determine which remote control buttons are available to control your TV, see the table on the following page.*


### 1 Turn On TV

Press the power button on your TV.

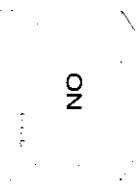

### 2 Program Code

Press and hold down the TV button while entering the 2-digit code for your brand of television:

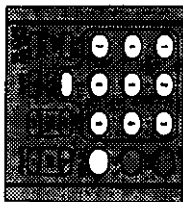


### 3 Check Your Results

If the TV advances to the next active channel, programming is complete! If the TV does not respond, try another 2-digit code. Some TV's are not listed but can be programmed.

### 4 Operate Your TV

Press TV to set the remote control to operate your TV. Note: When the remote control is in TV mode, it will NOT operate your VCR. To return to VCR mode, press VCR on the remote control.

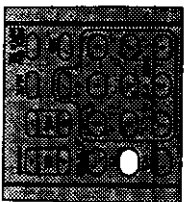

Samsung (old)	TV + 01
Sharp (new)	TV + 02
Sony	TV + 03
Magnavox	TV + 04
Sanyo	TV + 05
Goldstar (new)	TV + 06
RCA/GE	TV + 07
Goldstar (old)	TV + 08
Toshiba	TV + 09
Hitachi	TV + 10
IVC	TV + 11
Panasonic	TV + 12
Mitsubishi	TV + 13
Samsung (new)	TV + 14
Samsung (Latin)	TV + 15
Sharp (old)	TV + 16
Zenith	TV + 17
Goldstar	TV + 18
Daewoo	TV + 19
Sanyo (PAL)	TV + 20
Emerson	TV + 21
Sharp (PAL)	TV + 22

# Multi-Brand Remote Operation

	Power	0-9	100+	Ch+/-	Voi+/-	Display
Samsung (old)	•	•		•	•	
Sharp (new)	•	•		•	•	
Sony	•	•		•	•	•
Magnavox	•	•		•	•	
Sanyo	•	•	Display	•	•	
Goldstar (new)	•	•		•	•	
RCA/GE	Off	•		•	•	•
Goldstar (old)	•	A-K		•	•	
Toshiba	•	•	•	•	•	
Hitachi	•	•		•	•	
JVC	•	•		•	•	•
Panasonic	•	•		•	•	•
Mitsubishi	•	•		•	•	•
Samsung (new)	•	•		•	•	
Samsung (Latin)	•	•		•	•	
Sharp (old)	•	•		•	•	
Zenith	•	•	•	•	•	
Goldstar	•	•	•	•	•	•
Daewoo	•	•	•	•	•	•
Sanyo (PAL)	•	•	•	•	•	•
Emerson	•	•	•	•	•	•
Sharp (PAL)	•	•	•	•	•	•



## **Frequently Asked Questions (FAQs)**

---

*The following are some of the most frequently asked questions about our Dual-Deck VCRs. If you don't find the answers you need here, you can contact our Customer Service Department by phone at (602) 922-0896. Office hours are Monday-Friday, 6:00 a.m. to 7:00 p.m. and 8:00 a.m. to 4:00 p.m. MST on Saturday. You can also contact us anytime at our e-mail address: "custsvc@sensoryscience.com." Or refer to a listing of authorized Go-Video service centers on our Web site at "www.govideo.com."*

### **Why am I not getting a picture?**

- Make sure the TV/VCR button is set to VCR (the VCR icon on the front panel display should be on).
- Make sure your TV is set to the same channel (3 or 4) as the switch on the back of your VCR.

---

### **Why is the picture quality poor?**

- Change the channel switch on the back of the VCR, i.e. if it's set to 3 change it to 4. Make sure your TV is set to the same channel.
- If the picture is bad while playing a tape, try adjusting the tracking control. Press the Tracking +/- keys on the remote control.
- The video heads may be dirty; try cleaning the heads with a nonabrasive head cleaning tape.

---

### **Why can't I record from my cable box?**

Make sure the VCR is tuned to the cable box output channel (2, 3, or 4). Confirm this channel with your local cable provider.

---

### **Why can't I Timer Record?**

- Make sure the clock is set to the correct time, and the AM/PM adjustment is set correctly.
- If you have a cable box, make sure the Record Source is set to the cable box output channel (2, 3, or 4), and that the cable box is set to the channel you wish to record.

---

### **Why isn't my remote control working?**

- Make sure you are pointing the remote control directly at the VCR and that there are no obstacles between the remote control and VCR. Sunlight on the VCR front panel can sometimes interfere with the remote signal.
- Make sure the batteries in your remote are fresh and installed properly.
- The "TV" button may have been pressed by accident. This makes the remote control only operate the television. Press the VCR key on the remote and try again.

---

### **Why do my tapes record at different speeds when I use Copy Tape?**

Because Speed Matching is off in the Copy & Record Settings menu. Turn Speed Matching on to guarantee that the recording speed of the copy will match the playback speed of the source tape.

---

### **Why does the tape eject when I use Copy Tape or put a tape in to record?**

Make sure the record safety tab has not been removed from your tape. If the tab is missing, you can place a small piece of tape over the opening.

---

### **Why does the tape sometimes play or rewind when I don't want it to?**

- Turn Auto Play/Rewind off in the xx menu. When this feature is turned on, the VCR will automatically play tapes whenever you load them and/or rewind tapes when they reach the end.
- Turn EZ-Copy off in the xx menu. When EZ-Copy is turned on, both decks will automatically rewind before recording when you press Copy Tape.

---

### **Why does my on-screen display show "Error"?**

This indicates a problem with the VCR tape mechanism. Turn the power off and on again to reset. If this does not clear the error, unplug the VCR from the power outlet and inspect both tape slots for foreign objects, or for jammed or crooked tapes.

---

### **Why can't I eject a tape using my remote?**

- Make sure Remote Eject is turned on in the xx menu.
- If you have programmed scenes for editing in the 8-Scene Edit List, you cannot eject the tape in Deck 1 with the remote control. This protects you from losing your scene programming. You can either clear the scenes from the Edit List or press Stop/Eject on the front panel, which erases the scenes automatically.

---

### **Why can't I reset the Deck 1 tape counter?**

If you have programmed scenes for editing in the 8-Scene Edit List, you cannot reset the Deck 1 tape counter. This protects you from losing your scene programming. You can either clear the scenes from the Edit List or press Stop/Eject on the front panel, which erases the scenes automatically.

---

### **Why doesn't my VCR work?**

- A strong static electricity shock or other unforeseen circumstances may cause the control system of your Dual-Deck VCR to lock up. To reset the control system, first unplug the power cord from the wall outlet for 10 seconds and plug it in again.
- If this doesn't restore all operations to normal, unplug the VCR again for 15 minutes. You will then need to reset the clock (if the clock is still set, you haven't unplugged it long enough).
- If these steps do not correct the problem, the Dual-Deck VCR must be serviced by an authorized service center.

---

### **Why can't I bring up the 8-Scene Edit List?**

- Insert a tape in Deck 1. The VCR must have a tape in Deck 1 for the Edit List to appear.
- Edit List is not available during Copy Tape.

---

### **Why aren't the tape counters moving?**

If the VCR is playing a blank section of tape (only video noise, or "snow" appears on-screen), the tape counter cannot operate. The VCR requires a control track, which is only present on recorded tape, to provide counter information.

---

### **Why can't I get a menu or an on-screen display?**

- If the VCR is playing a blank section of tape (only video noise, or "snow" appears on-screen), the VCR cannot produce on-screen menus or displays. Stop the tape or record on it to enable the displays.
- The remote may be set to control the TV instead of the VCR. Press the VCR button on your remote to reactivate it.
- If the Date/Time Stamp is set to Cont (Continuous) and a recording is in progress, the on-screen menus and displays are disabled. Press Stop on the recording deck to restore normal on-screen functions.

---

### **Why do I get a blue screen?**

- If a channel is too weak to deliver a clear picture, the VCR will display a blue screen in its place. To see channels with poor reception, turn on the Show Weak Channels feature in the xx menu.
- Double-check your antenna connections or tuner settings.

---

### **Why is my Power button blinking?**

The VCR is in Auto Power Off mode. If you press the Power button while rewinding, copying, Timer Recording, One-Touch Recording or using EZ-Copy, the VCR will automatically turn off when the function is completed. Pressing the Power button toggles Auto Power On and Off.

---

### **Why is my Copy Tape button blinking?**

The Copy Tape procedure is in Pause mode. See Sync Editing on page 66.

---

### **Why do I lose stereo sound when I turn on my VCR? (GV6650 only)**

If your TV and VCR are connected with an RF coaxial cable, you will only hear stereo sound if the VCR is turned off. To hear stereo sound with the VCR turned on, you must connect the TV and VCR with RCA line cables; see page 81.

---

### **Why won't my remote operate all my TV functions?**

The remote control does not have a command for every function of your television. Some brands of television will only respond to a limited number of functions. See the table on page 86 for a list of common brands and functions.

# Technical Specifications

VIDEO SYSTEM	1/2-inch VHS system, 4 rotary head helical scanning, FM azimuth luminance; chrominance: converted sub system phase shift
TELEVISION SYSTEM	NTSC-type color signal EIA standard (525 lines, 60 fields)
AUDIO TRACK	Normal: 1 track; Hi-Fi: 2 track (GV6650 only)
TAPE WIDTH	12.7 mm, 1/2 inch
TAPE SPEED	SP: 33.35 mm/s; EP: 11.12 mm/s
PLAY/RECORD TIME	T-180 tape: SP 3 hours, EP 9 hours
FF/REW TIME	T-120 tape: <2 minutes
HEADS	
Video:	DA 4 rotary heads
Audio:	GV6650: 2 rotary heads (Hi-Fi), 1 stationary head (Linear)
Control:	1 stationary head
Erase:	1 full track, 1 audio track
VIDEO	
Input:	FROM ANTENNA ("F"-type) 75 ohms unbalanced, 1 V P-P
Output:	TO TV ("F"-type) 75 ohms unbalanced, 1 V P-P
Horiz Res:	Monochrome, more than 230 lines
S/N Ratio:	Better than 43 dB
AUDIO	
Input:	AUDIO IN (RCA) -8 dbm, 47K ohms
Output:	AUDIO OUT (RCA) -8 dbm, 1.5K ohm
TV Tuner:	181 channel frequency synthesized, VHF input Ch 2 - Ch 13, UHF input Ch 14 - Ch 69, VHF & UHF one input, Cable Ch 5A, A-5 through A-1, A-1, J through W+58, W+59 through W+84, 75 ohm unbalanced.
S/N Ratio:	Better than 68 dB (Hi-Fi)
WOW & FLUTTER	Less than 0.005% (Hi-Fi)
RF MODULATION	Channel 3 or 4
FREQUENCY RESPONSE	20-20,000 Hz (Hi-Fi)
POWER REQUIREMENT	120V AC, 60 Hz, 35 watts maximum
CLOCK BACKUP TIME	10 minutes
ENVIRONMENT	41-104 F (5-40 C); 10%-75% humidity
DIMENSIONS	540 x 100 x 400 mm (22" x 4" x 15 3/4")
WEIGHT	8 Kg (20 lbs.)

---

## **Dual-Deck VCR Limited Warranty**



### **Who Provides the Limited Warranty**

During the warranty period, the Go-Video Warranty Administrator will honor Dual-Deck VCR service for 90 days labor, 1 year parts from the original date of consumer purchase. See below for Commercial, Industrial or Educational use coverage. Dual-Deck VCR remote controls are warranted for 90 days from the date of purchase.

### **Who is Protected**

This warranty protects the original consumer owner of this Go-Video product.

### **What is Covered and How Long**

This warranty covers internal operating parts and service/labor to repair or replace covered parts in this Go-Video product for 90 days labor, 1 year parts, from the date of purchase, defined as follows: (1) Original Consumer Retail Purchase; (2) First Rental Purchase Agreement; or (3) First Lease Purchase Agreement (the "Warranty Period"). Labor and replacement parts supplied during the Warranty Period are covered only for the remaining portion of the original Warranty Period. The Go-Video Warranty Administrator shall have no liability for service under this warranty if non-OEM (Original Equipment Manufacturer) replacement parts are used in the repair of your Go-Video product.

### **What the Owner Must Do If Service is Required**

If service under this warranty is required, contact the Go-Video Warranty Administrator at (602) 922-0896 to determine the nearest authorized Go-Video service center.

---

## **Other Warranty Coverage**

Commercial, Industrial or Educational use has the same warranty coverage as stated in this warranty.

## **What are the Exceptions**

This warranty does not cover: (1) Normal maintenance service, such as video head cleaning. (2) Damage from misuse, abuse neglect or accident, natural disasters or Acts of God. (3) Cabinetry, decorative parts, A/C adapters, knobs or buttons. (4) The foreign country use of this product. (5) Go-Video product which has been electronically or mechanically modified in any way or incorporated into other products. (6) Installation and setup service adjustments. (7) Owner instruction. Your Owner's Guide provides information regarding operating instructions and user controls. For additional information, contact your authorized Go-Video dealer.

Go Video is not responsible for any shipping, handling or insurance charges.

This Exclusive Limited Warranty excludes all incidental and consequential damages. Some states do not allow the exclusion of incidental and consequential damages, so the above exclusion may not apply to you.

**ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY PERIOD.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Exclusive Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**GO-VIDEO WARRANTY ADMINISTRATOR**

Sensory Science Corp.

7835 East McClain Drive • Scottsdale, Arizona 85260-1732

(602) 922-0896 • [custsvc@sensoryscience.com](mailto:custsvc@sensoryscience.com)



# Index

# Index

## Symbols

- 0-9 Buttons 14, 23
- 100+ Button 14
- 8-Scene Editor 63

## A

- Add Channel 31
- AM/PM Indicator 17
- Antenna/Basic Cable Connections 2
- Arrow Buttons 23
- Audio Connections 81
- Audio Mono Input 16
- Audio Stereo Inputs 16
- Auto Channel Search 5, 30
- Auto Clock Set 7
- Auto Clock Set Channel 11
- Auto Play 47
- Auto Rewind 47
- Auto Setup 5
- Auto Time Set 5
- Auto Tracking 45

## B

- Batteries, Installation 1
- Blank Search 75

## C

- Cable, Basic Hookup 2
- Cable Box Hookup 79
- Camcorder Hookup 83

- Channel +/- Buttons 14, 16

- Channel Search, Auto 30

- Child Lock 19

- Child Lock Indicator 17

- Clear Button 13, 23

- CIK/Ctr Button 13, 71

- Clock Display 71

- Clock, Set Manually 7

- Commercials, Removing 68

- Connections, Advanced 79

- Connections, Basic 1

- Copy Audio Insert 41

- Copy Features 37

- Copy Mode 39

- Copy Tape Button 13, 15

- Copying, Basic 37

- Copyright 4

- Cue 44

- Customer Service 87

## D

- Date/Time Stamp 55

- Daylight Savings, Set 9

- Deck 1 Button 13

- Deck 1 Hi-Fi 48

- Deck 1 View 26

- Deck 2 Button 13

- Deck 2 Hi-Fi 48

- Deck 2 View 26

- Deck Select Button 15

- Deck Select Indicators 15

- Digital Tracking 17
- Direct Time Search 76
- Display Button 13
- Double Speed Playback 44
- Dual-Deck System 13
- DVD Player Hookup 83
- E**
- E-mail address 87
- Edit/Title Button 14
- Editing Features 63
- EP (Extended Play) 52
- EZ Copy 38
- F**
- Factory Settings, Restore 25
- FF Button 13, 15, 24
- First Things First 1
- Frame Advance 44
- Freeze Frame 44
- Frequently Asked Questions (FAQs) 87
- Front Panel Display Overview 17
- Front Panel Display Settings 18
- Front Panel, Door Closed 15
- Front Panel, Door Open 16
- H**
- Help 87
- Hi-Fi/Stereo Indicators 17
- I**
- Index Marks, Automatic 72
- Index Marks, Manual 72
- Index Marks, Placing 72
- Index Scan 73
- Index Search 74
- Initial Settings 5
- J**
- Jet Search 44
- L**
- Language, Initial Setting 5
- Language, Set Manually 6
- Laser Disc Player Hookup 83
- Loop Playback 46
- Loop Recording 54
- Loop Recording with OTR 51
- M**
- Main Menu Tree 21
- Manual Tracking 45
- Menu Button 13, 16, 23, 24
- Menu Navigation, Front Panel 24
- Menu Navigation, Remote Control 23
- Monitor Connections 82
- Mono 34
- Multi-Brand Remote Operation 86
- Multi-Brand Remote Setup 85
- Mute Button 14

**O**  
On-Screen Display Elements 27  
On-Screen Display Overview 26  
On-Screen Display Settings 28  
One-Touch Recording (OTR) 51

**P**

Panel Display 18  
Pause Button 15  
Picture Search 44  
Play Button 13, 15, 24  
Playback Audio Settings 48  
Playback, Basic 43  
Playback Features 43  
Playback Features, Special 44  
Playback Mode 46  
Power Button 13, 15  
Power On Indicator 17  
Prev. Ch/Input Sel Button 14

**R**

Record Indicator 17  
Record Mode 54  
Record Source 53  
Record Speed 52  
Record/OTR Button 13, 15  
Recording, Basic 49  
Recording Features 49  
Recording Options 50  
REM Indicator 17  
Remote Control Overview 13

Remote Control, Programming 85  
Remote Eject 20  
Remove Channel 32  
Repeat Button 14  
Repeat Playback 44  
Restore Factory Settings 25  
Return to 0:00:00 77  
Review 44  
Rewind Button 13, 15, 24

**S**

Safety v  
SAP (Second Audio Program) 35  
Satellite Receiver Hookup 83  
Screen Display 28  
Search/Index Button 13  
Search/Index Features 71  
Sequential Playback 46  
Sequential Recording 54  
Service centers 87  
Set Clock Button 13  
Set Timer Button 13  
Setup Menu Tree 22  
Show Weak Channels 33  
Shuttle +/- Buttons 14  
Shuttle Playback 44  
Simulcast 35  
Skip Button 14  
Skip Edit 68  
Skip Playback 44  
Slow +/- Buttons 14  
Slow Motion Playback 44

SP (Standard Play) 52  
SP/EP Button 14  
Speed Matching 40  
Stere Connections 81  
Stereo, Tuner Audio 34  
Still/Frame Button 13  
Stop/Eject Button 13, 15, 24  
Sync Editing 66

## T

Tape Counter 71  
Tape Speed Indicator 17  
Technical specifications 92  
Third VCR Hookup 83  
Time Remaining 71  
Time Zone, Set 10  
Timer Indicator 17  
Timer Recording Errors 62  
Timer Recording, How to Set 57  
Tiler, On-Screen 69  
Tiler, Recording Message 70  
Tracking 45  
Tracking +/- Buttons 14  
Tuner & Channel List 30  
Tuner Audio 34

Tuner Band 29  
Tuner/Aux View 26  
TV Button 14  
TV+SAP Setting 35  
TV/VCR Button 14, 16

## U

Unpacking your Dual-Deck VCR 1

## V

VCR Button 14  
VCR Indicator 17  
Video Game Hookup 83  
Video Input 16  
View Button 13  
Vol +/- Buttons 14

## W

Warranty 93  
Web site 87



S E N S O R Y  
S C I E N C E

7835 East McClain Drive  
Scottsdale, Arizona USA 85260  
[www.sensoryscience.com](http://www.sensoryscience.com)  
[www.govideo.com](http://www.govideo.com)

Printed in Japan

