



**HiPath 3000  
HiPath 5000 RSM**

HiPath AllServe, Hicom 150 E/H

**optiPoint 500 basic  
optiPoint 500 economy  
optiPoint 500 standard  
optiPoint 500 advance**

**Operating Instructions**

**SIEMENS**

Global network of innovation

# Before You Begin

These operating instructions describe the optiPoint 500 economy, optiPoint 500 basic, optiPoint 500 standard and optiPoint 500 advance telephones on your HiPath 3000 / 5000 RSM.

They describe all functions you can use from your telephone. You may find that some functions you wish to use are not available on your telephone. This may be due to one of the following reasons:

- The function has not been configured for your telephone - address any questions to your service personnel.
- Your communications platform does not support this function - contact your service personnel to upgrade your system.

## Important Notes



Do not operate the telephone in environments where there is a danger of explosions.



Use only original Siemens accessories → Page 106. Using other accessories may cause a hazard and will invalidate the warranty and the CE mark.



Never open the telephone or a key module. If you encounter any problems, contact your service personnel.

Never allow the telephone to come into contact with staining or aggressive liquids such as coffee, tea, juice, or soft drinks. For information on telephone maintenance → Page 109.

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

## Marks



The device conforms to the EU guideline 1999/5/EG, as attested by the CE mark.



This device has been manufactured in accordance with our certified environmental management system (ISO 14001). This process ensures that energy consumption and the use of primary raw materials are kept to a minimum, thus reducing waste production.

# Contents

## Basic operating instructions ..... 8

optiPoint 500 economy/basic/standard control panel	8
optiPoint 500 advance control panel with optiPoint key modules	9
How to Use these Operating Instructions	10
Screen Displays	10
Accessing Functions	11
... Interactively	11
... Via the Program/Service Menu	11
... With Function Keys	11
Functions You Can Use	12
Basic and Enhanced Functions	12
Additional Team and Executive/Secretary Functions	12
Using the Telephone Efficiently	12

## Making Calls – Basic Functions ..... 13

Answering Calls	13
Answering a Call With the Handset	13
Answering a Call with the Speaker (Speakerphone Mode)	13
Switching to Speakerphone Mode	14
Switching to the Handset	14
Open Listening in the Room During a Call	15
Making Calls	15
Off-Hook Dialing	15
On-Hook Dialing	15
Ending the call	16
Redialing a Number	17
Turning the Microphone On and Off	18
Calling a Second Party (Consultation Hold)	19
Switching to the Party on Hold (Toggle)	19
Transferring a Call	20
Call Forwarding	21
Using Variable Call Forwarding	21
Call Forwarding in the Carrier Network	
and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.)	22
Using Callback	23
Storing a Callback	23
Answering a Callback	23
Checking and Canceling a Saved Callback	23
Saving Repertory Dialing Numbers on a Key	24
Using Repertory Dialing Keys	25
Telephone Settings	26
Adjusting the Ring Volume	26
Adjusting the Ring Tone	26

Adjusting the Attention Ring Volume . . . . .	26
Adjusting the Speakerphone to the Room Acoustics . . . . .	27
Adjusting the Receiving Volume During a Call . . . . .	27
Adjusting the Display to a Comfortable Reading Angle . . . . .	27
Display backlight . . . . .	27
Adjusting the display contrast . . . . .	28
Selecting the Language of Screen Prompts . . . . .	28
<b>Making Calls – Convenience Functions . . . . .</b>	<b>29</b>
Answering Calls . . . . .	29
Accepting a Specific Call for Your Colleague . . . . .	29
Rejecting Calls . . . . .	30
Using the Speakerphone . . . . .	30
Answering a Call With a Headset . . . . .	31
Answering Calls from the	
Entrance Telephone and Opening the Door . . . . .	31
Accepting a Call From an Answering Machine . . . . .	33
Dialing/Making Calls . . . . .	34
En-Bloc Sending / Correcting Numbers . . . . .	34
Using a Caller List . . . . .	35
Speed-dial . . . . .	37
Dialing a Number From the Internal Directory . . . . .	39
Dialing from the Telephone Database (LDAP) . . . . .	40
Using Mailboxes . . . . .	43
Talking to Your Colleague With a Speaker Call . . . . .	43
Automatic Connection Setup (Hotline) . . . . .	44
Reserve Trunk . . . . .	44
Assigning a Station Number (Not for U.S.) . . . . .	44
Associated Dialing/Dialing Aid . . . . .	45
During a Call . . . . .	46
Using Call Waiting . . . . .	46
Accepting a Waiting Call (Camp-On) . . . . .	46
Preventing and Allowing Call Waiting (Automatic Camp-On) . . . . .	47
Turning the Call Waiting Tone On and Off . . . . .	47
Parking a Call . . . . .	47
Placing External Calls on Hold . . . . .	48
Conducting a Conference . . . . .	50
Ending a Conference (Initiator Only) . . . . .	51
Activating Tone Dialing (DTMF Suffix Dialing) . . . . .	52
...After a Speaker Call (Announcement) in a Group . . . . .	52
Trunk Flash . . . . .	53
If You Cannot Reach a Destination . . . . .	54
Call Waiting (Camp-On) . . . . .	54
Busy Override - Joining a Call in Progress . . . . .	54
Using Night Answer . . . . .	55

## Saving Functions, Procedures and Appointments 56

Assigning Functions to Keys .....	56
Assigning a Procedure (Operating Steps) to a Key .....	60
Appointments Function .....	61
Saving Appointments .....	61
Using Timed Reminders .....	62

## Displaying and Assigning Call Charges ..... 63

Displaying Call Charges (Not for U.S.) .....	63
Displaying Call Charges for Another Telephone (Not for U.S.) .....	64
Dialing with Call Charge Assignment .....	65

## Private Sphere/Security ..... 66

Turning Ringer Cutoff On and Off .....	66
Turning Do Not Disturb On and Off .....	66
Caller ID Suppression .....	67
Silent Monitor .....	67
Monitoring a Room .....	67
Trace Call: Identifying Anonymous Callers (Not for U.S.) .....	68
Locking the Telephone to Prevent Unauthorized Use .....	69
Locking Another Telephone to Prevent Unauthorized Use .....	70
Saving Your PIN .....	71

## Using Other Functions ..... 72

Sending a Message .....	72
Creating and Sending a Message .....	72
Displaying and Deleting Messages You Have Sent .....	73
Answering Messages .....	74
Leaving an Advisory Message .....	74
Deleting Advisory Messages .....	75
Display Number of Waiting Calls and Overload Indication .....	75
Using Another Telephone Like Your Own .....	76
Change call number (relocate) .....	77
Fax Details and Message on Answering Machine .....	78
Resetting Services and Functions (System-Wide Cancellation for a Telephone) .....	79
Activating Functions for Another Telephone .....	80
Using System Functions from the Outside (DISA: Direct Inward System Access) .....	81
Using functions in ISDN via code dialing (keypad dialing) .....	83
Controlling Connected Computers or Other Programs and Telephone Data Service (HiPath 3500/3550/3700/3750 Only) .....	84
Controlling Relays .....	85
Sensors (HiPath 3300/3350/3500/3550 Only) .....	85

Radio Paging (Not for U.S.) . . . . .	85
Simple Paging Equipment . . . . .	86
Enhanced Paging Equipment (Hipath 3700/3750 Only) . . . . .	86
<b>Using Other Team Functions . . . . .</b>	<b>87</b>
Turning Group Call On and Off . . . . .	87
Accepting a Call for Another Member of Your Team . . . . .	89
Activating and Deactivating a Ringing Group. . . . .	89
Uniform Call Distribution (UCD) . . . . .	90
<b>Team and Executive/Secretary Functions With Trunk Keys . . . . .</b>	<b>92</b>
Using Trunk Keys. . . . .	92
Answering Calls With Trunk Keys . . . . .	93
Making Calls with Trunk Keys . . . . .	93
Using a Trunk Key to Place a Call on Hold and Retrieve It Again . . . . .	93
Switching Between Phone Calls on Multiple Trunks. . . . .	94
Forwarding Calls on Lines . . . . .	94
Using DSS Keys. . . . .	96
Using DSS Keys to Answer Calls. . . . .	96
Calling a Team Member Directly . . . . .	96
Transferring a Call in Progress. . . . .	97
Accepting a Call for Another Team Member . . . . .	97
Joining or Leaving a Group Call (Not for the Executive Telephone in an Executive/Secretary Team) . . . . .	97
Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group) . . . . .	98
<b>Testing the Telephone. . . . .</b>	<b>99</b>
Testing the Telephone Functions . . . . .	99
Checking the Key Assignment . . . . .	99
<b>Special Functions in the LAN (PC Network) . . . . .</b>	<b>100</b>
Leaving a Hunt Group/Group Call . . . . .	100
Transferring Call Forwarding . . . . .	101
Using Night Answer . . . . .	102
Activating and Deactivating a Ringing Group. . . . .	103
Controlling Relays . . . . .	104
Opening the Door . . . . .	105


<b>Labeling, Documentation and Accessories . . . . .</b>	<b>106</b>
Labeling Key Fields . . . . .	106
Attaching a Station Number Label . . . . .	107
Documentation . . . . .	107
Accessories . . . . .	108
 <b>Fixing Problems . . . . .</b>	 <b>109</b>
Telephone Maintenance . . . . .	109
Troubleshooting . . . . .	109
Responding to Error Messages on the Screen . . . . .	110
Contacts for Resolving Problems . . . . .	110
 <b>Index . . . . .</b>	 <b>111</b>
 <b>Overview of Functions/Codes (Alphabetical) . . . . .</b>	 <b>117</b>

## Basic operating instructions


optiPoint 500 <sup>(a)</sup>	economy	basic	standard	advance
Function keys	12	12	12	19
Full-duplex speakerphone feature	-	-	✓	✓
Illuminated display	-	-	-	✓
Headset port	-	-	-	✓
USB interface	-	✓	✓	✓
Interface for add-on equipment	-	✓	✓	✓
Option bays	0	1	1	2

<sup>(a)</sup> The name and model of your telephone are printed on the base of your optiPoint 500.

## optiPoint 500 economy/basic/standard control panel

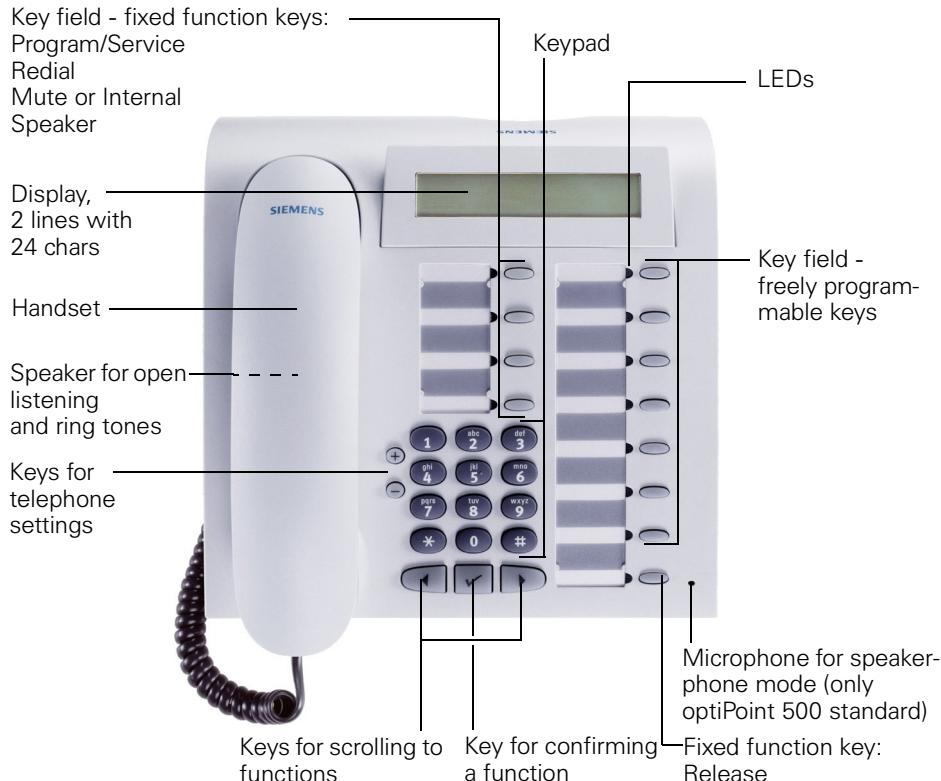

## optiPoint 500 advance control panel with optiPoint key modules

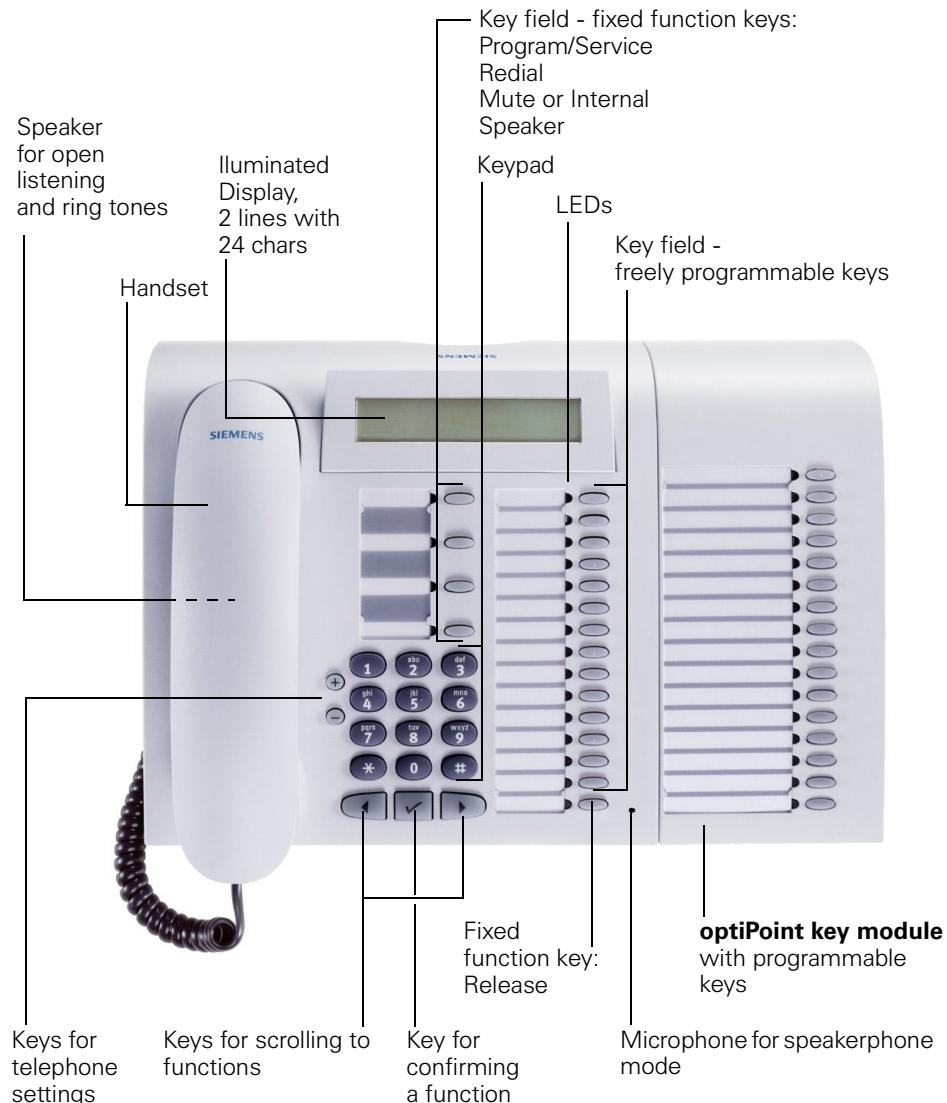

### Step by Step

## How to Use these Operating Instructions

You will find a graphic representation of the steps in logical sequence in the left column. Below is an explanation of the symbols:



Lift the handset (off-hook).



Replace the handset (on-hook).



Conduct a call.



Enter a telephone number or code.



Enter the code.



Press volume controls on the telephone.



Press the key.



Press the illuminated key.



Press the flashing key.

**Start conference?**



The option appears on the screen.

Press the key to confirm your selection.

**Display contrast?**



Search for an option.

Press the keys,

until the option appears on the screen.

Then press the key to confirm your selection.

## Screen Displays

**Please dial \_\_\_\_\_**

**Return to held call?**

Line 1 displays prompts or acknowledgment messages, depending on the situation.

Line 2 displays functions that you can confirm by pressing . If the symbol ">" appears on the right, you can press to access further options.

## Step by Step

### Accessing Functions

#### ... Interactively

You can select some functions **while the telephone is idle**, for example:

► **Forwarding on** ✓

Use to scroll to a function and press to execute it.

► **Callback** ✓

Press to confirm.

or

► **Send message** ✓

Use to scroll to a function and press to execute it.

#### ... Via the Program/Service Menu

First press the "Program/Service" key. You then see a list of selection options, such as: "#0=Reset services" → Page 79.

► **Program/Service**

Press the key.

► **#0=Reset services?** ✓

Use to scroll to a function and press to execute it.

or

**# 0**

Enter the code directly.

The Quick-Reference Operating Instructions contain a list of codes. However, they are also displayed on screen along with the corresponding function.

#### ... With Function Keys

If you saved a function on a key → Page 56, you can access it directly as follows:

Press the Mute key to execute the function.

## **Functions You Can Use**

### **Basic and Enhanced Functions**

You can use all basic and enhanced communications platform functions that appear interactively on the screen, in the Program/Service menu, and when you press function keys.

### **Additional Team and Executive/Secretary Functions**

→ Page 92f.

To help working and project groups work together more efficiently, the service technician can configure a variety of team functions, depending on your preferences when working in the team. You can use these team functions in addition to the basic and enhanced functions.

In addition to call pickup, hunting groups (group call), and call distribution groups, you can also set up teams with multiple lines per telephone.

You can tell if a telephone has trunk keys if your station number and the numbers of your colleagues are programmed on trunk keys. You can access all lines and can also conduct different calls simultaneously on multiple lines.

Another team function category includes the executive/secretary functions, which are configured by the service technician. You can use executive and secretary functions in addition to the basic and enhanced functions as well as other team functions.

An executive/secretary telephone has DSS keys for the executive or secretary, trunk keys for the executive and secretary, as well as ring transfer keys.

### **Using the Telephone Efficiently**

- You probably have certain colleagues or external parties with whom you talk on the phone especially frequently. To dial these numbers faster and more conveniently, you can save them on keys (Saving station numbers for repertory dialing on keys → Page 24).
- All too often you reach a busy line when dialing a number. Amid the confusion of your working day, it's easy to forget to try the number again later on. To avoid this, make it a habit to use the "Callback" → Page 23 function.

## Step by Step

## Making Calls – Basic Functions

## Answering Calls

Special default ring signaling is set for your telephone:

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

The number or the name of the caller appears on the display.

## Answering a Call With the Handset

The telephone rings. The caller appears on the screen.



⊕ or ⊖

Lift the handset.

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Answering a Call with the Speaker  
(Speakerphone Mode)

→ This function is not available with optiPoint 500 economy and optiPoint 500 basic.

The telephone rings. The caller appears on the screen.

 


⊕ or ⊖

Press the key. The LED lights up.  
Speakerphone mode.

Raise or lower the volume. Keep pressing the key until the desired volume is set.

### Step by Step



#### Ending the call:

Press the key. The LED goes out.

Press the key.

#### Notes on speakerphone mode:

- Tell the other party that you are using speakerphone mode.
- The speakerphone works bests at a low receiving volume.
- The ideal distance between the user and the telephone set in speakerphone mode is about 50 cm (approx. 20 inches).

## Switching to Speakerphone Mode

→ This function is not available with optiPoint 500 economy and optiPoint 500 basic.

**Precondition:** You are conducting a call with the handset.



Hold down the key and replace the handset.  
(in the U.S.: press the key once and replace the handset). Then release the key and continue the call.

## Switching to the Handset

→ This function is not available with optiPoint 500 economy and optiPoint 500 basic.

**Precondition:** You are engaged in a call in speakerphone mode.



Lift the handset. Continue the call.

## Step by Step

### Open Listening in the Room During a Call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

**Precondition:** You are conducting a call with the handset.

#### Activating ring transfer:



Press the key. The LED lights up.

#### Deactivating this function:



Press the key. The LED goes out.

## Making Calls

### Off-Hook Dialing



Lift the handset.



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### The called party does not answer or is busy:



Replace the handset.

### On-Hook Dialing



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### The other party answers with speaker:



Lift the handset.



On-hook: Use speakerphone mode (not available with optiPoint 500 economy and optiPoint 500 basic).

### Step by Step

Speaker 

#### The called party does not answer or is busy:

Press the key. The LED goes out.

 Your system may also be programmed so that you have to press the Internal key before you dial an internal number.

To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact your service personnel).

  
or  


### Ending the call

Replace the handset.

Press the key.

## Step by Step

### Redialing a Number

The last three external telephone numbers dialed are stored automatically.

You can redial them simply by pressing a key.

The station number appears on your screen for two seconds and is then dialed.

Redial

Press the key once to dial the number last dialed.

Press the key twice to dial the next to the last number dialed.

Press the key three times to dial the third-to-the-last number dialed.

### Displaying and dialing saved station numbers

Redial

Press the key.

Next?



Press the "OK" dialog key within two seconds to confirm your choice.

Next?



The next stored number is displayed. Press the "OK" dialog key to confirm four selection.

► Call?



Select and confirm.

 If this feature is configured (contact your service personnel), account codes entered are also saved → Page 65.

### Step by Step

#### Turning the Microphone On and Off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, → Page 30).

 Speakerphone mode is not available with optiPoint 500 economy and optiPoint 500 basic.

**Precondition:** You are conducting a call. The microphone is switched on.



or



 
or

► **Mute on?** ✓

Select and confirm.

► **Mute off?** ✓

or



Press the key. The LED lights up

\* 5 2 or # 5 2

Enter the code for "on" or "off".

## Step by Step

### Calling a Second Party (Consultation Hold)

You can call a second party while engaged in a call. The first party is placed on hold.

US: Consult?	✓
UK: Enquiry?	✓



Confirm.

Return to held call?	✓
or	

Quit and return?	✓
or	

Program/Service   

Call the second party.

#### Return to the first party:

Confirm.

► Toggle/Connect?   



Select and confirm.

Program/Service    

Press the key. The LED lights up. Enter the code. The LED goes out.

### Switching to the Party on Hold (Toggle)

Select and confirm.

► Conference?   



Select and confirm.

Program/Service    

Press the key. The LED lights up. Enter the code. The LED goes out.

### Combine the calling parties into a three-party conference

Select and confirm.

► Transfer?   



Select and confirm.

### Connecting the other parties to each other

Select and confirm.

### Step by Step

#### Transferring a Call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

US: Consult?



UK: Enquiry?



Enter the number of the party to which you want to transfer the call.



Announce the call, if necessary.



Replace the handset.



Select and confirm.

► Transfer?



## Step by Step

## Call Forwarding

## Using Variable Call Forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)

► Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → Page 101!

► **Forwarding on?** ✓  
or  
\* 1

Select and confirm.

► **1=all calls?** ✓  
or  
► **2=external calls only?** ✓  
or  
► **3=internal calls only?** ✓  
or  
1 or 2 or 3

Select and confirm.

Enter the code.

Enter the code.

Enter the code.



Enter the number of the telephone that is ringing.

**US: Save?** ✓  
**UK: Save entry?** ✓

Confirm.

## Deactivating call forwarding:

► **Forwarding off?** ✓  
or  
# 1

Select and confirm.

Enter the code.

► When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination. Destinations: fax = 870, DID = 871, fax DID = 872.



## Step by Step

### Using Callback

If a user is busy or is not answering, you can store an automatic callback. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback,

- When the other party is no longer busy
- When the user who did not answer has conducted another call.

### Storing a Callback

**Precondition:** You have reached a busy line or no one answers.

US: Callback	✓
UK: Set Callback	✓

or

\* 5 8

Enter the code.

### Answering a Callback

**Precondition:** A callback was saved. Your telephone rings. "Callback: ..." appears on the display.



Lift the handset.

Speaker

Press the key. The LED lights up.

You hear a ring tone.

### Checking and Canceling a Saved Callback

► View callbacks? ✓  
or

# 5 8

Select and confirm.

► US: Next callback? ✓  
► UK: Display next? ✓

Enter the code.

 
Select the displayed function and press the "OK" dialog key to display additional entries.

#### Deleting a displayed entry:

Delete? ✓

Press the "OK" dialog key to confirm your selection

### Step by Step

- ▶ **US: Exit?** ✓
- ▶ **UK: End?** ✓
- or
-  or 

#### Ending callback display:

Select and confirm.

Press the key. The LED goes out.

Press the key. The LED goes out.

### Saving Repertory Dialing Numbers on a Key

-  Press the key. The LED lights up.
- ▶ **\*91=Prog. feature key?** ✓
- or
-  Enter the code.

#### If applicable

If the "Shift Key" has been configured → Page 56, press the key.



Press the key. If the key is already in use, its assignment appears on the screen.

- US: Change key?** ✓
- UK: Change feature?** ✓
- Repodial key?** ✓
-  Enter the station number.

Confirm.

Confirm.

Enter the station number.

- US: Save?** ✓
- UK: Save entry?** ✓

Confirm.

#### If you make a mistake:

- ▶ **Previous?** ✓

Select and confirm. This deletes all entered digits.

- US: Exit?** ✓
- UK: End?** ✓

Confirm.

- ▶ **US: Another key?** ✓
- ▶ **UK: Program another key?** ✓

Select and confirm.

## Step by Step

→ Simply press the key to dial a stored telephone number → Page 25.

If you have saved an internal station number (=DSS call), the corresponding LED signals various states → Page 58, → Page 96.

You can do this while a call is in progress.

## Using Repertory Dialing Keys

**Precondition:** You have saved a station number on a repertory dialing key → Page 24.

Press the key on which the number is saved.  
If the station number is located on the second level, first press "Shift".

→ You can also press the repertory dial key during a call. This automatically sets up a consultation → Page 19.

### Step by Step

## Telephone Settings

### Adjusting the Ring Volume

⊕ or ⊖

Press these keys while the phone is idle.

US: Ring volume?	✓
UK: Ringer volume?	✓

⊕ or ⊖

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

✓

Save.

### Adjusting the Ring Tone

⊕ or ⊖

Press these keys while the phone is idle.

► US: Ring tone?	✓
► UK: Ringer tone?	✓

⊕ or ⊖

To adjust the ring tone: Keep pressing the keys until the desired tone is set.

✓

Save.

### Adjusting the Attention Ring Volume

If you belong to a team that uses trunk keys, the telephone can alert you to other calls in the team even when you are engaged in another call → Page 97. You hear the attention ring.

⊕ or ⊖

Press one of these keys while the phone is idle.

► US: Attention Ring Vol?	✓
► UK: Attention Ring Vol-	✓

⊕ or ⊖

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

✓

Save.

## Step by Step

### Adjusting the Speakerphone to the Room Acoustics

 This function is not available with optiPoint 500 economy and optiPoint 500 basic.

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: "Quiet room", "Normal room" and "Noisy room".

**⊕ or ⊖**

► **Speakerphone mode?** 

**⊕ or ⊖**

Press one of these keys while the phone is idle.

Select and confirm.

To set the room type: Keep pressing these keys until the setting you want appears on the screen.



Save.

### Adjusting the Receiving Volume During a Call

You are engaged in a call.

**⊕ or ⊖**

**⊕ or ⊖ simultaneously**

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

Save.

### Adjusting the Display to a Comfortable Reading Angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

### Display backlight

 This function is only available with optiPoint 500 advance.

When operating optiPoint 500 advance, e.g. when dialling a call number, a display backlight switches on automatically. The backlight switches off automatically a few seconds after the last action is completed.

### Step by Step

#### Adjusting the display contrast

The display has four contrast levels that you can set according to your light conditions.

⊕ or ⊖

Press one of the keys while the phone is idle.

► **Display contrast?** ✓

⊕ or ⊖

Select and confirm.

✓

Change the display contrast. Press the key repeatedly until the desired level is obtained.

✓

Save.

#### Selecting the Language of Screen Prompts

Program/Service

Press the key. The LED lights up.

► **More features?** ✓

Confirm.

► **\*48= Select language?** ✓

Confirm.

\* 4 8

Enter the code.

► **15=Spanish?** ✓

Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

## Step by Step

# Making Calls – Convenience Functions

## Answering Calls

### Accepting a Specific Call for Your Colleague

You hear another telephone ring.

Program/Service 

► **\*59=Pickup - directed?**  or

**\* 5 JK 9 WYZ**

**If applicable**  
► **Next?** 

Press the key. The LED lights up.

Select and confirm.

Enter the code.

A called station appears on the screen.

Select and confirm until you see the station you want.

**Accept call?**  or



Confirm.

If you know the number of the telephone that is ringing, enter it directly.

or

Press the flashing key.

 Accepting calls in a team → Page 89.

### Step by Step

#### Rejecting Calls

You can reject calls which you do not wish to take. The call is then signaled at another definable telephone (contact your service personnel).

The telephone rings. The caller is displayed.



Press the key.

If a call cannot be rejected, your telephone will continue to ring. The message "currently not possible" (UK) or "Feature not available" (US) is displayed (e.g. in the case of recalls).

#### Using the Speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.

→ Speakerphone mode is not available with optiPoint 500 economy and optiPoint 500 basic.



or



Lift the handset and answer the call.



Press the "OK" key to confirm your selection and answer the call.

or



Press the key and answer the call.

→ If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.

If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → Page 43.

## Step by Step

- ▶ **HF answerback on?** ✓  
or
- ▶ **HF answerback off?** ✓  
or

**\* 9 6 or # 9 6**

### Enabling and Disabling Handsfree Answerback

Select and confirm.

Enter the code for "on" or "off".

### Answering a Call With a Headset

**Precondition:** Your telephone rings.

If the "Headset" key has been configured → Page 56:



or

- Answer?** ✓

### Ending the call:



or



### Answering Calls from the Entrance Telephone and Opening the Door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener.

If you have the proper authorization (contact your service personnel), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or installed keypad).

### Speaking to visitors via the entrance telephone:

**Precondition:** Your telephone rings.



Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

or

### Step by Step



Lift the handset after more than thirty seconds.



Dial the entrance telephone number.

**Open door?**



Confirm.

**Program/Service**



► **\*61=Open door?**



**or**



Press the key. The LED lights up.

Select and confirm.

Enter the code.



Dial the entrance telephone number.

► **Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → Page 105!**

**Opening the door with a code (at the door):**



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

**Activating the door opener:**

**Program/Service**



► **\*89=Door opener on?**



**or**



Press the key. The LED lights up

Select and confirm.

Enter the code.



Dial the entrance telephone number.



Enter the five-digit code. Default code = "00000".

## Step by Step

► **3=change password?** ✓ or

Select the displayed function and press the "OK" dialog key to change the code.

► **1=enable with ring?** ✓ or

Select and confirm.

► **2=enable w/o ring?** ✓

You can also open the door without a doorbell ring.

### Deactivating the door opener:

Program/Service

► **#89=Door opener off?** ✓ or

# 8 9

Press the key. The LED lights up.

Select and confirm.

Enter the code.

## Accepting a Call From an Answering Machine

You can accept a call from any answering machine if the machine is connected to your system (contact your service personnel) and you have programmed the answering machine number on a key → Page 56.

The LED lights up. Press the key.

### Step by Step

## Dialing/Making Calls

### En-Bloc Sending / Correcting Numbers

If this feature is configured (contact your service personnel), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary.

The station number is only dialed at your specific request.



Internal: enter station number.

External: enter external code and station number.

#### Dialing entered/displayed numbers:

 


Lift the handset.



Confirm.

#### Correcting numbers entered:




Select and confirm.

The last digit entered in each case is deleted.



Enter the required digit(s).

#### Canceling en-bloc sending:

 

Select and confirm.



Press the key. The LED goes out.



Press the key.

## Step by Step

### Using a Caller List

If you are unable to accept an external or internal call, the call attempt is stored in the caller list.

You can store answered calls either manually (both internal and external calls) or automatically (external calls only; contact your service personnel for details).

Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The most recent entry not yet answered in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

#### Retrieving the Caller List

**Precondition:** Service personnel has set up a caller list for your telephone.

► **Caller list?**  or

Enter the code.

The last call is displayed on the screen.

**Next?** 

To view other calls, confirm each subsequent display.

#### Ending Retrieval

► **US: Exit?**   
► **UK: End?**  or

Select and confirm.

Press the key. The LED goes out.

Press the key. The LED goes out.

#### Displaying the Call Time and Additional Call Information

**Precondition:** You have retrieved the caller list and the selected call is displayed.

 
► **Time/Date sent?**  or

Select and confirm.

► **View station no.**  or

► **View name?** 

### Step by Step



#### Dialing a Station Number from the Caller List

**Precondition:** You have retrieved the caller list and the selected call is displayed.

Select and confirm.

→ The caller is automatically deleted from the caller list when a connection is finally set up.



#### Removing an Entry from the Caller List

**Precondition:** You have retrieved the caller list and the selected call is displayed.

Confirm.



#### Saving the Other Party's Station Number in the Caller List (Redial)

**Precondition:** You are engaged in a call or have called an external party.

Confirm.

Press the key. The LED lights up. Enter the code.

## Step by Step

### Speed-dial

#### Using Station and System Speed-Dial Numbers

**Precondition:** You have stored station speed-dial numbers → Page 37 or your service personnel has stored system speed-dial numbers.

Program/Service 

► \*7=Use speed-dialing? 

or

 \* 



Enter the code.

Enter a speed-dial number.

"\*0" to "\*9" = station speed-dialing.

"000" to "999" = system speed-dialing (contact your service personnel).

#### Storing Station Speed-Dial Numbers

You can store the ten numbers which you use the most and dial them using your own station speed-dial numbers: \*0 through \*9 → Page 37.

Program/Service 

► \*92=Change Speed-dial? 

or

 \*  



Enter the speed-dial number you wish to use (\*0 to \*9). If the speed-dial number is already in use, the programmed station number appears on the screen.

Confirm.



First enter the external code and then the external station number.

Confirm.

► US: Change? 

► UK: Change entry? 

► US: Save? 

► UK: Save entry? 

### Step by Step

or

► **Previous?** ✓

#### If you make a mistake:

Select and confirm. This deletes all entered digits.

**US: Next?** ✓

**UK: Next entry?** ✓

Confirm.

or

► **US: Change?** ✓

► **UK: Change entry?** ✓

Select and confirm.

or

► **Delete?** ✓

► **US: Exit** ✓

Select and confirm.

or

► **UK: End** ✓

Select and confirm.

## Step by Step

### Dialing a Number From the Internal Directory

The internal directory contains all station numbers and system speed-dial numbers assigned to a name. Contact your service personnel to find out if one was configured for your system.

**Precondition:** Names have been assigned to the station numbers stored in the system.

 


or



Lift the handset.

Press the key. The LED lights up.



Confirm.

or



Enter the code.

#### If applicable



If several directories have been configured:

Confirm.

 
The first entry is displayed on the screen.

⊕ or ⊖

or



Scroll to next or previous entry.



or



Enter the name you want to find, or just the first few letters, using the alphanumeric keypad.

You can use the keypad with the digits as an alphanumeric keypad in this case and enter the names by pressing the appropriate keys one or more times as needed.

For example, you can enter the letter "r" by pressing the "7" three times or the letter "e" by pressing the "3" twice. The first name with the entered letters is displayed. Enter the following letters by using the same method.

If no entry exists for the entered letters, you will hear three short beeps.

### Step by Step

#### If applicable

►  Delete Character? ✓

To enter a space, press the "0".  
Pressing "1" or "#" automatically displays the first entry in the internal directory.  
The "\*" key has no function here.

#### If applicable

►  Delete Line? ✓

Select and confirm each letter to be deleted. The last letter entered is deleted. If all letters are deleted, the first entry in the directory will be displayed again.

#### The entry you wish to dial appears on the screen.

►  Call? ✓

Select and confirm.

### Dialing from the Telephone Database (LDAP)

If configured (ask your service personnel), you can search for directory data in the LDAP database and dial the number of any subscriber you find there.

**Voraussetzung:** The LDAP search feature has been configured in the system.



or

Speaker   
 US: Directory? ✓  
 UK: Phonebook? ✓

Press the key. The LED lights up.

Confirm.

or



Enter the code.

#### If applicable

►  2=LDAP? ✓

If several directories have been configured:

Select and confirm.



Enter the name you wish to search for using the keypad (max. 16 characters).

You can enter an incomplete name, e.g. "mei" for "Meier".

## Step by Step

You can use the keypad with the digits as an alphanumeric keypad in this case and enter the names by pressing the appropriate keys one or more times as needed.

For example, you can enter the letter "r" by pressing the "7" three times or the letter "e" by pressing the "3" twice.

### If applicable

If configured (ask your service personnel), you can also search for surname and first name.

To separate surname and first name by a space, enter "0". You can enter incomplete names, e.g. "mei p" for "Meier Peter".

### If applicable

► **Delete Character?** ✓

Select and confirm. The letter entered last is deleted.

→ In large databases, the results of the search may be incomplete if too few characters are entered  
→ Page 42.

**Search?** ✓

Confirm.

The name is searched for. This may take a few seconds.

### The result is displayed:

If only one name is found, it is displayed.

Confirm.

If several names are found (max. 50), the first name is displayed.

⊕ or ⊖

or

► **Scroll Next?** ✓

Scroll to the next or the previous entry.

► **Scroll Previous?** ✓

Select and confirm.

### If no name is found:

If your search does not yield any name corresponding to your query, you can extend the range of the search, e.g. by deleting characters.

**Change search string?** ✓

Select and confirm.

For further procedure, see above.

### Step by Step

#### If too many names are found:

If more than the maximum of 50 names are found corresponding to your query, only an incomplete list of results can be displayed.

You can view these results, select any of the names, or change the search string (e.g. narrow the search by entering more characters).

 In this case it is advisable to narrow down the search so that all corresponding names can be displayed.

**Show results?**



Confirm, to view the incomplete list.  
For further procedure, see above

**or**

Narrow the search down.

► **Change search string?**



Select and confirm, in order to change the search string.  
For further procedure, see above

## Step by Step

### Using Mailboxes

If you have programmed the "Mailbox" key → Page 56, the associated LED lights up when messages have arrived for you. If your telephone is connected to a voice mail system, the "Mailbox" key will also light up to alert you to any messages that have arrived.

#### Accessing the Mailbox

 or

US: View messages?	✓
UK: Display Messages?	✓

▶  ✓ or

US: Message sent?	✓
UK: Text?	✓

▶  ✓ or

US: Call voice mail?	✓
UK: Call Voice Mail?	✓

Press the illuminated "Mailbox" key.

Confirm.

Select and confirm.

Follow the user prompts.

### Talking to Your Colleague With a Speaker Call

You can make a loudspeaker announcement through a loudspeaker if connected (ask your service personnel), or to an internal user with a system telephone without any action on their part.

 or

▶  ✓ or

 Enter the code.

Press the key. The LED lights up.

Select and confirm.



Enter the station number.

 Responding to a speaker call → Page 30.

### Step by Step

#### Automatic Connection Setup (Hotline)

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time (hotline after a timeout)**.

#### Reserve Trunk

If this feature is configured (contact your service personnel), you can reserve a busy trunk for your own use. When the trunk is free, you receive a call and a message appears on the display.

**Precondition:** The message "US:Currently busy UK:busy at the moment" appears on your screen.

Reserve trunk?



Confirm.

#### When the reserved trunk becomes free:

Your telephone rings. The display shows "Trunk is free".



Lift the handset. You hear the CO dial tone.



Enter the number of the external station.

#### Assigning a Station Number (Not for U.S.)

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.

Program/Service



Press the key. The LED lights up.

► \*41=Temporary MSN?



or

\* 4 1

Enter the code.



Enter the DID number you wish to use.



Dial the external number.

## Step by Step

### Associated Dialing/Dialing Aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S<sub>0</sub> bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

#### Dialing aid on the S<sub>0</sub> bus:

On the PC, select a destination and start dialing.



The speaker on your telephone is switched on. Lift the handset when the other party answers.

#### Dialing aid at the a/b (T/R) port:

On the PC select a destination and start dialing.

"Lift the handset" appears on the PC screen.



Lift the handset.

#### Dialing aid from your telephone for another telephone:



Press the key. The LED lights up.

Select and confirm.

Enter the code.



Enter the internal station number ("Dial for:").



Enter the number you wish to dial.

### Step by Step

## During a Call

### Using Call Waiting

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call. You can either ignore or accept the waiting call. When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on. You can also bar call waiting or the call waiting tone  
→ Page 47.

### Accepting a Waiting Call (Camp-On)

**Precondition:** You are engaged in a phone call and hear a tone (every six seconds).

#### Ending the first call and answering the waiting call:

 


Replace the handset. Your telephone rings.



Answer the second call. Lift the handset.

#### Placing the first call on hold and answering the second call:



Select and confirm.

or




Press the key. The LED lights up. Enter the code.



You are connected to the call waiting party immediately. The first party is placed on hold.

#### Ending the second call and resuming the first one:

 

Confirm.

or



Press the key. The LED lights up. Enter the code.

or



Replace the handset. "Recall: ..." appears on the screen. Lift the handset.

## Step by Step

### Preventing and Allowing Call Waiting (Automatic Camp-On)

If this function has been configured (ask your service technician), you can prevent or allow a second call  
→ Page 46 from being signaled by automatic camp-on during an ongoing call.

Program/Service 

and

- ▶ **#490=Call wait.trm.off?** ✓  
or
- ▶ **\*490=Call wait.term.on?** ✓  
or

**# 4 9 0 or \* 4 9 0**

Select and confirm.

Enter the code for "off" or "on".

### Turning the Call Waiting Tone On and Off

You can suppress the call waiting tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.

- ▶ **Waiting tone off?** ✓  
or
- ▶ **Waiting tone on?** ✓  
or

**\* 8 7 or # 8 7**

Select and confirm.

Enter code for "tone off" or "tone on".

### Parking a Call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

**Precondition:** You are conducting a call.

Program/Service 

- ▶ **\*56=Park a call?** ✓  
or

**\* 5 6**

Press the key. The LED lights up.

Select and confirm.

Enter the code.

### Step by Step

0 ... 9

Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

#### Retrieving a Parked Call

**Precondition:** One or more calls have been parked. The telephone is idle.

Program/Service

► **Retrieve call?** ✓  
or

# 5 6

0 ... 9

Press the key. The LED lights up.

Select and confirm.

Enter the code.

Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.

→ If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

#### Placing External Calls on Hold

If you have programmed a key on your telephone as a hold key → Page 56, you can place external calls on hold.

This enables all other parties to retrieve the call on the assigned line.

**Held on line: 801**

Press the "US:Hold UK:Common Hold" key.

A message appears showing which line is on hold (e.g. 801); make a note of the line number.

If a trunk key has been assigned, the LED flashes slowly.

#### If applicable

or **Release**

Replace the handset or press the key.

Depending on your system configuration, this may be necessary so other users can also pick up the held call.

## Step by Step

### Picking up (Retrieving) a Held Call

**Precondition:** One or more calls have been parked. The telephone is idle.

Program/Service 

► \*63=Rtrieve line?  or

\*  6  3

or



Press the key. The LED lights up.

Select and confirm.

Enter the code.

If the "Line retrieved" key → Page 56 has been configured, press the key.



Enter the line number you noted earlier.

or



If a "Trunk key" was assigned to this line → Page 56: LED flashes slowly. Press the key.

### Step by Step

#### Conducting a Conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.



► **Start conference?**



Call the first party.

Select and confirm.

Call the second station. Announce the conference.

► **Conference?**



or

Program/Service



Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

A tone sounds every 30 seconds to indicate that a conference is in progress. Contact your service personnel for instructions on how to turn it off.

#### If the second party does not answer:

**Return to held call?**



or



Enter the code.

#### Adding Up to Five Parties to the Conference (Initiator Only)

**Add party?**



Confirm.

Call the new party. Announce the conference.

► **Conference?**



or

Program/Service



Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

## Step by Step

**Checking Which Parties Are in the Conference (Initiator Only)**

- ▶ **View conf parties?** ✓ Select and confirm.  
The first station appears on the screen.
- Next?** ✓ To display other stations, confirm each subsequent display.
- ▶ **Exit list?** ✓ To exit the list: Select and confirm.

**Removing Parties From the Conference (Initiator Only)**

- ▶ **View conf parties?** ✓ Select and confirm.  
The first station appears on the screen.
- Next?** ✓ Confirm as often as required until the desired station appears.
- ▶ **Remove party?** ✓ Select and confirm.

**Leaving a Conference**

📞 or

- ▶ **US: Leave conference?** ✓ Select and confirm.
- ▶ **UK: Withdraw?** ✓ Select and confirm.

**Ending a Conference (Initiator Only)**

- ▶ **End conference?** ✓ Select and confirm.

Program/Service  # 

Press the key. The LED lights up. Enter the code. The LED goes out.

**Removing the ISDN Central Office Party From the Conference (Only for U.S.)**

- ▶ **Drop last conf. party?** ✓ Select and confirm.

Program/Service  \*  #  1

Press the key. The LED lights up. Enter the code. The LED goes out.

### Step by Step

#### Activating Tone Dialing (DTMF Suffix Dialing)

You can transmit dual-tone multifrequency (DTMF) signals to control devices such as an answering machine or automatic information system.

Program/Service 

► **\*53=DTMF dialing?** ✓

or

**\* 5 3**

Press the key. The LED lights up.

Select and confirm.

Enter the code.



You can use the keys "0" through "9", "\*", and "#" to transmit DTMF signals.

**→** Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

#### ...After a Speaker Call (Announcement) in a Group

If this function has been configured (contact your service personnel), you can use a speaker call (announcement, → Page 43) to announce a call in progress to a group of users → Page 87.

After a member of the group has accepted the call request, you can transfer the waiting party.

**Precondition:** You are conducting a call.

**US: Consult?** ✓

**UK: Enquiry?** ✓

Program/Service 

► **\*80=Speaker call?** ✓

or

**\* 8 0**

Confirm. The other party is placed on hold.

Press the key. The LED lights up.

Select and confirm.

Enter the code.



Enter the group's station number.



Announce the call.

When a member of the group accepts the call  
→ Page 30, you are connected to this party.

## Step by Step



Replace the handset.




Select and confirm.

 If the connection between the two other parties is not established within 45 seconds, the call from the first part returns to you (recall).


## Trunk Flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

**Precondition:** You have set up an external connection.

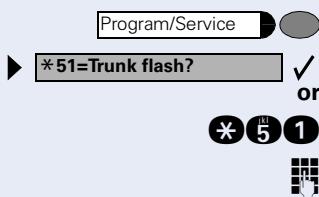

Press the key. The LED lights up.

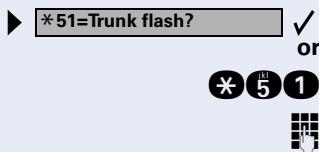

Select and confirm.



Enter the code.

Enter the service code and/or telephone number.

### Step by Step

## If You Cannot Reach a Destination ...

### Call Waiting (Camp-On)

**Precondition:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

**Camp-on**

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → Page 46

→ The called party can prevent automatic call waiting → Page 47.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

### Busy Override - Joining a Call in Progress

This function is only available if it has been configured by the service technician (contact your service personnel).

**Precondition:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

► **Override?** ✓

or

\* 6 2

Select and confirm.

Enter the code.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (station no. or name)".

You can now start talking.

## Step by Step

### Using Night Answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by service personnel (standard night answer service) or by you (temporary night answer service).

► Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → Page 102!

#### Activating this function:

► **Night answer on?** ✓  
or  
\* 4 4

Select and confirm.

Enter the code.

\*=default? ✓  
or  
\*  
or  
#

Press the "OK" dialog key to confirm ( standard night answer service).

Enter the code ( standard night answer service).



Enter the destination number (= temporary night answer service).

US: Save? ✓  
UK: Save entry? ✓

Confirm.

► **Night answer off?** ✓  
or  
# 4 4

Select and confirm.

Enter the code.

#### Deactivating night answer:

 
### Step by Step

## Saving Functions, Procedures and Appointments

You can save a frequently-dialed number, or frequently-used functions/procedures (comprising several operating steps) to any free key on your telephone or add-on device.

If you have programmed a Shift key, you can assign numbers and functions on two levels of the programmable keys. The second (Shift level) can accept only an external station number.

### Assigning Functions to Keys



Press the key. The LED lights up.

► **\*91=Prog. feature key?** ✓

or



Enter the code.



Press the key. If the key is already in use, its assignment appears on the screen.

**US: Change key?** ✓

**UK: Change feature?** ✓

►  ✓

Confirm.

Select and confirm the function, such as "Do not disturb".

All programmable functions appear on the screen. See Quick-Reference Operating Instructions (Appendix): section ... about function keys.

#### If applicable

► **US: Save incomplete** ✓

**UK: Store incomplete text** ✓

Select and confirm.

Some functions (such as "Call forwarding") accept incomplete entries. This means you have to add more digits later on when you activate the function by pressing a key.

**US: Exit?** ✓

**UK: End?** ✓

Confirm.

or

► **US: Another key?** ✓

**UK: Program another key?** ✓

Select and confirm.

## Step by Step

Now press the key to access the function directly. If the function can be turned on and off, such as "Do not disturb", pressing the key multiple times turns the function on and off.

### Meaning of LED Signals for Saved Functions:

**Call forwarding, Forwarding - trunk, Forward Line, US:Night answer UK:Night Service, Do not disturb, Changeover, Advisory message, Ringer cutoff, HF answerback on/off, US:Join/leave group UK:Hunt group join/leave, Caller ID suppression, Call wait.term., Waiting tone off, Ring Transfer, Door opener on/off, Control Relay, Ringing group on, Shift Key, UCD (Available on/off, Work on/off, Night answer on/off):**



Saved function is not active.



Saved function is active.

#### **Callback:**

You have not set a callback.



You have set a callback.

#### **Mute (on/off):**

The microphone is switched on.



The microphone is switched off.

#### **Headset:**

The headset is switched off.



The headset is switched on.



Flashing slowly - call can be taken via headset.

#### **Caller list:**

No calls saved.



Call request saved.

### Step by Step

 


#### Repdial key (internal), Direct station select:

The other party is not engaged in a call.



The other party is engaged in a call or has activated do not disturb.



Flashing rapidly - A caller is trying to reach you, please pick up the phone.

Flashing slowly - A caller is trying to reach another party, who has not yet answered.



#### Mailbox:

No messages present.



Message(s) present.



#### Call key, General call key, Trunk key, MULAP Key, Temporary MSN:

No call on assigned trunk.



Active call on assigned trunk.



Flashing rapidly- A call has arrived on this line; press the key to pick up the call.

Flashing slowly - A call on this line was placed on hold.



#### Trunk group key:

At least one trunk is free.



All trunks in the trunk group are busy.



#### View call charges:

No chargeable calls have been made since the last time call charges were displayed.

 


Chargeable calls have been made since the last time call charges were displayed.



#### Call forwarding, Forward Line:

Flashing slowly - Either you or your trunk is the destination of a forwarded call.



#### Fax details/answering machine:

No fax received or no message on answering machine.



Fax received or message on answering machine.



#### View number of calls:

No callers waiting.



Flashing rapidly - Callers waiting (a certain number is exceeded).

Flashing slowly - Callers waiting (a certain number was reached).

### Step by Step

#### **The following functions are assigned to keys which have no LED:**

Repodial key (external), Procedure key, Trace call, Speed-dial, Release call, Clear, US:Lock all phones UK:Telephone Lock, Send message, US:Directory UK:Phone-book (1=internal, 2=LDAP), Call waiting, US:Connect/ Toggle UK:Shuttle, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary Phone, Override, US:Park UK:Call Park, Pickup - directed, Pickup - group, Account code, Show call charges, Radio paging equip, Answer page, Timed reminder, Open door, DTMF dialing, Recall key, Room monitor, Hold key, Consultation, Associated dial, Associated serv., Tel. data service, Relocate

 
### Step by Step

## Assigning a Procedure (Operating Steps) to a Key

Station numbers and functions which require additional inputs, i.e. comprise several operating steps, can be saved to a single key on your telephone.

Using the associated dial function, for example → Page 45, you can save all the remaining inputs required (station number of the calling party + the station number to be dialed) to a single key.

Station numbers which require additional inputs but also dial pauses can also be stored.



► **\*91=Prog. feature key?** ✓

or



Press the key. The LED lights up.

Select and confirm.

Enter the code.

Press the key. If a function has already been assigned to this key, a corresponding message is displayed.

**US: Change feature?** ✓  
**UK: Change key?** ✓

► **Procedure key?** ✓



Confirm.

Confirm.

Enter the procedure, e.g. **\*\*67 231 089123456**.

\*67 = code for associated dial

231 = station number of the calling party

089123456 = number to be dialed.

### If necessary



To insert pauses, press this key (a "P" is displayed).

**US: Save entry?** ✓  
**UK: Save?** ✓

Confirm.

or

### If you make a mistake:

► **Previous?** ✓

Select and confirm. This deletes all digits entered.

## Step by Step

US: End? ✓  
UK: Exit? ✓

or

► US: Program another key? ✓  
► UK: Another key? ✓

Confirm.

Select and confirm.

► Select the stored procedure by pressing a key. Procedures containing functions which can be switched on/off can be activated by pressing the key, and deactivated by pressing the same key again.

You can also press a procedure key during a call. The stored digits are automatically sent as DTMF signals → Page 52.

## Appointments Function

You can tell your telephone to give you a call when you want to be reminded of an appointment → Page 62. To do this, you need to save the time you want the call to be made. You can enter a single appointment that will take place in the next twenty four hours, or you can enter a daily recurring appointment.

### Saving Appointments

Program/Service

► \*46=Timed reminder on? ✓

or

\* 4 6

Press the key. The LED lights up.

Confirm.



Enter a 4-digit time, such as 0905 for 9:05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

If necessary 2 or 7

If the selected language is "US English" (configure → Page 28) you can enter the code 2 for "am" or 7 for "pm" (standard = "am").

One time only? ✓

or

► Daily? ✓

Confirm.

Select and confirm.

US: Save? ✓

or

UK: Save entry? ✓

Confirm.

### Step by Step

Program/Service 

► #46=Timed reminder off?   
or

 4  6

#### Deleting and checking a saved appointment:

Press the key. The LED lights up.

Confirm.

Enter the code.

 Delete?   
or

► US: Exit   
► UK: End 

Confirm.

Select and confirm.

### Using Timed Reminders

**Precondition:** You must have saved a timed reminder  
→ Page 61. The current time is the time stored.

The telephone rings. The timed reminder appears on the screen.

Speaker 

or



Press the key twice.

Lift the handset and replace it again.

 If you fail to answer the timed reminder, it repeats five times and is then erased.

## Step by Step

## Displaying and Assigning Call Charges

### Displaying Call Charges (Not for U.S.)

#### For the current call:

The display usually shows call charges at the end of a call (default setting).

If you wish to display charges continuously during a call in progress, your service personnel must request this feature from your carrier.

Indication of the cost of a telephone call has to be requested from the service provider and has to be installed by an authorised technician.

Depending on the setting, during or after the call, the display will show the cost of the telephone call.


Some carriers also let you display toll-free external calls. The message "Free of Charge" appears on the screen either before or during the call.

If the cost indication facility has not been installed, the display will show the dialled number and/or the length of the telephone call.

► If a call is transferred, the charges are assigned to the telephone to which the call was transferred.

#### For all calls and the last one conducted:

The connection charges for the last chargeable call conducted are displayed first. Five seconds later, the total accumulated connection charges appear.

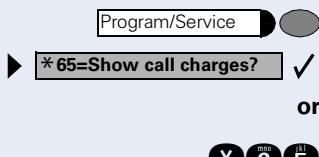

Press the key. The LED lights up.

Select and confirm.

Enter the code.

### Step by Step

#### Displaying Call Charges for Another Telephone (Not for U.S.)

If this function is configured (contact your service personnel), you can display and print the chargeable calls for other telephones (such as a pay phone).

**Precondition:** You have programmed the function "View call charges" on a key → Page 56.

The LED lights up to indicate that you have conducted chargeable call since the last time you viewed the charges.



Press the "View call charges" key. The chargeable call appear on the screen.

▶ **Next?** ✓

To display further chargeable calls, confirm each subsequent display.

▶ **Print?** ✓

Select and confirm.

or

▶ **Delete?** ✓

or

▶ **Add'l information?** ✓

or

▶ **US: Exit?** ✓

or

▶ **UK: End?** ✓

## Step by Step

### Dialing with Call Charge Assignment

You can assign external calls to certain projects.

**Precondition:** Service personnel has set up account codes for you.

►  **Program/Service**   or

 **\* 6 0**

Press the key. The LED lights up.

Select and confirm.

Enter the code.



Enter the account code.

**and**  **or**

 **US: #=Save?**

 **UK: #=Save entry?**

Press this key.

Confirm.

May be necessary, depending on how your system is configured; contact your service personnel for details.



Enter the number of the external station.

 You can also enter the account code during an external call.

## Step by Step

## Private Sphere/Security

## Turning Ringer Cutoff On and Off

You can activate the ringer cutoff function if you do not want the receive any calls. Calls are only identified by **one** ring signal, an indication on the display, and a key which has been programmed to flash (such as a trunk key).

- ▶ **Ringer cutoff on?** ✓  
or
- ▶ **Ringer cutoff off?** ✓  
or

\* 9 8 or # 9 8

Select and confirm.

Enter the code for "on" or "off".

## Turning Do Not Disturb On and Off

You can activate the do not disturb function if you do not want the receive any calls. When do not disturb is activated, internal callers hear a busy signal and external callers are rerouted to a telephone assigned for this purpose (contact your service personnel).

- ▶ **DND on?** ✓  
or
- ▶ **DND off?** ✓  
or

\* 9 7 or # 9 7

Select and confirm.

Enter the code for "on" or "off".

→ When you lift the handset, a special dial tone (continuous buzzing tone) reminds you that do not disturb is active.

Authorized internal callers can automatically override the do not disturb function after five seconds.

## Step by Step

### Caller ID Suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

- ▶ **Suppress call ID?** ✓  
or
- ▶ **Restore caller ID?** ✓  
or
- \*   or #  **

Select and confirm.

Enter code for "suppress" or "restore".

→ Your service personnel can turn caller ID suppression on and off for all telephones.

### Silent Monitor

If this function has been configured (contact your service personnel), you can join a call already in progress at an internal station and listen in unnoticed.



Enter the code.

Enter the internal station number.

### Monitoring a Room

A telephone can be used to monitor a room. The function must be activated on the telephone that you want to monitor.

Calling this telephone lets you hear what is going on in the room.

#### Activating the telephone to be monitored:

- Program/Service** 
- ▶ **\*88=Room monitor?** ✓  
or
- \*  **

Press the key. The LED lights up.

Select and confirm.

Enter the code.

You can either leave the telephone in speakerphone mode (not available with optiPoint 500 basic) or lift the handset and leave it directed towards the noise source.

## Step by Step

Program/Service 

or



### Deactivating the telephone to be monitored:

Press the illuminated key. The LED goes out.



### Monitoring the room:

Enter the internal number if the telephone in the room you wish to monitor.

## Trace Call: Identifying Anonymous Callers (Not for U.S.)

You can have the carrier identify malicious external callers. You can save the caller's station number during the call or for 30 seconds after the call ends. However, it is essential that you do not replace your handset during this time.

Program/Service 

and

► \*84=Trace call? 

✓

or

Press the key. The LED lights up.

Select and confirm.

Enter the code.

 After you have finished tracing the call, the data is stored on the carrier's system. Now contact your service personnel.

## Step by Step

### Locking the Telephone to Prevent Unauthorized Use

You can prevent unauthorized persons from using your telephone and its electronic notebook during your absence.

**Precondition:** You must have configured a personal identification number (PIN) for your telephone  
→ Page 71.

#### To lock and unlock the telephone:

► **Changeover on?** ✓

or

► **Changeover off?** ✓

or

\* 6 6 or # 6 6



Enter the code for "on" or "off".

Enter the telephone lock PIN → Page 71.

→ While the telephone is locked, a special dial tone sounds when you lift the handset. You can continue to dial internal numbers as usual.

Your telephone can also be locked or unlocked again by an authorized party → Page 70.

## Step by Step

### Locking Another Telephone to Prevent Unauthorized Use

If this function has been configured (contact your service personnel), you can lock other telephones to prevent unauthorized use and then unlock them again later.

You can use this function to unlock the telephone for users who have locked their telephones and then forgotten their PINs.

Program/Service 

Press the key. The LED lights up.

► **US: \*943=Lock all phones?** ✓  
► **UK: \*943=Telephone Lock?** ✓

Confirm.

or

**\* 9 4 3**

Enter the code.



Enter the internal number of the telephones that you want to lock or unlock.

**\*=Lock phone?** ✓  
or

Confirm.

**#=Unlock phone?** ✓  
or

**\* or #**

Enter the code.


## Step by Step

### Saving Your PIN

To use the functions

- to prevent unauthorized persons from using your telephone → Page 69
- to use another telephone like your own → Page 76
- to change your call number → Page 77

you need to enter a personal identification number, which you can save yourself.

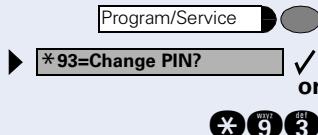

Press the key. The LED lights up.

Confirm.

Enter the PIN.



Enter the current five-digit PIN.

If you have not yet assigned a PIN, use the PIN "00000" the first time you enter it.



Enter the new PIN.



Repeat the new PIN.

 If you forget your PIN, contact your service personnel, who can reset your PIN to "00000".

### Step by Step

## Using Other Functions

### Sending a Message

You can send short text messages (infotexts) to single users or groups of users who have system telephones. On system telephones with no display (e.g. optiPoint 500 entry), on ISDN, pulse or tone dialling telephones, transmitted text messages will be saved as a callback request.

### Creating and Sending a Message

► **US: Send message?** ✓  
► **UK: Send Message?** ✓  
or  
\* 6 8

Select and confirm.

Enter the code.



Enter the internal station number of the recipient or group.

► **0=Please call back** ✓  
or  
0 ... 9

Select and confirm the preprogrammed message (which can be changed by service personnel).

Enter the code directly.  
The codes appear on the screen, next to the messages to which they are assigned.

or

► **Enter message text?** ✓

Select and confirm.

## Step by Step

0 ...  \* #

### Entering text via the keypad

Enter text (max. 24 characters) via the keypad. Digit keys must be pressed a specific number of times to enter letters.

Example:

"R" = Press the  key once and the  key three times.

key	1x	2x	3x	4x	5x
	(a)	1			
	a	b	c	2	
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	
	p	q	r	s	7
	t	u	v	8	
	w	x	y	z	9
	(b)	.	-	0	
	(c)				
	(a)				

(a) Delete the character to the left

(b) Space

(c) Next letter in upper-case

### After entering text:

**Send?** 

Confirm.

## Displaying and Deleting Messages You Have Sent

► **View sent message?** 

or

Select and confirm.

►  

Enter the code.

Follow the display prompts.

 Texts sent to groups can be deleted only by the originator.

### Step by Step

#### Answering Messages

"Messages received:" appears on your screen, along with an indication of the length.

US: View messages? ✓  
UK: Display Messages? ✓

► [ ] ✓

Confirm.

Follow the display prompts.

#### Leaving an Advisory Message

You can leave an advisory message on your telephone screen for internal callers who want to reach you while you are away from your desk.

When another party calls you, the message appears on the caller's screen.

► [Advisory msg. on?] ✓  
or

\* 6 9

Select and confirm.

Enter the code.

► [0=Back at:] ✓  
or

0 ... 9

Select and confirm the preprogrammed message (which can be changed by service personnel).

Enter the code directly.  
The codes appear on the screen, next to the messages to which they are assigned.

→ You can add numeric input to preprogrammed messages that end in a colon.

► [Enter message text?] ✓

Select and confirm.

Enter text (max. 24 characters).

→ For a detailed description, see → Page 73.

US: Save? ✓  
UK: Save entry? ✓

Confirm.

## Step by Step



### Deleting Advisory Messages

Select and confirm.

Enter the code.

If you have programmed an "Advisory message" key  
→ Page 56: The LED lights up. Press the key.

### Display Number of Waiting Calls and Overload Indication

You can show the number of external waiting calls on the display by pressing the "View number of calls" key  
→ Page 56.



Press the "Waiting calls" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact your service personnel to find out the waiting call limit.

- LED off:  
No callers waiting.
- LED flashes slowly:  
You have reached the programmed threshold.
- LED flashes rapidly:  
You have exceeded the threshold value (overload).

### Step by Step

#### Using Another Telephone Like Your Own

Other people can temporarily use your telephone for outgoing calls as though it were their own.

Program/Service 

► \*508=Temporary Phone?  or



Enter the code.

Enter the other user's station number.



Enter the other user's telephone lock PIN → Page 71.

If applicable

Change password 



Users who have not yet selected a personal identification number are prompted to do so on their own telephones.

Dial the external number.

This state is canceled at the end of the call.

## Step by Step

## Change call number (relocate)

You can put your call number on every other available telephone when it is set up (ask your service personnel). Your previous telephone then receives the old call number of your new telephone. The call number together with the settings (e.g. programmed keys) of the telephone are changed.

**Precondition:** Your old and new telephone are the first telephones at each connection. The telephone are in idle state.

The following procedure is carried out on the new telephone.

Program/Service 

► **\*9419=Relocate?**  or 

Press the key. The LED lights up.

Select and confirm.

Enter the code.



Enter your own call number.



Enter code (telephone lock) → Page 71.  
(This is not necessary if you have not determined a code yet).

**Complete Relocate**  or 

Confirm.

Enter the code.

 If you exchange call numbers from different system telephones, all programmed keys are replaced with the default assignment.  
You can, however, connect your telephone to another connection and carry out the procedure.

## Step by Step

### Fax Details and Message on Answering Machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → Page 56, the key lights up when a fax or a message has been received.

#### Deactivating indication:




Press the illuminated "Fax details" key. The LED goes out.

## Step by Step

### Resetting Services and Functions (System-Wide Cancellation for a Telephone)

There is a general reset procedure for activated functions. The following functions are canceled, if they were activated:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunting group off
- Suppress call ID
- Waiting tone off
- DND on
- Ringer cutoff on
- Messages received:
- View callbacks

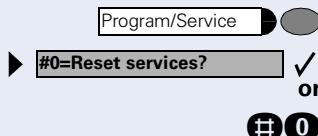

Press the key. The LED lights up.

Select and confirm.

Enter the code.

### Step by Step

## Activating Functions for Another Telephone

If this function has been configured (contact your service personnel), you can turn the following functions on and off for other telephones. This feature is also known as associated service.

- Do not disturb, code: \*97/#97 → Page 66
- Call forwarding, code: \*11, \*12, \*13/#1 → Page 21
- Locking and unlocking telephone, code: \*66/#66 → Page 69
- Group ringing, code: \*81/#81 → Page 87
- Leaving an advisory message, code: \*69/#69 → Page 74
- Group call, code: \*85/#85 → Page 87
- Reset services and functions, code: #0 → Page 79
- Control relay, code: \*90/#90 → Page 85
- Night service, code: \*44/#44 → Page 55
- Timed reminders, code \*65 → Page 61

Program/Service 

► **\*83=Associated serv?**  or

**\***  **8**  **3**

Press the key. The LED lights up.

Confirm.

Enter the code.



Enter the internal number of the telephone for which you want to activate the function.



Enter the code, such as \*97 for do not disturb.

Follow the prompts on the screen for any further input.

## Step by Step

## Using System Functions from the Outside (DISA: Direct Inward System Access)

If this function has been configured (contact your service personnel), you can set up external outgoing calls from outside the system, just like an internal user. You can also activate and deactivate the following functions in your system:

- Reset services and functions, code: #0 → Page 79
- Call forwarding, code: \*1/#1 → Page 21
- Lock and unlock all phones, code: \*66/#66 → Page 69
- Save PIN, code: \*93 → Page 71
- Send a message, code: \*68/#68 → Page 72
- Leave an advisory message, code: \*69/#69 → Page 74
- Group ringing, code: \*81/#81 → Page 87
- Group call, code: \*85/#85 → Page 87
- Suppress caller ID, code: \*86/#86 → Page 67
- Waiting tone, code: \*87/#87 → Page 47
- Open door, code: \*61 → Page 32
- Door opener on/off, code: \*89/#89 → Page 32
- Control relay, code: \*90/#90 → Page 85
- Do not disturb, code: \*97/#97 → Page 66
- Ringer cutoff function, code: \*98/#98 → Page 66
- Speed-dialing, code: \*7 → Page 37
- Associated service, code: \*83 → Page 80

**Precondition:** You have a telephone that uses tone dialing (DTMF dialing) or you can switch your telephone to tone dialing. The telephone is not connected to the system.



Set up a call to the system. Enter the station number (contact your service personnel).



Wait for a continuous tone (if necessary switch the telephone to tone dialing), then enter the internal number that has been assigned to you and the associated PIN.



Enter the code (necessary only if programmed in the system).

### Step by Step



Wait for a dial tone and then enter the code, such as \*97 for Do not disturb on. Make other inputs as necessary; (refer to the operating instructions for pulse and DTMF telephones).



Dial the external number.



You can only execute one function at a time, or set up only one outgoing connection.

The connection is immediately released after successful activation of a function.

In the case of an external-external call, the connection is released as soon as either of the parties ends the call.

## Step by Step

## Using functions in ISDN via code dialing (keypad dialing)

If authorized (contact your service personnel), you can set ISDN functions via code dialing in some countries.



Press the key. The LED lights up.

Confirm.

Enter the code.



Enter the number of the trunk you wish to use (contact your service personnel).



Entering a code for required ISDN function (contact your service personnel).

→ Contact your network provider to find out which ISDN functions can be code-controlled in your country.

Siemens AG shall not be liable for damages/costs which may be incurred by fraudulent activities or remote operation (e.g. toll fraud).

## Step by Step

## Controlling Connected Computers or Other Programs and Telephone Data Service (HiPath 3500/3550/3700/3750 Only)

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

**Precondition:** You have set up a connection.

Program/Service 

► \*42=Tel. data service?  or 

\*  4 

Press the key. The LED lights up.

Confirm.

Enter the code.

The connected computer now prompts you to enter the data, which you can do in one of two ways. Contact your service personnel to find out which option is programmed in your system:

- Input in en-bloc mode.

0 ... 

Enter data.

 or 

Press this key at the end of the entry.

Entry complete? 

Confirm.

or

- Input in online mode:  
The connected computer processes your entries directly.

 Enter the code.

0 ... 

Enter data.

## Step by Step

### Controlling Relays

If this function has been configured (contact your service personnel), you can turn up to four relays on and off to control different facilities (such as a door opener). Depending on how they are programmed, you can switch the relays on and off or switch them on and have them switched off automatically after a timeout.

 Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → Page 104!

- ▶ **\*90=Control Relay On?** ✓  
or
- ▶ **#90=Control Relay Off?** ✓  
or
- \* 9 0** or **# 9 0**
- 1** ... **4**

Select and confirm.

Enter the code for "on" or "off".

Enter the relay.

### Sensors (HiPath 3300/3350/3500/3550 Only)

If this function has been configured (contact your service personnel), sensors detect signals, causing your phone to ring and a message to appear on your screen.

### Radio Paging (Not for U.S.)

If paging equipment is connected to your system (contact your service personnel), you can contact people via their pocket receivers.

The pocket receiver indicates to the person you are looking for that someone is trying to get in touch. The person you page can then go to the nearest telephone and call you.

The operating procedures differ according to the type of radio paging equipment connected (simple or enhanced paging equipment).

### Step by Step

## Simple Paging Equipment

### Paging:

To be paged, you must have activated a call ringing group → Page 89, call forwarding → Page 21, or call redirection (service technician) to the internal station number of your paging equipment.  
A call request is then signaled automatically.

### Answering the page from the nearest telephone:



Lift the handset.



Enter the code.



 
Enter your own station number.

## Enhanced Paging Equipment (Hipath 3700/3750 Only)

### Paging:



Press the key. The LED lights up.



Select and confirm.



 
Enter the code.



Enter the number of the party you want to page.



Select and confirm.



Select and confirm.

### Answering the page from the nearest telephone:



Lift the handset.



Press the key. The LED lights up.



Select and confirm.



Enter the code.



Enter your own station number.

## Step by Step

## Using Other Team Functions

## Turning Group Call On and Off

If this function has been configured (contact your service personnel), you belong to one or more groups of users who can each be reached under a hunt group or group call number.

Incoming calls are signaled on all group member telephones in the order in which they are received ( hunt group) or simultaneously (= group call) until one member of the group accepts the call.

You can also belong to a team (including executive/secretary ones) in which station numbers are programmed on trunk keys → Page 92.

Each member of the group remains available under his or her own station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including an executive/secretary team).

If the LED on a programmed "US:Join/leave group UK:Hunt group join/leave" key → Page 56 is illuminated, this means that the audible tone was activated for at least one group.

► Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → Page 100!

## You belong to a hunt group or a group call:

- **US: Leave group?** ✓
- **UK: Leave hunt group?** ✓

or

- **US: Join group?** ✓
- **UK: Join hunt group?** ✓

or

# **8** **5** or \* **8** **5**

or



Enter the code for "leave" or "join".

Press the Hunt group join/leave key.

### Step by Step

You belong to multiple groups or to one group with trunk keys (including executive/secretary teams).

 
- ▶ **US: Leave group?** ✓
- ▶ **UK: Leave hunt group?** ✓

Select and confirm.

- ▶ **US: Join group?** ✓
- ▶ **UK: Join hunt group?** ✓

or

- ▶ **# 8 5 or \* 8 5** ✓
- ▶ **or**



Enter the code for "leave" or "join".

- ▶ **301 x group name** ✓
- ▶ **or**

- ▶ **301 group name**

If an "x" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

No "x" means that the audible tone was deactivated.

- ▶ **Next?** ✓

Press the "OK" dialog key to confirm your selection and display the next group or trunk number and group name.

or

- ▶ **US: Leave group?** ✓
- ▶ **UK: Leave hunt group?** ✓

Select and confirm. This turns off the audible tone for the displayed group or trunk.

or

- ▶ **US: Join group?** ✓
- ▶ **UK: Join hunt group?** ✓

Select and confirm. This turns off the audible tone for the displayed group or trunk.

or

- ▶ **#=Leave all groups?** ✓

Select and confirm. This turns off the audible tone for all groups and trunks.



Enter the code for "Leave all groups".

- ▶ **\*=Rejoin\_all\_groups** ✓

Select and confirm. This turns off the audible tone for all groups and trunks.

or



Enter the code for "Join all groups".

→ If you deactivate the audible tone for another group or trunk, or deactivate it for all groups and trunks to which you belong, a special dial tone sounds when you lift the handset.


## Step by Step

### Accepting a Call for Another Member of Your Team

You can accept calls for other telephones in your team from your telephone even while engaged in another call. To do this, contact your service personnel to find out if a pickup group has been configured.

**Precondition:** Your telephone rings briefly. The following message appears on the display: "Call for:".

Confirm.

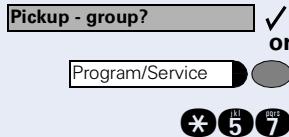

Press the key. The LED lights up.

Enter the code.

### Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at up to five other internal phones. The person who answers first receives the call.

→ Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → Page 103!

#### Saving, displaying, and deleting telephones for the ringing group:



Press the key. The LED lights up.

Select and confirm.

Enter the code.

Follow the display prompts (enter the internal station number).

#### Removing all telephones in call ringing group:

Select and confirm.

Enter the code.

### Step by Step

#### Uniform Call Distribution (UCD)

If this function has been configured (contact your service personnel), you belong to a group of users (agents) to whom calls are distributed.

An incoming call is always assigned to the agent who has had the longest break without a call.

##### Logging on and off at the beginning and end of your shift:

Program/Service 

- ▶ **UCD?** ✓
- \* 401=Log on? ✓
- or
- #401=Log off? ✓
- or

\*  4  0  1 or #  4  0  1

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "Log on" or "Log off".



To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

##### Logging on and off during your shift:

Program/Service 

- ▶ **UCD?** ✓
- ▶ **#402=Not available?** ✓
- or
- \* 402=Available? ✓
- or

#  4  0  2 or \*  4  0  2

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "Not available" or "Available".

## Step by Step

### Requesting and activating a work time:

If you want to follow-up on the last call you answered without being disturbed, you can request and activate a work time. This removes your telephone from the call distribution cycle for a programmable period of time until you log back on.

Program/Service

- ▶ **UCD?** ✓
- ▶ **\*403=Work on?** ✓
- or
- #403=Work off?** ✓
- or
- \* 4 0 3** or **# 4 0 3**

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

### Turning the night service on and off for UCD:

Program/Service

- ▶ **UCD?** ✓
- ▶ **\*404=UCD night on?** ✓
- or
- #404=UCD night off?** ✓
- or
- \* 4 0 4** or **# 4 0 4**

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

### Display the number of waiting calls:

Program/Service

- ▶ **UCD?** ✓
- ▶ **\*405=Calls in queue?** ✓
- or
- \* 4 0 5**

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

### Step by Step

## Team and Executive/Secretary Functions With Trunk Keys

If this function has been configured (contact your service personnel), you belong to a team of users for whom special keys were programmed:

- Trunk keys (MULAP keys)
- Direct station selection keys
- Group call key  
(not on the executive telephone in an executive/secretary team)
- Ring transfer keys  
(only in an executive/secretary team)

As a team member, you can also program these keys yourself ("MULAP key", "Direct station select", "US:Join/leave group UK:Hunt group join/leave", "Ring Transfer: on/off") → Page 56. You can also program a call forwarding key ("Forward Line") for each line.

### Using Trunk Keys

A separate trunk is assigned to each team member. All other team members have the same trunk keys for these trunks on their telephones. This means that every team member can use all programmed trunk keys. Each team member can also be reached under a separate station number, if one was assigned.

 
#### Meaning of LED Indications on Trunk Keys:




Trunk key LED is off - Trunk is free and can be used.



Trunk key LED is lit - Trunk is in use.



 Trunk key LED is flashing **rapidly** - A call on the trunk needs to be answered.



Trunk key LED is flashing **slowly** - A call on hold is waiting.

## Step by Step

### Answering Calls With Trunk Keys

**Precondition:** Your telephone is ringing and/or the trunk key is flashing rapidly.



Press the rapidly flashing trunk key.

This is not necessary if the trunk is automatically assigned to you when you lift the handset or press the "Speaker" key; in this case the assigned trunk key lights up.



Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening (not available with optiPoint 500 economy and optiPoint 500 basic).

### Making Calls with Trunk Keys



Press the free trunk key that you want to use to set up your call.

This is not necessary if the trunk is automatically assigned to you when you lift the handset or press the "Speaker" key; in this case the assigned trunk key lights up.



Dial the station number.



When the other party answers: Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening (not available with optiPoint 500 economy and optiPoint 500 basic).

### Using a Trunk Key to Place a Call on Hold and Retrieve It Again

**Precondition:** You are conducting a call over a trunk in your group. The "US:Hold UK:Common Hold" key has been programmed on your telephone → Page 56.

#### Placing a call on hold:



Press the "US:Hold UK:Common Hold" key.



or



Release

Replace the handset or press the key. Depending on the configuration (contact your service personnel), this may be necessary so other team members can also pick up the call on hold.

### Step by Step



#### Retrieving the call:

Press the slowly flashing trunk key.



#### Switching Between Phone Calls on Multiple Trunks

**Precondition:** You are conducting a call over a trunk in your group. Another trunk key starts flashing.



Press the flashing trunk key. The first party is placed on hold on the other trunk.



 
Press the slowly flashing trunk key. The second party is placed on hold.

You can switch between the two call as many times as you wish. Always press the slowly flashing trunk key.

#### Forwarding Calls on Lines

You can immediately forward internal or external calls on your lines to different internal or external telephones (destinations); even external destinations are possible in certain system configurations.

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Press the key. The LED lights up.



 
Select and confirm.



Enter the code.



Press the trunk key you wish to use.



Enter the number of the trunk you wish to use.



If available. Press the "Forward Line" key.  
(You have stored the incomplete "Forward Line" function on the key, excluding the call forwarding type and destination → Page 56.)

## Step by Step

1=all calls? ✓

or

► 2=external calls only? ✓

or

► 3=internal calls only? ✓

or

1 or 2 or 3



US: Save? ✓

UK: Save entry? ✓

or



Select and confirm.

Enter the code.

Enter the destination number.

Confirm.

If available. Press the "Forward Line" key. (You have stored the call forwarding type and destination on the "Forward Line" key → Page 56.)

### Deactivating call forwarding:



► #501=Forward Line: Off? ✓

or

‡ 5 0 1

Press the key. The LED lights up.

Select and confirm.

Enter the code.



or



Press the trunk key you wish to use.

Enter the number of the trunk key you wish to use.



or



 
If available. Press the "Forward Line" key.

► If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.


### Meaning of LED Indications on the "Forward Line" Keys:



or



or

 

The LED on the "Forward Line" key is off - call forwarding is not active for this trunk.

LED on the "Forward Line" key is lit - call forwarding is active for this trunk.

LED on the "Forward Line" key is flashing **slowly** - the trunk is a call forwarding destination.

### Step by Step

## Using DSS Keys

Each team member has a DSS key for every other member in the team.

This enables every team member to reach all other members of the team directly, simply by pressing a key.

### Meaning of LED Indications on DSS Keys



or



or



or



LED on the DSS key is off - the team member is not engaged in a phone call.

LED on the DSS key is lit - the team member is engaged in a phone call or has activated do not disturb.

LED on the DSS key is flashing **rapidly** - a call has arrived for you and needs to be answered.

LED on the DSS keys is flashing **slowly** - a caller is trying to reach another member of your team, who has not yet answered.

## Using DSS Keys to Answer Calls

**Precondition:** Your telephone is ringing and/or a DSS key is flashing.



Press the flashing DSS key.

This is not necessary if you are receiving a DSS call and the DSS key is flashing rapidly.



Lift the handset.

or

With on-hook dialing: Use speakerphone mode and open listening (not available with optiPoint 500 economy and optiPoint 500 basic).

## Calling a Team Member Directly



or



Press the direct station selection key.

If the team member you wish to reach is engaged in another call, the DSS key on your telephone is illuminated. You can make the call even in this case.



When the other party answers: Lift the handset.

## Step by Step

**or** With on-hook dialing: Use speakerphone mode (not available with optiPoint 500 economy and optiPoint 500 basic).

## Transferring a Call in Progress



Press the DSS key and announce the call, if desired.



Replace the handset.



Press the key.

## Accepting a Call for Another Team Member



Press the flashing DSS key or trunk key.



Lift the handset.

**or** With on-hook dialing: Use speakerphone mode and open listening (not available with optiPoint 500 economy and optiPoint 500 basic).

## Joining or Leaving a Group Call (Not for the Executive Telephone in an Executive/Secretary Team)

By default, your telephone rings when a call arrives on your line.

If you want your phone to ring even when calls arrive on other lines, you can turn your ringer on and off for each line in your group → Page 87.

Your telephone rings (one time only or every four seconds) even when you are engaged in another call (attention ring volume → Page 26).

### Step by Step

## Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group)

Normally, audible signaling of all calls for the executive is heard only in the secretary's office.

You can activate audible signaling so that calls are only signaled on the executive telephone and on a second telephone assigned to it.

### Activating ring transfer:



or



► **\*502=Ring Transfer: On?** ✓  
or



Press the Ring Transfer" key. The LED lights up.

Press the key. The LED lights up.

Select and confirm.

Enter the code.



or



Press the trunk key you wish to use.

Enter the number of the trunk you wish to use.

### Deactivating ring transfer:



or



► **#502=Ring Transfer: Off?** ✓  
or



Press the "Ring Transfer" key. The LED goes out.

Press the key. The LED lights up.

Select and confirm.

Enter the code.



or



Press the trunk key you wish to use.

Enter the number of the trunk you wish to use.


## Step by Step

## Testing the Telephone

## Testing the Telephone Functions

You can test your telephone functions.

**Precondition:** Your telephone is idle.

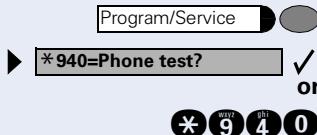

Press the key. The LED lights up.

Select and confirm.

Enter the code.

If everything is OK,

- all LEDs on the telephone start flashing, including the ones on the key module (only the Program/Service menu LED lights up);
- your station number appears on the screen;
- all pixels in the display are activated;
- the ringer signal sounds.

## Checking the Key Assignment

You can check the assignment of keys on your telephone to see which functions are programmed on which keys.




Press the key. The LED lights up.

Select and confirm.

Enter the code.



Press the key. The key assignment appears on the screen.

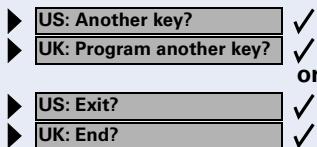

Select and confirm.

Select and confirm.

### Step by Step

 
## Special Functions in the LAN (PC Network)

If your telephone is operating in a HiPath 5000 RSM environment, multiple HiPath 3000 systems are interconnected via a LAN (Local Area Network, e.g. proprietary PC network). Your telephone calls are conducted via the LAN (PC network).

If this is the case, you must take certain special features into consideration when performing various functions. These are described below.

### Leaving a Hunt Group/Group Call

**Precondition:** you belong to a hunt group/group call  
→ Page 87 of another HiPath 3000:

- ▶ **Internal DISA?** ✓ or   **\***   **4**   **7**
- Select and confirm.
- Enter the code.
-  Enter the (DISA) call number of the other HiPath 3000.
- ✓ or  Confirm the entry.
-  Enter the (DISA) call number of your telephone.
- ✓ or  Confirm the entry.
- ▶ **Leave hunt group?** ✓ or  
- Select and confirm.
- ▶ **Join hunt group?** ✓ or  
- Enter the code for "leave" or "join".
- You belong to multiple groups of another HiPath 3000:**
-  Enter the group number for "Join/Leave, directed".

## Step by Step

### Transferring Call Forwarding

You can activate/deactivate call forwarding → Page 21 for your telephone from other HiPath 5000 RSM telephones.

► **Internal DISA?** ✓

or

\* 4 7



Enter the code.

Enter the (DISA) call number of the HiPath 3000 to which your telephone is connected.

✓ or #



Confirm the entry.

Enter the (DISA) call number of your telephone.

✓ or #



Confirm the entry.

#### Activating this function:

► **Call forwarding on?** ✓

or

\* 1

Enter the code.

**1=all calls?** ✓

or

► **2=external calls only?** ✓

or

► **3=internal calls only?** ✓

or

1 or 2 or 3



Enter the code.

Enter the destination number.

**Save?** ✓

Confirm.

#### Deactivating this function:

► **Call forwarding off?** ✓

or

# 1

Enter the code.

### Step by Step

#### Using Night Answer

If authorized (contact your service personnel), you can define telephones in other HiPath 3000 communications platforms as the night answer → Page 55.

► **Internal DISA?** ✓  
or

\*  

Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 to which the night answer telephone is connected.

✓ or 

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to activate/deactivate the night answer service.

✓ or 

Confirm the entry.

#### Activating this function:

► **Night answer on?** ✓  
or

\*  

Select and confirm.

Enter the code.



Enter the destination number (= temporary night answer service).

**Save?** ✓

Confirm.

#### Deactivating this function:

► **Night answer off?** ✓  
or

#  

Select and confirm.

Enter the code.

## Step by Step

# Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other HiPath 3000 communications platforms → Page 89.

## Saving the telephones for the ringing group:

- ▶ **Program/Service** 
- ▶ **\*81=Ringng group on?** ✓ or 
- ▶ **Add to ringing group?** ✓ or 
- ▶ **Add another station?** ✓ or 
- ▶ **Display remove?** ✓ Select and confirm, then follow the operating instructions.
- ▶  Enter the call number.
- ▶ **#=Entry complete?** ✓ or 
- ▶ **Save?** ✓ Confirm.
- ▶ **Exit?** ✓ Select and confirm.

**Removing all telephones in call ringing group:**

- ▶ **Ringing group off?** ✓ or 
- ▶  Enter the code.

### Step by Step

#### Controlling Relays

If this feature is configured (contact your service personnel), you can also control relays → Page 85 in other HiPath 3000 communications platforms.

► **Internal DISA?** ✓  
or

\*  # 

Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the relay is to be controlled.

✓ or #

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to control the relay.

✓ or #

Confirm the entry.

► **\*90=Control Relay On?** ✓  
or

► **#90=Control Relay Off?** ✓  
or

\*  0 or #  0

Select and confirm.

Enter the code for "on" or "off".

1 ... 

Enter the relay.

## Step by Step

### Opening the Door

If this feature is configured (contact your service personnel), you can also activate the door opener  
 → Page 32 in other HiPath 3000 communications platforms.

► **Internal DISA?** ✓  
 or  
 \* 4 7

Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the door is to be opened.

✓ or #

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to activate the door opener.

✓ or #

Confirm the entry.

► **Open door?** ✓  
 or  
 \* 6 1

Select and confirm.

Enter the code.



Enter the call number of the entrance telephone.

# Labeling, Documentation and Accessories

## Labeling Key Fields

You can chose from the following options to label the keys with the functions/call numbers saved (→ Page 8, → Page 9, → Page 56):

### Labeling

- by hand:

Labeling strips are delivered with your optiPoint. Write the function or a name on the matching strips within the white field and attach them to your optiPoint.

- with a computer:

You have avail of a CD Rom (ask your service personnel) with the electronic operating instructions for your HiPath 3000 / 5000 RSM  
→ Page 107. You can label your keypads for each PC.

- with a computer via the Internet:

You will find the "Online Key Labelling Tool" along with the user interface under <http://www.siemens.com/hipath> → "Downloads" → "Software".

Put the labeled strips in the relevant key pad on your optiPoint and place the transparent cover over them (mat page above).



## Attaching a Station Number Label

Self-adhesive call-number labels are also delivered with your optiPoint.

Write on the call-number label (fire brigade, police, own telephone numbers), then remove and stick it in the recess on the telephone when the handset is lifted.

## Documentation

You can find these operating instructions in the Internet in PDF format under

<http://www.siemens.com/hipath>

and on CD-ROM (ask your service personnel) in HTML and PDF format.

In order to look at and print the operating instructions in PDF format, you need a computer on which the free Acrobat Reader software package is installed by Adobe.

To look at the operating instructions in HTML format you need a computer with a www browser, e.g. Microsoft Internet Explorer.

## Accessories

The following accessories help you customize your telephone (not optiPoint 500 economy) to your individual preferences. optiPoint adapters are modules which can be plugged into the option bays at the bottom of optiPoint.

### **optiPoint key module:**

Key module with 16 programmable keys. You can connect up to two key modules to your telephone.

### **optiPoint BLF:**

Key modules with 90 LEDs and function keys. Use preferably in conjunction with optiPoint Attendant.

### **optiPoint acoustic adapter:**

Connects a desk microphone, Headset, external speaker or second handset.

Provides an additional bell for signaling calls in loud environments and similar situations and controls illuminated display panels, such as "Please do not enter" at the entrance to a room.

### **optiPoint analog adapter:**

Connects an additional analog telephone, fax machine or PC with a modem card.

### **optiPoint ISDN adapter:**

Connects an ISDN device, such as an ISDN fax machine, video recorder or PC to the S<sub>0</sub> interface.

### **optiPoint phone adapter:**

Connects a second system telephone. Callers can reach the second system telephone under a separate station number.

### **optiPoint recorder adapter:**

Connects an external recorder or a second headset.

### **Headset:**

Headset for frequent telephone users.

### **Second handset:**

Allows you to hear better in noisy environments.

### **Desk microphone:**

For speakerphone mode under poor acoustic conditions.

### **External speaker:**

Improves the sound quality with open listening.

### **optiPoint Conference Kit:**

to improve the hands free speaking quality of telephone conferences.

---

 You will find details about the individual products in your optiPoint telephone data sheets.

---

# Fixing Problems

## Telephone Maintenance

- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaners containing alcohol, cleaners that corrode plastic, or abrasive powders.

## Troubleshooting

### Pressed key does not respond:

Check whether the key is stuck.

### Telephone does not ring:

Check whether the do not disturb function was activated on your telephone ("Do not disturb" appears on the screen). If so, deactivate it  
→ Page 66.

### You cannot dial an external number:

Check whether your telephone is locked ("US:Not authorized UK:Access denied" appears on the screen). If so, unlock the telephone → Page 69.

### To correct any other problem:

First contact your service personnel. If your service personnel is unable to correct the problem, contact Customer Service.

### Step by Step

## Responding to Error Messages on the Screen

**US: Invalid entry**

**UK: Incorrect entry**

### Possible cause:

The station number is incorrect.

### Possible response:

Enter a correct station number.

**US: Not authorized**

**UK: Access denied**

### Possible cause:

You tried to activate a disabled function.

### Possible response:

Ask your service personnel to authorize you to use the function.

**US: Currently not possible**

**UK: Feature not available**

### Possible cause:

The station number you dialed does not exist. The telephone you are trying to call is unplugged.

### Possible response:

Enter a correct station number. Try calling the telephone again later on.

**US: Invalid station number**

**UK: Number cannot be dialed**

### Possible cause:

You dialed your own station number.

### Possible response:

Enter a correct station number.

**US: Key memory is full**

**UK: Max.no.of keys exceeded**

### Possible cause:

All memory locations for external station numbers are currently in use.

### Possible response:

Try again later on.

## Contacts for Resolving Problems

If you encounter a problem that lasts longer than five minutes, contact your service personnel.

# Index

## A

accessories .....	108
account code .....	65
activating door opener .....	32
adapter .....	108
advisory message .....	74
agents .....	90
announcement .....	43
answering a timed reminder .....	62
answering machine .....	78
call pickup .....	33
appointment .....	61
assigning a DID number .....	44
assigning available keys .....	56
assigning programmable keys .....	56
associated dialing/dialing aid .....	45
Attention Ring Vol .....	26
automatic connection setup .....	44
automatic line seizure .....	16

## C

call	
accepting from answering machine ....	33
accepting in a team .....	97
accepting, group .....	89
answering .....	13, 29
forwarding .....	21
forwarding in a team .....	94
forwarding MSN in CO .....	22
in a team with trunk keys .....	93
parking .....	47
pickup, directed .....	29
placing on hold .....	48
rejecting .....	30
retrieving from park .....	48
retrieving held .....	49
transfer .....	97
transfer after announcement .....	52
using DSS keys in a team .....	96

call charge assignment .....	65
call charges for another telephone .....	63
call charges for your telephone .....	63
call forwarding .....	21
MSN in CO .....	22
call request .....	35
call signal .....	13
call transfer .....	20
call volume .....	13, 27
call waiting .....	
accepting .....	46
allowing .....	47
preventing .....	47
call waiting (camp-on) .....	54
tone off .....	47
call waiting on/off .....	47
call waiting tone on/off .....	47
caller ID .....	
restoring display of .....	
suppressing display of caller ID .....	67
caller ID suppression .....	67
calling .....	
entrance telephone .....	31
calling a second party .....	19
calls .....	
distributing .....	90
calls in queue .....	75, 90
CE mark .....	2
change call number .....	77
charges for another telephone .....	63
charges for your telephone .....	63
checking key assignments .....	99
cleaning the telephone .....	109
code dialing in ISDN .....	83
codes .....	11
conducting calls with a headset .....	31
conference .....	19
connection setup, automatic .....	44
consultation hold .....	19
contacts/problems .....	110
control panel .....	
optiPoint 500 advance .....	9
optiPoint 500 economy/basic/standard .....	8

### D

deleting advisory messages	75
desk microphone	108
details, fax	78
dial input editing	34
dialing	
en-bloc	34
internal/external calls	15
dialing a number	
from the caller list	36
with repertory dialing keys	25
dialing aid	
S0-bus	45
dialing Internal calls	15
dialing numbers	
from the internal directory	39
using speed-dialing	37
direct inward system access (DISA)	81
direct station select	25, 58, 96
directory, internal	39
DISA	81
Display	8
display	9
Display angle	27
Display backlight	27
Display contrast	28
distributing calls	90
do not disturb	66
door opener	32

### E

editing dial inputs	34
editing the station number	34
en-bloc	34
enhanced paging equipment	86
entrance telephone	31
error messages	110
executive/secretary functions	92
explanation of symbols	10
external code	15

### F

faceplate	
key module	9
fax details	78
forwarding	
multiple subscriber number (MSN)	22
forwarding MSN in CO	22
forwarding multiple subscriber number (MSN)	22
function keys	
activating/deactivating for another telephone associated service	80
programming on keys	56
resetting	79

### G

group call	87
in a team	97

### H

handsfree answerback	30
off	31
on	31
headset	31, 108
HiPath 5000 RSM	
actuators	104
door opener	105
group call	100
hunt group	100
night answer	102
relays	104
ringing group	103
transferring call forwarding	101
hotline	44
HTML format	107
hunt group	87

### I

internal directory	39
IP telephony	100

**K**

key fields, labeling ..... 8, 9, 106  
 key module ..... 9  
 keypad dialing ..... 83  
 keys  
     assigning ..... 56  
     fixed ..... 8, 9  
     incomplete save ..... 56  
     labeling ..... 106  
     programmable ..... 8, 9

**L**

labeling key fields ..... 8, 9, 106  
 LAN telephony ..... 100  
 LDAP-Telefonbuch ..... 40  
 leaving an advisory message ..... 74  
 LED (light-emitting diode) ..... 8, 9  
 LED indications, meaning of ..... 92, 95, 96  
 LED signals, meaning ..... 57  
 locking all phones ..... 70  
 locking/unlocking the telephone ..... 69

**M**

mailbox ..... 43  
 making calls  
     on-hook dialing ..... 15  
     using redial ..... 17  
     with the dialing aid ..... 45  
 making external calls ..... 15  
 making trunk calls ..... 15  
 malfunctions ..... 109  
 meaning of LED Indications ..... 92  
 meaning of LED indications ..... 95, 96  
 meaning of LED signals ..... 57  
 message  
     answering ..... 74  
     deleting/displaying ..... 72  
     receiving ..... 74  
     sending ..... 72  
 microphone for speakerphone mode ..... 9  
 monitoring  
     silent ..... 67  
 MULAP keys ..... 92  
 MULAP trunk keys ..... 92

**N**

night answer ..... 55  
 notes ..... 2

**O**

open door  
     with a code ..... 32  
 open listening ..... 15  
 opening door ..... 32  
 operating instructions  
     HTML format ..... 107  
     ordering ..... 107  
     PDF format ..... 107  
 operating principle ..... 11  
 operating steps  
     assigning to a key ..... 60  
 operating systems ..... 10  
 optiPoint adapter ..... 108  
 optiPoint key module ..... 9  
 overload ..... 75  
 override ..... 54, 67

**P**

parking a call ..... 47  
 PDF format ..... 107  
 personal identification number ..... 71  
 pickup (call) ..... 29, 89  
 PIN ..... 71  
     for a telephone ..... 69  
 placing a call on hold ..... 48  
     in a team ..... 93  
 preventing and allowing  
     automatic camp-on ..... 47  
     prime line on ..... 16  
 problems/contacts ..... 110  
 procedure  
     assigning to a key ..... 60  
 Program/Service ..... 11  
 programming available keys ..... 56  
 programming keys ..... 56  
 programming your telephone ..... 26  
 project calls ..... 65

**R**

radio paging equipment PSE ..... 85  
recall ..... 53  
receiving volume ..... 13, 27  
redialing a number ..... 17  
    from the caller list ..... 36  
relays ..... 85  
relocate ..... 77  
reserving a trunk ..... 44  
resetting functions ..... 79  
resetting services ..... 79  
ring tone ..... 26  
ring transfer  
    in an executive/secretary team ..... 98  
ring volume ..... 26  
ringer cutoff ..... 66  
ringing group ..... 89  
room monitor ..... 67

**S**

saving a PIN ..... 71  
second level ..... 25, 56  
secretary functions ..... 92  
security ..... 66  
sensors ..... 85  
setting your telephone ..... 26  
Shift ..... 25, 56  
Shift key ..... 25, 56  
silent monitor ..... 67  
simple paging equipment ..... 86  
speaker ..... 13  
speaker call ..... 43  
speakerphone mode ..... 13, 14, 27  
special dial tone ..... 66  
speed-dialing  
    dialing numbers ..... 37  
    saving station speed-dialing ..... 37  
    system ..... 37  
station number  
    assigning ..... 44  
    correcting ..... 34  
    saving ..... 24  
station speed-dialing ..... 37  
suffix-dialing ..... 52  
switches ..... 85  
system speed-dialing ..... 37

system-wide cancellation ..... 79

**T**

team with trunk keys ..... 92  
Telefonbuch LDAP ..... 40  
telephone  
    cleaning ..... 109  
    locking ..... 69  
    locking another ..... 70  
    locking/unlocking ..... 69  
    locking/unlocking all phones ..... 70  
    maintaining ..... 109  
    operating ..... 11  
    settings ..... 26  
    testing ..... 99  
        using another like your own ..... 76  
telephone data service ..... 84  
telephone maintenance ..... 109  
telephone test ..... 99  
temporary phone ..... 76  
testing the telephone ..... 99  
testing the telephone functions ..... 99  
text message  
    answering ..... 74  
    deleting/displaying ..... 72  
    receiving ..... 74  
    sending ..... 72  
three-party conference ..... 19  
time-dependent hotline ..... 44  
toggle ..... 19  
toggle/connect  
    in the team ..... 94  
tone dialing ..... 52  
tone dialing (DTMF dialing) ..... 52  
trace call ..... 68  
transfer (call)  
    after announcement ..... 52  
transfer call ..... 20  
trunk flash ..... 53  
trunk keys in a team ..... 92  
trunk keys, MULAP ..... 92  
trunk, reserving ..... 44

**U**

UCD ..... 90  
using a caller list ..... 35  
using a temporary phone ..... 76  
using functions from the outside ..... 81

**V**

variable call forwarding ..... 21

**W**

## Wählen

aus LDAP-Datenbank ..... 40  
waiting calls ..... 75  
work time ..... 91



# Overview of Functions/Codes (Alphabetical)

The table below lists all available functions as they appear on the display. Functions that have been configured (contact your service personnel) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contact your service personnel).

Functions (display)	... Inter- actively	... Via the Program/Service menu		... With function keys
		Program/Service	Code	
Account code		✓	*60	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated dial		✓	*67	X
Associated serv.		✓	*83	X
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Caller List	✓	✓	#82	X
Save number	✓	✓	*82	X
Changeover on	✓	✓	*66	X
Changeover off	✓	✓	#66	X
Change PIN		✓	*93	
Conference	✓	✓	*3	X
Start conference	✓			
Adding a party to the conference	✓			
End conference	✓	✓	#3	
View conf parties	✓			
Remove party	✓			
Drop last conf. party (only for U.S.)			*491	

## Overview of Functions/Codes (Alphabetical)

Functions (display)	... Inter- actively	... Via the Program/Service menu		... With function keys
			Code	
Consult	✓			
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/US:Accept call UK:Accept	✓			
Control Relay On		✓	*90	X
Control Relay Off		✓	#90	X
US:Directory UK:Phonebook				
1=internal	✓		*54	X
2=LDAP	✓		*54	X
DISA				
Internal DISA	✓	✓	*47	X
En-bloc sending				
Dial	✓			
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
DTMF dialing		✓	*53	X
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD out	✓	✓	#64	X
Forward Line: On		✓	*501	X
Forward Line: Off		✓	#501	X
Headset				X
Answer call	✓			

Functions (display)	... Inter- actively	... Via the Program/Service menu		... With function keys
		Program/Service	Code	
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
Hotline				
Join hunt group	✓	✓	*85	X
Leave hunt group	✓	✓	#85	X
Rejoin all groups	✓	✓	*85*	X
Leave all groups	✓	✓	#85#	X
Lock all phones		✓	*943	X
Monitoring			*944	
Mute on	✓	✓	*52	X
Mute off	✓	✓	#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page		✓	*45	X
Answer page (not for U.S.)		✓	#45	X
Park a call		✓	*56	X
Retrieve call		✓	#56	
Phone Test		✓	*940	
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Prog. feature key		✓	*91	X
Redial				X
Reject call				
Release				X
Relocate		✓	*9419	X
Complete Relocate	✓		#9419	
Reserve trunk	✓			X
Reset services		✓	#0	X

## Overview of Functions/Codes (Alphabetical)

Functions (display)	... Inter- actively	... Via the Program/Service menu		... With function keys
			Code	
Retrieve line		✓	*63	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Ringing group on		✓	*81	X
Ringing group off		✓	#81	X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
US: View messages UK: Display Messages	✓	✓	#68	X
Mailbox				X
Keypad dialing!		✓	*503	
Shift Key				X
Show call charges (own telephone)		✓	*65	X
View call charges (other party's telephone)				X
Speaker call		✓	*80	X
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Tel. data service			*42	
Temporary MSN (not for U.S.)	✓	✓	*41	X
Temporary Phone		✓	*508	X
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Toggle/Connect	✓	✓	*2	X
Trace call		✓	*84	X
Transfer	✓			
Trunk Flash		✓	*51	X

Functions (display)	... Inter- actively	... Via the Program/Service menu		... With function keys
			Code	
UCD				
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
US:Callback UK:Set Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Use speed-dialing		✓	*7	X
Change Speed-dial (station)		✓	*92	X

# **FCC and Industry Canada Compliance**

This section describes the requirements for compliance with Federal Communications Commission (FCC) Rules and Industry Canada CS-03 standard.

## **FCC Certification and Requirements**

The following paragraphs describe requirements and information based on FCC rules.

### **Service**

If you experience problem with the Siemens optiPoint telephone, contact Siemens customer support at 1-800-835-7656 for information on service and repairs. The telephone company can ask you to disconnect the equipment from the network until the problem is corrected or until you are sure that the equipment is not malfunctioning.

### **FCC Rules, Part 15**

The Siemens optiPoint telephone has been tested and complied with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, can cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference in the user's expense.

### **FCC Rules, Part 68**

#### FCC Part 68 Certification

The Siemens optiPoint telephone is certified with FCC under Part 68 as a component device for connection behind FCC Part 68 certified Siemens PBX systems. In order for the FCC certification of the Siemens optiPoint telephone to be retained, all other products used in conjunction with the Siemens optiPoint telephone must also be FCC Part 68 certified for use with the front-end terminal equipment. If any of these components are not certified, Siemens is required to obtain FCC Part 68 certification of the assembled equipment prior to connection to the telephone network. Part 68 certification requires Siemens to maintain this approval and as such are responsible for the following:

- Any component added to the Siemens optiPoint telephone, whether it bears component certification or not, will require a Part 68 compliance evaluation. Siemens may need to test and make a modification filing to the FCC before that new component can be used;
- Any modification/update made to the Siemens optiPoint telephone will require a Part 68 compliance evaluation. Siemens may need to test and make a modification filing to the FCC before that modified component can be used;
- Siemens optiPoint telephone complies with and will continue to comply with all the applicable rules and regulations in Subpart D of the FCC Part 68 rules during the life-time of the product.

If at any time the ownership of Siemens optiPoint telephone is transferred to someone else (whether independently or as part of a system), please supply this manual to the new owner.

## 1. REN

The ringer equivalence number (REN) is used to determine the quality of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). At the base of the telephone is a label contains, among other information, the REN and the FCC certification number. If requested, this information must be given to the telephone company. To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

Note: REN is associated with the analog telephones. It is not applicable to Siemens optiPoint telephone. If requested, please supply the FCC Certification numbers of the front-end host terminal equipment that have a direct Public Switched Telephone Network connection (i.e. have a REN stated on the label) and the highest REN.

## 2. Facility Interface Information

Siemens optiPoint telephone connects to the public switched telephone network through FCC Part 68 certified front-end host PBX equipment which specifies the type of network jacks to be used.

## 3. Disruption of the Network

If the Siemens optiPoint telephone disrupts the telephone network, the telephone company can discontinue your service temporarily. If possible, the telephone company will notify you in advance. If advance notice is not practical, they will notify you as soon as possible. You are also informed of your right to file a complaint with the FCC.

## 4. Telephone Company Facility Changes

The telephone company can make changes in its facilities, equipment, operations, or procedures that can affect the operation of your equipment. If they do, you should be notified in advance so you have an opportunity to maintain uninterrupted telephone service.

## 5. Hearing-Aid Compatibility

Telephones for emergency use and telephones installed in common areas such as lobbies, hospital rooms, elevators, and hotel rooms must have handsets that are compatible with magnetically coupled hearing aids. Persons who are not in common areas must also be provided with hearing-aid compatible handsets, if needed.

The Siemens optiPoint telephone complies with the FCC Rules, Part 68, Section 68.316 Hearing Aid Compatibility and 68.317 volume control requirements.

## 6. Programmed Dialer Features

When you program emergency numbers or make test calls to emergency numbers using Siemens products with programmed dialer features, stay on the line and briefly explain to the dispatcher the reason for the call before hanging up. Perform these activities in off-peak hours, such as early morning or late evening.

## Equipment Attachment Limitations

The following are notices required by Industry Canada Terminal Attachment Program Certification Procedure CP-01, Part I, Section 14.

### Ringer Equivalence Number (REN)

The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. The REN is associated with the analog loop-start and ground-start telephones. It is not applicable to Siemens optiPoint telephones.

### Equipment Attachment Limitations

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirement documents. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

---



### DANGER

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

---

[www.siemens.com/hipath](http://www.siemens.com/hipath)



The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.  
An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

© Siemens AG 2004  
Information and Communication Networks  
Hofmannstr. 51 • D-81359 München

**Ref. No.: A31003-H1012-C121-5-7619**

Subject to availability. Right of modification reserved.  
Printed in the Federal Republic of Germany.  
05.05.2004