

**SIEMENS**



Siemens Aktiengesellschaft,  
issued by Siemens Communications  
Haidenauplatz 1  
D-81667 Munich


© Siemens AG 2005  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens.com/gigaset](http://www.siemens.com/gigaset)


**Gigaset S450**

**Gigaset**

# Handset at a glance

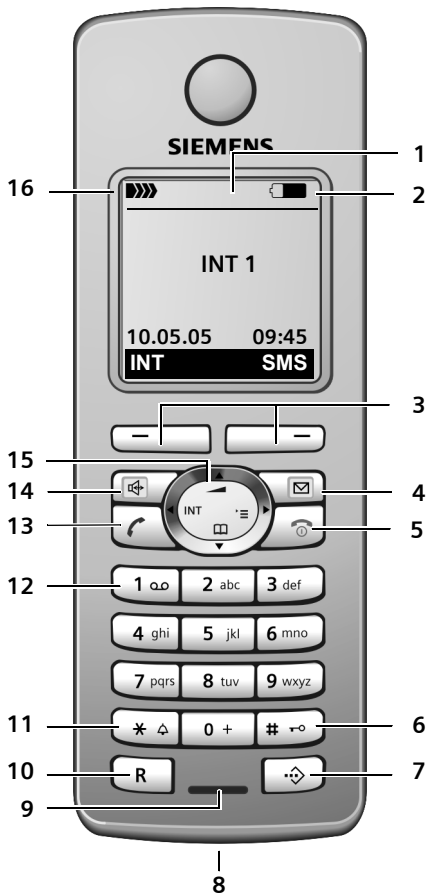

- 1 **Display** in idle status
- 2 **Charge status of the batteries**  
 (flat to full)  
 flashes: batteries almost flat  
 flashes: batteries charging
- 3 **Display keys** (page 12)
- 4 **Message key**  
 Access to calls and message lists;  
 Flashes: new message or new call.
- 5 **End call key, On/Off key**  
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
 Key lock on/off (press and hold in idle status),  
 Toggle between upper/lower case and digits
- 7 **Call-by-call list key**  
 Open call-by-call list
- 8 **Connection socket** for headset
- 9 **Microphone**
- 10 **Recall key**  
 - Confer (Flash)  
 - Insert a dialling pause (press and hold)
- 11 **Star key**  
 Ringtones on/off (press and hold),  
 Open table of special characters
- 12 **Key 1**  
 Select network mailbox (press and hold)
- 13 **Talk key**  
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 14 **Handsfree key**  
 Switch between earpiece and handsfree mode;  
 Lights up: handsfree activated;  
 Flashes: incoming call
- 15 **Control key** (page 13)
- 16 **Signal strength**  
 (high to low)  
 flashes: no reception

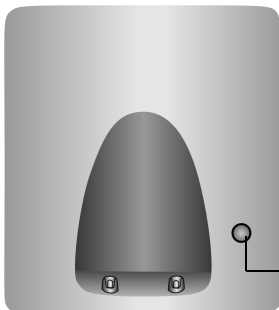

Registration/Paging key  
(page 33/page 34)

# Contents

<b>Handset at a glance</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>4</b>
<b>Gigaset S450 – more than just a telephone</b> ....	<b>5</b>
<b>First Steps</b> .....	<b>5</b>
Pack contents .....	5
Installing the base station .....	5
Setting up the handset for use .....	6
<b>Menu tree</b> .....	<b>9</b>
<b>Making calls</b> .....	<b>11</b>
Making an external call .....	11
Ending a call .....	11
Answering a call .....	11
Calling Line Identification .....	11
Handsfree operation .....	11
Muting .....	12
<b>Operating the handset</b> .....	<b>12</b>
Control key .....	12
Display keys .....	13
Returning to idle status .....	13
Menu guidance .....	13
Correcting incorrect entries .....	14
<b>Network services</b> .....	<b>15</b>
Setting functions for the next call ...	15
Setting functions for all subsequent calls .....	15
Functions during a call .....	15
Functions after a call .....	16
Activating/deactivating network mailbox .....	16
<b>Using the directory and lists</b> ..	<b>17</b>
Directory/call-by-call list .....	17
Last number redial list .....	19
Opening lists with the message key .	20
<b>Making cost-effective calls</b> ....	<b>21</b>
Linking call-by-call numbers with one number .....	21
Automatic network provider code (preselection) .....	21
<b>SMS (text messages)</b> .....	<b>23</b>
Writing/sending an SMS .....	23
Receiving an SMS .....	25
Notification by SMS .....	27
SMS mailboxes .....	28
Setting SMS centre .....	29
SMS info services .....	29
SMS to a PABX .....	30
Activating/deactivating the SMS function .....	30
SMS troubleshooting .....	30
<b>Using the network mailbox</b> ...	<b>32</b>
Configuring the network mailbox for fast access .....	32
Viewing the network mailbox message .....	32
<b>Using several handsets</b> .....	<b>33</b>
Registering handsets .....	33
De-registering handsets .....	34
Locating a handset ("paging") .....	34
Changing the base station .....	34
Making internal calls .....	34
Linking internal callers to an external call .....	35
Changing the name of a handset ...	36
Changing a handset's internal number .....	36
Using a handset as a room monitor .	36
<b>Handset settings</b> .....	<b>38</b>
Changing the display language ....	38
Setting the display .....	38
Setting the screen picture .....	38
Setting display illumination .....	39
Activating/deactivating auto answer .	39
Adjusting the loudspeaker volume ..	39
Changing ringtones .....	39
Activating/deactivating first ring muting .....	40
Activating/deactivating advisory tones .....	40
Setting the alarm clock .....	41
Restoring the handset default settings .....	41

<b>Base station settings</b>	<b>42</b>
Protecting against unauthorised access	42
Activating/deactivating the wait melody	42
Repeater support	42
Restoring default settings to base station	42
<b>Connecting the base station to the PABX</b>	<b>43</b>
Dialling modes and flash time	43
Setting pauses	43
Switching temporarily to tone dialling (DTMF)	43
<b>Appendix</b>	<b>44</b>
Care	44
Contact with liquid	44
Questions and answers	44
Service (Customer Care)	45
Specifications	45
Guarantee Certificate	46
<b>Notes on the operating instructions</b>	<b>47</b>
Symbols used	47
Example: menu input	48
Example: multiple line input	48
Writing and editing a text message	49
<b>Accessories</b>	<b>51</b>
<b>Index</b>	<b>53</b>

## Safety precautions

### Caution:

Read the safety precautions and the user guide before use.

Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Fit only the **approved, rechargeable batteries**! Never use conventional (non-rechargeable) batteries as this could damage your health and cause injury. Use the batteries as directed in this user guide (page 45).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station in bathrooms or shower rooms. The handset and base station are not splash proof (page 44).



Do not use the phone in environments with a potential explosion hazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the user guide.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

### Note:

Not all of the functions described in this user guide are available in all countries.

## Gigaset S450 – more than just a telephone

Your phone not only enables you to send and receive text messages over the fixed network and store up to 150 telephone numbers (page 17) – it can do a whole lot more:

- ◆ You can designate important people as VIPs so you can tell important calls from the ringtone (page 17).
- ◆ You can store anniversaries (page 19) in your phone and it will remind you of them in advance.
- ◆ Select frequently used phone numbers at the press of a **single** key (page 17).
- ◆ View missed calls on your phone (page 20).

**Have fun using your new telephone!**

## First Steps

### Pack contents

- ◆ one Gigaset S450 base station,
- ◆ one Gigaset S45 handset,
- ◆ one mains adapter,
- ◆ one phone cord,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

### Installing the base station

The base is designed for use in closed, dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

### Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

### Range and reception strength

#### Range:

- ◆ Up to 300 m in the open
- ◆ Up to 50 m in buildings


#### Reception strength:

The display shows the quality of the radio contact between the base station and handset:

- ◆ Good to poor: **|||||** **||||** **|||** **||**
- ◆ No reception: **|||||** flashes

### Connecting the base station

- ▶ **First** connect the mains adapter and **then** the phone jack as shown below and place the cables in the cable recesses.

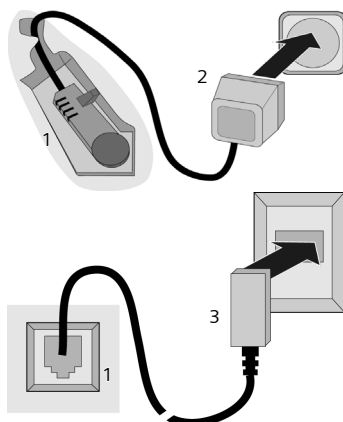


- 1 Underside of the base station (detailed view)
- 2 Mains adapter 230 V
- 3 Phone jack with phone cord

## First Steps

### Please note:

- ◆ The mains adapter must be **always connected**, as the phone will not operate without mains connection.
- ◆ If you buy a replacement phone cord from a store, ensure that the phone jack is connected correctly.

#### Correct phone jack assignment

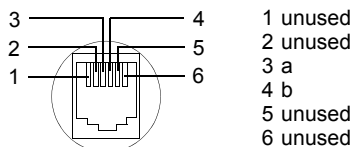

## Setting up the handset for use

### Inserting the batteries

#### Caution:

Use only the rechargeable batteries recommended by Siemens (page 45). Never use conventional (non-rechargeable) batteries or other battery types as this may cause significant damage to health and property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- Fit the batteries with the correct polarity (see diagram).

The polarity is indicated in/on the battery compartment.



### Closing the battery cover


- First align the notches on the side of the battery cover with the lugs on the inside of the casing.
- Then press the cover so that it clicks into place.

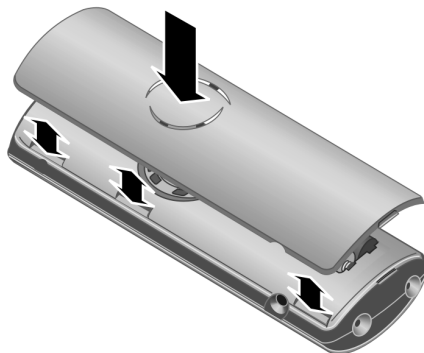

### Attaching the belt clip


There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

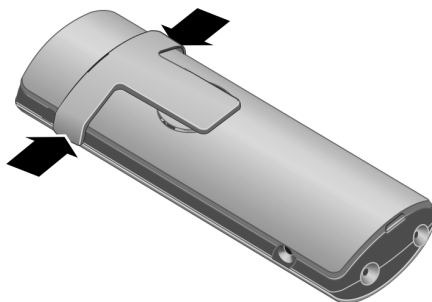

### Opening the battery cover

- If fitted, remove belt clip.
- Insert a fingernail or a small screwdriver between the notch for the belt clip and the cover. Lift the whole cover up and out of the locators.

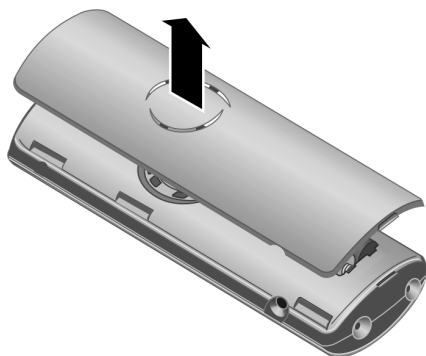

## Placing the handset in the base station and registering

- Place the handset in the base with its **display facing upwards**.

The handset registers automatically. Registration takes around 1 minute. During this time **Regstr.Procedure** appears in the display and the name of the base station flashes, e.g. **Base 1**. The handset will be assigned the lowest unassigned internal number (1–6).

This will appear in the display when registration is complete, e.g. **INT 1**. This means that the number 1 has been assigned. If the internal numbers 1–6 are already assigned to other units, the number 6 is overwritten.

### Notes:

- Automatic registration is only possible while no-one is making calls using the base station.
- Each key press interrupts the automatic registration.
- If automatic registration does not work the handset will have to be registered manually (page 33).
- You can change the name of the handset (page 36).

To charge the batteries, leave the handset in the base station.

### Notes:


- If the handset has switched itself off because the batteries are flat and is then placed in the base station, it will switch itself on automatically.
- Only place the handset in the base or charging cradle that is intended for it.

For questions and problems see page 44.

## Headset socket

You can connect the following types of headset (with jack connector): HAMA Plantronics M40, MX100 and MX150.

## Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- To do this, leave the handset in the base or charging cradle **continuously** for **ten** hours. Your handset need not be switched on for it to charge.
- Afterwards, remove the handset from the base station and do not put it back again until the batteries are fully discharged.

### Note:

After the first battery charge **and** discharge you may replace your handset in its base after every call.



## First Steps

### Please remember:



- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and re-insert them.
- ◆ The batteries may warm up as they are charging. This is not dangerous.
- ◆ After a time the charge capacity of the batteries will decrease for technical reasons.
- ▶ Set the date and the time, for example to ensure the correct time of incoming calls is recorded.

## Setting the date and time

---

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field via:

 →  → **Date/Time**

- ▶ Change multiple line input:

**Date:**

Enter day, month and year in 6-digit format.

**Time:**

Enter hours and minutes with 4 digits,  
e.g.      for 07:15 a.m.


**Save**

Press the display key.

## Display in idle status

---


Once the phone is registered and the time set, the idle display looks as shown here (example).

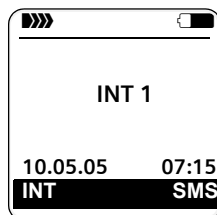


**Your phone is now ready for use.**

# Menu tree

Instead of scrolling to locate a menu function, you can select a menu function faster by opening the menu and keying in the digit combination ("shortcut").

**Example:**  5 jkl 2 11 for "Set ringtone for external calls".

With the telephone in **idle status**, press  (open main menu):

1      SMS 

**You have activated an SMS mailbox (general or private) without a PIN**

1-1	New SMS	(page 23)
1-2	Incoming 0	(page 26)
1-3	Outgoing 0	(page 24)

**You have activated an SMS mailbox with a PIN or 2-3 mailboxes**

1-1	Mailbox	1-1-1	New SMS	(page 23)
		1-1-2	Incoming 0	(page 26)
		1-1-3	Outgoing 0	(page 24)
1-2 to 1-4	Mailbox 1 Mailbox 2 Mailbox 3	1-2-1 to 1-4-1	New SMS	(page 23)
		1-2-2 to 1-4-2	Incoming 0	(page 26)
		1-2-3 to 1-4-3	Outgoing 0	(page 24)
1-5	SMS Service			(page 29)
1-6	Settings	1-6-1	Service Centres	(page 29)
		1-6-2	SMS Mailboxes	(page 28)
		1-6-3	Notify Number	(page 27)
		1-6-4	Notify Type	(page 27)
		1-6-5	Status Report	(page 24)
		1-6-6	Subscribe to SMS	(page 23)

## Menu tree

### 2 Sel. Services

2-2	Network Mailbox	(page 16)	
2-6	All Calls	2-6-1	Call Divert (page 15)
		2-6-3	Call Waiting (page 15)
		2-6-4	Fixed Destin. Call (page 15)

### 3 Alarm Clock

### 4 Add. Features

4-3	Room Monitor	(page 37)
-----	--------------	-----------

### 5 Settings

5-1	Date/Time		
5-2	Audio Settings	5-2-1	Ringer Settings (page 39)
		5-2-2	Advisory Tones (page 40)
5-3	Display	5-3-1	Screen Picture (page 38)
		5-3-2	Colour Scheme (page 38)
		5-3-3	Contrast (page 38)
		5-3-4	Backlight (page 39)
5-4	Handset	5-4-1	Language (page 38)
		5-4-2	Auto Answer (page 39)
		5-4-3	Register H/Set (page 33)
		5-4-4	Select Base (page 34)
		5-4-5	Reset Handset (page 41)
5-5	Base	5-5-2	Music on hold (page 42)
		5-5-3	System PIN (page 42)
		5-5-4	Base Reset (page 42)
		5-5-5	Add. Features (page 35, page 42, page 43)
		5-5-6	Preselection (page 21)
		5-5-7	Calls List Type (page 20)
5-6	Voice Mail	5-6-1	Set Key 1 (page 38)

## Making calls

### Making an external call

 
External calls are calls using the public telephone network.

 


Enter the number and press the talk key.

Or:



Press **and hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

#### Notes:

 
- Dialling using the directory, call-by-call list (page 1, page 17) or calls list (page 20) saves time re-entering numbers and network provider prefixes ("call-by-call numbers").

### Ending a call





Press the end call key.

### Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the **Accept** display key.
- ▶ Pressing the handsfree key .

If the handset is in the base and the **Auto Answer** function is activated (page 39), the handset will take a call automatically when you lift it out of the base.

If the ringtone is intrusive, press the display key **Silence**. You can take the call as long as it is displayed on the screen.


## Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI.
  - CLI (Calling Line Identification): number of the caller is transmitted.
  - CLIP (Calling Line Identification Presentation): number of the caller is indicated.
- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

### Call display with CLIP/CLI

If the number of the caller is stored in your directory, you will see their name.

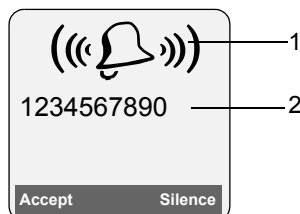

1 Ring symbol

2 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

### Handsfree operation

In handsfree mode, instead of holding the handset to your ear you can put it down e.g. on the table in front of you to allow others to participate in the call.

### Activating/deactivating handsfree

---

#### Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.



#### Switching between earpiece and handsfree mode



Press the handsfree key.

During a call switch handsfree on or off.

If you wish to place the handset in the base station during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If handsfree key  does not light up, press the key again.

For how to adjust the volume, see page 39.

### Muting

---

You can deactivate the microphone in your handset during an external call. The other party hears a wait melody.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

You can switch the wait melody on and off (page 42).

## Operating the handset

---

### Activating/deactivating the handset

---




Press and **hold** the end call key. You will hear the confirmation beep.

### Activating/deactivating the keypad lock

---




Press and **hold** the hash key.


You will hear the confirmation beep. The icon  appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

### Control key

---

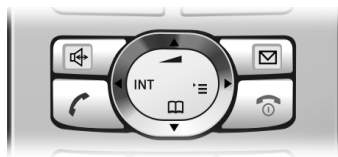

In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:

#### When the handset is in idle status



Open the directory.



Open main menu.




 


Open list of handsets.



Set the ringtones on the handset (page 39).

#### In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

#### In lists and submenus



Scroll up/down line by line.






Open submenu or confirm selection.




Go back one menu level, or cancel.

## During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust loudspeaker volume for earpiece and handsfree mode.





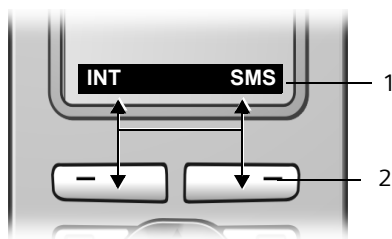

## Display keys

The function of the display keys changes depending on the particular operating situation. Example:




- 1 The display keys' current functions are shown in the bottom display line.
- 2 Display keys

The most important display symbols are:

-  Open the main menu.
-  Open a context-dependent menu.
-  Delete key: deletes one character at a time from right to left.
-  Go back one menu level or cancel operation.
-  Copy number into directory.
-  Open the last number redial list.

## Returning to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.


Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry OK** will be lost.

An example of the display in idle status is shown on page 1.

## Menu guidance


Your telephone's functions are accessed using a menu that has a number of levels.

### Main menu (first menu level)

- ▶ Press  with the handset in idle status to open the main menu.

The main menu functions are shown in the display as a list with icon and name.

To access a function, i.e. open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key . Press the display key **OK**.

### Submenus


The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 9).

Pressing **briefly** on the end call key  returns you to the previous menu level / cancels the operation.

## Correcting incorrect entries

---

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **<C** to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the character (flashing) when entering the time and date etc.

**You will find examples of symbols used, menu entries and multiple line input in the appendix to this user guide, page 47.**




## Network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**

## Setting functions for the next call


You have the following options:

 →  → **Withhold No.**  Enter number.

 Press talk key.

## Setting functions for all subsequent calls

If you have completed one of the following procedures, a code is sent.

- ▶ After confirmation from the telephone network, press the end call key .

You can set the following features:

### General call diversion

 →  → **All Calls** → **Call Divert**

- ▶ Change multiple line input:

**When:**

**All Calls / No Answer / When Busy dialling.**

**Call No.:**

Press the display key **Edit**. Enter number to which call is to be diverted, and press **Save Entry** **OK**.

**Status:**

Activating/deactivating call diversion.

- ▶ Press the display key **Send**.

### Activating/deactivating call waiting

 →  → **All Calls** → **Call Waiting**

**Status:** Activating/deactivating.

**Send** Press the display key.

### Fixed destination call

 →  → **All Calls** → **Fixed Destin. Call**

- ▶ Change multiple line input:

**Number:**

Press display key **Edit**. Enter number and press **Save Entry** **OK**.

**Status:**

Activating/deactivating fixed destination call.


- ▶ Press the display key **Send**.

## Functions during a call

### Consultation


During a call:

**Ext.Call** Press the display key.

 Enter number.

You have the following options:

- ◆ **Toggleing:**

- ▶ Use  to toggle between the participants.


End the call with one participant:

- ▶ Use  to switch to the caller.  
Then: **Options** **End Active Call**.

- ◆ **Conference call:**

- ▶ Press the display key **Conf.**  
End the conference call (toggle):  
▶ Press **EndConf**.

- ◆ **End call with both participants:**

- ▶ Press the end call key .

### Accepting a waiting call

**Accept** Press the display key.

You have the option of toggling or holding a conference call.

#### Note:

Without CLIP a waiting call is only announced with a beep.



## Network services

### Accept call waiting

**Options** → Accept waiting call

### Reject call waiting

**Options** → Reject waiting call

## Functions after a call

---

### Activating/deactivating network mailbox

---



Network Mailbox

**Status:** Activating/deactivating.

**Send**

Press the display key.



Press the end call key.

## Using the directory and lists

The options are:


- ◆ Directory,
- ◆ Call-by-Call list,
- ◆ Last number redial list,
- ◆ SMS list,
- ◆ Calls list.

You can store a maximum of 150 entries in the directory and call-by-call list (the actual number depends on the size of the individual entries).

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 18).

### Directory/call-by-call list

In the **directory**, you can store numbers and the associated names.

- ▶ With the handset in idle status, open the directory by pressing the  key.

In the **call-by-call list**, you can store prefixes of network providers (so-called "call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

#### Length of entries

Number: max. 32 digits

Name: max. 16 characters

#### Note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

### Storing a number in the directory

 → **New Entry**

- ▶ Change multiple line input:

**Number :**

Enter number.

**Name :**

Enter name.

**Annivers.::**

Enter anniversary if required (page 19).

**Speed Dial:**

Select key for quick dial.

- ▶ Save changes.

### Storing a number in the call-by-call list

 → **New Entry**

- ▶ Change multiple line input:



**Number :**

Enter number.



**Name :**

Enter name.

### Selecting entries in the directory and call-by-call list


 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with  if required.

### Dialling with the directory/call-by-call list

 /  →  (select entry)

 Press the talk key. The number is dialled.

### Managing entries in the directory/call-by-call lists

 /  →  (select entry)

#### Viewing an entry

**View**

Press the display key.

The entry is displayed.

Back with **OK**.

#### Editing entries

**View**




**Edit**


Press display keys one after the other.

- ▶ Carry out changes and save.

## Using the directory and lists

### Using other functions

 /  →  (select entry)  
→ **Options** (open menu)

The following functions can be selected with :

#### Display Number

Edit or add to a stored number. Then dial or call up further functions by pressing **Options**.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### VIP Entry (directory only)

Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringtone. You can then identify VIP calls by their ringtones.

**Requirement:** Calling Line Identification (page 11).

#### Copy Entry

Send a single entry to a handset (page 18).

#### Delete List

Delete **all** entries in the directory/call-by-call list.

#### Copy List

Send complete list to a handset (page 18).

#### Available Memory

Display the available entries in the directory and call-by-call list (page 17).

### Using quick dial keys




- ▶ Press and **hold** the required quick dial key (page 17).

### Sending the directory/call-by-call list to another handset

---

#### Requirements:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and base station can send and receive directory entries.

 /  →  (select entry)  
→ **Options** (open menu)  
→ **Copy Entry / Copy List**



Enter the internal number of the receiver handset. You see **Copying entry**.

**Yes / No** Press the display key.

A successful transfer is confirmed by a message and confirmation tone on the receiver handset.

#### Please remember:

- ◆ Entries with identical numbers are not overwritten on the receiver handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiver handset is full.

### Adding a displayed number to the directory

---

Numbers that appear in a list, e.g. the calls list or the last number redial list, in a text message or displayed during a call can be added to the directory.



A number is displayed:

**Options** → **Copy to Directory**

- ▶ Complete the entry, see page 17.

## Copying a number from the directory

There are many operating situations in which you can open the directory, e.g. to copy a number. Your handset need not be in idle status.

- Depending on the operating situation, open the directory with  or  or **Menu** **Directory**.




Select an entry (page 17).

## Storing anniversaries in the directory

You can store an anniversary for every number in the directory and specify a time when you will receive a reminder call on the anniversary.



→  (Select entry; page 17)



**View** **Edit** Press display keys one after the other.



Scroll to the **Annivers.:** line.



Press the display key.

- Change multiple line input:

**Date:**

Enter the day/month in 4-digit format.

**Time:**

Enter the hour/minute for the reminder call in 4-digit format.

**Prompt:**

Select the type of signal for the reminder and press **OK**.


- Save changes (page 48).

**Note:**

Reminder calls require a time stamp. If you select a visual signal, then a time stamp is not required and is automatically set to 00.00.

## Deleting anniversaries



→  (Select entry; page 17)



**View** **Edit** Press display keys one after the other.



Scroll to the **Annivers.:** line.



**Delete** **Save**

Press display keys one after the other.

## Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ring tone.

**Silence**

Press the display key to stop the reminder call.

## Last number redial list

The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.

### Manual last number redial



Press the key **briefly**.



Select entry.



Press the talk key again. The number is dialled.

When displaying a name, you can have the respective phone number displayed by using the display key **View**.

## Managing entries in the last number redial list




Press the key **briefly**.



Select entry.

**Options**

Open menu.

The following functions can be selected with :

**Display Number** (as in the directory, page 18)


**Copy to Directory**

Copy an entry to the directory (page 18).


**Delete Entry** (as in the directory, page 18)

 


**Delete List** (as in the directory, page 18)

## Opening lists with the message key

You can use the message key  to open the following lists:


- ◆ SMS list  
If **several** mailboxes are set up (page 28), several lists are displayed.
- ◆ Network mailbox  
If your network provider supports this function and the network mailbox is configured for fast access (page 32).
- ◆ Calls list

An advisory tone sounds as soon as a **new entry** appears on a list. The  key flashes (it goes off when the key is pressed). In idle status, the displays shows an icon for the new message.

Icon	New message...
	... in network mailbox
	... in calls list
	... in SMS list

The number of new entries is shown beneath the corresponding icon.

Only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are shown first and identified in bold. The number of new or old messages contained are each shown in brackets.

Select the list with . To open, press **OK**.


## SMS incoming message list

All received SMS messages are saved in the incoming message list, see page 26.

## Calls list

**Requirement:** Calling Line Identification (CLIP, page 11)

Depending on the type of list set, the calls list contains

- ◆ accepted calls ()
- ◆ missed calls

The numbers of the last 30 incoming calls are stored.

 
Multiple missed calls from the same number are only stored once (the last call).

## Setting list type for calls list

 →  → Base → Calls List Type

Missed Calls / All Calls

Select and press **OK**

( = on).



Press and **hold** (idle status).

The entries in the calls list are retained when you change the list type.


## List entry

New messages are at the top.


Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry  
**Bold:** new entry
- ◆ Number or name of caller  
You can add the number of the caller to the directory (page 18).
- ◆ Date and time of call (if set, page 8)

- ◆ Type of entry:
  - accepted calls (  )
  - missed calls

Pressing the display key **Delete** deletes the marked entry.

After pressing the display key **Options** you can select more functions with :

#### Copy to Directory

Add a number to the directory.

#### Delete List

Delete complete list.

When you leave the calls list all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

## Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

### Linking call-by-call numbers with one number

You can insert the dialling code of a network provider in front of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).



Press the display key.

#### Display Number

Select and press **OK**.



Enter number or select number from the directory (page 19).



Press talk key. Both numbers are dialled.

## Automatic network provider code (preselection)

You can specify a call-by-call number (preselection number), which is **automatically** placed in front of numbers according to two lists.

- ◆ The list "**with preselection**" contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.
- ◆ The list "**without preselection**" contains the "exception to the rule".  
Example:

You have entered 08 for "with preselection". Now all numbers that start with 08 will be dialled with preselection.


However, if you require, for example, that 081 is still dialled without preselection, enter 081 for "without preselection".

When dialling, after pressing the talk/handsfree key the **first** digits of the dialled number are compared with both lists:

- ◆ The preselection number is not inserted in front if the dialled number
  - matches **no** entry in either list
  - matches an entry in the list "**without preselection**"
- ◆ The preselection number is inserted in front if the first digits of the dialled number match with **only** one entry in the list "**with preselection**".

### Storing preselection numbers



→  → **Base** → **Preselection**  
→ **Preselect No.**



Enter or edit preselection number (call-by-call number).

► Save changes (page 48).



Press and **hold** (idle status).

### Saving/editing entries in the preselection lists

---

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means, for example, that all national calls or calls into the mobile phone network will **automatically** be linked to the preselection number which you have previously stored.



→  → **Base** → **Preselection**  
→ **With Preselect / Without Presel.**



Select entry.



Press the display key.



Enter or edit first digits of number.

► Save changes (page 48).



Press and **hold** (idle status).

### Temporarily cancelling preselection

---



(press and hold) → **Options**  
→ **Aut Preselect off**

### Permanently deactivating preselection

► Delete the preselection number (page 21).

## SMS (text messages)

Your unit is supplied ready for you to send text messages immediately.

### Requirements:

- ◆ Calling Line Identification (page 11) is enabled for your phone connection.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive text messages.

Text messages are exchanged between SMS centres that are operated by service providers. You must enter the SMS centre in the unit through which you wish to send and receive. You can receive SMS from **every** SMS centre that is entered if you have registered with your service provider.

Your text messages are sent via the **Service Centr.** that is entered as the **send service** centre. However, you can activate any other SMS centre as the active send service centre to send a current message (page 29).

If no SMS Service Centre is entered, the SMS menu only consists of the entry **Settings**. Enter an SMS Service Centre (page 29).

- ◆ Entering text, see page 49.
- ◆ Writing using the predictive text tool EATONI, see page 49.

### Rules

- ◆ An SMS can be up to 612 characters long.
- ◆ If there are more than 160 characters or a lot of image data, the text message is sent as a **linked** SMS (up to 4 messages with 153 characters each).

### Please remember:

- ◆ Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such an SMS "call" on the first ring, the SMS will be lost. To prevent this ringing, suppress the first ringtone for all external calls (page 40).
- ◆ If your phone is connected to a PABX, please read page 30.
- ◆ To receive text messages you must be registered with your service provider.

### Registering with the registration wizard

The first time you press the display key **SMS** you will be asked if you wish to register automatically with all entered SMS centres (see page 29). Confirm with **OK**. You can now receive text messages from any of the SMS centres whose number you have entered.


You can call up automatic registration thereafter via the menu:

 →  → **Settings** → **Subscribe to SMS**

The registration wizard does not support setting up personal mailboxes (page 28).

## Writing/sending an SMS

### Writing an SMS

 → 

**Mailbox 2** Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

**New SMS**

Select and press **OK**.



Write an SMS.

**Options**

Press the display key.

**Send**

Select and press **OK**.

**SMS**

Select and press **OK**.



## SMS (text messages)

### Sending an SMS



Select number with area code (even if you are in that area) from the directory or call-by-call list or enter it directly. For SMS to an SMS mailbox: put the mailbox ID at the **end** of the number.

- Options** Press the display key.
- Send** Select. The SMS is sent.

#### Notes:

- If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- If the memory is full, or if the SMS function on the base is being used by another handset, this cancels the operation. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

### Setting input language

- You are writing an SMS (page 23).

- Options** Press the display key.

#### Select Language

Select and press **OK**.



Select input language and press **OK**.



Press the end call key **briefly** to return to the text panel.

 
The input language setting only applies to the current SMS.

### SMS status report

**Requirement:** Your service provider supports this feature.

If you have activated the status report, you will receive a message with a confirmation text after you have sent your SMS.

### Activating/deactivating the status report



#### Status Report

Select and press **OK**  
(☒ = on).

### Reading/deleting a status report

- Open the incoming message list (page 26) and then:



Select SMS with the status **State OK** or **State not OK**.

- Read** Press the display key.

Or:

- Delete** Press the display key. The text message is deleted.

### Draft message list

In the draft message list, you can save, edit later and send an SMS.

### Saving an SMS in the draft message list

- You are writing an SMS (page 23).

- Options** Press the display key.

- Save Entry** Select and press **OK**.

### Opening the draft message list



→ → (Mailbox, mailbox PIN)  
→ **Outgoing (3)**

The first list entry is displayed, e.g.:

1234567890
21.09.05 09:45

### Reading or deleting individual SMS

- Open the draft message list and then:



Select SMS.

- Read** Press the display key.  
The entry will be displayed.  
Scroll line by line using .

Or:

- Options** Open menu.
- Delete Entry** Press **OK**. The SMS is deleted.

## Writing/editing an SMS

- You are reading an SMS in the draft message list.

**Options** Open menu.

You have the following options:

### New SMS

Write and then send a new SMS (page 24) or save.

### Edit

Edit the text of the saved SMS and then send (page 24).

### Character Set

Text is shown in the selected character set.

## Deleting draft message list

- Open the draft message list and then:

**Options** Open menu.

**Delete all** Select, press **OK** and confirm with **Yes**. The list is cleared.



Press and **hold** (idle status).

## Sending an SMS to an e-mail address

If your service provider supports the SMS to e-mail service, then you can also send your text messages to e-mail addresses.

The e-mail address must be written at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.



→ → (Mailbox, mailbox PIN)

→ **New SMS**



Enter the e-mail address. End with a space or colon (depending on the service provider).



Enter the SMS text.

**Options**

Press the display key.

**Send**

Select and press **OK**.

**E-mail**

Select and press **OK**. If the number of the e-mail service is not entered (page 29), enter the number of the e-mail service.

**Options**

Press the display key.

**Send**

Select and press **OK**.

## Sending an SMS as a fax

You can also send an SMS to a fax machine.

**Requirement:** Your service provider supports this feature.

- You are writing an SMS (page 23).

**Options**

Press the display key.

**Send**

Select and press **OK**.

**Fax**

Select and press **OK**.



Select number from the directory or enter directly. Enter the number with dialling code (even when you are in the same area).



Press the display key.

**Send**

Select and press **OK**.

## Receiving an SMS

All received text messages are saved in the incoming message list. Linked text messages are displayed as **one** message. If this is too long or has not transferred completely, it will be split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the message memory is full.



- Deleting text messages you no longer require (page 26).

## SMS (text messages)

### Incoming message list

The incoming message list contains:

- ◆ all received text messages, starting with the most recent.
- ◆ messages that could not be sent on account of an error.

New text messages are signalled on all Gigaset S45 handsets by the  icon in the display, the flashing message key  and an advisory tone.

### Opening the incoming message list with the key

 Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

<b>SMS:</b>	<b>(2)</b>	1
		2

1 **bold:** number of new entries

**not bold:** number of read entries

2 name of mailbox, here: general mailbox

Open list with **OK**.

An entry in the list is displayed e.g as follows:

1234567890
21.09.05 09:45

### Opening the incoming message list via the SMS menu

 →  → (Mailbox, mailbox PIN)  
→ Incoming (2)

### Reading or deleting individual SMS messages

- ▶ Open the incoming message list.
- ▶ Continue as described at "Reading or deleting individual SMS", page 24.

A new message which you have read acquires the status **Old**.

### Deleting incoming message list

All **new and old** SMS in the list are deleted.

- ▶ Open the incoming message list.

**Options** Open menu.

- ▶ To continue, see "Deleting draft message list", page 25.

### Replying to or forwarding text messages

- ▶ Read the SMS (page 26):

**Options** Press the display key.

You have the following options:

#### Reply

Write and send a reply SMS directly (page 23).

#### Edit

Edit the text in the SMS and then send it (page 23). Attachments (e.g. pictures, melodies) are not sent.

### Forwarding an SMS

- ▶ You are reading an SMS (page 26):

**Options** Press the display key.

**Forward** Select and press **OK**.  
To continue see page 23.

Attachments are forwarded. If a service provider does not permit the forwarding of attachments:

- ▶ Select **Edit** to forward the SMS without attachments.
- ▶ Confirm the prompt **New SMS will not contain picture/ melody. Continue?** with **Yes**.

## Adding a number to the directory

### Adding the sender's number

- ▶ Open incoming message list and select entry (page 26).

**Options** Press the display key.  
Continue see page 18.


#### Notes:

- You can create a special directory for text messages within your main directory by putting a star (\*) before the names.
- An attached mail box identifier is added to the directory.


### Copying/selecting numbers from an SMS text

- ▶ Read SMS (page 26) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key.  
Continue see page 18.

Or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the area code (dialling code) in the directory.

### Changing the character set

- ▶ Read the SMS (page 26):

**Options** Press the display key.

#### Character Set

Text is shown in the selected character set.

## Notification by SMS

You can be notified by SMS about missed calls .

**Requirement:** For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to set the phone number to which notification should be sent (notification number) and the notification type.

### Storing the notification number

 →  → **Settings** → **Notify Number**



Enter the number to which the SMS is to be sent.

**Save**

Press the display key.



Press and **hold** (idle status).

#### Caution:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

### Setting the notification type

 →  → **Settings** → **Notify Type**

- ▶ Change multiple line input if necessary:

#### Missed Calls:

Set **On** if you want SMS notification.

- ▶ Save changes (page 48).

## SMS (text messages)

### SMS mailboxes

The **General Mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can also set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "Mailbox ID" (a kind of extension number).

#### Please note:

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports such a function. You can tell that this is supported by the fact that a star (\*) is added to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's factory settings. This will **delete all messages from all mailboxes**.

### Setting up and changing a personal mailbox

#### Setting up a personal mailbox

 →  → **Settings** → **SMS Mailboxes**

 Select a mail box, e.g. **Mailbox 2**, and press **OK**.

- ▶ Change multiple line input:

#### On/Off:

Activate or deactivate mailbox.

#### ID:

Select mailbox ID (0–9). You can only select the available numbers.

 
#### Protection:

Activate/deactivate PIN protection.

#### PIN

Enter 4-digit PIN, if necessary.

- ▶ Save changes (page 48).

Active mailboxes are marked with ☒ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

#### Deactivating a mailbox

- ▶ Set **On/Off:** to **Off**. Confirm message with **Yes** if necessary.

All SMS saved in this mailbox will be deleted.

#### Deactivating PIN protection

- ▶ Set **Protection:** to **Off**.

The mailbox PIN is reset to "0000".

#### Changing the name of a mailbox

 →  → **Settings** → **SMS Mailboxes**  
→  (Select mailbox)

**Edit**

Press the display key.



Enter new name.

**Save**

Press the display key.



Press and **hold** (idle status).

#### Changing a mailbox's PIN and ID

 →  → **Settings** → **SMS Mailboxes**  
→  (Select mailbox)



Enter mailbox PIN if necessary and press **OK**.

- ▶ Set **ID:**, **Protection:** and **PIN** (page 28).

### Sending a text message to a personal mailbox

To send a text message to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

## Setting SMS centre

### Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**  
 Select SMS centre (e.g. **Service Centr. 1**) and press **OK**.

- ▶ Change multiple line input:

#### Active Send:

Select **Yes** if the text messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

#### SMS:

Press the display key **Edit**. Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

#### E-mail:

Press the display key **Edit**. Enter the number of the email service.

- ▶ Save changes (page 48).

#### Note:

Ask your service provider for details of how you should enter service numbers if you wish to use personal mailboxes (requirement: your service provider supports this function).

## Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 to 4) as **send centre**.
- ▶ Send the SMS.

This setting only applies to the SMS that is being sent next. Afterwards, the setting automatically changes back to **Service Centr. 1**.

## SMS info services

You can have your service provider send you certain information (e.g. weather forecast or lottery numbers) via SMS. Up to 10 info services can be stored. You can obtain information about the info services available and their costs from your service provider.

### Setting up/ordering an info service

#### Setting up an info centre

 →  → **SMS Service** → **Info Centre**



Enter destination number (max. 20 digits).

**Options**

Open menu.

**Save Entry** Select and press **OK**.

#### Ordering an info service

 →  → **SMS Service** → **Ordering**



Select info service.

**Send**

Press the display key.

#### Setting up an info service

- ▶ Select info service (see above). Now:

**Edit**

Press the display key.



Enter code and designation, if necessary.

**Save**

Press the display key.

## SMS (text messages)

### SMS to a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded to the extension of the PABX (CLIP)**. The CLIP of the phone number for the SMS centre is evaluated in your **Gigaset**.
- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX).  
If in doubt, test your PABX e.g. by sending a text message to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS **on ISDN PABXs** is only possible via the MSN number assigned to your base station.

### Activating/deactivating the SMS function

When you switch off you cannot send or receive any SMS with your phone.

The settings which you have made for sending and receiving SMS (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved when you switch off your phone.



Open menu.

5 jkl

5 jkl

9 wxyz

2 abc

6 mno

Enter the digits.

0 +

OK

Deactivate the SMS function.

Or:

1 abc

OK

Activate SMS function (default settings).

### SMS troubleshooting

#### Errors when sending

E0	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
F E	Error occurred during SMS transfer.
F D	Connection to SMS centre failed, see self-help.

#### Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.	
1.	You have not requested the CLIP service (Calling Line Identification Presentation). ▶ Ask your service provider to enable this service.
2.	Text message transmission has been interrupted (e.g. by a call). ▶ Re-send the text message.
3.	Feature is not supported by network provider.
4.	No number or an invalid number is entered for the SMS centre activated as the send centre. ▶ Enter the number (page 29).
You receive a message whose text is incomplete.	
1.	Your phone memory is full. ▶ Delete old messages (page 26).
2.	The provider has not yet sent the rest of the message.
You have stopped receiving messages.	
1.	You have changed the ID of your mailbox. ▶ Tell your SMS contacts your new ID or undo the change (page 28).
2.	You have not activated your mailbox. ▶ Activate your mailbox (page 28).
3.	Call diversion is activated with <b>When: All Calls</b> or the call diversion <b>All Calls</b> is activated for the network mailbox. ▶ Change your call diversion.

The message is played back.

1. The "display call number" service is not activated.
  - ▶ Have your service provider enable this service (there is a charge for this).
2. Mobile phone operator and network SMS service provider have not agreed on a cooperation.
  - ▶ Obtain information from your network SMS service provider.
3. Your terminal is recorded in the records of your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
  - ▶ Start the registration wizard for automatic registration (see page 23).
    - Register the terminal (again) for SMS reception.

Messages are only received during the day.

1. The terminal is stored in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
  - ▶ Start the registration wizard for automatic registration (see page 23).
  - ▶ Register the terminal (again) for SMS reception (see above).



## Using the network mailbox

---

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested it** from your network provider.

## Configuring the network mailbox for fast access

---

With fast access, you can dial the network mailbox directly.


The network mailbox is preconfigured for fast access. You only need to enter the number.

### Configuring the network mailbox for fast access and entering the network mailbox number

 →  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK**

( = on).



Enter the number for the network mailbox.



Press the display key.

**Save Entry** Select and press **OK**. The entry is stored.



Press and **hold** (idle status).

The setting for fast access applies to all Gigaset S45 handsets.

 
## Calling the network mailbox



Press and **hold**.

You are connected straight to the network mailbox.



Press handsfree key  if required. You hear the network mailbox announcement.

## Viewing the network mailbox message

---

If a message arrives for you, you receive a call from the network mailbox. If you have requested Calling Line Identification, the displays shows the network mailbox number. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number will be stored in the missed calls list and the message key flashes (page 19).

## Using several handsets

### Registering handsets

You can register up to a total of six handsets on your base station.

A Gigaset S45 handset can be registered on up to four base stations.

### Automatic registration Gigaset S45 to Gigaset S450

**Important:** The handset must not already be registered to any base station.

Registering the handset to the Gigaset S450 base station occurs automatically.

- Place the handset in the base with its **display facing forward**.

Registration takes around 1 minute. During this process, **Regstr.Procedure** appears in the display and the name of the base station flashes e.g. **Base 1**. When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset is assigned the lowest available internal number (1-6). If all internal numbers 1-6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

#### Notes:

- Automatic registration is not possible when the base station on which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (page 36).

### Manual registration Gigaset S45 to Gigaset S450

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If it does not, repeat the procedure.

#### On the handset



→ → **Handset** → **Register H/Set**



Select base station, e.g. **Base 1** and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. The screen will display, e.g. **Base 1**.

#### On the base station

Within 60 secs. press and **hold** the registration/paging key on the base station (page 1) (approx. 3 secs.).

### Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

#### On the handset

- Start to register the handset as described in its user guide.

#### On the base station

- Press and **hold** the registration/paging key on the base station (page 1) (approx. 3 secs.).

## De-registering handsets

---

You can de-register any registered handset from any registered Gigaset S45 handset.



Open list of internal users.  
The handset you are currently using is indicated by < .



Select the internal user you wish to de-register.

### Options

Open menu.

### De-reg. H/Set No.

Select and press **OK**.



Enter current System PIN and press **OK**.

### Yes

Press the display key.


## Locating a handset ("paging")

---

You can locate your handset using the base station.

- ▶ Press the registration/paging key on the base station **briefly**.
- ▶ All handsets will ring at the same time ("paging"), even if the ringers are switched off.

### Ending paging

- ▶ **Briefly** press the registration/paging key on the base station or press the talk key  on the handset.

## Changing the base station

---

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).



→  → **Handset** → **Select Base**



Select one of the registered base stations or **Best Base** and press **OK**.

## Making internal calls

---

Internal calls to other handsets registered on the same base station are free.

### Calling a specific handset



Initiate internal call.



Enter the number of the handset.

Or:



Initiate internal call.



Select handset.



Press the talk key.

### Calling all handsets ("group call")



Initiate internal call.



Press the star key. All handsets are called.

### Ending a call



Press the end call key.

## Transferring a call to another handset

---

You can transfer an external call to another handset (connect).



Open list of handsets.  
The external caller hears the wait melody if activated (see page 42).



Select a handset or **Call All** and press **OK**.

When the internal participant answers:


- ▶ If necessary announce the external call.



Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or is busy, press the display key **End**, to return to the external call.

When diverting a call you can also press the end call key  before the internal participant lifts the receiver.

Then, if the internal participant does not answer or is busy, the call will automatically return to you (the display will show **Recall**).

### Internal consultation calls

When you are speaking to an **external** participant you can simultaneously call an **internal** participant for consultation.



Open list of handsets.  
The external caller hears the wait melody if activated (see page 42).



Select handset and press **OK**.

### Ending an enquiry call

**End** Press the display key.

You are reconnected with the external caller.

### Accepting/rejecting call waiting

If you get an **external** call while conducting an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if phone number identification is enabled.

### Ending an internal call, accepting an external call

**Accept** Press the display key.

The internal call is **ended**. You are connected to the external caller.

### Rejecting external call

**Reject** Press the display key.

The call waiting tone is turned off. You remain connected with the internal participant. The ringtone can still be heard at other registered handsets.

## Linking internal callers to an external call

**Important:** The **Listening In** function must be activated.

You are conducting an external call. An internal caller can listen in on this call and take part in the conversation. All the participants are made aware of the 'listening-in' by a signal tone.

### Activating/deactivating internal listening in



→ → **Base** → **Add. Features**  
→ **Listening In**



Press and **hold** (idle status).

### Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the existing external call.



Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone. During this time, this handset will not display any information or messages and no selection can be made from this handset.

### Ending listening in



Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has 'listened-in' remains connected to the external caller.

## Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.



Open list of handsets. Your own handset is indicated by <.



Select handset.



Press the display key.



Enter name.



Press the display key.

## Changing a handset's internal number

A handset is **automatically** assigned the lowest unassigned number when it is registered. If all the numbers have been assigned, number 6 is overwritten, provided the handset is in idle status. You can change the internal number of all registered handsets (1–6).



Open list of handsets. Your own handset is indicated by <.



Open menu.

Edit H/Set No.

Select and press **OK**. The list of handsets is displayed.



The current number flashes. Select a handset.



Enter the new internal number(1–6). The handset's old number is overwritten.



Press the display key to save the input.



Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

- Repeat the process with an unused number.

## Using a handset as a room monitor

If the room monitor is activated, a previously stored destination number is called as soon as a set noise level is reached. You can store an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you switch off the handset, the room monitor mode is deactivated. You must reactivate the function after switching on the handset again.

### Caution!

- **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.**
- When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the base. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

## Activating the room monitor and entering the number to be called

 →  → Room Monitor

- ▶ Change multiple line input:


Room M.:

Select **On** to activate.

Call to:

Press the display key **Edit** and enter destination number.

**External number:** select number from the directory or enter directly. Only **the last 4 digits** are displayed.


**Internal number:** delete any stored external number. **INT**  (select handset or **Call All**, if all registered handsets are to be called) **OK**.

Store number with **Save**.

Level:


Set noise level sensitivity (**Low** or **High**).

- ▶ Save changes (page 48).

The function is now activated. With , you can move directly to settings.

## Changing previously set external destination number

 →  → Room Monitor



 Scroll to the **Call to:** line.


**Edit** Press the display key.

**<C** Delete existing number.

- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 37).
- ▶ Save changes (page 48).

## Changing previously set internal destination number

 →  → Room Monitor

 Scroll to the **Call to:** line.



**Edit** Press the display key.

**Yes** Press the display key to confirm the prompt.

- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 37).
- ▶ Save changes (page 48).

## Deactivating the room monitor remotely

**Important:** The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Take the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings on the handset (e.g. no ringtone) will however remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save (page 37) with **Save**.

## Handset settings


Your handset is preconfigured, but you can change these settings to suit your individual requirements.

### Changing the display language

You can view the display texts in different languages.

 →  → **Handset** → **Language**

The current language is indicated by .


 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:



   

Press keys one after the other.

 Select the correct language and press **OK**.


 
### Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → **Display**

**Colour Scheme**

Select and press **OK**.

 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

**Contrast** Select and press **OK**.

 Select contrast.


**Save** Press the display key.

 Press and **hold** (idle status).

## Setting the screen picture

You can display a screen picture (picture or digital clock) when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been deregistered.

If a screen picture has been activated, the menu item **Screen Picture** is marked with .

 →  → **Display** → **Screen Picture**

The current setting is displayed.

► Change multiple line input:

**Activation:**

Select **On** (screen picture is displayed) or **Off** (no screen picture).

**Selection:**


Change screen picture if necessary (see below).

► Save changes.

If the screen picture conceals the display, press the end call key **briefly** to show the idle display with time and date.

### Changing the screen picture

 →  → **Display** → **Screen Picture**

 Scroll to the **Selection** line.

**View** Press the display key.  
The active screen picture is displayed

 Select picture/Clock.

**Save** Press the display key.

► Save changes.

## Setting display illumination

Depending on whether or not the handset is in the base station you can set different levels of display illumination. If it is switched on, the display is permanently dimmed.

 →  → **Display** → **Backlight**

The current setting is displayed.

► Change multiple line input:

**In Charger**

Select **On** or **Off**.

**without Charger**

Select **On** or **Off**.


**Save**



Press the display key.



Press and **hold** (idle status).

 
## Activating/deactivating auto answer

If you have activated this function, when you get a call you can simply lift the handset out of the base station without having to press the talk key .

 →  → **Handset**

**Auto Answer**

Select and press **OK**

( = on).



Press and **hold** (idle status).

## Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree speaking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during a call.

The handsfree volume can only be adjusted when this function is set.

You are conducting an external call.




Open menu.



Select volume.

**Save**

Press display key if necessary to save the setting permanently.

If  is assigned a different function, e.g. when toggling (page 15):

**Options**

Open menu.



**Volume**

Select and press **OK**.

Configure setting (see above).

## Changing ringtones

◆ **Volume:**

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "Crescendo" ring (6; volume increases with each ring = .

◆ **Ringtones:**

You can choose between 15 different melodies.

You can configure the following functions with different ringtones:

◆ **Ext. Calls** : for external calls

◆ **Internal Calls** : for internal calls

◆ **All**: the same for all functions

## Settings for individual functions

Set the volume and melody depending on the type of signalling required.



→  → **Audio Settings** →

**Ringer Settings**



Set, e.g. select **Ext. Calls** and press **OK**.

► Change multiple line input:



Set volume (1–6).




Scroll to the next line.



Select melody.

**Save**

Press the display key to save the setting.

In idle status, you can also open the menu **Ringer Settings** by pressing  **briefly**.



## Settings for all functions to ring the same

 →  → Audio Settings →  
Ringer Settings → All

- ▶ Set volume and ringtone (see "Settings for individual functions").


**Yes** Press the display key to confirm the prompt.

 Press and **hold** (idle status).

## Activating/deactivating the ringtone

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

### Deactivating the ringtone permanently

 Press the star key and hold until you can no longer hear the ringtone.

The  icon appears in the display.

### Re-activating the ringtone


 Press and **hold** the star key.

 
### Deactivating the ringtone for the current call

**Silence** Press the display key.


## Activating/deactivating the alert tone

In place of a ringtone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringtone.

 Press and **hold** the star key and **within 3 seconds**:

**Beep** Press the display key. A call is now signalled by **one** brief alert tone. You will now see  in the display.

## Activating/deactivating first ring muting

 Open menu.

Press keys.

 **OK** First ring audible.

Or:

 **OK** First ring muted.

## Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key beep**: Each key press is acknowledged.
- ◆ **Acknowledge tones**:
  - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in calls list
  - **Error beep** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone**: when scrolling at the end of a menu
- ◆ **Battery tone**: The batteries need to be charged.

 →  → Audio Settings  
→ Advisory Tones

- ▶ Change multiple line input:

**Key Tones:**

Select **On** or **Off**.

**Confirm.:**

Select **On** or **Off**.

**Battery:**

Select **On**, **Off** or **In Call**. The battery warning tone is activated/deactivated or only sounds during a call.

 
- ▶ Save changes (page 48).

You cannot deactivate the confirmation tone for placing the handset in the base station.

## Setting the alarm clock

**Requirement:** The date and time have already been set (page 8).

## Activating/deactivating and setting the alarm clock



► Change multiple line input:

**Alarm Clock:**

Select **On** or **Off**.

**Time:**

Enter the wake-up time in 4-digit format.


**Melody:**

Select melody.

**Volume:**

Set the volume (1-6).

► Save changes (page 48).

You will see the icon .

A wake-up call with the selected ringer melody is signalled on the handset. The wake up call sounds for 60 seconds. The display shows **Alarm Clock**. If no key is pressed the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone.

## Deactivating the wake-up call/ repeating after a pause (slumber mode)

**Requirement:** A wake-up call is sounding.

**Off**

Press the display key. The wake-up call is deactivated.

**or**

**Snooze**

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory, call-by-call list, calls list, or SMS lists or the handset's registration to the base station.


 →  → **Handset** → **Reset Handset**

**Yes**

Press the display key.



Press and **hold** (idle status).

Cancel the restoring process by pressing  or the display key **No**.

## Base station settings

---

The base station settings are carried out using a registered Gigaset S45 handset.

### Protecting against unauthorised access

---

Protect the system settings of the base station with a PIN known only to yourself. The system PIN must now be entered when, for example, registering/de-registering a handset to/from the base station or when restoring the default settings.

### Changing the system PIN

---

You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only to yourself.

#### Caution:

Memorise the new system PIN well! If you forget it, the phone will require specialist attention. If this happens, contact the Siemens Hotline (page 45).

 →  → **Base** → **System PIN**



Enter current System PIN and press **OK**.



Enter new system PIN. For security the PIN is shown as four stars (\*\*\*\*).



Scroll to the next line, re-enter new system PIN and press **OK**.



 
Press and **hold** (idle status).

### Activating/deactivating the wait melody

---



→  → **Base** → **Music on hold**

Press **OK** to activate or deactivate the wait melody ( = on).


## Repeater support

---

With a repeater you can increase the range and reception strength of your base station. First you must activate the repeater mode. This will terminate any calls currently running through the base station.


**Requirement:** A repeater is registered.



→  → **Base** → **Add. Features**  
→ **Repeater Mode**

**Yes**

Press the display key.

When repeater mode is active, the menu item is marked with .


### Restoring default settings to base station

---

When resetting, the handsets remain registered. The following settings are not reset:

- ◆ System PIN
- ◆ Setting "First ringtone suppressed"
- ◆ SMS info services




→  → **Base** → **Base Reset**



Enter the system PIN and press **OK**.

**Yes**

Press the display key.

Cancel the restoring process by pressing  or the display key **No**.




Press and **hold** (idle status).

## Connecting the base station to the PABX

The following settings are only needed when your PABX requires them. Please refer to the user guide for your PABX.

You cannot send or receive SMS on PABXs that do not support Calling Line Identification.





## Dialling modes and flash time



The current setting is indicated by .


### Changing the dialling mode

The following dialling modes can be selected:





- ◆ Tone dialling (DTMF),
- ◆ Pulse dialling (DP).


 
   Base  Add. Features  
→ Dialling Mode

 Select dialling mode ( = on) and press **OK**.

 Press and **hold** (idle status).

### Setting the flash time


   Base  Add. Features  
→ Recall

 Select flash time ( = on) and press **OK**.

 Press and **hold** (idle status).

## Setting pauses

### Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.

 Open menu.

Press keys.



Enter digit for the pause length (**1** = 1 sec.; **2** = 3 secs.; **3** = 7 secs.) and press **OK**.

### Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open menu.

Press keys.



Enter a digit for the length of the pause (**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms) and press **OK**.

### Changing the dialling pause



 
Open menu.

Press keys.



Enter a digit for the length of the pause (**1** = 1 sec.; **2** = 2 secs.; **3** = 3 secs.; **4** = 6 secs.) and press **OK**.

To insert a dialling pause: press  for 2 seconds. A P appears in the display.

## Switching temporarily to tone dialling (DTMF)

If your PABX still operates with dial pulsing (DP), but you need tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to tone dialling for the call.

**Requirement:** You are conducting a call or have already dialled an external number.

**Options** Open menu.

**Tone Dialing** Select and press **OK**.

Tone dialling is now activated **for this call only**.

# Appendix

## Care

- ▶ Wipe the base station and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

## Contact with liquid

If the handset has come into contact with liquid:


1. **Switch the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for **at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Questions and answers

 
If you have any queries about the use of your telephone, you can contact us at any time at [www.siemens.com/gigasetcustomer care](http://www.siemens.com/gigasetcustomer care). The table below contains a list of common problems and possible solutions.

### The display is blank.

1. The handset is not switched on.
  - ▶ Press and **hold** the end call key .
2. The batteries are flat.
  - ▶ Charge or replace the batteries (page 7).

### The handset does not respond to a key press.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 12).

### "Base station x" is flashing in the display.

1. The handset is outside the range of the base station.
  - ▶ Reduce the distance between handset/ base station.
2. The handset has been de-registered.
  - ▶ Register the handset (page 33).
3. The base station is not switched on.
  - ▶ Check the base station mains adapter (page 5).

### Base Search is flashing in the display.

The handset is set for **Best Base** and no base station is switched on or within range.

- ▶ Reduce the distance between handset/ base station.
- ▶ Check the base station mains adapter (page 5).

### Handset does not ring.


1. The ringtone is switched off.
  - ▶ Activate the ringtone (page 40).
2. Call diversion set to **All Calls**.
  - ▶ Switch off Call Diversion (page 15).

### You cannot hear a ringtone/dialling tone.

Base station's phone cord has been replaced.

- ▶ When purchasing a new cord, ensure that it has the correct pin connections (page 6).

### The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".

- ▶ Switch on the microphone again (page 12).

### The incoming call number is not displayed although CLIP is set.

Phone number identification is not enabled.

- ▶ **Caller** should ask network provider to activate phone number identification (CLI).

**You hear an error tone when keying an input**

(a descending sequence of tones).

Action has failed/invalid input.

- ▶ Repeat the operation.  
Watch the display and refer to the operating instructions if necessary.

**You cannot listen to messages on the network mailbox.**

Your phone system is set for pulse dialling.

- ▶ Set your phone system to tone dialling.

## Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet:

[www.siemens.com/gigasetcustomer care](http://www.siemens.com/gigasetcustomer care)

This site can be accessed at any time wherever you are. It provides you with 24/7 support for all our products. It also provides interactive troubleshooting, a list of FAQs and answers, plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section in the appendix to this user guide.

For personal advice on our range of products, call

**Premium Hotline:**

**801 11 11 11 6**

You can talk to qualified Siemens technicians who will guide you expertly through product information and installation. For fast and dependable assistance with any repairs or guarantee/warranty claims, contact our service centres.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Declaration of conformity

**This device is designed for the analogic telephone connection in the greek telephone net.**

Siemens AG hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

If you require a copy of the original, visit the **website:** <http://www.siemens.com/gigasetdocs>.

**CE 0682**

## Specifications

### Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- ◆ Sanyo Twicell 650
- ◆ Sanyo Twicell 700
- ◆ Panasonic 700mAh "for DECT"
- ◆ GP 700mAh
- ◆ Yuasa Technology AAA Phone 700
- ◆ Varta Phone Power AAA 700mAh
- ◆ GP 850 mAh
- ◆ Sanyo NiMH 800
- ◆ Yuasa Technologies AAA 800

The handset is supplied with the authorised batteries.

### Handset operating times/charging times

Capacity	650 mAh
Standby time	Approx. 170 hours (7 days)
Calling time	Approx. 13 hours
Charging time	approx. 6 hours

The operating and charging times apply only when using the recommended batteries.

### Base station power consumption

In standby mode: approx. 2 watt

During a call: approx. 3 watt.

### General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/ DP (dial pulsing)

### Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- ◆ This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- ◆ This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Siemens.
- ◆ Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Siemens be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Notes on the operating instructions

---

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

### Symbols used

---

#### Copy Entry / Copy List (example)

Select one of the two menu functions specified.



Enter digits or letters.

The display keys' current functions are shown reverse highlighted in the bottom display line. Press the display key below to launch the function.



Press the top or the bottom of the control key: scroll up or down.



Press the right or left of the control key: e.g. select setting.





etc.


Press the corresponding key on the handset.



## Example: menu input

In the user guides, the steps you need to perform are shown in abbreviated form. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.

 →  → Display

- ▶ With the handset in idle status, press on the right of the control key to open the main menu.
- ▶ Select the  icon using the control key – press the control key at the top or bottom.

In the display header, **Settings** is displayed.

- ▶ Press the **OK** display key to confirm the function **Settings**.

The **Settings** submenu is displayed.

- ▶ Press the bottom of the control key repeatedly until **Display** is selected.
- ▶ Press the **OK** display key to confirm the selection

**Contrast** Select and press **OK**.

- ▶ Press the bottom of the control key repeatedly until **Contrast** is selected.
- ▶ Press the **OK** display key to confirm the selection

 Select contrast and press **OK**.

- ▶ Press on the right or left of the control key to select the contrast.
- ▶ Press the **Save** display key to confirm the selection

 Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

## Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide symbols are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.


You will see the following display (example):

**Date/Time**

---

**Date:**  
[10.06.05]

**Time:**  
11:11


**Save**

**Date:**


Enter day, month and year in 6-digit format.

The second line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.

**Time:**


Enter hours/minutes in 4-digit format.

- ▶ Press the  key.

The fourth line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.






- ▶ Save changes.

- ▶ Press the **Save** display key.
- ▶ Then press and **hold** the  key.


The handset changes to idle status.

## Writing and editing a text message

 

The following rules apply when writing a text message:

- ◆ Control the cursor with    .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key  to show the table of special characters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Entering special characters

You can call up the table of special characters when writing an SMS using the  key. Select the required character and insert it with **Insert**.

## Writing an SMS/name (without predictive text)

 
 
Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.


The following applies when writing an SMS:

- ◆ The display shows whether upper case, lower case or digits is selected. "Abc", "abc" or "123" appears at the top right of the display.
- ◆ When you press a key and **hold** it, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

 
## Writing an SMS (with predictive text)


EATONI predictive text helps you when you are writing an SMS.

Each key between  and  is assigned several letters and characters (see the character set tables, page 49). These appear in a selection line immediately under the text panel (above the display keys) as soon as you press a key. The letter you are most likely looking for is reverse-highlighted and is at the beginning of the selection line. It is copied into the text panel.

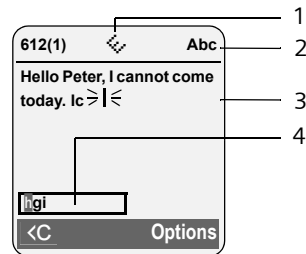

- 1 EATONI is activated
- 2 Upper/lower case or digits
- 3 SMS text
- 4 Selection line

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the hash key  repeatedly until the required letter is reverse-highlighted on the display line and copied into the text panel.

If you press and **hold** the hash key  you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

 
### Deactivating/activating predictive text

**Requirement:** You are writing an SMS.

**Options** Press the display key.

#### Predictive Text

Select and press **OK**

( = on).



Press the end call key **briefly** to return to the text panel.  
Enter the text.

### Order of directory entries

---

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

## Accessories

---

### Gigaset Handsets

Turn your Gigaset into a cordless telephone system:

#### Gigaset Handset S45

- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree operation
- ◆ Polyphonic ringer melodies
- ◆ Directory for around 150 entries
- ◆ SMS (CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

[www.siemens.com/gigaset45](http://www.siemens.com/gigaset45)



#### Gigaset Handset E45

- ◆ Dust and splash proof casing
- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree operation
- ◆ Polyphonic ringer melodies
- ◆ Directory for around 250 entries
- ◆ SMS (CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

[www.siemens.com/gigasete45](http://www.siemens.com/gigasete45)



## Accessories

### Gigaset handset SL55

- ◆ Illuminated graphical colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Handsfree operation
- ◆ Polyphonic ringer melodies
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (CLIP must be enabled)
- ◆ Voice dialling
- ◆ PC interface, e.g. for managing directory entries, ringtones and screen savers
- ◆ Headset socket

[www.siemens.com/gigaset/sl55](http://www.siemens.com/gigaset/sl55)



### Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base station.

[www.siemens.com/gigaset/repeater](http://www.siemens.com/gigaset/repeater)



### Voice and data adapter Gigaset M34 USB

Use the Gigaset M34 USB for wireless connections between your PC and your Gigaset. Then you can:

- ◆ Make low-cost calls via the Internet (ADSL) on your Gigaset handset (Voice-over-IP)
- ◆ Enjoy wireless surfing on the Internet from your PC (ISDN)
- ◆ Write, send and receive text messages on your PC
- ◆ Have Internet messages (e.g. weather, share prices) displayed on your handset
- ◆ Send and receive texts from messenger services (IMS)
- ◆ Operate your PC remotely via the handset (e.g. operating the Windows Media Player)

[www.siemens.com/gigaset/m34usb](http://www.siemens.com/gigaset/m34usb)



All accessories and batteries are available from your mobile phone retailer.



Only use original accessories. This will avoid possible health risks and damage, and also ensure that all the relevant regulations are complied with.

# Index

---

## A

- Access protection . . . . . 42
- Accessories . . . . . 51
- Acknowledge tones . . . . . 40
- Activating
  - advisory tones . . . . . 40
  - auto answer . . . . . 39
  - handset . . . . . 12
  - internal listening in . . . . . 35
  - keypad lock . . . . . 12
  - muting ringtone . . . . . 40
  - room monitor . . . . . 37
- Activating/deactivating network
  - mailbox . . . . . 16
- Adjusting
  - loudspeaker volume . . . . . 39
- Advisory tones . . . . . 40
- Alarm clock . . . . . 41
- Alert tone . . . . . 40
- Anniversary . . . . . 19
  - storing in directory . . . . . 19
- Answering machine, see
  - Network mailbox
- Auto answer . . . . . 11, 39
- Automatic network provider code . . . 21

## B

- Base station
  - changing . . . . . 34
  - connecting and setting up . . . . . 5
  - connecting to PABX . . . . . 43
  - range . . . . . 5
  - restoring to factory settings . . . . . 42
  - setting . . . . . 42
  - system PIN . . . . . 42
- Battery
  - charging . . . . . 7
  - display . . . . . 7
  - fitting . . . . . 6
  - icon . . . . . 7
  - recommended batteries . . . . . 45
  - tone . . . . . 40
- Best base station . . . . . 34
- Birthday, see Anniversary

## C

### Call

- answering . . . . . 11
- caller listening in . . . . . 35
- disconnecting (toggle) . . . . . 15
- ending . . . . . 11
- external . . . . . 11
- forwarding . . . . . 16
- forwarding (connecting) . . . . . 34
- internal . . . . . 34
- transferring (connecting) . . . . . 36
- Call acceptance . . . . . 39
- Call diversion . . . . . 15
- Call duration . . . . . 11
- Call history . . . . . 19
- Call protection . . . . . 15
- Call waiting
  - accepting/rejecting . . . . . 15
  - activating/deactivating . . . . . 15
  - internal call . . . . . 35
- Call-by-call list . . . . . 17
  - key . . . . . 1
- Call-by-call numbers . . . . . 17, 21
- Calling
  - external . . . . . 11
- Calling Line Identification . . . . . 11
- Cancelling (operation) . . . . . 13
- Care of the telephone . . . . . 44
- Changing
  - destination number . . . . . 37
  - dialling mode . . . . . 43
  - display language . . . . . 38
  - internal number of a handset . . . . . 36
  - name of handset . . . . . 36
  - pause time . . . . . 43
  - ringtone . . . . . 39
  - system PIN . . . . . 42
- Changing PIN . . . . . 42
- Changing system PIN . . . . . 42
- Character set table, see
  - Special characters
- Charge status display . . . . . 1
- CLI, CLIP . . . . . 11
- Conference call . . . . . 15
- Confirmation beep . . . . . 40
- Connecting, base station to PABX . . 43
- Consultation . . . . . 15
- Consultation (internal) . . . . . 35
- Control key . . . . . 1, 12

Correcting incorrect input . . . . .	14
Customer Care . . . . .	45
<b>D</b>	
Deactivating	
advisory tones . . . . .	40
auto answer . . . . .	39
handset . . . . .	12
internal listening in . . . . .	35
keypad lock . . . . .	12
muting ringtone . . . . .	40
room monitor . . . . .	37
Delete key . . . . .	13
Deleting	
characters . . . . .	14
De-registering (handset) . . . . .	34
Dialling	
call-by-call list . . . . .	17
directory . . . . .	17
with quick dial . . . . .	18
Dialling mode . . . . .	43
Dialling pause . . . . .	43
entering . . . . .	1
Directory . . . . .	17
copying number from text . . . . .	19
managing entries . . . . .	17
opening . . . . .	12, 13
order of entries . . . . .	50
saving entry . . . . .	17
sending entry/list to handset . . . . .	18
storing anniversary . . . . .	19
storing number of sender (SMS) . . . . .	27
using to enter numbers . . . . .	19
Disconnecting waiting caller (toggle) . . . . .	15
Display	
changing display language . . . . .	38
contrast . . . . .	38
illumination . . . . .	39
in idle status . . . . .	13
keys . . . . .	1, 13
memory . . . . .	18
network mailbox message . . . . .	32
number (CLI/CLIP) . . . . .	11
screen picture . . . . .	38
setting . . . . .	38
wrong language . . . . .	38
Display keys . . . . .	13
DP (pulse dialling) . . . . .	43
Draft message list (SMS) . . . . .	24

**E**

Earpiece mode . . . . .	12
Earpiece volume . . . . .	39
EATONI (predictive text) . . . . .	49
E-mail address . . . . .	25
End call key . . . . .	1, 11
Ending, call . . . . .	11
Ending, see Deactivate	
Entry	
saving (network mailbox) . . . . .	32
saving, changing (preselection) . . . . .	22
selecting (menu) . . . . .	48
selecting from directory . . . . .	17
Error beep . . . . .	40
Example	
menu input . . . . .	48
multiple line entry . . . . .	48

**F**

Fast access	
assigning key 1 . . . . .	1
network mailbox . . . . .	32
Fax (SMS) . . . . .	25
Flash time . . . . .	43

**G**

Group call . . . . .	34
----------------------	----

**H**

Handset	
activating/deactivating . . . . .	12
advisory tones . . . . .	40
changing internal number . . . . .	36
changing name . . . . .	36
changing number . . . . .	36
changing to best reception . . . . .	34
changing to different base station . . . . .	34
contact with liquid . . . . .	44
de-registering . . . . .	33, 34
display illumination . . . . .	39
display language . . . . .	38
forwarding call . . . . .	34
idle status . . . . .	13
list . . . . .	12, 13
loudspeaker volume . . . . .	39
muting . . . . .	12
paging . . . . .	34
reception strength . . . . .	5
registering . . . . .	33

registering on another	
base station	34
restoring to factory settings	41
screen picture	38
setup	6
using room monitor	36
using several handsets	33
Handset charging times	46
Handset operating time	46
in room monitor mode	36
Handset settings	38
Handsfree key	1
Handsfree talking	11
Hash key	1, 12
Headset socket	7
Hearing aids	4

## I

Icon	
alarm clock	41
battery	7
display	13
keypad lock	12
new SMS	26
ringtone	40
Idle status (display)	13
Idle status, returning to	13
Incoming message list (SMS)	25
Incorrect input (correction)	14
Info services (SMS)	29
Input language (SMS)	24
Internal	
consultation	35
listening in	35
making calls	34
Internal call	34
call waiting	35

## K

Key 1 (fast access)	1
Keypad lock	12
Keys	
assigning directory entry	17
call-by-call key	1
cancel key	13
control key	1, 12
delete key	13
display keys	1, 13
end call key	1, 11
fast access	1

handsfree key	1
hash key	1, 12
menu key	13
message key	1
On/Off key	1
quick dial	17, 18
recall key	1
star key	1, 40
talk key	1, 11

## L

Language, display	38
Last number redial	19
Linking, see SMS	
Liquid	44
List	
call history	19
call-by-call list	17
handsets	12, 13
missed calls	20
Listening in to call	35
Lock	
activating/deactivating keypad	
lock	12
Loudspeaker volume	39

## M

Mailbox ID, see SMS	
Mailboxes, see SMS	
Mains adapter	4
Making calls	
answering a call	11
external	11
internal	34
Making cost-effective calls	21
Manual last number redial	19
Medical appliances	4
Memory	18
Menu	
back one menu level	13
end tone	40
key	13
menu guidance	13
menu input	48
opening	12, 13
overview	9
Message key	
opening lists	20
Message list	
opening list	26



## Index

Messages	
key	1
Microphone	1
Missed call	20
Multiple line entry	48
Muting	12
first ring	40
Muting handset	12

## N

Name	
of a handset	36
Network mailbox	32
Network provider (number list)	17
Network provider code,	
automatic	21
Network services	15
Notification via SMS	27
Number	
adding to directory	18
as destination for room monitor	37
copying from an SMS text	27
copying from directory	19
display calling number (CLIP)	11
entering for network mailbox	32
entry using directory	19
fixed destination call	15
saving in directory	17
Number list	
network provider	17

## O

On/Off key	1
Order of entries in directory	50

## P

PABX	
connecting base station	43
pause times	43
setting dialling mode	43
setting flash time	43
SMS	30
switching to touch tone dialling	43
Pack contents	5
Paging	34
Paging, handset	34
Pause	43
Phone jack assignment	6
Power consumption	46
Predictive text	49

Preselection	21
suppressing	22
Protecting phone from access	42
Pulse dialling	43

## Q

Questions and answers	44
Quick dial	17

## R

Range	5
Recall key	1
pause after	43
Reception booster, see Repeater	
Reception strength	5
Registering (handset)	33
Reminder call	19
Repeater	42
Ringtone	
changing	39
muting	40
setting	12
setting melody	39
setting volume	39, 42
Room monitor	36

## S

Screen picture	38
Searching in directory	17
Sending	
directory entry to handset	18
Sensitivity (room monitor)	37
Service	45
Setting	
display illumination	39
screen picture	38
Setting date	8
Setting melody	39
Setting time	8
Setting up, base station	5
Setup	
handset	6
Shortcut	9
Signal beep, see Advisory tones	
Slumber mode	41
SMS	23
changing mailbox	28
deleting	24
draft message list	24
forwarding	26

info services	29
input language	24
linked	23
mailbox ID	28
mailboxes	28
notification number	27
notification type	27
notification via SMS	27
PIN protection	28
reading	24
receiving	25
registration wizard	23
replying to and forwarding	26
rules	23
self help with error messages	30
sending as fax	25
sending to a personal mailbox	28
sending to e-mail address	25
status report	24
storing number	27
to a PABX	30
troubleshooting	30
SMS centre	
changing number	29
setting	29
Sound, see Ringtone	
Special characters	49
Special functions	43
Specifications	45
Star key	1, 40
Suppressing	
preselection	22
System settings	42

## T

Talk key	1, 11
Text message, see SMS	
Toggling	15
Touch tone dialling	43
Troubleshooting	44
Troubleshooting (SMS)	30

## U

Unknown	11
Unknown caller	11

## V

Viewing network mailbox message	32
VIP (directory entry)	18
Volume	
earpiece	39
handset loudspeaker	39
loudspeaker	39
ringtone	39, 42
setting	39

## W

Wait melody	12, 42
Warning beep, see Advisory tones	
Writing (SMS)	23
Writing, editing ext	49