

# INSPIRON 14

 
## Quick Start Guide

Translated Text Here  
Translated Text Here  
Translated Text Here  
Translated Text Here

For Proof Only  
Dell Confidential

### 1 Connect the power adapter and press the power button

Connect the power adapter and press the power button  
Connect the power adapter and press the power button  
Connect the power adapter and press the power button  
Connect the power adapter and press the power button

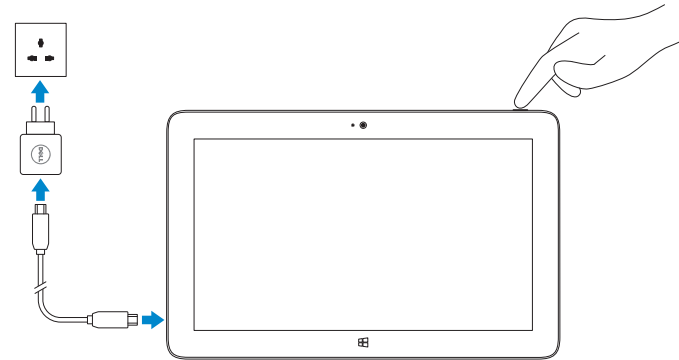

### 2 Finish Windows setup

Finish Windows setup | Finish Windows setup  
Finish Windows setup | Finish Windows setup



Enable security  
Enable security  
Enable security  
Enable security

### 3 Configure Wireless (optional)

Configure Wireless (optional) | Configure Wireless (optional)  
Configure Wireless (optional) | Configure Wireless (optional)



### 4 Connect to a network

Connect to a network | Connect to a network  
Connect to a network | Connect to a network



Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

Touch Settings → Wireless icon → Select your network, and touch Connect.

**NOTE: You may have to activate your network service before connecting.**

NOTE: You may have to activate your network service before connecting.

NOTE: You may have to activate your network service before connecting.

NOTE: You may have to activate your network service before connecting.

NOTE: You may have to activate your network service before connecting.

### 5 Explore resources

Explore resources | Explore resources  
Explore resources | Explore resources



#### Help and Tips

Help and Tips | Help and Tips  
Help and Tips | Help and Tips



#### My Dell

My Dell | My Dell  
My Dell | My Dell



#### Dell Shop

Dell Shop | Dell Shop  
Dell Shop | Dell Shop

## Product support

Product support | Product support  
Product support | Product support

## Contact Dell

Contact Dell | Contact Dell  
Contact Dell | Contact Dell

## Regulatory and safety

Regulatory and safety | Regulatory and safety  
Regulatory and safety | Regulatory and safety

## Computer model

Computer model | Computer model  
Computer model | Computer model

## Regulatory model and type

Regulatory model and type  
Regulatory model and type  
Regulatory model and type  
Regulatory model and type

[dell.com/support](http://dell.com/support)

[dell.com/contactdell](http://dell.com/contactdell)

[dell.com/regulatory\\_compliance](http://dell.com/regulatory_compliance)

**Inspiron 3137**  
**Inspiron 3137 series**

**T06G**  
**T06G001**

## Información para NOM, o Norma Oficial Mexicana

La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):

 
### Importador:

Dell México S.A. de C.V.  
Paseo de la Reforma 2620 - Piso 11.º  
Col. Lomas Altas  
11950 México, D.F.

Número de modelo reglamentario:	T06G
Voltaje de entrada:	100 VAC–240 VAC
Corriente de entrada (máxima):	1,00 A ~ 1,30 A
Frecuencia de entrada:	50 Hz–60 Hz
Corriente de salida:	1,2 A / 1,54 A
Voltaje de salida	19,5 VDC


## Features

Features | Features | Features | Features

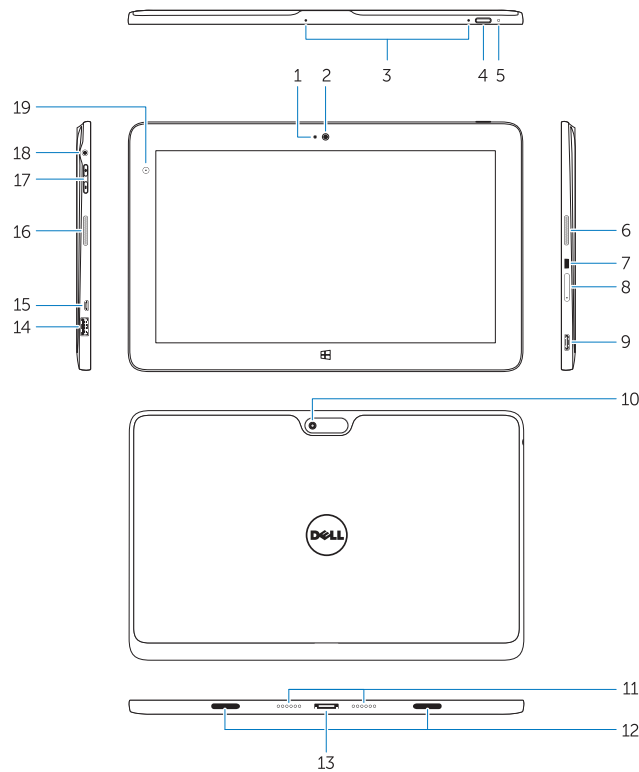

## Stylus (optional)

 Stylus (optional) | Stylus (optional) | Stylus (optional) | Stylus (optional)



1. camera LED
2. front camera
3. microphones
4. power button
5. power LED
6. right speaker
7. Noble security lock slot
8. memory card reader
9. mini HDMI connector
10. rear camera
11. dock pins
12. docking guide slots

1. camera LED
2. front camera
3. microphones
4. power button
5. power LED
6. right speaker
7. Noble security lock slot
8. memory card reader
9. mini HDMI connector
10. rear camera
11. dock pins
12. docking guide slots

13. docking connector
14. USB 3.0 connector
15. micro USB power connector
16. left speaker
17. volume button
18. audio connector
19. Ambient Light Sensor
20. Pen Tip (replaceable)
21. Programmable buttons

13. docking connector
14. USB 3.0 connector
15. micro USB power connector
16. left speaker
17. volume button
18. audio connector
19. Ambient Light Sensor
20. Pen Tip (replaceable)
21. Programmable buttons

1. camera LED
2. front camera
3. microphones
4. power button
5. power LED
6. right speaker
7. Noble security lock slot
8. memory card reader
9. mini HDMI connector
10. rear camera
11. dock pins
12. docking guide slots

1. camera LED
2. front camera
3. microphones
4. power button
5. power LED
6. right speaker
7. Noble security lock slot
8. memory card reader
9. mini HDMI connector
10. rear camera
11. dock pins
12. docking guide slots

13. docking connector
14. USB 3.0 connector
15. micro USB power connector
16. left speaker
17. volume button
18. audio connector
19. Ambient Light Sensor
20. Pen Tip (replaceable)
21. Programmable buttons

13. docking connector
14. USB 3.0 connector
15. micro USB power connector
16. left speaker
17. volume button
18. audio connector
19. Ambient Light Sensor
20. Pen Tip (replaceable)
21. Programmable buttons

1. camera LED
2. front camera
3. microphones
4. power button
5. power LED
6. right speaker
7. Noble security lock slot
8. memory card reader
9. mini HDMI connector
10. rear camera
11. dock pins
12. docking guide slots

13. docking connector
  14. USB 3.0 connector
  15. micro USB power connector
  16. left speaker
  17. volume button
  18. audio connector
  19. Ambient Light Sensor
  20. Pen Tip (replaceable)
  21. Programmable buttons
- NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.
- NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.
- NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.
- NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.

13. docking connector
14. USB 3.0 connector
15. micro USB power connector
16. left speaker
17. volume button
18. audio connector
19. Ambient Light Sensor
20. Pen Tip (replaceable)
21. Programmable buttons

13. docking connector
  14. USB 3.0 connector
  15. micro USB power connector
  16. left speaker
  17. volume button
  18. audio connector
  19. Ambient Light Sensor
  20. Pen Tip (replaceable)
  21. Programmable buttons
- NOTE:** It is recommended that you immediately backup the operating system image using the USB device through Dell Backup and Recovery (DBAR) application.

