

RC Snake™

Remote Control Snake with Obstacle Course

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD

PROBLEMS? BEFORE TAKING THIS PRODUCT BACK TO THE STORE. PLEASE CALL US,
WE CAN HELP! 1-888-742-2484 OR GO TO WWW.UNCLEMILTON.COM

Note: tool required - Small Phillips screwdriver

Install Batteries Into Controller

- Using a Phillips head screwdriver remove the battery door from the back of the controller (See Fig. 1).
- Insert 2 AA batteries and replace cover.

Install Batteries Into R/C Snake™

- Using a Phillips head screwdriver remove the battery doors from the bottom of the snake (See Fig. 2).
- Insert 2 "AAA" batteries and replace covers.

Using Your R/C Snake™

- Turn the power switches to the "ON" position on both the controller and R/C Snake (See Fig. 2).
- Move the snake forward and backwards, left and right using the buttons on the controller.

Note: For best performance use your R/C Snake™ on a smooth flat surface like a hardwood or

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Switch toy off before opening battery compartment.
- Insert batteries correctly. Match positive + and negative - signs.
- Alkaline batteries are recommended for best performance.
- Rechargeable batteries are not recommended.
- If rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- Do not recharge non-rechargeable batteries.
- Only use the batteries specified.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not mix old and new batteries.
- Remove dead or exhausted batteries.
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this product.
- Dispose of batteries safely. Recycle where available.
- Do not dispose of batteries in a fire or attempt to open the outer casing. Never short-circuit the battery terminals.
- Do not immerse battery-operated toys in water. Wipe clean only.

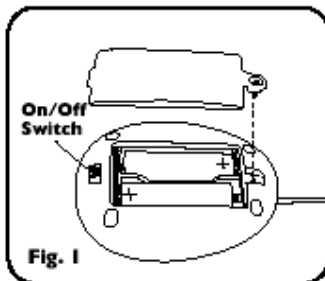 


Fig. 1

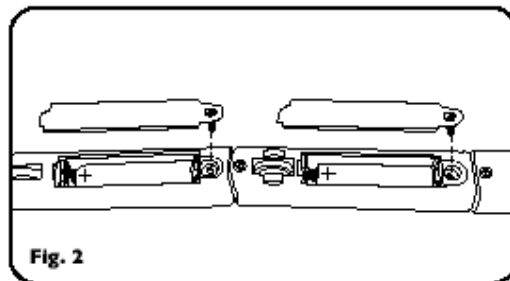 


Fig. 2

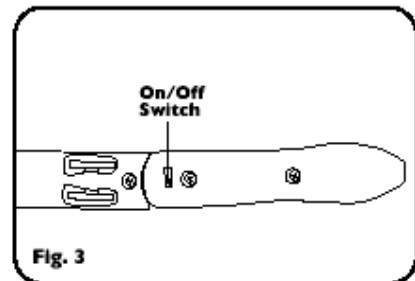 


Fig. 3

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC ID: N9B2035UMI2006

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

 MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURE MAY VOID USERS AUTHORITY TO OPERATED THIS DEVICE



UMI, Westlake Village, CA 91362
1.888.742.2484 Fax: 818.707.0878 www.unclemilton.com
© UMI. All rights reserved. RC Snake is a trademark of UMI. Printed in China.

2035-08/05