

 
Photos taking / Video recording

Press the photographing button to take photo through the camera on the helicopter. The status indicator will flash when a photo is taken. Press the video recording button to start recording video. Press the button again to stop recording. The status indicator will turn on during recording. When the internal memory is full, the status indicator flashes continuously. Move/ remove the saved data from the internal memory before taking photos again.

Transferring files to computer

Opening stored photos and videos

1. Be sure the helicopter has been switched OFF. Connect the helicopter to a computer through the USB cable and switch it on. A pop-up window will appear. Browse the helicopter (as a USB device)

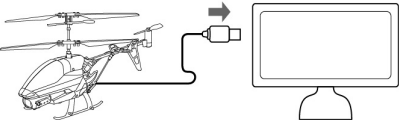

2. If you have insert Micro SD card (Not included), 2 pop-up window appear at the same time.



 
3. Enter the camera folder, find the image files to needed location. Copy the images or videos to your computer



Inserting and removing the MicroSD

1. Open the cover.
2. Insert the MicroSD card (not included) with the gold-colored contacts facing up.
3. Push gently the card until the card disengages from the helicopter, and then pull it out of the slot.

Note: Memory card slot: MicroSD card (not included), up to 32GB



Troubleshooting

Symptom	Cause	Correction
The helicopter does not response.	- The helicopter and/ or the transmitter is switch off ("OFF") - The battery of the helicopter is weak.	- Set the power switch to "ON" - Recharge the battery of the helicopter.
1. The video/ photo was not recorded. 2. The status indicator flashes continuously.	- The battery of the helicopter is weak - The built-in memory is full.	- Recharge the battery of the helicopter. - Move/ remove some photos/ videos.

 
Tip! If status indicator LED keeps flashing, it indicates either the memories are fully occupied or low batteries. Please save and remove photos/videos from the memory. After this, if LED remains flashing, please re-charge the helicopter.

Become our fan on facebook facebook.com/SilverlitToys


Visit us at www.Silverlit.com

Part Identification

Helicopter

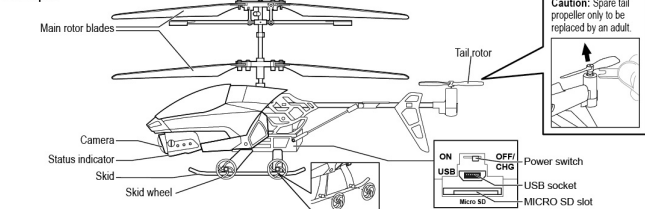


Transmitter

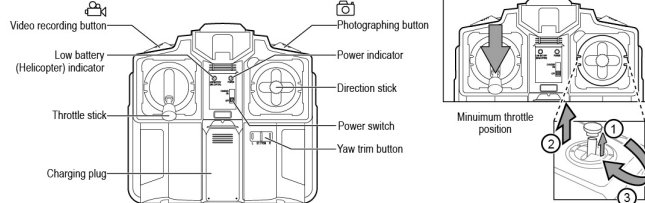 


Battery Installation & Charging

 Transmitter Battery Installation ("Make sure the power switch is set to "OFF"")

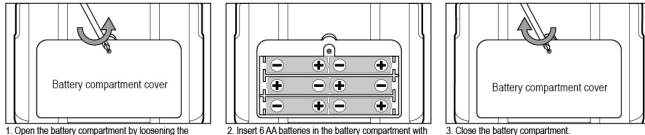

Note: When the power indicator on the transmitter starts blinking, replace the batteries.
L' amateur reçoit un signal de l'hélicoptère lorsque les piles sont faibles. Lorsque les piles deviennent faibles, l'indicateur de piles faibles (Hélicoptère) sur l'émetteur commence à clignoter. Rechargez l'hélicoptère.

 Charging Helicopter

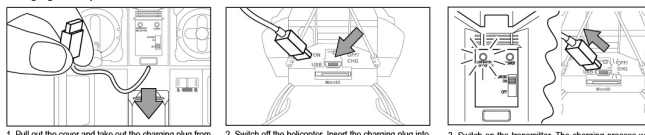


Note: 1. The helicopter can operate for about 4 - 5 minutes per every 30 - 45 minutes charging.
2. Before recharging the battery, wait 10 - 15 minutes for it to cool down.

Spy Cam II

Age classification: not suitable for children under 6 years of age.

WARNING:
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

 Delivery contents



Precautions, Warnings and Statements

The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. Tell your children to dispose of batteries properly by taking them to the local collecting points. This way batteries are recycled safely.

This product is in compliance with the essential requirements and other provisions of Directive 1999/5/EC.

Warning: Conversion or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.
- The transmitter charger is tailor made for the LFP rechargeable battery used in helicopter. Do not use it to charge any battery other than that in the helicopter.
- Photographing or video recording should only take place with the consent from all involved parties.

Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time.
- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the transmitter charger until the damage has been repaired.
- Wipe the toy gently with a clean cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Special notes to adults:

- Only operate the toy indoor under adult supervision.
- Parental guidance is recommended when installing or replacing batteries.
- Notes:
 - Under the environment with electrostatic discharge, the toy may malfunction and require user to reset the toy.
 - New alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
 - This toy must only be used with the recommended charger.

Battery warnings:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being charged. (Transmitter only)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy. (Transmitter only)
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries. (Transmitter only)
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. (Transmitter only)

This helicopter is equipped with a LiPo rechargeable battery, please pay attention to the following cautions for safety use:

- Do not dispose the battery in fire or heat.
- Do not use or leave the battery near a heat source such as fire or heater.
- Do not strike or throw the battery against hard surface.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- When recharging, only use the battery charger specifically for the purpose.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet.
- Do not directly solder the battery pad/pencil battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery every 6 months.

Battery requirement (Transmitter):

- Power Supply: DC 3 V, 3.6 V
- Batteries: 6 x 1.5 V "AA" (LR6) (not included)

Silverlit SLT (USA) Inc., Suite# 220, 21660 East Copley Drive, Diamond Bar, CA, 91765, U.S.A. Tel: (877) 502-8697 ©2012 Silverlit. All rights reserved.

Flying Your Helicopter

Tip! Piloting hints

- For controlling the sticks on transmitter, try not to push the sticks immediately any extreme positions. It should be like steering a bicycle rather than pressing computer game sticks.
- For the novice pilot (after the trimming procedure is completed), it is highly recommended to focus exclusively on learning to control the throttle stick first. If the helicopter turns around by itself there is no need to keep it straight. For the first flight, it is important to learn to keep the helicopter at a constant altitude of around 1 meter with very gentle inputs on the throttle stick. Once the pilot masters this, they may start learning to take control with the direction stick.

Tip! Operation hints

- If the helicopter is crashed, switched off the helicopter and the transmitter. Examine the helicopter and ensure it has no damage before switching them on again.
- Don't operate the helicopter under the direct bright light it will affect the control system of your helicopter.
- Don't cover the IR diodes of the transmitter as it will block the IR signal.
- Don't stick any other label onto the helicopter as it will affect receiving of IR signal.

 
 
 
1. Procedure for PAIR / SYNC the Helicopter and Transmitter

2.4 GHz technology allows for many helicopters to run without signal interference. A connection, or pairing, must be made between the helicopter and the transmitter to function. Sometimes, the pairing will happen automatically. If it does not, or if the connection is lost then follow these steps to sync the helicopter and the transmitter.

1. Place the helicopter on the ground with the tail point towards you and the nose pointing away.
2. Turn the Power Switch button to 'ON' position both on the Helicopter and Transmitter, Red LED will then flash.
3. The Synchronization/Pairing procedure is automatically COMPLETED when you can see the Red LED light up speed (not blinking) on both Helicopter and Transmitter.


2. Trimming the helicopter:

Gently push the throttle up to raise your helicopter about 0.5 to 1 meter high.




3. Flight control:

 
Hover up and down: When the helicopter flies steadily, slowly push the throttle stick up to make helicopter fly higher, or lower the stick a bit to make helicopter fly lower. Only small amounts of stick position change are required for smooth flying.



 Forward and backward flight: Maintain the helicopter at a certain height. Push the direction stick upward to fly the helicopter forward. Push it downward to fly the helicopter backward.



 Turn left and right: Maintain the helicopter at a certain height. Push the direction stick toward left to turn the helicopter anticlockwise, and push the direction stick toward right to turn it clockwise.



4. Lift-off procedures (after trimming procedure):

- Put the helicopter on a smooth surface. Uneven floor surface will affect its lifting off.
- Slowly increase the throttle.
- Do not look at the transmitter but focus on the helicopter.
- As soon as the helicopter leaves ground, reduce the throttle slightly. (In the worst case, helicopter will go back to the floor but that is better than crashing against the ceiling.)
- Very gently add the throttle if the helicopter descends.
- Very gently reduce the throttle if the helicopter ascends.
- For turning, give short and small inputs to the direction stick. (Most beginners will easily overcontrol the helicopter.)