

Ferrari

OFFICIAL LICENSED PRODUCT

"Produced under license of Ferrari Spa. FERRARI, the PRANCING HORSE device, all associated logos and distinctive designs are property of Ferrari Spa. The body designs of the Ferrari cars are protected as Ferrari property under design, trademark and trade dress regulations"

Silverlit®

Silverlit SAS, Espace Green Parc, Route de Villepele,
91280 Saint Pierre du Perray / France.
©2013 Silverlit. All rights reserved.

Please note that the use of this accessory with Android may affect wireless performance.

The product has imbedded the Bluetooth module with QDID B017511

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Silverlit is under license. Other trademarks and trade names are those of their respective owners.

 Become our fan on facebook
facebook.com/SilverlitToys

Visit us at
www.Silverlit.com

 Bluetooth®

EI-4484

Silverlit

Interactive Bluetooth® R/C
connect, control, drive like never before

458 ITALIA

Instruction Manual



Use Your Android Devices as your
 Bluetooth® Remote Control

**Compatible with
Android Devices**

Silverlit

Interactive Bluetooth® R/C
connect, control, drive like never before

English

 
For Ages 8+
Ab 8 Jahre
Pour 8 ans et plus
Voor leeftijd 8+
Para 8+ años
Dai 8 anni in su

WARNING:
CHOKING HAZARD – Small Parts.
Not for children under 3 years.



This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.


1. Delivery contents

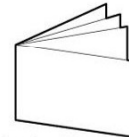

Instruction Manual



 4 x AA Batteries

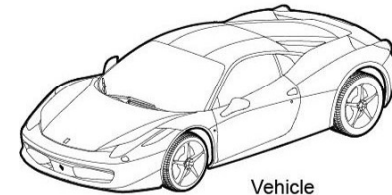

Vehicle

Safety precautions

- Parents: Please read the operating instructions carefully with your children prior to the first use.
- Stop the vehicle through the transmitter before picking it up.
- Keep hands, hair and loose clothing away from the moving parts, e.g. tires and the wheel hubs, when toy is switched on.
- Do not operate the remote controlled vehicle on streets. Avoid hitting people, pets or home furnishings.



The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. Tell your children to dispose of batteries properly by taking them to the local collecting points. This way batteries are recycled safely.



Waste Electrical and Electronic Equipment (WEEE)

When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and

2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Battery warnings:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time.
- Wipe the toy gently with a clean cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Battery requirement for (Vehicle):

Power Supply	: ===
Rating	: DC 6 V , 7,8 W
Batteries	: 4 x 1,5 V "AA"/LR6/AM3 (included)
Capacity	: 2800 mAh

2

TIPS

For the vehicle, best & maximum performance can be only obtained by new and alkaline batteries.

 
 
Notes:

- Parental guidance is recommended when installing or replacing batteries.
- Keep this instruction manual for future reference.
- Users should keep strict accordance with the instruction manual while operation the product.
- Under the environment with electrostatic discharge, the toy may malfunction and require user to reset the toy.
- Use new alkaline batteries in this toy to obtain best performance.

2. Part Identification

2.1 Parts included:



Vehicle

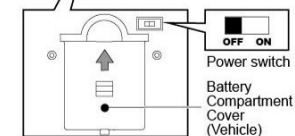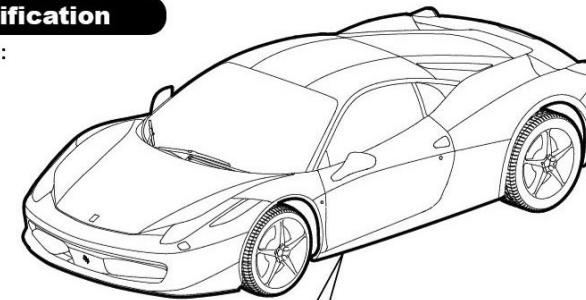

3. Getting Started:

Battery installation

  - 3.1 - The vehicle is powered by 4 x 1.5V "AA" size batteries (included).
- 3.2 - Make sure the power switch is on "OFF" position.
- 3.3 - Press down the button (1) on battery compartment cover, and then follow the arrow (2) direction to push out the battery compartment cover (fig. 1).
- 3.4 - Insert four "AA" batteries with correct polarity, as shown inside battery compartment (fig. 2).
- 3.5 - Close the battery compartment cover.

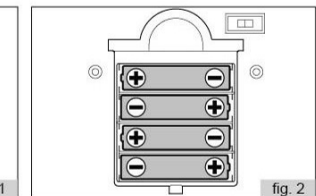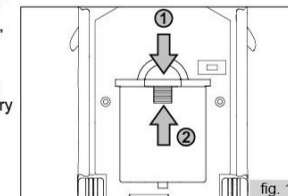

3

 
Important: Prepare your Android Devices (Only for Virtual Joy Stick Mode. Applicable to device with multi-touch screen + Android system 2.33 or above.) to set up the operation procedure followed the below steps

4. Operation Steps




Note: Please also go to App help for video tutorial and instructions.

5. Interface Control Function Description: Gesture Mode

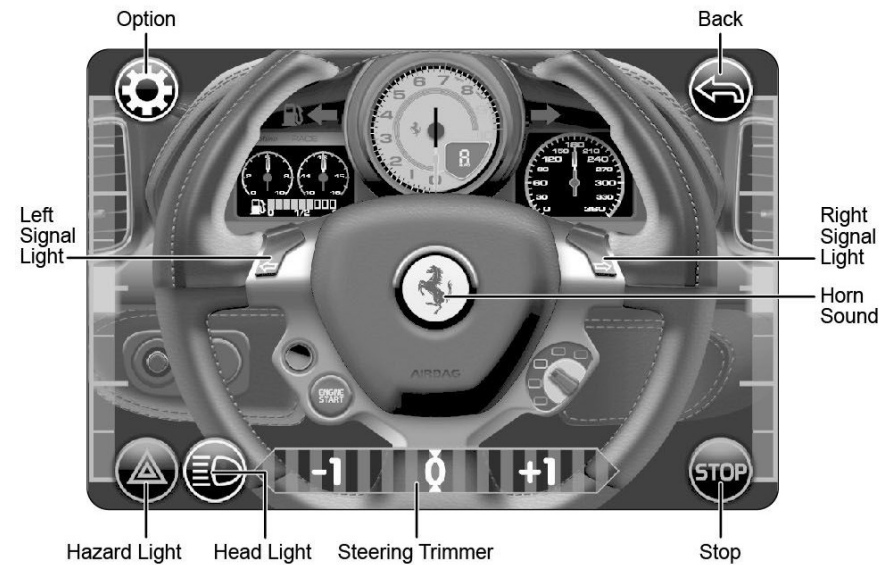

 6. Interface Control Function Description: Joystick Mode

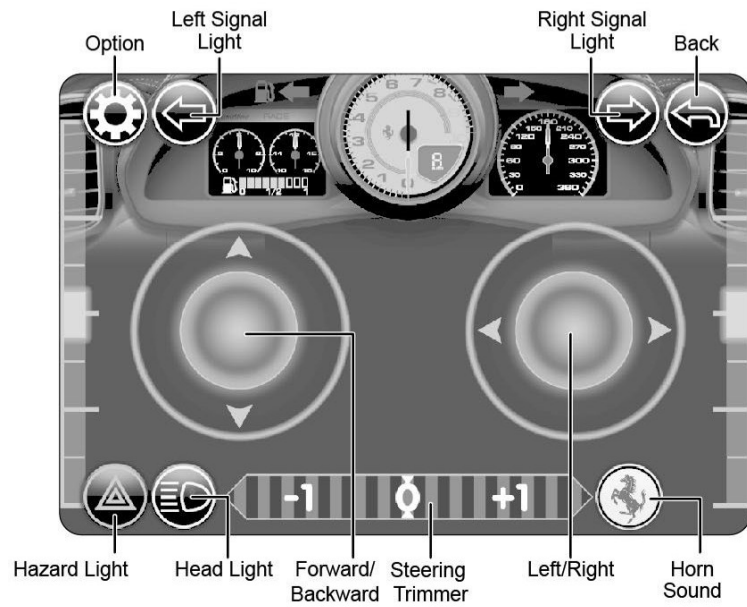

6

7. Drive Your Vehicle

Forward and Accelerate	Backward and Accelerate	Forward Left	Forward Right	Backward Left	Backward Right
7.1 Gesture Mode					
7.2 Joystick Mode					

 
7

8. Interface Indicator Description

Gesture Mode



Joystick Mode

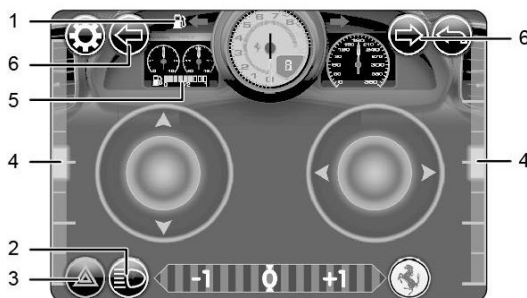


1. Low Battery Indicator
2. Head Light
3. Hazard Light
4. Forward & Backward Indicator
5. Battery Level Indicator
6. Left & Right Signal Light

9. Interface Option Screen Setting


9.1 Sensitivity Setting



 1 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 9 - 10
Low High

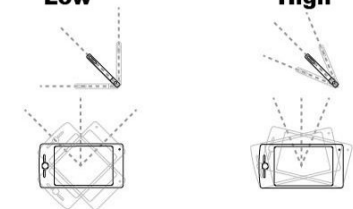

 9.2 Acceleration Curve Setting

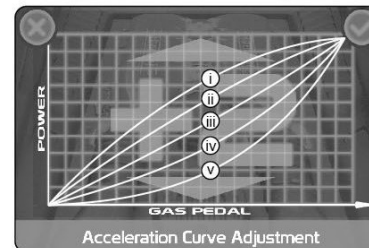

1. Default
 - Factory setting for beginners
2. Customize
 - Drag to select on different curves (from top to bottom)
 - i. FASTEST acceleration at the beginning. (more suitable for fast driving)
 - ii. FASTER acceleration at the beginning THAN the ending of gas pedal range.
 - iii. REGULAR acceleration all along the gas pedal range.
 - iv. LOWER acceleration at the beginning THAN the ending of gas pedal range.
 - v. LOWEST acceleration at the beginning. (more suitable for precise driving)

9.3 Trim the vehicle

Turn the steering trimmer at the bottom towards Left side when the vehicle drives to the right involuntarily. If it turns left involuntarily, turn the trimmer towards Right side.



10. Driving Tips:

1. Only operate the vehicle on flat, smooth (but not slippery) and dry surfaces or low pile carpets. Hair, carpet or dirt can affect the operation of the vehicle.
2. Do not drive the vehicle on sand or through water or snow. If your vehicle gets wet, wipe it with a towel and allow it to dry completely.
3. Do not operate near concrete walls which may disturb bluetooth transmission.

11. Troubleshooting

Symptom	Cause	Solution
Vehicle does not react, or react poorly to the Android device.	<ul style="list-style-type: none"> - High-frequency interference occurred near to high-voltage lines, transformers and some types of building. - Android devices battery is weak. - Vehicle batteries are weak. - Bluetooth may not be in connection with your vehicle. - The toy is in stand-by mode. 	<ul style="list-style-type: none"> - Avoid these if possible, or choose another place to operate the vehicle. - Switch off the toy and turn it on again. - Resetting Android device. - Change all batteries in vehicle with new alkaline batteries. - Recheck if your Android device connects with your vehicle in Bluetooth.
Loss of control.	<ul style="list-style-type: none"> - Out of the transmission range. 	<ul style="list-style-type: none"> - The vehicle has a transmission range of 8 meters (26 feet) in open space.
Vehicle runs slowly, erratically or does not run.	<ul style="list-style-type: none"> - Power switch is not in "ON" position. - Batteries are not installed correctly. - Weak batteries. - Hair, carpet or dirt might be trapped between wheels. 	<ul style="list-style-type: none"> - Switch on the power. - Check the batteries polarity and connection. - Replace them with new ones. - Carefully remove the foreign materials.
Bluetooth connection unsuccessful.	<ul style="list-style-type: none"> - Other bluetooth device connected. 	<ul style="list-style-type: none"> - Disconnect other bluetooth device and try again.
Too sensitive while controlling.	<ul style="list-style-type: none"> - Sensitivity setting is not in the correct setting. 	<ul style="list-style-type: none"> - Decrease sensitivity setting inside option screen.