



## 4. Operation/Adjustments


(i) **Vertical Training Wheel**  
Insert the vertical training wheel into the back of the vehicle. It can run vertically.

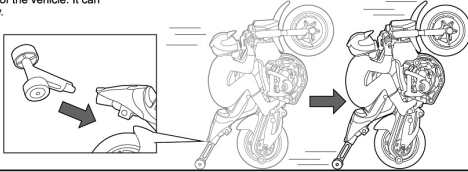

(ii) **Stand**  
Place vehicle on the stand for display.

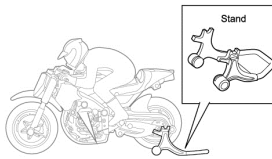

(iii) **Trimming**  
Some times the throttle signal between the vehicle and transmitter may need adjustment so the vehicle stays still in the idle mode. Adjust the throttle trimming dial to establish an idle setting for the vehicle. If the vehicle rolls forward by itself, turn the dial clockwise until it stops moving. Turn it anticlockwise to compensate for reverse idle.

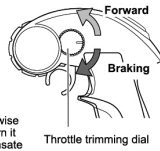

### Driving Tips:

- The turning speed and radius may vary at different control combination.
- Operate only on flat, smooth (but not slippery), dry surfaces and low pile carpet, as hair, carpet or dirt can affect the operation of the vehicle.
- Don't drive your vehicle in sand or through water or snow, if your vehicle gets wet, wipe with a towel and allow to dry completely.


## 5. Trouble Shooting

Symptom	Cause	Correction
Vehicle does not react, or react poorly to operation by transmitter.	- PAIR / SYNC Procedure is not yet completed or done. - Out of the control range of distance. - Enter into power save mode.	- Pair the Vehicle and the transmitter by Press both PAIR/SYNC buttons. - Vehicle runs distance up to 10 meters (or 33 feet) indoor. - Switch off the vehicle and turn on again.
Vehicle runs slowly or does not run.	- ON/OFF switch is not in "ON". - Low battery. - Hair, carpet or dirt might be trapped between wheels.	- Switch on the power. - Recharge the vehicle. - Carefully remove such foreign materials.

Follow us on Facebook  
facebook.com/SilverlitToys

Visit us at  
www.Silverlit.com




## 1. Part Identification

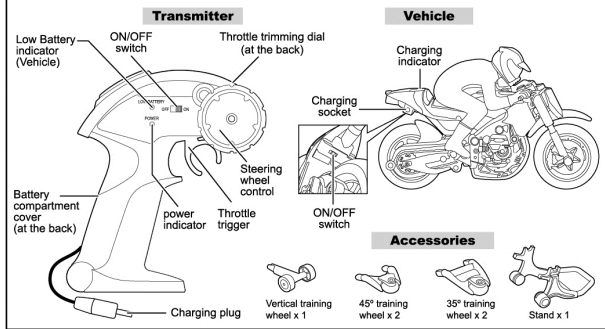

## 2. Battery Installation and Charging



### Transmitter battery installation

   - Switch off the transmitter
- Open the battery compartment by loosening the screw (fig. 1).
- Put 4 Type AA battery in the battery compartment as per the polarity shown inside (fig. 2).
- Place back the battery compartment cover (fig. 3).



### Charging the vehicle

  - Pull out the charging plug from the bottom of the transmitter (fig. 4).
- Switch off the vehicle. Insert the charging plug into the charging socket on the vehicle (fig. 5).
- Switch on the transmitter. The charging process will begin automatically and the charging indicator will light up. Unplug the charging plug after the charging indicator turns off. Charging is completed (fig. 6).



- Note: 1. The vehicle can operate for about 6 - 7 minutes per every 18 - 25 minutes charging.  
2. Before recharging the battery, wait 10 - 15 minutes for it to cool down.


The transmitter receives a signal from the car when the battery is low. When the vehicle battery indicator on the transmitter starts blinking, recharge the vehicle.



For ages 5+  
Ab 5 Jahre  
À partir de 5 ans  
Leeftijd vanaf 5 jaar  
A partir de 5 años  
Dal 5 anni in su

This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

## Delivery Contents

 

## FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
1) This device may not cause harmful interference, and  
2) This device must accept any interference received, including interference that may cause undesired operation.  
**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.  
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.

## Safety Precautions

- Parents, this toy is recommended for children. To ensure that your child's play is both safe and fun, please review the operating instructions with your children.
- DO NOT** pick up moving vehicle.
- Keep hands, hair and loose clothing away from the tires and the wheel hubs when power switch is turned ON.
- Remove battery from the toy when not in use.
- DO NOT** operate your vehicle on street. Avoid hitting people, pets or home furnishings.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The crossed-out death symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. If the toy is out of use, please use common household tools to break the product for built-in rechargeable battery operated toy or unscrew the battery door for replaceable battery operated toy, then take the battery out from the toy. Dispose of battery in accordance with your local battery recycling or disposal laws.

**Waste Electrical and Electronic Equipment (WEEE)**  
When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

## Cautions:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged. (Transmitter only)
- Rechargeable batteries only to be charged by an adult.
- Different types of batteries or new and used batteries are not to be mixed. (Transmitter only)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries. (Transmitter only)
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. (Transmitter only)
- The battery of vehicle is not replaceable.

## Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time.
- Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

## Note:

- Parental guidance is recommended when installing or replacing batteries.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the instruction manual while operation the toy.

## Battery requirement for Transmitter:

- Power Supply: ---
- Rating: DC 8 V, 2.4 W
- Batteries: 4 x 1.5 V AA/LR6/AM3(not included)

## Battery requirement for Vehicle:

- Power Supply: ---
- Battery ratings: DC 3.7 V, 2.22 W
- Batteries: 1 x 3.7 V LiPo Rechargeable Battery Pack (included)
- Capacity: 110 mAh

 
**silverlit** Silverlit SAS, Espace Green Parc, Route de Villepele, 91280 Saint Pierre du Perray / France.  
©2013 Silverlit. All rights reserved.

## 3. Operation

### 3.1 Procedure for PAIR / SYNC the Vehicle and Transmitter

2.4 GHz technology allows for many vehicles to run without signal interference. A connection, or pair, must be made between the vehicle and the transmitter. Hold the transmitter with your left hand like holding a pistol (fig. 9).

The vehicle will automatically enter power saving mode after 10 minutes when not in use. To turn it on again, simply switch the ON/OFF switch to 'OFF' position and then 'ON' position again.




### 3.2 Control

(i) **Forward & Stop**  
Pull throttle control (trigger) gently to drive the vehicle forward and release the trigger to stop the vehicle.

#### TIPS!

To achieve maximum speed, operate the vehicle indoor on dust-free floor. Avoid driving it in thick/soft carpet. The vehicle may be damaged as a result.

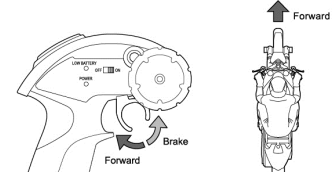


### (ii) Turning Left & Right

Rotate the steering wheel clockwise to steer the vehicle Right and rotate the steering wheel counter clockwise to steer the vehicle Left.

#### TIPS!

Be careful not to squeeze the throttle trigger abruptly while turning left or right.

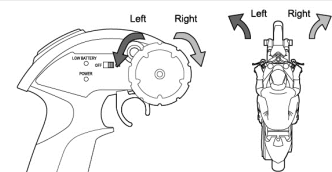

### 3.3 Precise turn angle

(i) **45° training wheels:**  
Vehicle attached with 45° training wheels. It can make smaller radius turns in a small area.



(ii) **35° training wheels:**  
Vehicle attached with 35° training wheels. It can make bigger radius turns in a wider area.

