



5. Trouble Shooting		
Symptom	Cause	Correction
Vehicle does not react, or react poorly to operation by transmitter.	PAIR / SYNC Procedure is not yet completed or done. Out of the control range of distance. Enter into power save mode. Enter into overheat protection mode.	- Turn the Power Switch button to 'ON' position both on the Vehicle and Transmitter, Red LED will then flash. Push both left and right throttle sick toward and release them Vehicle runs distance up to 50 feet outdoor Switch off the vehicle and turn on again Wait 15-20 minutes for it to cool down.
Vehicle runs slowly or does not run.	ON/OFF switch is not in "ON". Low battery. Hair, carpet or dirt might be trapped between wheels.	Switch on the power. Replace the batteries. Switch off the vehicle carefully and remove such foreign materials and then switch on the power.

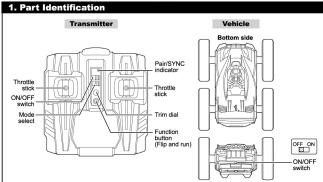


2. Battery Installation

Transmitter battery installation

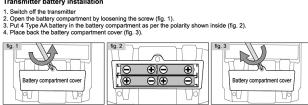

Vehicle battery installation

- de (fig. 5).

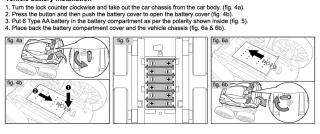



For ages 5+
Ab 5 Jahre
A partir de 5 at
Leeftijd vanaf
A partir de 5 at
Dai 5 anni in si

 ⚠ WARNING: CHOKING HAZARD - Small parts Not for Children under 3 years.

Delivery Contents









Instruction manua

Instruction Manual

FCC Statements

- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

 1)This device may not cause harmful interference, and

 2)This device may not cause harmful interference, and

 2)This device must accept any interference received, including interference that may cause undesired operation.

 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

 NOTE: This equipment alies and the provider researched protection against harmful interference in a residential installation. This equipment lose causes harmful interference to radio communications.

 However, there is no guarantee that Interference will not occur in a particular installation. This equipment lose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

 Increase the separation between the equipment and receiver.

 Increase the separation between the equipment and receiver.

 Connect the equipment inch an outlet on a circuit different from that to which the receiver is connected.

Safety Precautions

- Parents, this toy is recommended for children. To ensure that your child's play is both safe and fun, please review the operating instructions with your children.

 DO NOT pick up moving vehicle.

 Keep hands, hair and loose clothing away from the tires and the wheel hubs when power switch is turned ON.

 Remove battery from the toy when not in use.

 DO NOT operate your vehicle on street. Avoid hitting people, pets or home furnishings.

 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The crossed-out dustion symbol indicates that batteries, inchangeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are hamiful for better and the environment from the third of the environment from the third of the environment from the environment from the middle of the product for butter or the state of the product for butter or personal butteries, or personal butteries, the buttery down the buttery down the buttery down the buttery down the production of the pr



Waste Electrical and Electronic Equipment (WEEE
When this appliance is out of use, please remove all batteries
and dispose of them separately. Dring electrical appliances to the
local collecting points for waste electrical and electronic
equipment. Other components can be disposed of in domestic
refuse.

- Cautions:

 Non-rechargeable batteries are not to be recharged.

 Rechargeable batteries are not to be recharged.

 Rechargeable batteries are to be removed from the toy before being charged.

 Rechargeable batteries are to be removed from the toy before being charged.

 Rechargeable batteries are to be charged by an adult.

 Only batteries of the same or equivalent type as recommended are to be used.

 Batteries are to be inserted with correct polarity.

 Exhausted batteries are to be removed from the toy.

 The supply terminals are not to be short-circuited.

 Do not mix old and new batteries.

- rd (carbon-zinc) or rechargeable (nickel-cadmium) batteries

- Do not mix alkaline, standard (carbon-zinc) or recnargeasize (hover-carbon), and time and Maintenance:
 Always remove batteries from the toy when it is not being used for a long period of time.
 Wipe the try gently with a clean damp cloth.
 Keep the try ways from direct surgified and/or direct heat.
 Do not submerge the try, into water that can damage the electronic assemblies.
 Operation city on flat, amorbit (but not slippery), dry surfaces and low pite carpet, as hair, cargor or dirt can affect the operation of the vehicle.

- Note:

 Parental guidance is recommended when installing or replacing batteries.

 Users should keep and retain this information for future reference.

 Users should keep strict accordance with the instruction manual while operation the toy.


Battery requirement for Vehicle:
Power Supply:
Battery ratings: DC 9.0 V , 9.0 W
Battery ratings: DC 9.0 V , 9.0 W
Company of the State of the State

Under the environment with electrostatic discharge, the sample may malfunction and require user to pair the controller and car again. Visit us at www.Silverlit.com

Best performance can be only obtained by using new alkaline batteries.

This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



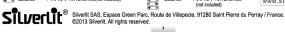





3. Operation


3.1 Procedure for PAIR / SYNC the Vehicle and Transmitter

- 2.4 GHz technology allows for many racers to run without signal interference. A connection, or pairing, mu made between the car and the transmitter to function. Follow these steps to PAIR/SYNC the racer and the on, or pairing, must be transmitter.
- Turn the Power Switch button to 'ON' position both on the Vehicle and Transmitter, Red LED will then flash.
- Push both left and right throttle stick forward and release them.
 The PAIR/SYNC procedure is COMPLETED when you can see the Red LED light up.



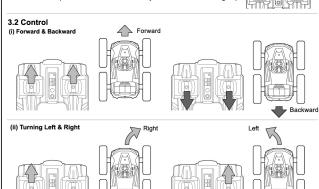

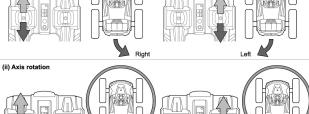

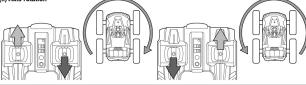

Sometimes the vehicle will stay on the side of the wheels. When insert the additional accessories to the side of wheels, the vehicle can lift back to normal position more ex

