


TURBO TransZorner

El-92

Contents :

- Turbo TransZorner Vehicle
- Transmitter
- Removable battery drawer for 6 "AA" size batteries
- Instruction manual
- Plastic antenna tube
- Antenna

1 Name of Parts

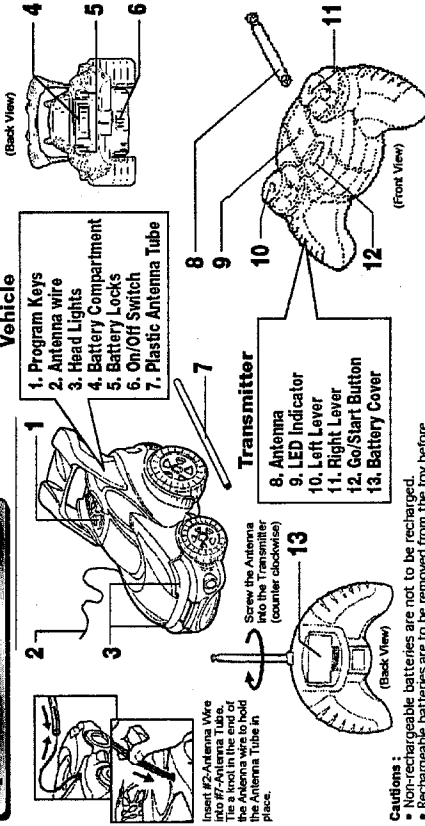

Insert #2-Antenna Wire into #7-Antenna Tube. Tie a knot in the end of the Antenna wire to hold the Antenna Tube in place.


- Cautions :**
- Non-rechargeable batteries are only to be recharged under adult supervision.
 - Rechargeable batteries are to be removed from the toy before being charged.
 - Rechargeable batteries are to be removed from the toy before supervision.
 - Rechargeable battery, if must be NiCd in type and have the capacity below 700mAh.
 - Different types of batteries or new and used batteries are not to be mixed.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with correct polarity.
 - Battery terminals are not to be short-circuited.
- Notes:**
- Parental guidance is recommended when installing or replacing batteries.
 - New and alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
 - You are advised to replace with new batteries as soon as the function becomes impaired.
 - Interference will cause loss of control or uncontrolled running of vehicle if used in vicinity of cordless telephones, baby monitors, walkie-talkies, etc.
 - To race 2 vehicles at the same time, buy one vehicle with frequency 27MHz, another one with frequency 49MHz. If you buy 2 vehicles with the same frequency, their signals will interfere.
 - Users should keep and retain this information for future reference.
 - Users should keep strict accordance with the manufacturer's instructions while operating the product.

- Power Supply:**
- Battery requirement for Vehicle:
- DC 9V 63W
 - 6 x 1.5V "AAV1" LR6 / AM3
 - 6 x Batteries
 - Requires 6 x "AA" size alkaline batteries (not included)
- Battery requirement for Transmitter:
- DC 9V 0.4W
 - 1 x 9V / RL727 / 6AM6
 - Requires 1 x "9V" battery (not included)

WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

2 Battery Installation

- Batteries requirement :**
- Vehicle : 6 x "AA" size alkaline batteries (not included)
 - Transmitter : 1 x 9V alkaline battery (not included)
- Vehicle :**
- Make sure the power switch is in the "OFF" position.
 - Slide the battery compartment out by turning the battery locks at both sides as indicated.
 - Install 6 x "AA" size batteries with polarity as shown inside battery compartment.
 - Insert Battery drawer and close the battery compartment by turning the battery locks in opposite directions.
- Transmitter :**
- Remove the battery cover by using a coin
 - Install 1 x 9V size alkaline battery as indicated with polarity as shown inside battery compartment.
 - Replace the battery door back in position.

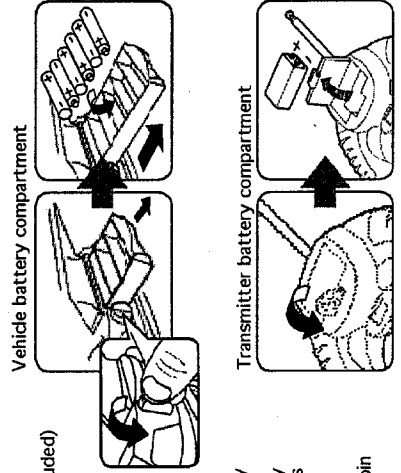

Parental guidance is recommended when children are installing and replacing batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, any interference that is received by this equipment can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Trouble Shooting :

| SYMPTOM | PROBLEM CAUSE | CORRECTION |
|---|---|--|
| Vehicle runs slowly or does not run. | <ul style="list-style-type: none"> • Loose battery connection or main switch not in the "ON" position. • Batteries not placed in compartment correctly. • Batteries are exhausted. | <ul style="list-style-type: none"> • Check battery connector and vehicle main switch. • Check that the batteries are put in compartment correctly following "+", "&". • Replace all with new "AA" size batteries. |
| Vehicle doesn't work after going through water. | <ul style="list-style-type: none"> • Water in electronics area. | <ul style="list-style-type: none"> • Vehicle will take several hours to dry. |
| Error sound during programming. | <ul style="list-style-type: none"> • Program Actions entered exceed more than 32 steps | <ul style="list-style-type: none"> • Key-in no more than 32 steps |
| The car does not receive any command operations | <ul style="list-style-type: none"> • Batteries of the vehicle are running low or exhausted. | <ul style="list-style-type: none"> • Replace all 6 "AA" size new batteries. |
| Loss of control | <ul style="list-style-type: none"> • Another radio controlled vehicle using the same frequency is operated near this vehicle. | <ul style="list-style-type: none"> • Move to another area, away from radio frequency interference from another device. |

Safety Precautions:

Parents, this toy is recommended for children 5 years and older. To ensure that your child's play is both safe and fun, please read the instructions carefully and supervise children if they are in the presence of children under 5 years of age, adult supervision is recommended.

Warnings:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Care and Maintenance:**
- Always remove batteries from the toy when it is not being used for a long period of time.
 - Wipe the toy gently with a clean damp cloth.
 - Keep the toy away from direct sunlight and/or direct heat.
 - Do not immerse the toy into water that can damage the electronic assemblies.

Stunts and Driving Tips :

Turbo TransZorner is the ultimate in fun, featuring the ability to perform many fantastic stunts and awesome R/C control. Of course, anyone can learn to be a good driver, it only takes patience and practice!

Power Supply:

Battery requirement for Vehicle:

- DC 9V 63W
- 6 x 1.5V "AAV1" LR6 / AM3
- 6 x Batteries
- Requires 6 x "AA" size alkaline batteries (not included)

Battery requirement for Transmitter:

- DC 9V 0.4W
- 1 x 9V / RL727 / 6AM6
- Requires 1 x "9V" battery (not included)

Silverlit® Silverlit Toys (U.S.A.) Inc. P.O. Box 96068, City of Industry, CA 91715-0608
©2000 Silverlit Toys Manufacturing Limited. All rights reserved.