

Instruction Manual



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- 2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

Contents:

- Turbo Twister
- Transmitter
- 9.6V Ni-Cd battery Pack
- Charger
- Instruction manual

Keys Features:

- Full function Turbo Twister vehicle with stunt actions
- Front wheel drive.
- Rear wheel ascend & descend.

Safety Precautions:

- Parents, this toy is recommended for children 8 years and older. To ensure that your child's play is both safe and fun, please review the operating instructions with your children. If toy in the presence of children under 8 years of age, adult supervision is recommended.
 - **DO NOT** pick up moving vehicle
 - Keep hands, hair and loose clothing away from the tires and the wheel hubs when power switch is turned ON.
 - Remove battery pack and transmitter battery when not in use.
 - **DO NOT** operate your vehicle on street. Avoid hitting people, pets or home furnishings.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Battery Cautions:

- Do not recharge battery pack if it's hot. Allow it to cool before recharging.
- Do not charge a battery pack that shows leakage or corrosion.
- Do not disassemble the battery pack. The battery pack is a sealed NiCd (Nickel-Cadmium) battery.
- Do not dispose of the battery pack in fire.
- Exercise caution in handling a hot battery pack.

Cautions:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- If use the rechargeable battery, it must be NiCd in type and has the capacity below 600mAh.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

 
Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time.
- Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.


Note:

- Parental guidance is recommended when installing or replacing batteries.
- New and alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
- You are advised to replace with new batteries as soon as the function becomes impaired.
- This vehicle may only be raced against other vehicles using different frequencies. Loss of control will result if another radio controlled vehicle using the same frequency is operated near this vehicle.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the manufacturer's instructions while operating the product.

Battery requirement for Transmitter:

Power Supply :  9V
 Rating : DC 9V 0.4W
 Battery : 1 x 9V / 6LF22 / 6AM6
 Requires 1 x "9V" battery (not included)

 Battery requirement for Vehicle:

Power Supply : 
 Rating : DC 9.6V 19W
 Battery : 9.6V Ni-Cd battery pack
 Requires 9.6V Ni-Cd battery pack & Charger (Included)



Battery pack & Charger
(Included)

Silverlit[®]



Silverlit Toys (U.S.A.) Inc. P.O. Box 90608, City of Industry, CA 91715-0608
 ©2001 Silverlit Toys Manufactory Limited. All rights reserved.

#82041




  Index to Parts


⚠ WARNING:
CHOKING HAZARD – Small parts.
 Not for Children under 3 years.

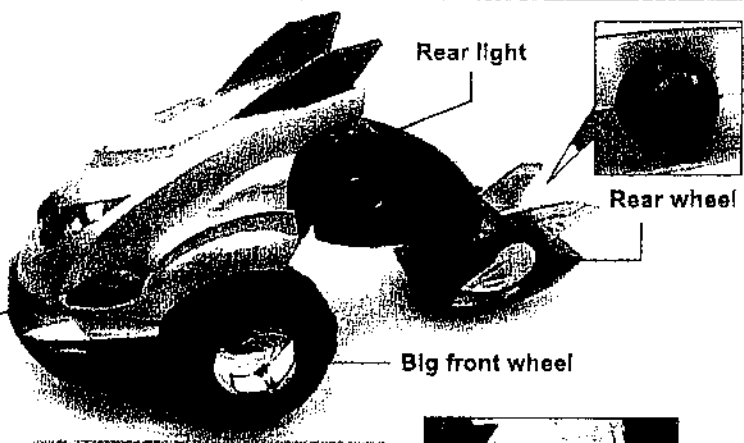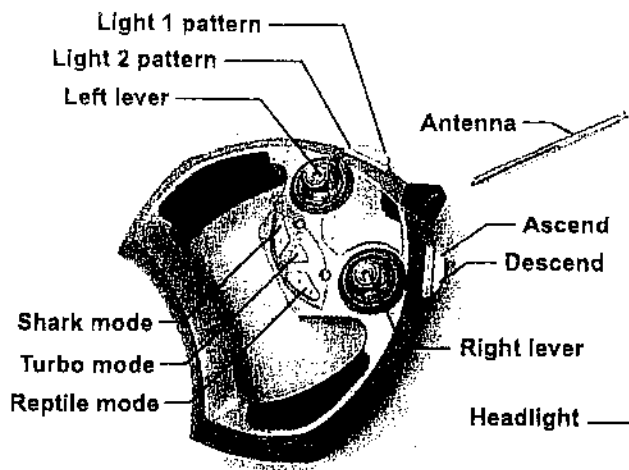

Transmitter

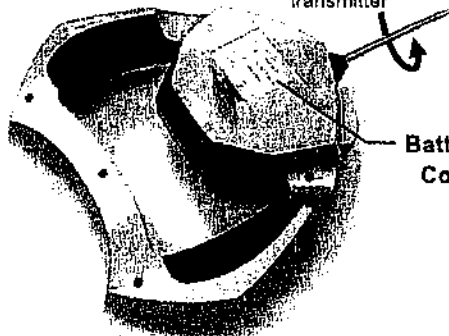 

Turbo Twister Vehicle

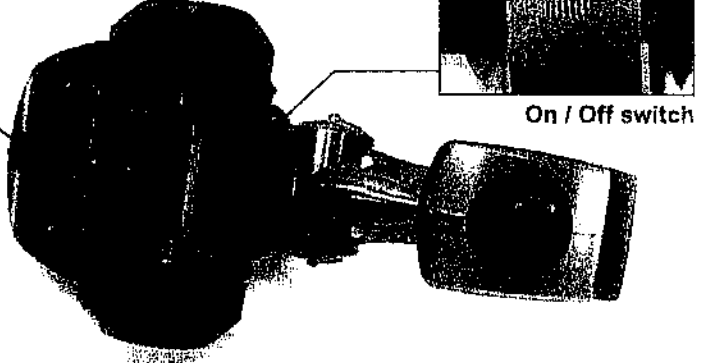 

Trouble Shooting:

Symptom	Cause	Correction
Vehicle does not react, or react poorly to operation by transmitter.	<ul style="list-style-type: none"> High-frequency interference occurred near to high-voltage lines, transformers and some types of building. Enter sleep mode 	<ul style="list-style-type: none"> Avoid these if possible, or choose another place to operate the vehicle. Push ON/OFF switch once to start the play.
Loss of control	<ul style="list-style-type: none"> Another radio control vehicle using the same frequency is operated near your vehicle. Out of the control range of distance. 	<ul style="list-style-type: none"> Race against other vehicles using different frequencies. Move to another place where without radio frequency interference from another device.
Vehicle runs slowly or does not run.	<ul style="list-style-type: none"> Loose battery connection Main power switch is not in "ON" position. Batteries are not placed in compartment correctly. Batteries are exhausted. 	<ul style="list-style-type: none"> Check battery connection. Switch on the power. Check the battery polarity. Replace with fresh battery for controller, for vehicle, replace with fully charged NiCd battery.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Hints: This Turbo Twister vehicle will automatically enter into sleep mode after 5 minutes when not in use. To turn it on again, simply push the ON/OFF switch once to start the play.

Getting Started


Batteries:

- Use a phillips head screw driver to loosen screw. (counter clockwise) (pic. 1)
- Your Turbo Twister is powered by 9.6V battery pack (pic. 2)
- Your transmitter is powered by 1 x 9V size alkaline battery (pic. 3 & 4)

Charging Battery Pack:

The 9.6V battery pack is not charged. It has to be charged before being used for the first time. please proceed as follows:

 - Rechargeable batteries are charged under adult supervision.
 - Collect the plug of the battery pack to the plug of the transformer, then plug the transformer to the A.C. socket.
 - * Charging time : 4 hours
 - After charging, plug out of the socket and disconnect the transformer.
- The specifications of the utilized unit must be absolutely observed.

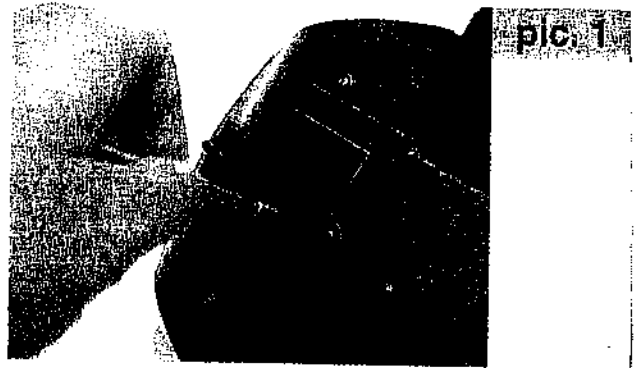


pic. 1




pic. 2

 
9.6V Ni-Cd battery pack

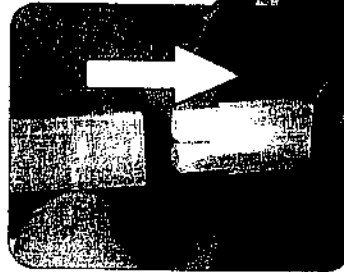

(Connect the plug)

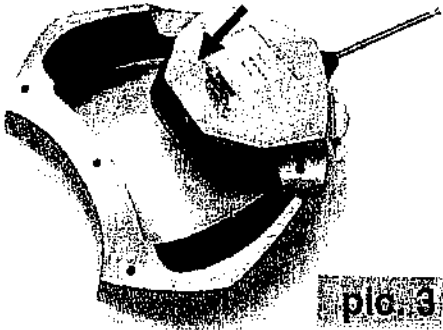 

pic. 3

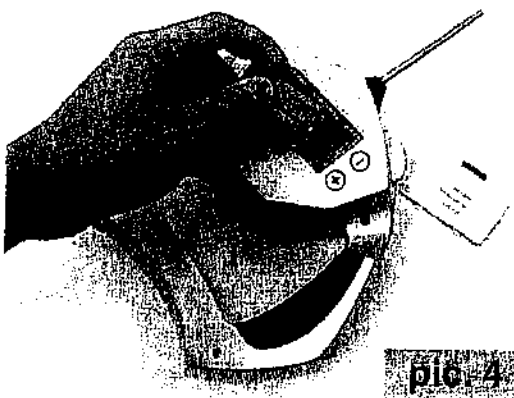 

pic. 4

Battery Installation -- Vehicle:

Make sure the power switch is on "OFF" position. Open the battery cover. (pic. 1). Install batteries with polarity as shown inside battery drawer. Connect the plug from inside the battery compartment to the plug of the battery drawer. (pic. 2) Put the battery cover back in position.

Battery Installation -- transmitter:

1. Remove the battery cover with a coin. (pic. 3)
2. Insert new 1 x "9V" size alkaline battery with "+" & "-" signs as shown below. (pic. 4)
3. Close the battery cover.

 
Running Your Turbo Twister Vehicle

Start to play :

- Start with a full charging battery.
- Switch on the Turbo Twister.
- Steer the Turbo Twister by adjusting the control levers of transmitter in different combinations to perform different actions.
- Press the 3 behavior buttons to changed the character with cool sound effect.
- After use, switch off the Turbo Twister.
- If the Turbo Twister is to be "parked" for a relatively long time, remove all batteries from the vehicle and the transmitter.

Driving Tips:


- Operate only on flat, smooth (but not slippery), dry surfaces and low pile carpet.
- Don't drive your Turbo Twister vehicle in sand or through water or snow, if your vehicle get wet, wipe with a towel and allow to dry completely.
- When your Turbo Twister vehicle runs erratically, the problem is usually the result of interference caused by high tension wires, radios, or other R/C cars running close by on the same frequency as yours. You may have to choose on alternate place to race.
- Do not operate near concrete walls which may disturb transmission.

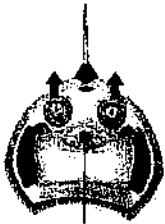


Turbo button



 
Press the Turbo mode button for turbo speed performance.

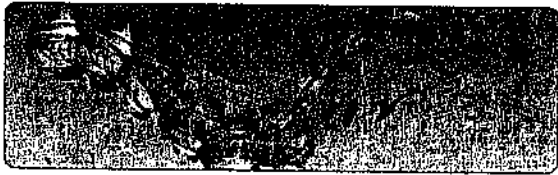

 Press the Shark mode button for realistic shark movement.

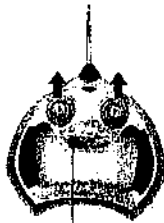

Shark button

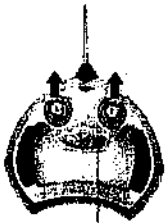 

Reptile button



Press the Reptile mode button for slow stunt action.

Left Lever	Right Lever	Action
↑	↑	↑
↓	↓	↓
↘	↑	↶
↑	↘	↷
↘	↓	↵
↓	↘	↷
↑	↓	↻
↓	↑	↻

High Performance
Radio Control
Cyber Stunt
Vehicle

