# 

Instruction Manual

EI-178

CHOKING HAZARD - Small parts. Not for Children under 3 years.

#### Contents:

- X-Swing'r Vehicle
- Transmitter • Removable battery drawer • Front wheel drive for 6 x "AA" size batteries • Light patterns
- Instruction manual

#### Main Features:

- Full function X-Swing'r Vehicle with stunt action
- Rear wheel swing for changing the direction

Safety Precautions:

Parents, this toy is recommended for children 5 years and older. To ensure that your child's play is both safe and fun, please review the operating instructions with your children. If toy in the presence of children under 5 years of age, adult supervision is

recommended.

DO NOT pick up moving vehicle

Keep hands, hair and loose clothing away from the tires and the wheel hubs when power switch is turned ON.

DO NOT operate your vehicle on street. Avoid hitting people, pets or home furnishings.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's

#### Cautions:

- · Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- · Rechargeable batteries are only to be charged under adult supervision.
- · Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- · Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

#### Care and Maintenance:

- · Always remove batteries from the toy when it is not being used for a long period of time.
- · Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

#### Note:

- · Parental guidance is recommended when installing or replacing batteries.
- · New and alkaline batteries are recommended to use in this toy to obtain best and maximum
- · You are advised to replace with new batteries as soon as the function becomes impaired.
- · Interference will cause loss of control or uncontrolled running of vehicle if used in vicinity of cordless telephones, baby monitors, electronic devices or other radio controlled devices.
- To race 2 vehicles at the same time, each must have a separate frequency. One with 27MHz. and the other with 49MHz, if both have the same frequency, their signals will interfere with each other.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the manufacturer's instructions while operating the product.

Power Supply


DC 9V 0.45W 1 x 9V / BLF22 / 6AM6 Requires 1 x "9V" size alkaline battery

8 x 1.5V AA / LR6 / AM3 Requires 6 x 1.5V "AA" size alkaline batteries (not included)

or 9.6V rechargeable battery pack (not included)

Silverlit Toys (U.S.A.) Inc. P.O. Box 90608. City of Industry, CA 91715-0608 ©2002 Silverlit Toys Manufactory Limited, All rights reserved.

## Real Body Twisting Action to Swing Body for Turning Action

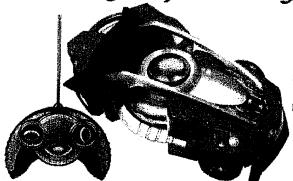

Streamline Design With Swing Body

Breakthrough Mechanism For Turning Actions

Amazing Left & Right
Swinging Actions

F Eye-Catching Light Effects

#### **FCC Statements**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions I)This device may not cause harmful Interference, and

2) This device must accept any interference received, including interference that may cause undestred operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generales, uses and can radiate radio frequency energy and. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


Recrient or relocate the receiving antenna.

increase the separation between the equipment and receiver,


Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

Consult the dealer or an experienced radio/TV technician for help.

#### **Index to Parts**

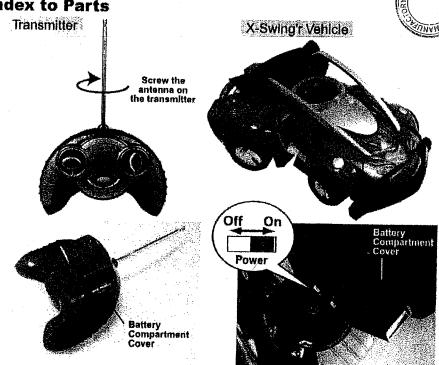



#### **Getting Started**

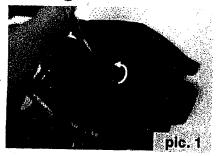



#### Batteries:

- Your X-Swing'r vehicle is powered by 6 x 1.5V "AA" size alkaline batteries or 9.6V rechargeable battery pack.
- Your transmitter is powered by 1 x 9V size alkaline battery.

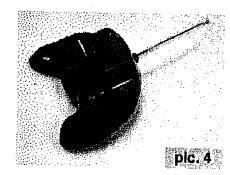

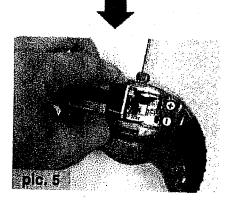

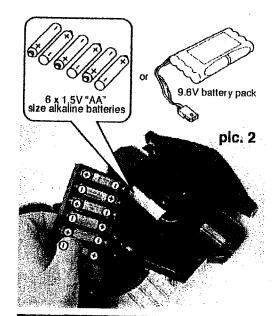

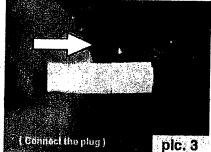

#### Battery Installation -- Vehicle:

Make sure the power switch is on "OFF" position.

- Use a phillips head screwdriver to loosen the screw (turn counter clockwise) on the battery compartment cover. (pic.1)
- 2.Insert new "AA" size alkaline batteries with "+" & "-" signs as shown inside the battery drawer. (pic. 2)
- Connect the plug from Inside the battery compartment to the plug of the battery drawer. (plc. 3)
- 4.Close the battery compartment cover use a phillips head screwdriver.

#### Battery Installation - Transmitter:

- 1.Remove the battery compartment cover with a coln. (pic. 4)
- 2.Insert new "9V" size alkaline battery with "+" & "-" signs as shown inside the battery compartment. (plc. 5)
- 3.Put the battery compartment cover back in position.

## **Driving Your X-Swing'r Vehicle**


#### Start to play:

- · Switch on the X-Swing'r vehicle.
- Steer the X-Swing'r vehicle by adjusting the control levers of transmitter in different combinations to perform different actions.
- · Press the "Light" button to turn on the light.
- For best results, hold antenna up, not pointed down toward X-Swing'r vehicle.
- · After use, switch off the X-Swing'r vehicle.
- If the X-Swing'r vehicle is to be "parked" for a relatively long time, remove all batteries from the vehicle and the transmitter.

Les Lever	Right Lover	Action	24
分		<b>†</b>	Į
û		<b>↓</b>	QE
企	<b>⇔</b>	ጎ	O.
企	合	<b>C</b>	Ĭ
Û	4	J	
Û	分	Ĺ,	I



- Operate only on flat, smooth (but not slippery), dry surfaces and low pile carpet.
- Don't drive your X-Swing'r vehicle in send or through water or snow, if your vehicle get wet, wipe with a towel and allow to dry completely.
- When your X-Swing'r vehicle runs erratically, the problem is usually the result of interference caused by high tension wires, radios, or other R/C cars running close by on the same frequency as yours. You may have to choose an alternate place to race.
- Do not operate near concrete walls which may disturb transmission.

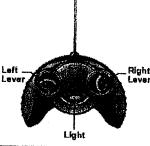







## **Trouble Shooting:**

<b>J</b>		WANTE S	
Symptom	Cause	Gerregion	
Vehicle does not react, or react poorly to operation by transmitter.	High-frequency interference occurred near to high-voltage lines, trensformers and some types of building.     In sleep mode	Avoid these if possible, or choose another place to operate the vehicle.     Push ON/OFF switch once to start the play.	
Loss of control	Another radio control vehicle using the same frequency is operated near your vehicle.     Out of the control range of distance.	Race against other vehicles using different frequencies.     Move to another place where without radio frequency interference from another device.	
Vehicle runs slowly or does not run.	Loose battery connection     Main power switch is not in "ON"     position.     Batteries are not placed in     compartment correctly.     Batteries are exhausted.	- Check battery connection Switch on the power Check the bettery polarity Replace all old batteries with new ones.	

Hints: This X-Swing'r vehicle will be automatically enter into sleep mode after 5 minutes when not in use. To turn it on again , simply push the ON/OFF switch once to start the play.