 
 


Switch "ON" Power



Radio Control Play

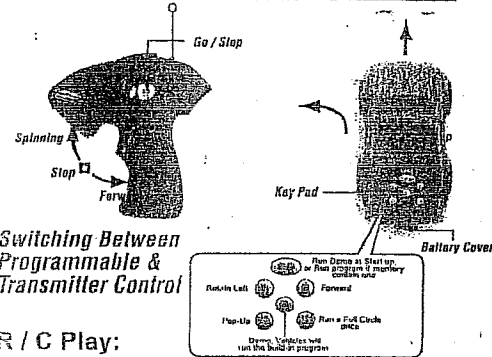 


Switching Between Programmable & Transmitter Control


R / C Play:

- * Pull the trigger lever on transmitter backward, vehicle will go forward.
- * Push the trigger lever on transmitter forward, vehicle will spin left.
- * Press the GO/STOP button on transmitter, can run or stop programming actions.
- * Radio control signal can interrupt the programming action, i.e. the remote signal will have the priority

Players can switch over the programmed actions (If program is available) and steering actions (If adjusting the control levers of the transmitter) anytime they like.

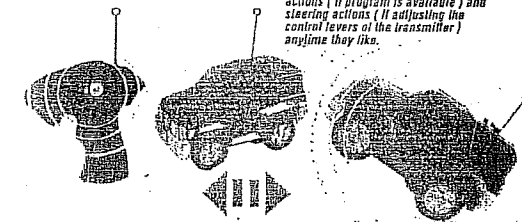

Stop / Interrupt Program

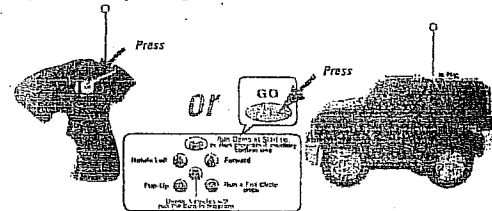 

Drive the Car in Programming


Control Key Description:

KEY	Function Description
	Demo, Vehicles will run the built-in program
	Forward
	Pop-Up
	Rotate Left
	Run a Full Circle once
	Run Demo at Start up, or Run program if memory contain one

Programmable Play:

1. Run Demo
Slide main power to "OFF" and then "ON" again + on Vehicle or Transmitter.
Press again to stop Demo.
2. Programming
Press action key to input actions (Press action key once to input one step of action).
Repeat to continue input.
Total programming steps can be up to 32 steps in one run including Demo.
Press to run the programmed action.

 Example:

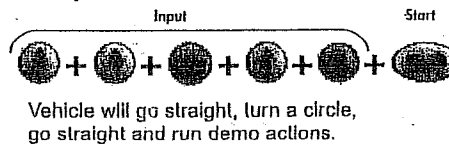

Trouble Shooting :

SYMPTOM	PROBLEM CAUSE	CORRECTION
Vehicle runs slowly or does not run.	<ul style="list-style-type: none"> • Loose battery connection or main switch not in the "ON" position. • Batteries not placed in compartment correctly. • Batteries are exhausted. 	<ul style="list-style-type: none"> • Check battery connector and vehicle main switch. • Check that the batteries are put in compartment correctly following "+" & "-" signs • Replace all with new "AAA" size batteries.
Vehicle doesn't work after going through water.	<ul style="list-style-type: none"> • Water in electronics area. 	<ul style="list-style-type: none"> • Vehicle will take several hours to dry.
Error sound during programming.	<ul style="list-style-type: none"> • Program Actions entered exceed more than 32 steps 	<ul style="list-style-type: none"> • Key-In no more than 32 stops
The car does not receive any command operations	<ul style="list-style-type: none"> • Batteries of the vehicle are running low or exhausted. 	<ul style="list-style-type: none"> • Replace all 3 "AAA" size new batteries.
Loss of control	<ul style="list-style-type: none"> • Another radio controlled vehicle using the same frequency is operated near this vehicle. 	<ul style="list-style-type: none"> • Move to another area, away from radio frequency interference from another device.

Power Supply:

Battery requirement for Transmitter:
 Power Supply : DC 9V 0.45W
 Rating : 1 x 9V / 6LF22 / 6AM6
 Battery : Requires 1 x "9V" size alkaline battery (not included)

Battery requirement for Vehicle:
 Power Supply : DC 4.5V 4W
 Rating : 3 x 1.5V "AAA" LR03 / AM4
 Batteries : Requires 3 x 1.5V "AAA" size alkaline batteries (not included)

CONTENT:

- * R/C Turbo Z Vehicle
- * Transmitter
- * Battery Drawer (for 3 AAA batteries)
- * Instruction Manual

KEY FEATURES:

- * Radio control for forward & turn.
- * Programmable, up to 32 steps in one run including Demos.
- * Radio control supersedes programming actions.

FCC Statements :

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
 1) This device may not cause harmful interference, and
 2) This device must accept any interference received, including interference that may cause undesired operation.
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 • Reorient or relocate the receiving antenna.
 • Increase the separation between the equipment and receiver.
 • Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
 • Consult the dealer or an experienced radio/TV technician for help.

This product is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC.



WARNING:
 CHOKING HAZARD - Small parts.
 Not for Children under 3 years.

Silverlit

 
Silverlit Toys (USA) Inc. 17800 Castleton Street, Suite #463, City of Industry, CA 91746, U.S.A. Tel: 1-800-707-1159
 ©2004 Silverlit Toys Manufacturing Limited. All rights reserved.

TURBO 2 in 1 RC-PRO


Radio Control Program Control
Radio Control + Program Control

Battery Installation


Vehicle Battery Installation

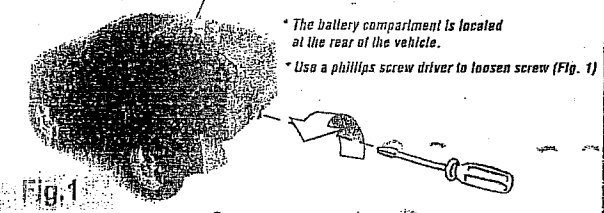

 - The battery compartment is located at the rear of the vehicle.
- Use a Phillips screw driver to loosen screw (Fig. 1)

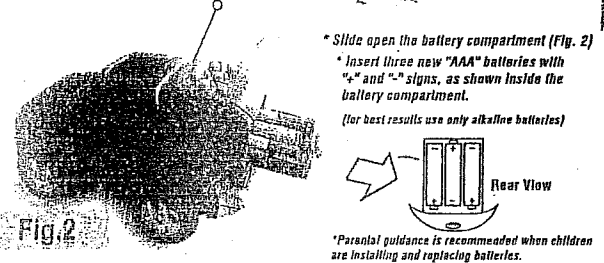

 - Slide open the battery compartment (Fig. 2)
- Insert three new "AAA" batteries with "+" and "-" signs, as shown inside the battery compartment.
- (for best results use only alkaline batteries)



*Parental guidance is recommended when children are installing and replacing batteries.

Cautions:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Note:

- Parental guidance is recommended when installing or replacing batteries.
- New and alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
- You are advised to replace with new batteries as soon as the function becomes impaired.
- Interference will cause loss of control or uncontrolled running of vehicle if used in vicinity of cordless telephones, baby monitors, electronic devices or other radio controlled devices.
- To race 2 vehicles at the same time, each must have a separate frequency. One with 27MHz, and the other with 49MHz. If both have the same frequency, their signals will interfere with each other.
- Users should keep and retain this information for future reference.
- Users should keep strict accordance with the manufacturer's instructions while operating the product.

Safety Precautions:

- Parents, this toy is recommended for children 5 years and older. To ensure that your child's play is both safe and fun, please review the operating instructions with your children. If toy in the presence of children under 5 years of age, adult supervision is recommended.
- DO NOT pick up moving vehicle
- Keep hands, hair and loose clothing away from the tires and the wheel hubs when power switch is turned ON.
- Remove battery pack and transmitter battery when not in use.
- DO NOT operate your vehicle on street. Avoid hitting people, pets or home furnishings.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time.
- Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Transmitter Battery Installation

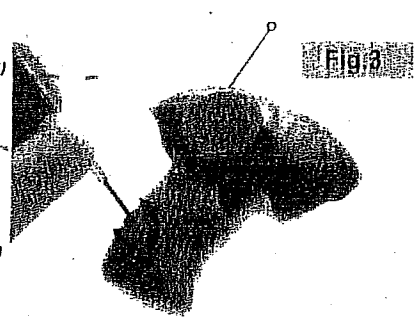 


Fig. 3

1. Use a Phillips head screwdriver to loosen the screw (turn counter clockwise) on the battery compartment cover. (Fig. 3)

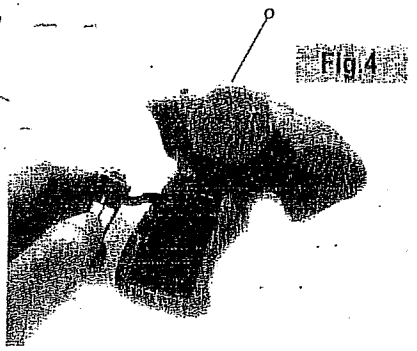 


Fig. 4

2. Insert new "9V" batteries with "+" & "-" signs as shown inside the battery compartment. (Fig. 4)

 
Radio Control

- ✓ Wireless direct driving fun
- ✓ R/C control interrupts program actions

Program Control

- ✓ 32 distinct program actions
- ✓ Endless programming possibilities

(Please Read Thoroughly Before Operating Your Vehicle)

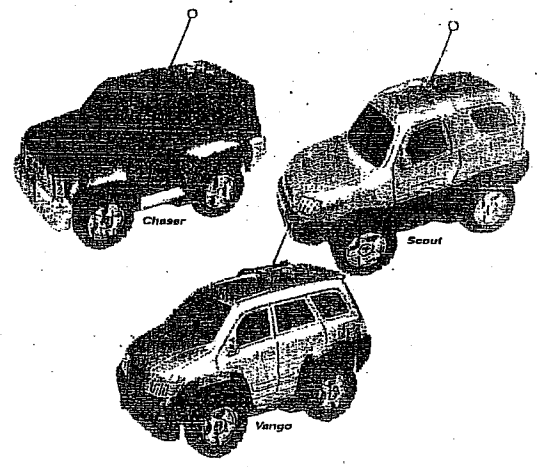

Parts Description

