 



ENGLISH

Driving the motorbike

1. Set motorbike ON/OFF switch to "ON".
2. Drive the motorbike forward pressing the throttle button.
3. Spin the motorbike or steer the motorbike to the left by pressing the rotate button.

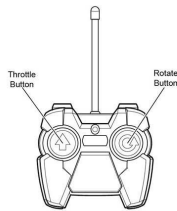

 Perform a basic wheelie by lifting the motorcycle up manually while the side car is still on the ground.




Driving Tips:

1. Don't touch (hold) the antenna of transmitter.
2. Operate only on flat, smooth (but not slippery), dry surfaces and low pile carpet. Hair, carpet or dirt can affect the operation of the motorbike.
3. For best performance, hold the antenna up, do not point it down, towards the vehicle.
4. Don't drive your motorbike in sand or through water or snow, if your motorbike get wet, wipe with a towel and allow to dry completely.
5. When your Motorbike runs erratically, the problem is usually the result of interference caused by high tension wires, radios or other R/C toys running close by on the same frequency as yours. You may have to choose an alternate place to race.
6. Do not operate near concrete walls which may disturb transmission.

Trouble Shooting:

Symptom	Cause	Correction
Motorbike does not react, or react poorly by operation by transmitter.	- High-frequency interference occurred near to high-voltage lines, transformers and some types of building. - Weak power of transmitter.	- Avoid these if possible, or choose another place to operate the motorbike. - Change new battery in transmitter.
Loss of control.	- Another radio control Motorbike using the same frequency and channel is operated near your motorbike. - Out of the control range of distance.	- Move to another place where without radio frequency interference from another device. - Ensure the antenna is fully extended. The vehicle has a transmission range of 12 meters (40 feet) in open space.
Motorbike runs slowly erratically or does not run.	- Loose battery connection. - Main power switch is not in "ON" position. - Batteries are not installed correctly. - Hair, carpet or dirt might be trapped between wheels. - Weak batteries.	- Check battery connection. - Switch on the power. - Check the battery polarity. - Carefully remove such foreign materials. - Replace them with new ones.

 ENGLISH

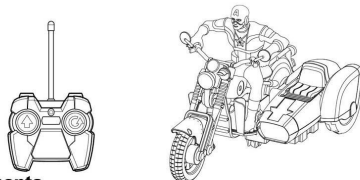


FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and
2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 Part Identification

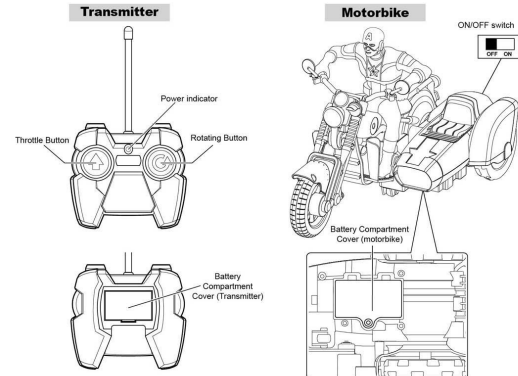

ENGLISH

 
ENGLISH



EI-3305
Instruction Manual
For ages 5+

Delivery contents

- Motorbike
- Transmitter
- Instruction manual



Safety Precautions:

- Parents: Please read the operating instructions carefully with your children prior to the first use.
 - Stop the vehicle through the transmitter before picking it up.
 - Keep hands, hair and loose clothing away from the moving parts, e.g. tires and the wheel hubs, when toy is switched on.
 - Do not operate the remote controlled vehicle on streets. Avoid hitting people, pets or home furnishings.
- Warning:** Conversion or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

The crossed-out button symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. Tell your children to dispose of batteries properly by taking them to the local collecting points. This way batteries are recycled safely.

WEEE
When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in a general waste.

Battery warnings:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the transmitter.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove batteries from the toy which it is not being used for a long period of time.

WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

TIPS

New alkaline batteries are recommended to use in this toy to obtain best and maximum performance.

Care and Maintenance:

- Wipe the toy gently with a clean cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Notes:

- Keep this instruction manual for future reference.
- Users should keep strict accordance with the instruction manual while operation the product.
- Under the environment with electrostatic discharge, the toy may malfunction and require user to reset the toy.

Battery requirement for Transmitter:

- Power Supply : 9V
- Rating : DC 9 V ; 0.27 W
- Battery : 1 x 9 V 6F22(RB)1 (not included)

Battery requirement for Motorbike:

- Power Supply : 4 x 1.5 V
- Rating : DC 6 V ; 7.8 W
- Batteries : 4 x 1.5 V "AA" LR6/AM3 (not included)

Silverlit® SLT (USA) Inc.
Suite 220, 21660 East Copley Drive, Diamond Bar, CA, 91765, U.S.A. Tel: (877) 502-8897
© 2011 Silverlit. All rights reserved. Visit us at: www.silverlit.com

 
 
MARVEL Captain America: The First Avenger: the Movie © 2011 MVL Film Finance LLC. Marvel, Captain America, all related character names and their distinctive likenesses. TM & © 2011 Marvel Entertainment, LLC and its subsidiaries. All rights reserved.

Battery installation:

- The motorbike is powered by 4 x 1.5 V "AA" size batteries.
- The transmitter is powered by 1 x 9 V battery.



Transmitter

1. Remove the battery compartment cover with a coin. (fig. 1)
2. Insert a new "9V" battery with correct polarity, as shown inside battery compartment (fig. 2)
3. Put the battery compartment cover back in position.

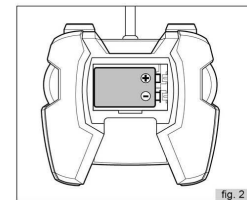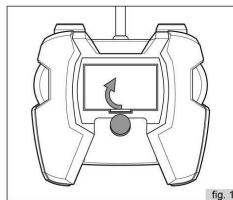

Motorbike

  - Make sure the power switch is on "OFF" position.
1. Use a screwdriver to loosen screw on the battery case in anti-clockwise. (fig. 3)
 2. Insert 4 "AA" size batteries with correct polarity, as shown inside battery compartment. (fig. 4)
 3. Close the battery compartment.

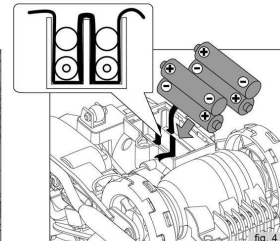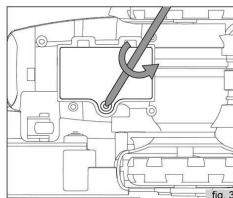

ENGLISH