
R/C Turbo Amphibian

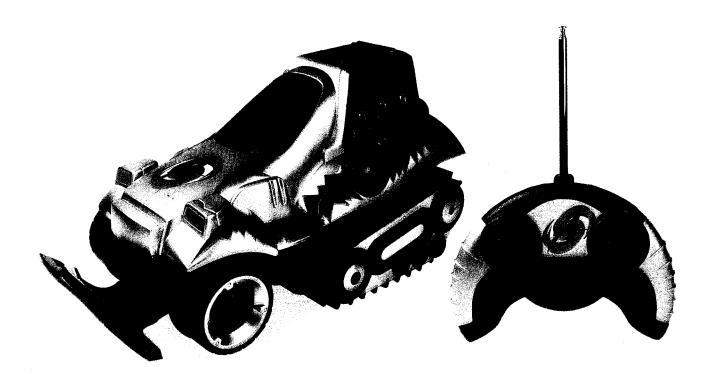



Maneuver in rain & mud



Power to go up slope



Navigate on sea



Easy To Clean







- Full function radio control in both land and sea
- Awesome climbing power and super transforming track tires that takes the vehicle from the rough terrain to splashing into the water
- Futuristic styling for hours of fun on and off the water
- · Water resistance vehicle

/ehicle:

9.6V rechargeable battery pack required (included)

Transmitter: 1 x "9V" size battery required (included)




Pack include AC charger.




For ages 5 and up

Aqua Terrain

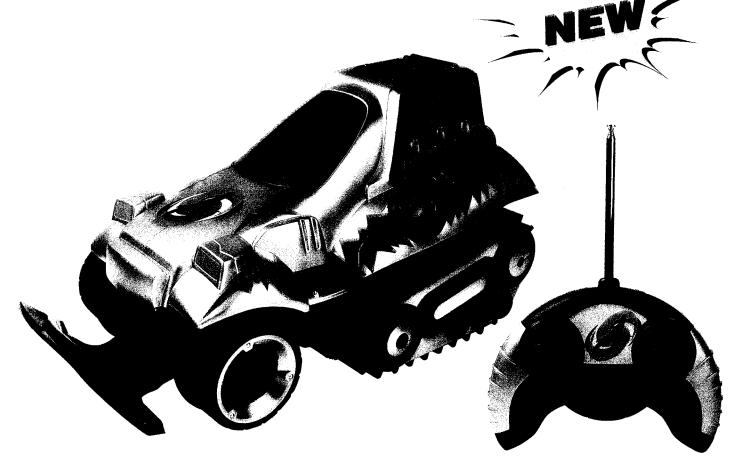



Maneuver in rain & mud

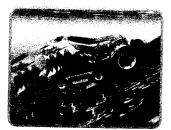

Power to climb a hill




Navigate on sea



Easy To Clean

This full function R/C vehicle is Ready to Run with speed and action. It has awesome climbing power and the super transforming track tires that takes your vehicle from the rough terrain to splashing into the water. Futuristic styling for hours of fun on and off the water. Available in two different R/C frequencies allows you to race them against each other for added fun. Vehicle requires 1 x 9.6V rechargeable battery pack and charger(all included). Transmitter requires 1 x 9V battery (included). For ages 5 years & up.

Item # 82101 Std. Pack: 2

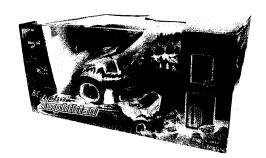



EI:284 Instruction Manual

CONTENT:

- R/C Turbo Amphibian
- 9V Battery

Transmitter

- Charger
- 9.6V Ni-Cd Battery Pack Instruction Manual

KEY FEATURES:

- Land & Water playing fun
- Radio control for full function
- Vehicle is water resistance

Safety Precautions:

- Parents, this toy is recommended for children 5 years and older. To ensure that your child's play is both safe and fun, please review
 the operating instructions with your children. If toy in the presence of children under 5 years of age, adult supervision is
 recommended.
- DO NOT pick up moving vehicle
- Keep hands, hair and loose clothing away from the tires and the wheel hubs when power switch is turned ON
- DO NOT operate your vehicle on street. Ávoid hitting people, pets or home furnishings.

 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cautions:

- · Non-rechargeable batteries are not to be recharged.
- · Rechargeable batteries are to be removed from the toy before being charged.
- · Rechargeable batteries are only to be charged under adult supervision.
- · Different types of batteries or new and used batteries are not to be mixed.
- · Only batteries of the same or equivalent type as recommended are to be used
- · Batteries are to be inserted with correct polarity.
- · Exhausted batteries are to be removed from the toy.
- . The supply terminals are not to be short-circuited.

Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time.
- · Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct sunlight and/or direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Note:

- Parental guidance is recommended when installing or replacing batteries.
- New and alkaline batteries are recommended to use in this toy to obtain best and maximum performance.
- You are advised to replace with new batteries as soon as the function becomes impaired.
- Interference will cause loss of control or uncontrolled running of vehicle if used in vicinity of cordless telephones, baby monitors, electronic devices or other radio controlled devices.
- To race 2 vehicles at the same time, each must have a separate frequency. One with 27MHz, and the other with 49MHz, If both have the same frequency, their signals will interfere with each other.
- Users should keep and retain this information for future reference.
- · Users should keep strict accordance with the manufacturer's instructions while operating the product.

Special Note to Adults:

- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the charger until the damage has been repaired.
- This toy is not intended for children under 3 years old. The charger is not a toy.
- This toy must only be used with the recommended charger.

Battery requirement for Transmitter

9V

 Battery requirement for Vehicle:



Power Supply: ===

Rating : DC 9V 25W

Batteries : 9.6V Ni-Cd b

Batteries : 9.6V Ni-Cd battery pack Requires 9.6V Ni-Cd battery pack & charger (included)

(included)



Silverlit Toys (U.S.A.) Inc. 17800 Castleton Street, Suite 463, City of Industry, CA 91748, U.S.A. ©2003 Silverlit Toys Manufactory Limited. All rights reserved. Tel: 1-800-707-1159

"This product is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC."

△ WARNING:

CHOKING HAZARD – Small parts. Not for Children under 3 years.



FCC Statements


This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1)This device may not cause harmful interference, and
- 2)This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- · Consult the dealer or an experienced radio/TV technician for help.

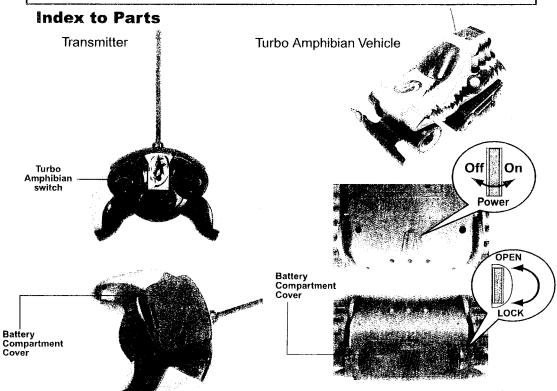

Getting Started

Batteries:

- · Your Turbo Amphibian vehicle is powered by 9.6V Ni-Cd battery pack.
- · Your transmitter is powered by 1 x 9V size

Battery Installation -- Transmitter:


- 1.Remove the battery compartment cover with a coin. (pic.1)
- 2.Insert new "9V" size battery with "+" & "-" signs as shown inside the battery compartment. (pic.2)
- 3.Put the battery compartment cover back in position.


Charging Battery Pack:

The 9.6V battery pack is not charged. It has to be charged before being used for the first time, please proceed as follows:

- · Rechargeable battery pack are charged under adult supervision.
- · Collect the plug of the battery pack to the plug of the charger, then plug the charger to the A.C. socket.
- · Battery pack must be charged for 4 hours.
- · After charging, plug out of the socket and disconnect the charger. The specifications

of the utilized unit must be absolutely observed. Warning: In order to obtain the battery maximum performance. Do not charge the battery pack over 6 hours.

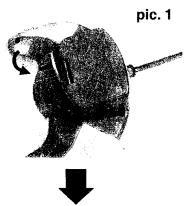

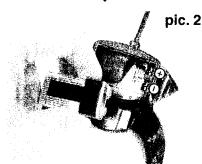

Battery Installation -- Vehicle:


Make sure the power switch is on "OFF" position. (pic. 3)



Make the "LOCK" turn to open position, then take battery compartment cover. (pic. 4)



- 1.Insert charged battery pack inside the battery compartment. (pic. 5)
- 2. Connect the plug from inside the battery compartment to the plug of the battery compartment. (pic. 6)
- 3. Close the battery compartment cover and turn the lock to "LOCK" position.

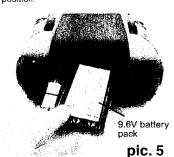



pic. 6

Driving Your Turbo Amphibian Vehicle

Start to play:

The Turbo Amphibian can be played on both land and

- · Switch on the Turbo Amphibian vehicle.
- · Steer the Turbo Amphibian vehicle by adjusting the control levers of transmitter in different combinations to perform different actions.
- · For best results, keep antenna up,do not point down toward Turbo Amphibian vehicle.
- · After use, switch off the Turbo Amphibian vehicle.
- · If the Turbo Amphibian vehicle is to be "parked" for a relatively long time, remove all batteries from the vehicle and the transmitter.

DRIVING ON LAND

Left Lever	Right Lever	Action
仓	仓	f
Û	Û	14
	Û	7
企		r
	Û	J
Û		L.
Û	Ç	0
Û	企	U



Action

DRIVING ON WATER

介

Left Lever Right Lever

Driving Tips:

recommended.

alternate place to race.

completely.

⚠ WARNING:

Operate only on flat, smooth (but not slippery), dry

surfaces and low pile carpet or operate only in

clam, clear water. Pools and shallow ponds are

· After each use, wipe with a towel and allow to dry

interference caused by high tension wires, radios,

or other R/C cars running close by on the same

frequency as yours. You may have to choose an

· Do not operate near concrete walls which may

When your R/C Turbo Amphibian vehicle runs

erratically, the problem is usually the result of

Never allow young children to play in or around water without adult supervision.

MARNING:

Do not run your vehicle far from bank, otherwise, you may lost it.

Trouble Shooting:

Symptom	Cause	Correction
Vehicle does not react, or reacts poorly to operation by transmitter.	High-frequency interference occurred near to high-voltage lines, transformers and some types of building.	Avoid these if possible, or choose another place to operate the vehicle.
Loss of control	Another radio control vehicle using the same frequency is operated near your vehicle. Out of the control range of distance.	Race against other vehicles using different frequencies. Move to another area without radio frequency interference from another device.
Vehicle runs slowly or does not run.	Loose battery connection Main power switch is not in "ON" position. Batteries are not placed in compartment correctly. Batteries are exhausted.	Check battery connection. Switch on the power. Check the battery polarity. Replace all old batteries with new ones.