

PICASSO

TABLET AND PEN COMBO



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Picasso Tablet

Quick Start Guide

This is a quick start guide only.
Ceci est un guide de démarrage rapide seulement.
Dies ist eine Kurzanleitung nur.
Questa è solo una guida rapida.
Esta es sólo una guía de inicio rápido.

For full user manual, please visit
Pour le mode d'emploi complet , s'il vous plaît visitez
Für vollständige Bedienungsanleitung finden Sie unter
Per manuale utente completo , visitare il sito
El manual de usuario completo, visitar
www.simbans.com/manuals

Language/ La langue / Sprache / Lingua / Idioma:

English ----- P.3 - 7
Français ----- P.8 - 12
Deutsche ----- P.13 - 17
Italiano ----- P. 18 - 22
Español ----- P. 13 - 27

Read me first

Please read this manual before operating your tablet, and keep it for future reference.

The descriptions in this manual are based on the default settings.


Images and screenshots used in this manual may differ from the actual product.

Available features and additional services may vary by device, software or service provider.

Our company is not liable for performance issues caused by third-party applications.

 
English




Button	Description
1. Back Camera	5 Megapixel camera to take photos
2. Power key 	Press and hold the power button for a few seconds to turn on the tablet. To turn off the tablet, press and hold the power button for a few seconds, and then select Power Off. When the tablet is on, press the power button once to lock/ unlock the screen.
3. Volume Key	Press to increase or decrease the volume
4. Reset	A very tiny hole. If your tablet freezes, please use a paperclip to gently press inside this hole to reset.
5. Type-C	Charge your tablet or connect your tablet to computer for file/ songs transfer
6. HDMI	Connect your tablet to laptop or TV with HDMI cable
7. Headphone	Slot for earphones plug-in
8. Mic	Built-in microphone captures sound and voice when it is used with an application capable of handling audio
9. SD Card	Slot for MicroSD card expansion (supports up to 32 GB)

Chargers


US

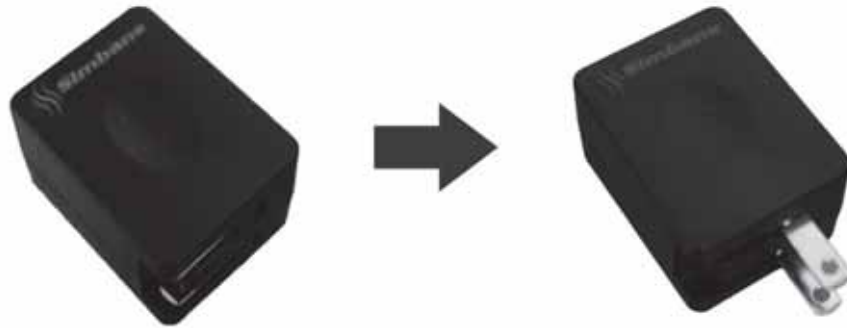

Europe

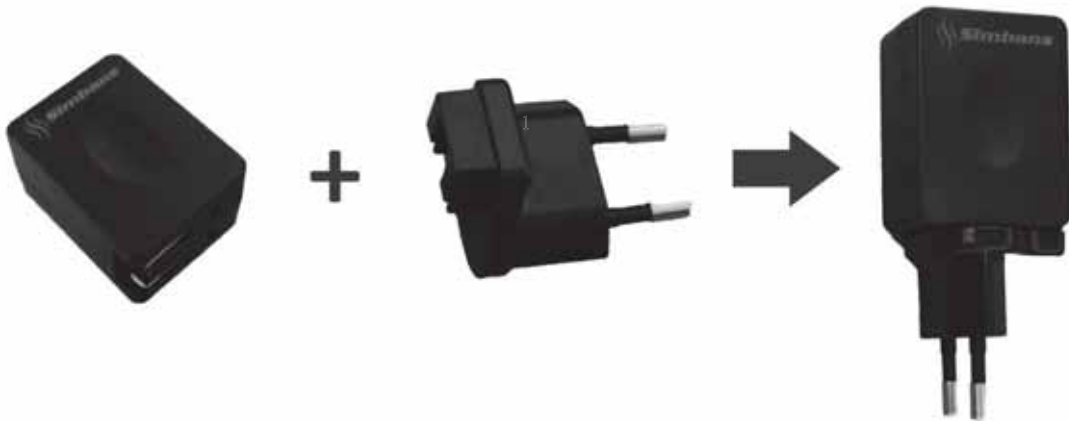 

UK

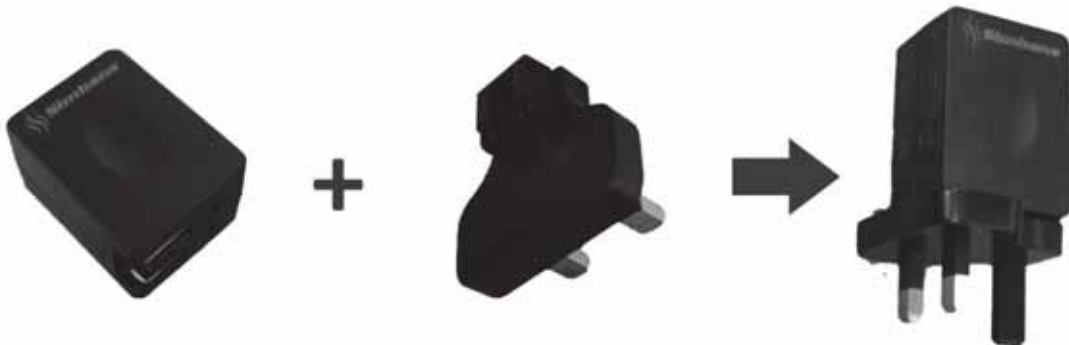 

1 Charging



2 Power On



 
3 File Transfer



4 Insert MicroSD card
(not included)



Select Drag & Move

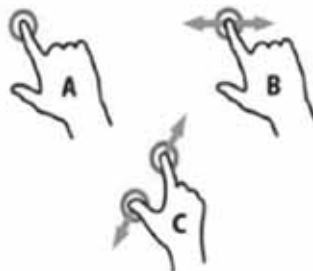

Zoom

Getting Started

1. Charge the Tablet

The Tablet comes with a built-in rechargeable lithium-polymer battery. It is recommended to fully charge the battery before first use.

- To charge the Tablet, plug the charger to an electrical socket with the other end of the adapter inserted to the charging slot on the Tablet (Refer to Step 1 on the previous page).
- You may continue to use the Tablet while it is charging. You may stop charging any time even when it is not 100% charged.
- The battery charge status will be indicated in the middle of the screen.



- Disconnect the power adapter when the Tablet is fully charged.

Note: When the Tablet is connected to a computer via the USB cable, the battery will charge via the USB socket, but at a much slower rate than via the DC 5V power adapter.

- ▲ Do not use any other power adapters than the one supplied. Using an incompatible power adapter could damage the tablet and poses the potential risk of fire.

2. Turn on the Tablet

- Press the power key for 5 seconds.
- The Simbans logo will show up in the middle of the screen, followed by the Android logo.
- Wait for about 30-60 seconds for Android system to load.
- You will then see the welcome page.

3. Touch Screen Actions

You can control all the functions of the Tablet by using the touch screen in combination with the three touch keys located at the bottom of the screen. To control the Tablet, use your finger to select the icons, buttons, menu, on-screen keyboard, and other items displayed on the screen.

You can perform the following actions with your fingers:

- A. Touch an option to select it
- B. "Touch and drag" to move items or to scroll through lists by touching and holding, then gliding your finger over the screen.
- C. Use a finger and thumb to "pinch zoom" on-screen items such as photographs and web pages.

