

Kodak

PIXPRO S-1

Compact System Camera

User Manual



Declaration of Conformity

Responsible Party: JK Imaging Ltd.

Address: 1411 W. 190th Street, Suite 550, Gardena, CA 90248, USA

Company Website: www.kodakcamera.jkiltld.com

INDUSTRY CANADA

This device complies with Canadian RSS-210.

This device complies with Industry Canada license-exempt RSS standard (s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement:

The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations:

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

For Customers in Europe



This symbol [crossed-out wheel bin WEEE Annex IV] indicates separate collection of electrical waste and electronic equipment in the European countries. Please do not throw the equipment into domestic refuse. Please use the return and collection systems available in your country for proper, safe disposal of this product.



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" marked cameras are intended for sales in Europe.

Hereby, [AOF Imaging Technology Co., Ltd.], declares that this [Wireless DSC] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

- EN 60950-1: 2006+A11:2009 +A1:2010 +A12:2011

Safety of Information Technology Equipment

- EN 62311: 2008/ Article 3(1) (a) and Article 2 2006/95/EC)

Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz-300 GHz) (IEC 62311:2007 (Modified))

- EN 300 328 V1.7.1: 2006

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive.

- EN 301 489-1 V1.9.2: 2008

Electromagnetic compatibility and Radio Spectrum Matters (ERM); Electro Magnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.

- EN 301 489-17 V2.2.1: 2012

Electromagnetic compatibility and Radio spectrum Matters (ERM); Electro Magnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment.

For Customers in the U.S.A.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

About this Manual

Thank you for purchasing the KODAK PIXPRO digital interchangeable-lens camera. Please carefully read this manual and keep it well for future reference.

- JK Imaging Ltd. reserves all rights of this document. No part of this published manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form, by any means, without the prior written permission of JK Imaging Ltd..
- All trademarks mentioned in this manual are used for identification purposes only and are properties of their respective owners.
- This manual is to introduce you how to operate this KODAK PIXPRO digital interchangeable-lens camera. JK Imaging Ltd. has tried its utmost to ensure the correctness of all contents here, but reserves the right to modify. All of these contents are subject to change without prior notice.
- Throughout this manual, the following symbols are used to help you locate information quickly and easily:



Indicates useful information.



Indicates precautions are to be taken while operating the camera.

- In introducing you how to operate this camera, the following symbols may appear to facilitate your understanding:

[Button name]: When one button on the camera cannot be indicated by an icon, the symbol [] is used to indicate it.

[Item properties] : The optional properties in the camera interface are indicated by the symbol [] .

Safety notes for this camera

- Do not drop the camera or allow it to hit solid objects.
- Do not disassemble or repair this camera by yourself.
- To prevent the camera from being damaged by moisture, do not use or store the camera in very humid environments, such as in rain or near bodies of water.
- Do not use or store the camera in dusty places or on a beach to prevent dust or sand from entering the camera, causing possible damage to it.
- Do not use or store the camera in a hot environment or under direct sunlight.
- Do not use or store the camera near a powerful magnetic field, for example near a magnet or transformer.
- Turn the camera off, remove the battery and the memory card, and dry it within 24 hours if water accidentally comes in contact with the camera.
- When you take the camera from a cold place to a warmer environment, condensation may occur. Please wait for a reasonable period of time before you turn it on.
- Before you remove the battery and memory card, the camera should be turned off.
- In demounting the lens, the image sensor will be exposed. To avoid scuffing, please don't touch the image sensor.
- Do not place fingers in the bayonet of camera. As the components of image sensor are precise, failures or damages may be caused.
- In cleaning the camera body, please don't use corrosive cleaning agents or those with alcohol or organic solvent.
- Advise to use soft lens cloth to regularly clean the camera's body and lens mount.
- If this camera is not in use for a long time, please keep it in a dry and clean condition.
- Our company will not pay compensation for any failure of playback of pictures or videos caused by improper operation.

Safety notes for battery

- Please use the battery with the same type as the attached.
- Please use the attached charger to charge the battery.
- If the liquid leaking from the battery contacts with your skin, please immediately flush with water and seek medical treatment. If the liquid leaks into the camera, please contact the retailer.
- Please dispose the wasted battery in accordance with local (national or regional) regulations.
- To prevent the battery from being damaged, do not drop the battery or allow it to hit solid objects or to be scratched by the objects.
- Do not let the battery come in contact with metal objects (including coins) to avoid short circuiting, discharging, excessive heat, or possible leakage.
- Do not attempt to disassemble the battery.
- Do not expose the battery to water. Always keep the battery contacts dry.
- Do not heat the battery or throw it into a fire to avoid a possible explosion.
- Do not store the battery in a hot environment or in direct sunlight.
- If an overheating happens during charging or use, please immediately stop charging or using and then take out the battery with care in shutdown mode to wait it for cooling.
- If it is not used for a long time, please remove the battery for proper keeping.
- In a colder environment, the performance of the battery could be noticeably reduced.
- When you install the battery, install it according to the positive and negative markings on the battery compartment. Never force it into the battery compartment.

Safety notes for memory card

- We suggest buying only well-known, name brand memory cards to ensure peak performance.
- Format the memory card using the camera before you use it or insert a new one.
- Do not make the memory card fall off from high places or hit by heavy objects to prevent damaging it.
- Do not attempt to disassemble or repair the memory card.
- Do not expose the memory card to water. Always keep it dry.
- Do not remove the memory card when the camera is turned on. Otherwise, the memory card could be damaged.
- Do not directly edit the data on the memory card. Copy the data to your PC before you edit them.
- When the camera is stored for a long period of time, be sure to download your photos and remove the memory card. Store it in a dry environment.
- Do not modify the name of the files or folders of the memory card using your PC. Modifying the file names may cause the files to not be recognized on the camera or a possible error may occur.
- A photo taken with the camera will be stored in the folder that is automatically generated on the memory card. Do not store photos that are not taken using this camera in these folders as the pictures cannot be recognized during the playback.
- When you insert a memory card, make sure the notch of the card matches the markings on the top of the card slot.

Attentions for Use of Lens

- Remove dirt and dust on the front and rear lens caps before and after use.
- Wipe your lens using professional lens cleaning paper.
- Do not mount your lens at an angle to your camera body to avoid scratching the mount.
- To protect the lens surface, use the lens cap when you are not using the lens.
- Mount or remove your lens in a place with little dust.
- After the lens is removed from the camera, install the front and rear lens caps and place it with the bottom facing upwards to avoid scratches to the surface and contact.
- Be careful not to stain or damage the contact.
- Do not expose the camera lens to direct sunlight for long periods of time to avoid damage.
- Do not place the product where it can be reached by the infants and children to avoid injury.
- When you do not use your lens for a long period of time, store it in a dry and clean place.

Other Safety Notes

- Do not disconnect the power or turn the camera off during the update process. Doing so may cause incorrect data to be written and the camera may not power on later.
- Do not hang the neck strap of the camera around the neck of a child.
- When using your camera on an airplane, observe the relevant rules specified by the airline.
- Due to the limitations of manufacturing technology, the LCD screen may have a few dead or bright pixels. These pixels do no effect the quality or performance of the camera, photos or video.
- Do not expose the LCD screen to water. In a humid environment, only wipe it with a soft and dry cleaning cloth.
- If the LCD screen is damaged and the liquid crystal comes into contact with your skin, wipe your skin with a dry cloth immediately and rinse it with clean water. If liquid crystal comes into contact with your eyes, wash them with clean water at least for 15 minutes and seek immediate medical attention. If you accidentally swallow liquid crystal, rinse your mouth immediately and seek medical attention.

Before You Start	1
Safety Notes	6
Contents	10
Getting Ready.....	16
Accessories Included	16
Mounting Strap.....	17
Part Names	18
Description of Lens	20
Install / Remove Lens.....	21
Install the Flash	23
Rotatable LCD Screen	24
Installing Battery and Memory Card.....	25

Charging Battery	27
Turning Camera On and Off.....	28
Set your Language, Date/Time	29
Basic Operations	32
How to take pictures.....	32
Overview of the screen icons in photo shooting mode.....	33
Overview of the Screen Icons in Movie Mode.....	35
Mode Dial Description	36
Auto Scene.....	36
Program AE	37
Shutter priority	37
Aperture priority.....	37
Manual Mode	37
Scene Mode	38

Wi-Fi.....	44
CS Setting.....	51
Introduction on Functions of Buttons.....	53
Introduction of Functions of Timer/ Self-timer Button.....	53
Introduction of Functions of Lock Button.....	55
Introduction of Functions of Message Button.....	56
Introduction on Functions of Exposure Button	58
EV Value Setting.....	58
ISO Value.....	59
Shutter Speed Setting.....	59
Aperture Adjustment	60
Introduction on Functions of Quick Record Button.....	60
Introduction on Functions of OK Button	61
Metering Mode.....	62
AF Area.....	62
WB Mode	63

Focus Mode	65
Picture Effect	68
Flash Mode	69
OIS	70
WDR	71
Introduction on Functions of Menu Button	72
Fn Settings	73
Shoot Settings 1	75
Shoot Settings 2	80
Normal Settings	85
File & Firmware Settings	87
Viewing Photos and Videos	92
Description on Screen Icons under Playback Mode	93
Thumbnail View	94
Photos and Video Deletion	95
Introduction on Functions of Playback OK Menu	96

Rotate	96
Color	97
HDR.....	98
Touch-up.....	99
Resize.....	100
Introduction on Playback Menu.....	100
Continuous Capture Group Playback.....	107
Time-lapse Movie Playback	108
Animation panorama play	109
Slideshow.....	110
Using Zoom Playback (for still pictures only)	111
Connection Settings	112
Connection to a Computer	112
Connecting to a PictBridge Compatible Printer.....	114
Using the PictBridge Menu	116

 
Video System	120
Set Eye-Fi Card Connection Mode	121
Supported HDMI Connections	121
HDMI CEC Control.....	122
Smart Device APP Operating Method	128
Position Service Function.....	128
APP Home	130
Remote Viewfinder.....	130
Playback.....	135
About.....	145
Appendices.....	146
Camera Specifications	146
Prompt and warning messages.....	151
Troubleshooting	157

4


Getting Ready

Accessories Included


Your camera box should contain the camera model you purchased along with the following accessories. If anything is missing or appears to be damaged, please contact your retailer. (The battery chargers may be a little different in shape due to the difference of countries or regions this type of cameras are sold to, so please subject to the physical product.)

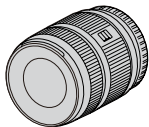


Interchangeable lens

 

 Camera cover (installed on the camera in purchasing)



 Front lens cap (installed on lens in purchasing)




Rear lens cap (installed on lens in purchasing)



Flash (P10)



 
Neck strap




Rechargeable
Li-ion battery



 USB cable




AC adapter

 

CD-ROM



 Camera manual



Lens manual

 


Warranty card





Service card


Mounting Strap

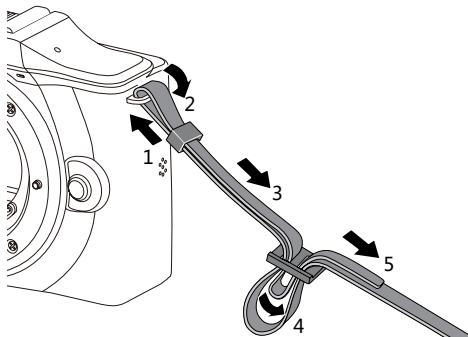

Part Names

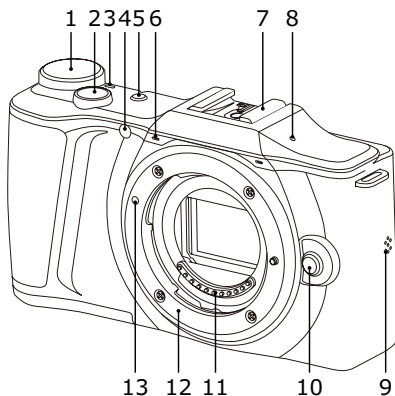 

 1. Mode Dial
2. Shutter Button
3. LED Indicator
4. AF Assist Beam / Self-timer Indicator Light
5. Power Button
6. Microphone
7. Hot Shoe
8. [] Wi-Fi Signal Indicator
9. Speaker
10. Lens Release Button
11. Contact
12. Lens Mount
13. Lens Mounting Sign

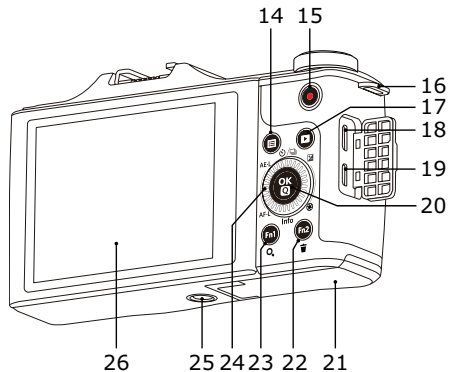

- 14. [] Menu Button
- 15. [] Fast Video Recording
- 16. Strap Lock
- 17. [] Playback Button
- 18. USB Interface
- 19. HDMI Interface
- 20. [] OK Button
- 21. Battery Cover
- 22. [**Fn2**] Custom Button 2
- 23. [**Fn1**] Custom Button 1
- 24. Jog Dial
 - [/] Timer / Self-timer Button (up)
 - [Info] Info Button (down)
 - [AE-L/AF-L] Lock Button (left)
 - [/] Exposure Button (right)
- 25. Tripod Fixing Screw Holes
- 26. LCD Screen

Rolling the jog dial can be for fast selection instead of pressing the direction button.

 
Description of Lens

Micro 4/3™-mount Lens

This lens is suitable for camera with a Micro 4/3-mount.




Take KODAK PIXPRO SZ ED 12-45mm F3.5-6.3 AF Lens as an example to introduce the use of the lens.

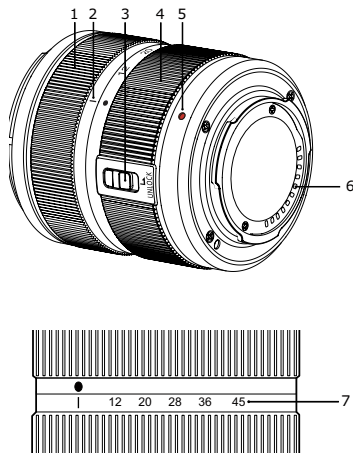


1	Focus ring
2	Zoom location mark
3	Lens back switch
4	Zoom ring
5	Lens mounting mark
6	Contact
7	Focus scales

 Install / Remove Lens

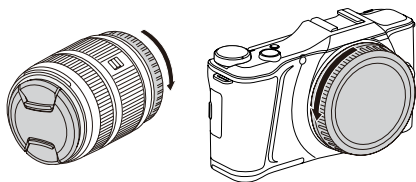


Install Lens

 1. Remove the rear lens cap and body cap.
2. Align the camera mounting mark with the lens mounting mark and rotate in the direction indicated by the arrow until you hear a click and the lens clicks into place.
3. Remove the front lens cap.

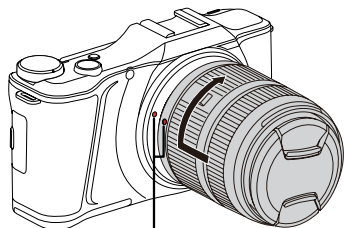

Mounting mark

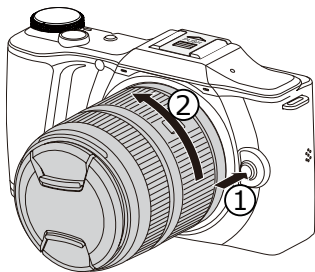 


Remove Lens

Rotate the lens as per the direction of arrow ② while pressing the Lens Release Button as per the direction of arrow ①, and remove the lens.



Install the Flash

 1. Follow the direction ① shown by the arrow to remove the protective cover of hot shoe.
2. Follow the direction ② shown by the arrow to install the flash.

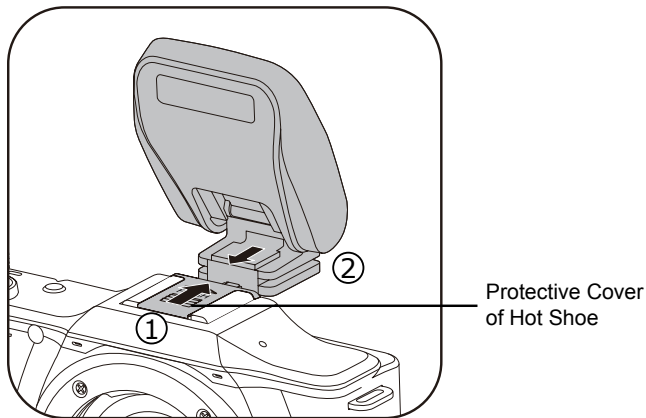

Rotatable LCD Screen

  The LCD screen is housed in the camera's body. You may follow the directions shown below to rotate it as needed:

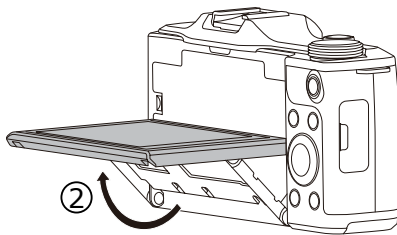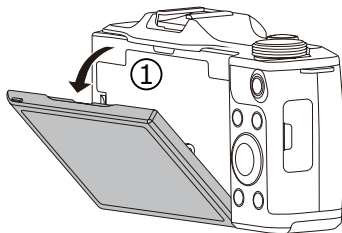


1. Turn over the LCD screen by following the direction ① shown by the arrow.
2. Rotate it according to the direction ② shown by the arrow.




Please don't forcibly rotate it to prevent causing damages.

 Installing Battery and Memory Card

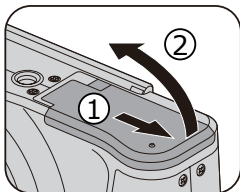


 
1. Open the battery cover.
 - Open the battery cover according to the direction of arrow.

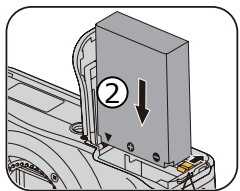

2. Insert the battery into the battery slot in the correct position as shown in the following diagram.
 - Insert the battery till the battery lock locks it in place.
 - The battery side with a gap should face the lens.

  
Battery lock
knob

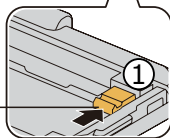

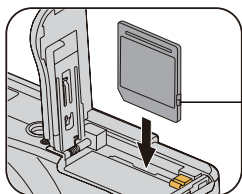



Write protection
buckle

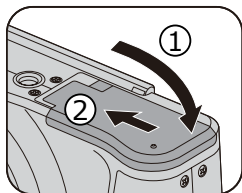 3. Insert the memory card into the memory card slot as shown in the diagram.

 


4. Close the battery cover.

 The memory card (SD/SDHC) is optional and not included in all camera packaging. If you have to purchase a memory card, select one with storage capacity between 4GB and 32GB to ensure correct data storage.


 To remove your memory card, open the battery cover, gently press the memory card to eject it and remove it carefully.


Charging Battery

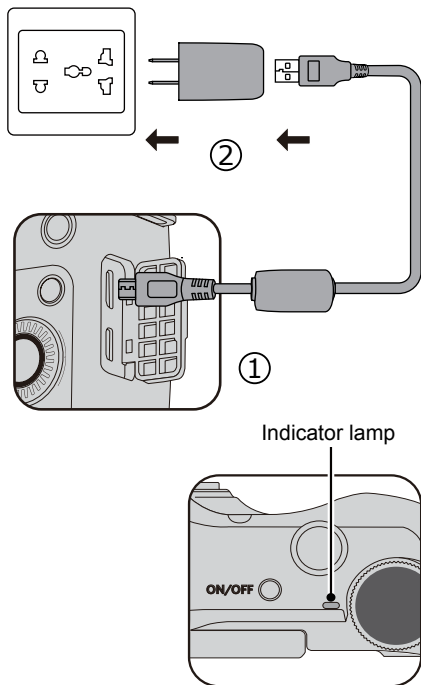


Please insert the battery and charge it under shutdown mode.

 
1. Connect the camera with the battery charger with an USB cable.
2. Insert the plug of the power charger into the wall outlet to charge the battery.

 After the battery is stored for a long period of time, use the supplied power charger to charge the battery prior to use.

 Please charge the battery indoors between 0°C and 40°C.


 Charging indicator:
Steady orange: Charging
Steady green: Charging complete
To have maximum battery life, charge the battery for at least 4 hours the first time.

Turning Camera On and Off

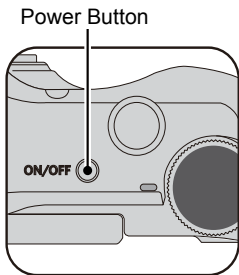

On

 1. Please remove the front lens cap before booting the camera up.
2. Press the Power button to turn the camera on.

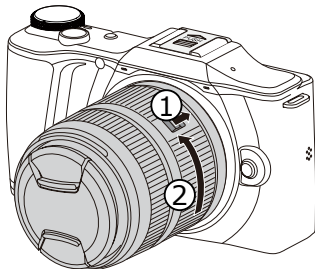

Off

 
1. Press the Power button camera off.
2. Pull the lens switch as per the direction of arrow ① and then rotate the lens clockwise as per the direction of arrow ②, and release the switch till the lens completely goes back.
3. Install the front lens cap.





Press and hold the  button to power on and enter Playback mode.


Set your Language, Date/Time

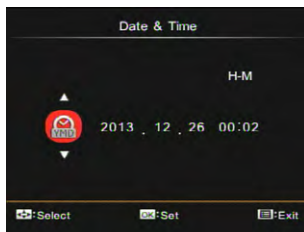Set your Language, Date/Time after the first power-on



 1. When you turn the camera on for the first time, the language selection screen appears.
2. Press the arrow buttons to select your desired language.
3. After you press the  button to confirm the selection, the Date/Time settings screen appears.
4. Press the [◀AE-L/AF-L] / [▶Z/☺] button to select the Date/Time to be adjusted: Time is displayed in YYYY: MM: DD HH:MM.
5. Press the [▲☺/☺] / [▼Info] button to adjust the value for the selected Date/Time.
6. Press the  button to confirm the time settings and the snapshot screen appears.

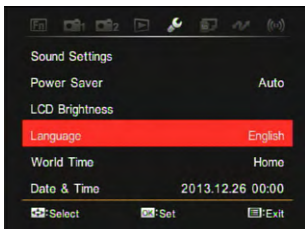

Resetting your Language



After you set your language for the first time, follow the instructions below to reset your language.

1. Press the  button.
2. Press the [◀AE-L/AF-L] / [▶Z/☺] button to select .
3. Press the [▲☺/☺] / [▼Info] button to select [Language] and then Press the  button to enter a menu.



4. Press the [▲☺/☺] / [▼Info] button to select a language and then press the  button to confirm.
5. Press the  button to make the camera back to photo mode.