 
 




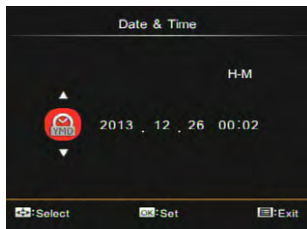


## Resetting Date/Time

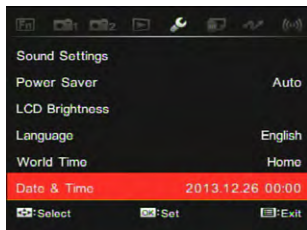

 
 
After you set your Date/Time for the first time, follow the instructions below to reset date and time.

1. Press the  button.
2. Press the [ ◀AE-L/AF-L ] / [ ▶☒/⊗ ] button to select .
3. Press the [ ▲☺/☐ ] / [ ▼Info ] button to select the [Date and Time] and then press the  button to enter a menu.
4. Press the [ ◀AE-L/AF-L ] / [ ▶☒/⊗ ] button to select the block to be adjusted: time shown in the manner of YYYY: MM: DD HH:MM.
5. Press the [ ▲☺/☐ ] / [ ▼Info ] button to adjust the value of block selected. After setting, press the  button to confirm.
6. Press the  button to make the camera back to photo mode.

# 5


## Basic Operations

### How to take pictures

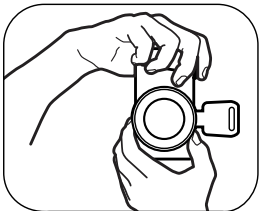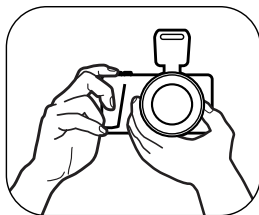


1. Hold the camera with your hands as shown in the picture and make the lens focus on the object and then frame with the LCD screen.
2. Rotate the zoom ring on lens to adjust the shooting distance.
3. Semi-press the shutter button to focus and then fully press the shutter button to complete shooting.

## Overview of the screen icons in photo shooting mode

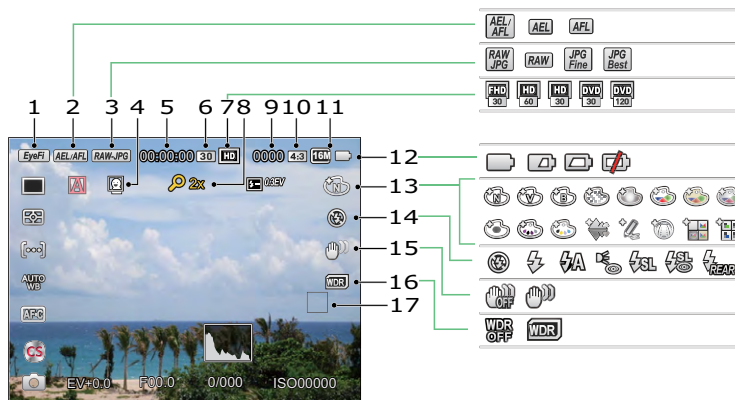 

1	Eye-Fi ON (with signal)	7	Video Pixels	13	Picture Effect
2	AE/AF Lock	8	Digital Zoom	14	Flash Mode
3	Quality	9	Number of Pictures in Static Mode	15	OIS
4	Human Face Detection	10	Ratio of Shooting Pixels	16	WDR
5	Maximum Record Time	11	Image Size	17	Focus Frame
6	Recording Speed (fps)	12	Battery Status		

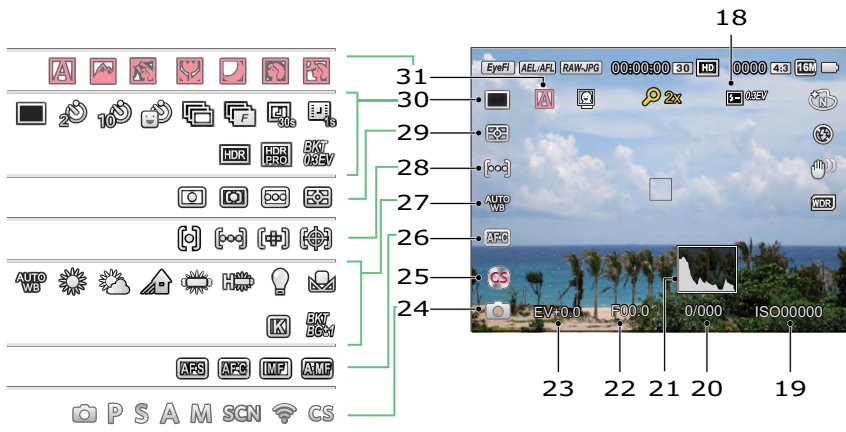 

18	Flash Exp. Comp.	23	Exposure Compensation Value	28	AF Area
19	ISO Value	24	Capture Mode	29	Expo Metering
20	Shutter Speed	25	Custom Settings	30	Single / Self-timer / Continuous Shot / HDR / Time-lapse Movie / AE Bracketting
21	Histogram	26	Focus Mode	31	Auto scene
22	Aperture Value	27	AWB		

---

## Overview of the Screen Icons in Movie Mode



1	Battery status
2	Number of Videos Captured
3	Available Continuous Recording Time
4	Video Mode