

**DELPHI**



# SKYFi2™ Satellite Radio Receiver Quick Guide



**Warning:** This manual and the SKYFi2 Satellite Radio Receiver User Guide contain important safety and operating information. Please read and follow the instructions in these manuals. Failure to do so could result in personal injury, death, and/or damage to your SKYFi2 Receiver, accessories, and/or to your vehicle or other property.



# SKYFi2 Receiver Controls

Use your SKYFi2 control buttons to operate various functions.

See your *SKYFi2 User Guide* and *SKYFi2 Installation Guide* for additional operating, installation, and safety information.

## Display button

Displays additional information on screen such as stocks or sports scores.

## Memory button

Saves and recalls song information such as artist and song title.

## Menu button

Selects and changes configuration options.

## Search button

Changes search mode between search by category or search by scanning.

## 30-Minute Replay buttons

Pause and replay up to 30 minutes of live XM broadcast.

## Scroll wheel

Previews channels; also selects various menu options.

## XM button

Confirms selected channel or menu option.

## Power button

Powers SKYFi2 on and off.

## Number keys

Enter a channel directly or select your favorite presets.



## Preset/direct button

Selects between direct channel entry or up to 30 presets.

## Jump button

Switches between current and previous channel.

## Menu

The menu in your SKYFi2 lets you change the brightness and contrast of the display, set the FM modulator frequency, set the audio level, aim the Home Antenna, manage your TuneSelect™ list, enter and delete stock symbols from the Stock Ticker, access Info Extras, restore your unit to the factory default settings, and more. See your *SKYFi2 User Guide* for an explanation of these features.

To access the menu, press the **“menu”** button, use the scroll wheel (or remote) to move the cursor, then press the **“XM”** button to select an option. Pressing the **“menu”** button will always exit any menu to either the previous menu level or back to the play screen. If the **“menu”** button is not pressed or the cursor is not moved within 8 seconds, the menu will time out and automatically return the user to the play screen.

## TuneSelect

TuneSelect notifies you when a favorite song or artist is playing on a channel other than the channel you are currently listening to. You can choose to search for songs either by song title or by the artist name, configurable in the menu under TuneSelect.





To store a song title or artist in the TuneSelect list, press and hold the **“XM”** button for 2 seconds while you listen to that song. SKYFi2 will beep once and display “Artist/Song Selected.”

Later, when any song on your list is playing on another channel, SKYFi2 will beep once and display the song and artist name along with the channel name and number where the song is currently playing. Press the **"XM"** button to go to the channel where the song is playing. You can use the menu to erase all or only some of the songs from your TuneSelect list.

### Stock Ticker

You can track up to 20 stocks with your SKYFi2. Use the menu to enter your favorite stock symbols, and then use the **"display"** button to select display mode 2 in order to view your Stock Ticker.

### 30-Minute Replay

30-Minute Replay gives users the opportunity to finally "hear that song again." Pressing the  button replays the previous song, and can be used to replay songs previously listened to over the last 30 minutes. This feature applies to the current listening session only. Turning your SKYFi2 off removes all songs from the up-to-30-minute buffer. You can also pause the live broadcast anytime by pressing the **"pause"** button. Press the  or  buttons to skip back to songs or programs within the last 30 minutes. To resume live broadcast, press and hold the  button until SKYFi2 beeps.

### Built-in FM Modulator

SKYFi2 includes a built-in FM modulator that transmits XM audio to your vehicle's FM radio. Use the menu to select the proper FM frequency, and make sure nothing is plugged into SKYFi2's audio output jack.

**Note:** Use of the FM modulator requires the installation of the XM SureConnect accessory. See the SKYFi2 Install Guide and XM SureConnect Vehicle Installation Guide for additional information.



**Warning:** When using this product it is always important to keep your eyes on the road and your hands on the wheel. Failure to do so could result in personal injury, death, and/or damage to your SKYFi2 Receiver, accessories, and/or to your vehicle or other property.

## Some Other Features to Know About...

### Basic Channel Selection

Turn the scroll wheel, then press **"XM"** to select.

-or-

Press the "preset/direct" button until the **"Direct"** icon appears, then use the number keys to enter the channel number. For example, for channel 50, press "5" then "0" or for channel 121, press "1," then "2," then "1."

### Presets

Your SKYFi2 has three banks of presets: A, B, and C. Each bank of presets can hold up to 10 channels for a total of 30 presets. Use these banks to organize your favorite channels or create separate preset banks for additional users to enjoy.

To set a preset, tune to a channel and make sure that it is playing. Then choose between banks A, B, or C by pressing the **"preset/direct"** button. Then, press and hold (for 2 seconds) the number key you wish to assign for that channel. SKYFi2 will beep once and display the preset number that has been set.

To choose a preset channel, press the **"preset/direct"** button to select the desired bank. Then, press the number key for the preset channel you wish to play.

# DELPHI

Delphi Corporation  
1441 West Long Lake Road  
Troy, Michigan 48098-5090  
U.S.A.  
Customer Service: [1] 877.GO DELPHI

[www.delphi.com](http://www.delphi.com)