


Listening to XM

Selecting channels

Select a channel directly by entering its channel number. Press the **"pre/dir"** button (step 1) until **direct** appears on the screen. Then press the number buttons (step 2) corresponding to the channel. Channel 12 can be entered as "1," then by "2," or as "0," "1," and "2."

Or press the up and down arrows to quickly step through each channel. When you find one you like, press the **"select"** button.

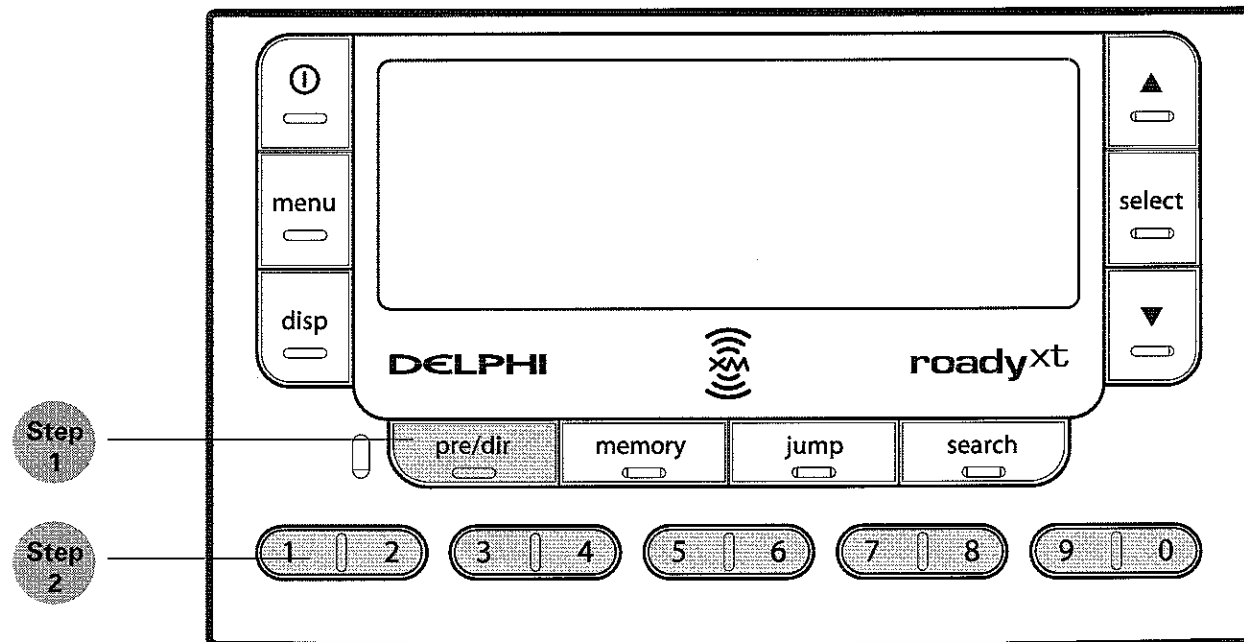

Warning: When using this product it is always important to keep your eyes on the road and your hands on the wheel. Not doing so could result in injury and/or death to yourself or to others and/or in property damage.

Searching for channels by category

XM channels are arranged by categories, or neighborhoods. This allows you to see all channels in the “Rock” category, for example.


Press the “**menu**” button (step 1), go to “Search Mode,” and select “By Category.”

Each press of the “**search**” button (step 2) tunes you to the first channel of a new category.

Notice that the **category** icon is highlighted in the display.

Use the arrow buttons (step 3) to sample the channels within a category. Press the “**select**” button to choose a channel.

If you do nothing for 10 seconds, the radio automatically returns to the normal channel selection method.

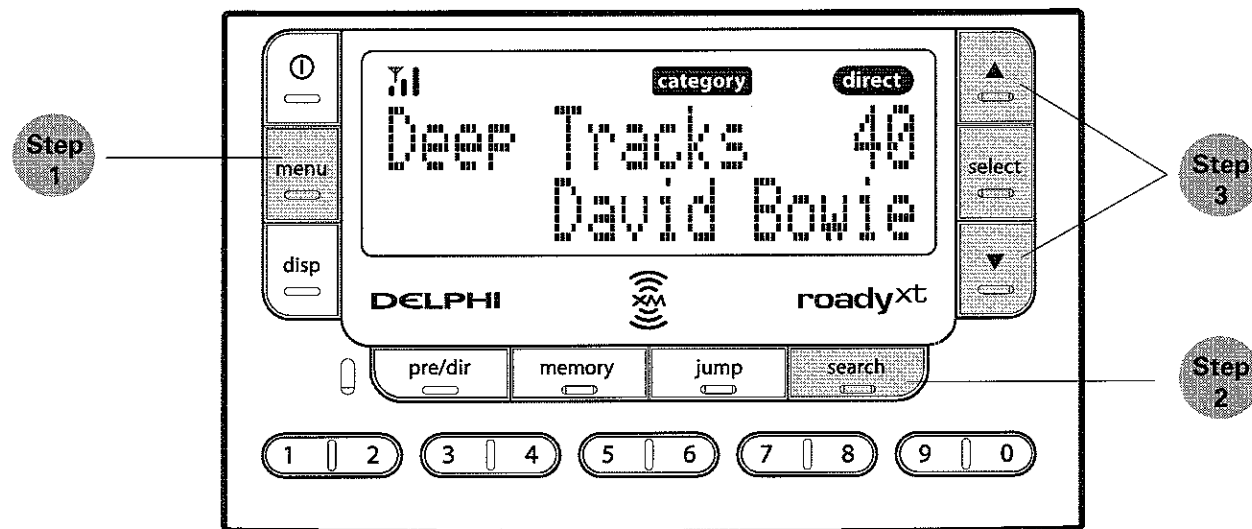


Searching for channels by scanning

Your roadyXT can also scan through each channel, pausing long enough to hear the programming before moving on to the next one.

Press the **"menu"** button (step 1), go to "Search Mode," and select "By Scanning" (step 2).

Press the **"search"** button to begin scanning (step 3). Each channel plays for about 5 seconds. While scanning channels, **scan** blinks in the display. Press the **"search"** button again to stop on a channel.

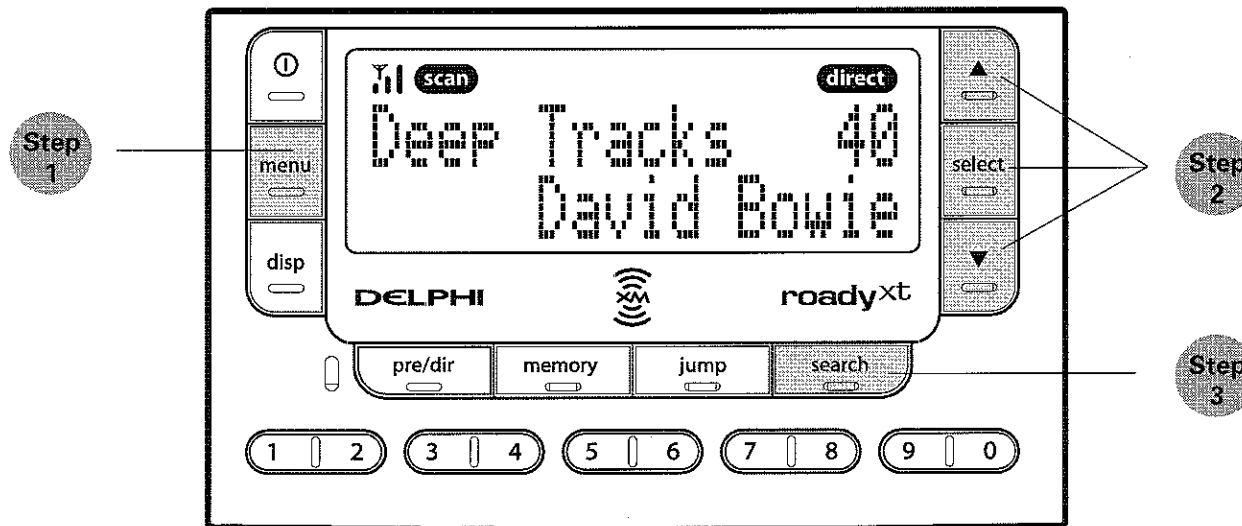


Using presets

Your roadyXT can store up to 30 of your favorite channels as presets. The presets are organized into three banks (A, B, or C) that each contain 10 presets.

Press the **"pre/dir"** button one or more times to select bank A, B, or C (step 1). After you've tuned to your desired channel, press and hold a number button to save the channel into that preset (step 2).

Whenever you want to quickly tune to that channel, simply press that button again.

You can use the preset banks to organize your channels in different ways: Store your favorite channels in bank A, and someone else's favorite channels in bank B. Or use one bank for music, another for news.

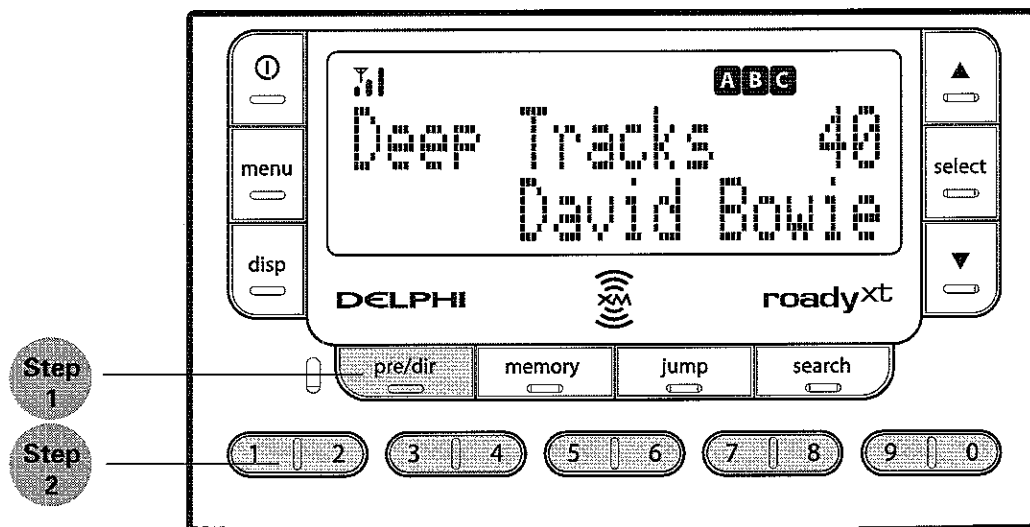


Memory and jump

Press the “**memory**” button to remember a song’s artist or title. Your roadyXT can remember up to 20 entries. (After 20, any new entry replaces the oldest entry in memory.)

To recall the list of songs, press and hold the “**memory**” button, then use the up and down arrow buttons to step through the list.

Press the “**jump**” button to return to the previous channel you were listening to.

You can press and hold the “**jump**” button for FM presets. See page 16 for more information.

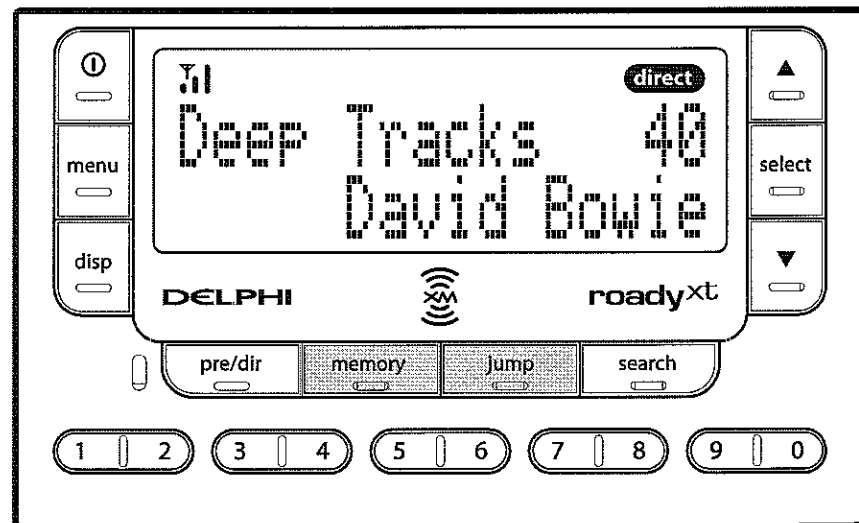

Personalizing Your roadyXT

You can easily adapt your roadyXT to suit your listening habits. Simply press the **"menu"** button to see the options you can customize. If you ever get lost or decide not to change anything, press the **"menu"** button several times to return to normal operation. Or just wait about 15 seconds and roadyXT automatically cancels whatever you're doing.

Making your vehicle's FM radio an XM radio

Your roadyXT contains a built-in FM transmitter that sends the XM audio signal to your car or marine FM radio when using the vehicle cradle only.

1. Turn on your FM radio, and turn off your roadyXT.
2. Unplug any cassette adapter or audio cable from the roadyXT cradle. If you are using the Delphi FM Direct Adapter (model SA10112, sold separately), connect it to the vehicle cradle.
3. Find an FM frequency that is not being used by any commercial FM station. Tune your FM radio through the FM band and note which frequency has no FM station or the least amount of interference.
4. Turn on your roadyXT.
5. Press the **"menu"** button and select **"FM Frequency."**
6. Match the FM frequency that you found in step 3.
7. You should now hear XM programming on your vehicle's FM radio. If the sound isn't clear or you hear noise or static, try another FM frequency. If you're traveling, you may need to retune periodically; this is due to the differences in signal strength of local FM stations and is not a problem with your roadyXT.
8. Pressing and holding the **"jump"** button for 2 seconds pulls up a list of the last six FM frequencies you selected. This allows you to quickly tune to unused FM frequencies when using the FM transmitter. Use the arrow buttons and the **"select"** button to choose the frequency you want.

Screen color

To change the color of the display, press the **"menu"** button and select **"Screen Color."** Use the arrow and the **"select"** buttons to choose a color; to cancel, press the **"menu"** button.

Contrast

To vary the contrast of the display, press the **"menu"** button and select **"Contrast."** Use the arrow buttons to adjust the contrast, and press the **"select"** button to confirm.

Audio level

You may adjust roadyXT's audio output level if it is too high (causing distortion) or too low. Choose a setting so that the XM audio matches your other audio sources, such as your CD player or FM radio. To change the audio output level, press the **"menu"** button and select **"Audio Level."** Use the arrow buttons to adjust the level and the **"select"** button to confirm. Press the **"menu"** button to exit.

Most users should NOT need to change this level from the factory setting. This is not a volume control; you should set the volume using the audio system that is connected to your roadyXT.

Aiming the antenna

Note: For use with the Home Kit, sold separately.

Your roadyXT can help you choose the best antenna position and orientation.

1. Press the **"menu"** button. Use the arrow and **"select"** buttons to choose "Antenna Aiming."
2. Slowly turn and tilt the antenna. The signal bars on the display will change. Find the position that gives at least two bars on either "satellite" or "terrestrial."
3. The antenna aiming screen remains as long as it's needed to help you position the antenna. When you've found the best position, press the **"menu"** button twice to return to normal operation.

TuneSelect™

TuneSelect can alert you whenever one of your favorite songs or artists is playing on any XM channel.

1. Press the **"menu"** button and select the "TuneSelect" option, then select "Song or Artist." You can choose to select "By Song" (factory default) or "By Artist." Press the **"menu"** button again to return to normal operation.
2. When you hear one of your favorite songs or artists, press and hold the **"select"** button until you hear a beep. This indicates that roadyXT has saved the song or artist information to its TuneSelect list. The list holds up to 20 entries; when it is full, any new entry replaces the oldest song in the list.
3. When any song or artist on the list is currently playing on any XM channel, your roadyXT beeps and flashes "Artist / Song Found" on its display.
4. Press the **"select"** button to switch to that channel.
5. To edit the list, press the **"menu"** button and choose the "TuneSelect" option, then the "Erase" option. You can either erase specific songs or artists on the list, or erase all songs and artists.

Stock Ticker

You can track up to 20 stock symbols and see their prices and movements right on the roadyXT's display.*

TO ADD A STOCK SYMBOL:

1. Press the "**menu**" button, select "Stock Ticker," and select "Add Stocks."
2. Use the arrow buttons to add each letter of the desired stock symbol. Press the "**select**" button after choosing each letter. (Your roadyXT has a list of more than 9,000 stock symbols, and will not only help you complete each entry but prevents you from entering incorrect symbols.)
3. When you've entered all your desired stock symbols, press the "**menu**" button several times (or simply wait a few seconds) until your roadyXT returns to normal operation.
4. Press the "**disp**" button until you see "Stocks" and a ticker across the bottom of the screen.**

TO ERASE A STOCK SYMBOL:

1. Press the "**menu**" button, select "Stock Ticker," and select "Erase Stocks."
2. Choose "Erase All" or "Erase Some."
3. If you're erasing some stocks, press the arrow buttons to select the stock to be deleted. Press the "**select**" button to erase the chosen stock symbol.
4. Press the "**menu**" button several times to return to normal operation.

*Quotes are provided by ComStock, Inc. and cover most stocks listed on the NYSE, AMEX, or NASDAQ. Market information is delayed by approximately 25 minutes.

** Extreme cold temperatures can affect the performance of the LCD in "Scroll" mode. We recommend you change to the "Pages" mode until the temperature rises.

Info Extras


XM Satellite Radio will broadcast information such as sports scores and other features at various times.*

Press the **"menu"** button and select "Info Extras" (step 1). Use the arrow buttons to see what's available (step 2).

Press the **"select"** button to add or remove the Info Extras item (step 3).

"-" indicates that you have not yet selected the item; "+" means you've chosen the item.

To view the Info Extras that you chose, press the **"disp"** button until you see the Info Extras items at the bottom of the screen (display mode 5).

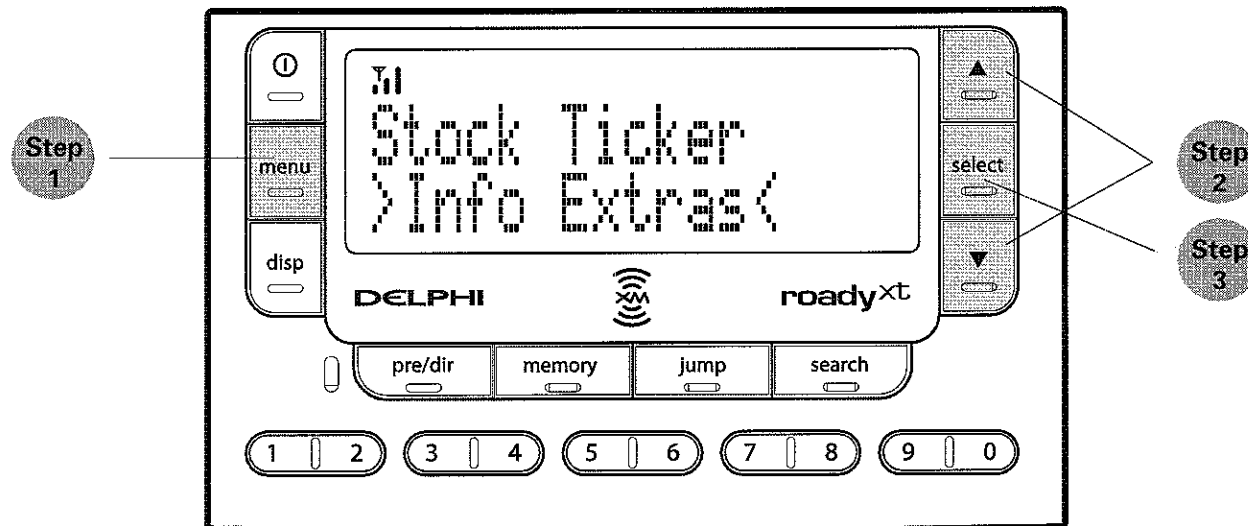

*Sports scores are provided by Stats, Inc.