



Xpress^{RC}

User Guide

Table of Contents

Introduction	3
Features	4
About XM Satellite Radio	5
Safety information	6
What's in the box?	8
Xpress ^{RC} functions	9
Remote control functions	10
5-way navigation knob	11
Vehicle Installation	12
Step 1: Mount the XM Antenna	13
Step 2: Install the vent or swivel mount	16
Step 3: Connect your XM Radio	18
Step 4: Turn on your Xpress ^{RC}	20
Activation and Registration	22
Using your Xpress^{RC}	24
Listening to XM	25
View a category	26
Enter a specific channel	26
Jump to the previous channel	27
Preset your favorite channel	27
Skip a channel	29
Block xL (explicit language) channels	30
Tune directly to a channel	32
Special Features	34
Change the display mode	35
Add a song to SongSaver	35
60 minute replay	38
TuneSelect favorite artists or songs	39
GameSelect favorite sports or teams	43
Get stock quotes	45
How Else Can You Use Your XM Radio?	48
Configuring your Xpress^{RC}	50
Turn the FM modulator on/off	51
Find an FM frequency	52
Set the Line Out Level	54
Set the tone	55
Aim antenna for best reception	56
Backlight settings	57
Display appearance	58
Set time	59
Automatic power	61
Delayed power	61
Sleep timer	62
Factory defaults	63
Demo mode	64
Troubleshooting	66
Product Specifications	70
Patent Information	72
Environmental Information	72
FCC Statement	73
Warranty	74



Introduction

Features

Congratulations, on your purchase of the Xpress^{RC}!

The Xpress^{RC} has these exciting features to enhance your listening experience:

- Large, customizable, color display that's easy to read – you can view the content you want just the way you want it.
- View the current channel, and three other channels in the channel list at the same time OR view the current and the previous channel at the same time.
- Pause and Replay up to 60 minutes of live XM programming.
- SongSaver allows you to store, save, and listen to up to 10 of your favorite songs any time.
- TuneSelect finds your favorite artists or songs and alerts you when they're playing on an XM channel.
- GameSelect finds your favorite sports and team events and alerts you when they're playing on an XM channel.
- Sports and Stock Tickers so you are up to speed on the latest scores and stocks while listening to you favorite XM programming.
- Quick and easy setup.

Please read the entire user guide before using your Xpress^{RC}

About XM Satellite Radio


XM is America's number one satellite radio company. Broadcasting live daily from studios in Washington, DC, New York City, Chicago, the Country Music Hall of Fame in Nashville, Toronto and Montreal, XM's 2007 lineup includes more than 170 digital channels of choice from coast to coast: commercial-free music, premier sports, news, talk radio, comedy, children's and entertainment programming; and the most advanced traffic and weather information.

XM, the leader in satellite-delivered entertainment and data services for the automobile market through partnerships with General Motors, Honda, Hyundai, Nissan, Porsche, Subaru, Suzuki and Toyota, is available in 140 different vehicle models for 2007. XM's industry-leading products are available at consumer electronics retailers nationwide. For more information about XM hardware, programming and partnerships, please visit <http://www.xmradio.com/>.

About Delphi

Delphi is a world leader in mobile electronics, vehicle components, and audio technology. Delphi created the first in-dash radio in 1936 and continues its strong tradition of innovation in the audio industry. Now Delphi technology has helped make satellite radio a reality, and Delphi continues to expand its in-vehicle and consumer electronics technologies. With its exciting line of satellite radio products, Delphi offers a broad portfolio of products to answer a wide variety of information and entertainment needs -- in the vehicle, home, office, or virtually anywhere.

Safety and Care Information

 **IMPORTANT:** Always read and understand all the instructions to avoid injury to yourself and/or damage to your device. XM Satellite Radio claims no responsibility for damage from data loss due to breakdown, repair, or other causes.

- Do not expose to extreme temperatures (above 140°F or below -4°F, or above 60°C or below -20°C).
- Do not expose to moisture. Do not use device near or in water.
- Do not let any foreign matter spill into device.
- Do not store in dusty areas.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight, fire, flame or other heat sources for a prolonged period.
- Do not try to disassemble and/or repair device yourself.
- Do not drop your device or subject it to severe impact.
- Do not place heavy objects on device.
- Do not subject device to excessive pressure.



WARNING


- Opening the case may result in electric shock.
- The uninsulated parts inside the power adapter and cradle may cause electric shock or fire. For your safety, please do not open these components. Do not let metallic objects, such as necklaces or coins, come into contact with the power adapter plugs.
- To avoid electric shock, use the power adapter only with an outlet that matches the shape of the adapter's plug.
- Make sure that you insert the adapter's plug all the way into the outlet.
- Do not plug several devices into the same electrical outlet.
- Use the power adapter and cradle away from water sources to avoid fire or electric shock.
- Do not touch the device with wet hands.

When using this product it is always important to keep your eyes on the road and hands on the wheel. Not doing so could result in personal injury, death, and/or damage to your device, accessories, and/or to your vehicle or other property.


Your device should be placed in your vehicle where it will not interfere with the function of safety features, e.g., deployment of airbags. Failure to correctly place device may result in injury to you or others if the unit becomes detached during an accident and/or obstructs the deployment of an airbag.

Introduction

What's in the Box?

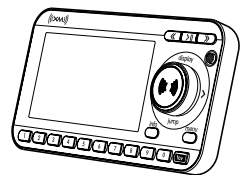


Xpress^{RC}

 

Remote Control




Cassette Adapter

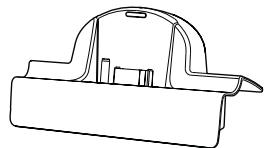


Car Cradle



 
Swivel Mount



Vent Mount

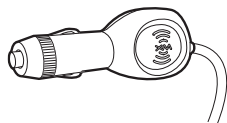

Car Power Adapter

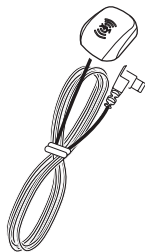


XM Car Antenna



Swivel Mount Preparation Kit

Xpress^{RC} functions

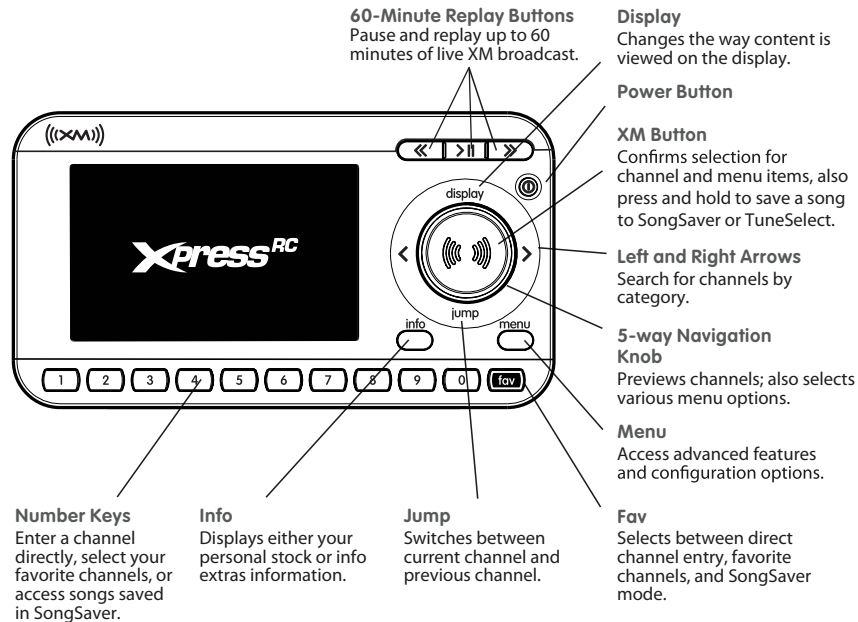

Introduction

Remote Control functions

Power Button

60-Minute Replay Buttons
Pause and replay up to 60 minutes of live XM broadcast

XM Button

Confirms selected channel or menu options, also press and hold to save a song to SongSaver or TuneSelect.

info

Displays either your personal stock or info extras information.

Mute


Silences live or replayed XM content.

Number Keys

Enter a channel directly, select your favorite channels, or access songs saved in Song-Saver.

Jump

Switches between current channel and previous channel

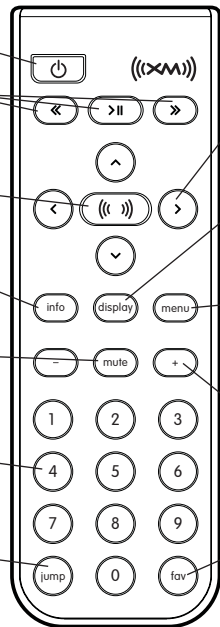

Arrow Buttons

Select menu entries, change channels.

Display

Changes the way content is viewed on the display

Menu

Access advanced features and configuration options.

+ and -

Change channels or control volume for audio system (sold separately)

Fav

 
Selects between direct channel entry, favorite channels, and SongSaver mode.

5-way navigation knob


Turn the knob to scroll through a list.

Press the center of  to make a selection.


Press the edge of  to select **display**, **jump**, **<** or **>**.




Press center button (XM button)

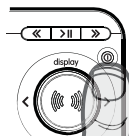


Toggle right

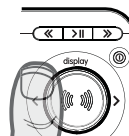

Toggle left

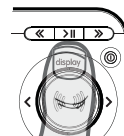

Toggle up

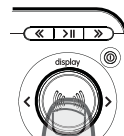

Toggle down






Vehicle Installation

Step 1: Mount the XM Antenna


The XM antenna contains a strong magnet which will stick to any metal parts of your vehicle.

- 1 Choose the best location for your XM antenna considering your own personal situation. Pay particular attention to any accessories that you may have like luggage racks and how frequently you may use them.

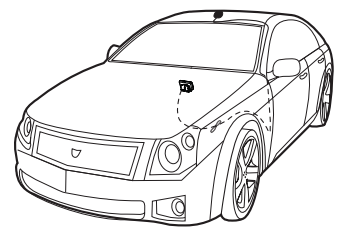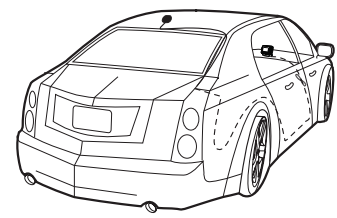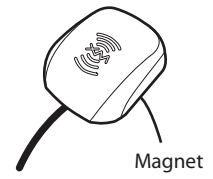


Vehicle Installation


- 2 Place the antenna in the location you selected.
- 3 Route the cable:
 - If you placed the XM antenna on the **front** of the vehicle, route the cable across the top of the windshield. Gently pry up the rubber weather seal and tuck the cable underneath. Follow the weather seal down to the door jam. Tuck the cable into the door jam and up to the dash or under the carpet to the car cradle as shown.

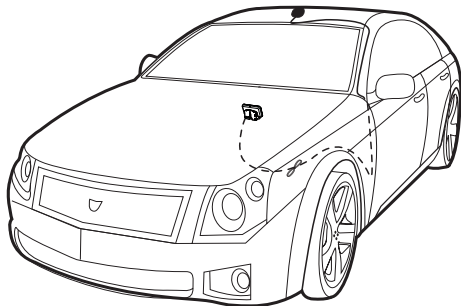

- If you placed the XM antenna on the **rear** of the vehicle, route the cable under the weather seal of the rear window. Route it into the trunk and through any existing wire passages or cargo passages to the rear passenger compartment. Tuck the cable under the door jam trim or under the carpet to the radio as shown.

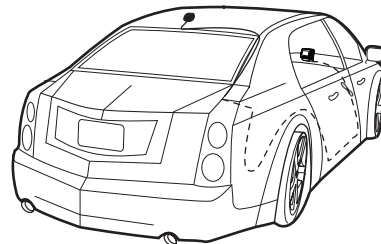

- 4 Make sure any excess cable does not interfere with vehicle operations.

 **TIP!** Always be careful to include enough slack in your cable to accommodate open doors or trunk lids. Use things typically found around the home, like electrical tape, to secure cables in areas so that hinges do not pinch the cable with the door. Hide any excess cable in the trim.

Vehicle Installation



Step 2: Install the vent or swivel mount.

You can use either the vent mount or the swivel mount for your Xpress^{RC} depending on your particular situation.

 
Installing the vent mount

- 1 Locate a vent with horizontal slats sturdy enough to hold your XM cradle and radio.
- 2 Adjust the clamps to fit your vent.
- 3 Snap the mount onto the vent.

To remove, push the mount into the vent, then lift up.

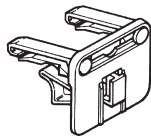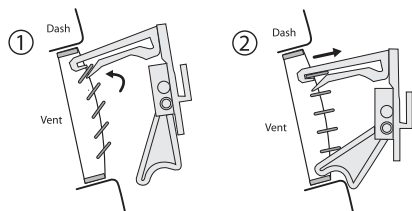




Vent Mount



Swivel Mount

Installing the swivel mount

-  **CAUTION!** The adhesive used with the swivel mount may make it difficult to remove. Do not install this mount on leather surfaces and make sure the air temperature is at least 60°F (15°C).
- 1 Locate a flat surface for the mount. Make sure there is ample room for the XM cradle and radio when installed.
 - 2 Clean the surface with the preparation kit and let it dry thoroughly.
 - 3 Peel off the adhesive liner. Position, press, and hold the swivel mount in place for 30 seconds.
-  **IMPORTANT!** Let the adhesive cure for 24 hours before attaching the XM cradle and radio to the mount.
- 4 Turn the swivel to accommodate the XM cradle and radio. Adjust the tension via the center screw.

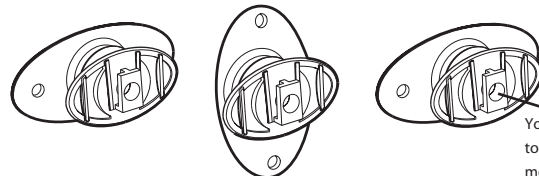

You can adjust this screw to adjust the tension of the mount with a screwdriver.


Vehicle Installation


To remove, carefully lift the adhesive pad with your fingers or a spoon. Warming the pad with a hair dryer for several minutes will help soften the adhesive.

You can reinstall the swivel mount using the extra adhesive pad.

Step 3: Connect your Xpress^{RC}.

- 1 Plug the antenna into ANT IN on the cradle.
- 2 Plug the power adapter into DC IN on the cradle.
- 3 Plug the audio adapter into AUDIO OUT on the cradle.
 - Use the **Cassette Adapter** if your vehicle has a built-in cassette player.
 - Use a **mini audio cable** (sold separately) if your vehicle has an audio input jack.
- 4 Insert the cradle into the mount.
- 5 Insert your Xpress^{RC} into the cradle.

 **NOTE!** If your car does not contain a cassette player or an audio input, you will need to use either the XM SureConnect (sold separately) or the FM Direct adapter (sold separately).

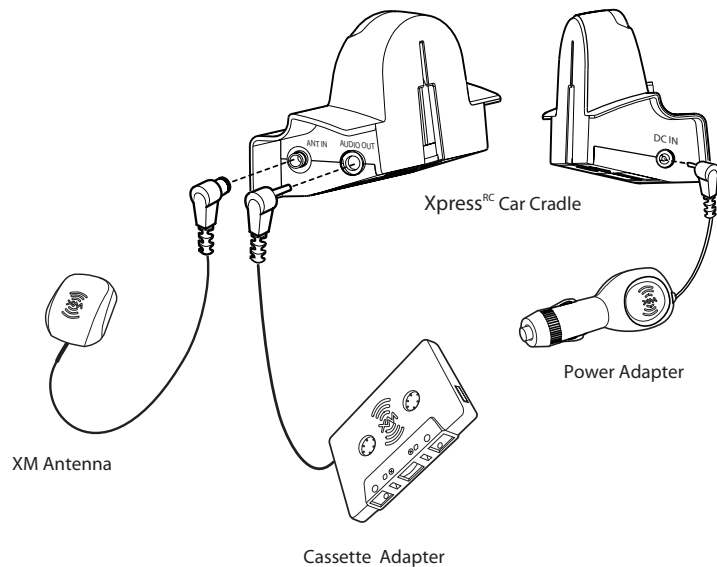


Vehicle Installation

- **XM SureConnect** (sold separately): You can listen to your Xpress^{RC} through your car stereo by using Xpress^{RC}'s built-in FM modulator and the XM SureConnect. Simply find an unused FM frequency on the stereo and set your Xpress^{RC} to transmit on that same frequency. Refer to Set the FM frequency page 52 for more information
- **FM Direct Adapter** (sold separately): This option directly connects the Xpress^{RC} to your car's audio system and antenna. A professional installation is recommended if you choose to use this method

Step 4: Turn on your Xpress^{RC}.

- 1 Turn on your car radio.
- 2 Insert the cassette adapter.
- 3 Turn on your Xpress^{RC}.

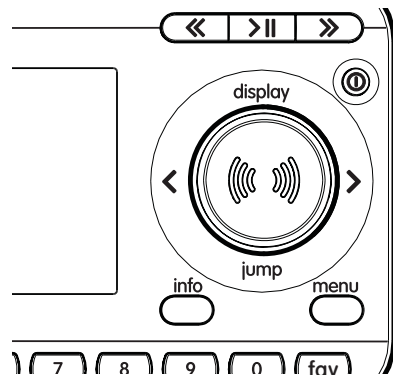


- 🔊 **NOTE:** You may experience a two-second delay and hear a short beep while your Xpress^{RC} powers up. If you press the power button during these two seconds, you will see a Please Wait message.
- 🔊 **NOTE:** If you are using the XM SureConnect or the FM Direct adapter, refer to Turn the FM modulator on/off on page xxx for information.



Activation

Before you can listen to any of XM's great channels, you must first activate your Xpress^{RC}.

- 1** Make sure your Xpress^{RC} is properly installed and receiving the XM signal so that you can hear the audio on channel 1.
 - 2** Make a note of your XM Radio ID. You can find it:
 - On XM channel 0
 - On the rear package label
 - On the label on the back of your Xpress^{RC}
-  **NOTE:** The XM Radio ID does not use the letters I, O, S, or F.
- 3** Activate your service:
 - Browse to <http://activate.xmradio.com> and follow the instructions.

OR

 - Call 1 800 XM RADIO (1-800-967-2346).
 - 4** When your service is activated, your Xpress^{RC} will receive all channels. This usually takes 10 to 15 minutes, but may take up to an hour. Your radio must remain on until activated.






Listening to XM

Enter a channel

- 1 Turn the knob to scroll through the list of channels.
- 2 You'll see the channel logo and current artist. In a few seconds, the current song title appears.



-  **TIP:** You can change the display mode to show both the current channel and all channels. Refer to Changing the display on page 35.
- 3 Press  to select a channel.
-  **TIP:** You can configure Xpress^{RC} to automatically tune to the channel you scroll to. Refer to page 32 for instructions on how to eliminate the need to enter your selection.

Using your Xpress^{RC}

View a category

With so many channels to choose from, XM Satellite Radio has organized them into categories to make it easier for you to find the ones that suit your taste.

- 1 To view a category, press < or >.
- 2 Scroll through the category to find the channel you want.
- 3 Press **⏪**.

🔍 TIP! To briefly listen to each channel in the category, select Scan, then press **⏪**.

Enter a specific channel

- 1 To enter a channel number, make sure “Direct” is on the screen. If not, press **fav**.



- 2 Use the number buttons or remote to enter the channel number.

Jump to the previous channel

Press **jump** to listen to the previous channel you selected.

🔍 TIP! You can view both current and the previous channel at the same time. Refer to Changing the display on page 35.

Preset your favorite channel

You can assign up to 10 of your favorite channels to the number buttons so you can quickly access them.

To assign a favorite channel to a button:

- 1 Tune to the desired channel.
- 2 Be sure you are in Favorite Channels mode. Press **fav** until Favorite Channels appears in the title bar.

Using your Xpress^{RC}





- 3 Press and hold the number button you want to use for that channel.






To listen to a favorite channel:

- 1 Be sure you are in Favorite Channels mode by pressing **fav** until Favorite Channels appears in the title bar.

- 2 Press the number button where the desired channel is programmed.

 **TIP!** To see your list of Favorite Channels, press < or >. Select a favorite and press  to listen to that channel.


Skip a channel

- 1 To remove channels from the list displayed when you scroll through the channels, press **menu**.
- 2 Select **Channel Access**. Press .
- 3 Select **Channel Skip/Add**. Press .
- 4 Each channel preceded by ✓ appears in the list of channels. To remove a channel from the list, scroll to the channel and press .



Using your Xpress^{RC}

- 5 Each channel preceded by Ø does not appear in the list of channels. To add a channel back to the list, scroll to the channel and press **OK**.

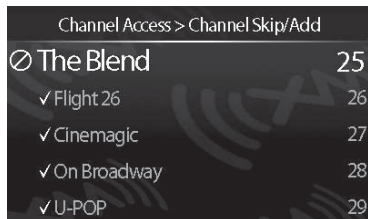

- 6 When finished, press < or **menu** to go back to the previous menu

Block xL (explicit language) channels:

When xL appears after a channel logo, explicit language will be heard on that channel.

To skip all explicit language channels:


- 1 Press **menu**.
- 2 Select **Channel Access**, and press **OK**.

- 3 Select **xL Channels**, and press **OK**.
- 4 Turn the knob until Channel Access is **OFF**.
- 5 Press **OK**.
- 6 None of the explicit language channels will appear on the channel list or on the channel skip/add list.


To add explicit language channels to the channel list:

- 1 Press **menu**.
- 2 Select **Channel Access**, and press **OK**.
- 3 Select **xL Channels**, and press **OK**.
- 4 Turn the knob until Channel Access is **ON**.
- 5 Press **OK**.
- 6 The explicit language channels will now appear on the channel list or on the channel skip/add list.




Using your Xpress^{RC}

 **IMPORTANT!** To completely block access to an XM channel, contact XM Listener Care at 1.800.XM.RADIO (1.800.967.2346) or online at <http://www.xmradio.com/parentalcontrols/index.jsp>.




Tune directly to a channel:


Usually, you press  to select a channel. You can change this so that your radio automatically tunes to the channel when highlighted for longer than 3 seconds.

To automatically tune to a channel:

- 1 Press **menu**.
- 2 Select **Channel Access**, and press .
- 3 Select **Direct Tune**, and press .
- 4 Turn the knob until Direct Tune is **ON**.
- 5 Press .

To disable Direct Tune:

- 1 Press **menu**.
- 2 Select **Channel Access**, and press .
- 3 Select **Direct Tune**, and press .
- 4 Turn the knob until Direct Tune is **OFF**.
- 5 Press .

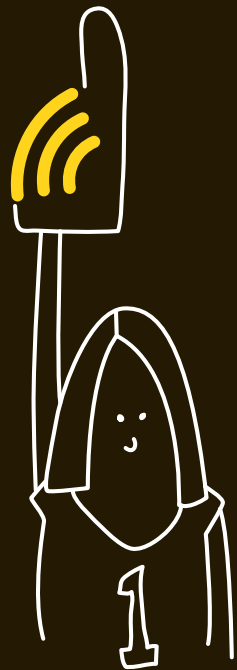


Special Features

Change the display mode

You can view multiple channels on the display to see what else is playing.

Choose from:

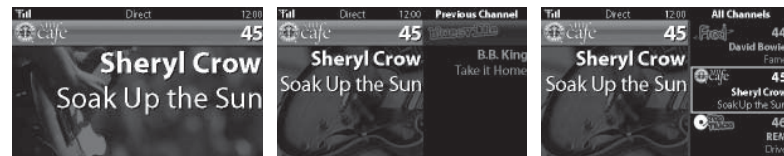



single current channel

split screen with previous

split screen with channel list

To change the mode, press **display**.


 **TIP!** When in split screen with the channel list, you can scroll through the list of channels, just like when it appears on the full screen. Press < or > to change categories. Press  to select a channel.


 **TIP!** Press jump to change to the previous channel.

Add a song to SongSaver


You can save up to ten of your favorite songs to listen to whenever you like.

Special Features

- 1 When you hear a song you like, press and hold  until "Add to SongSaver" appears.

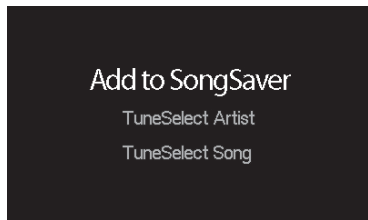


- 2 Press  again

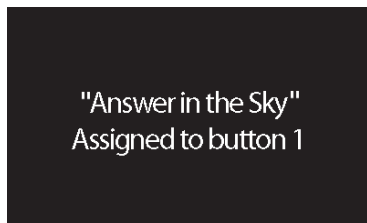


- 3 Your song is saved to the next available number button.

 **NOTE!** Up to 12 minutes of the song is saved.

 **TIP!** When all ten buttons are used, the next song added to SongSaver overwrites the oldest song saved (i.e., the 11th song is saved to button 1).

To listen to a saved song:

- 1 Press **fav** until "SongSaver" appears.

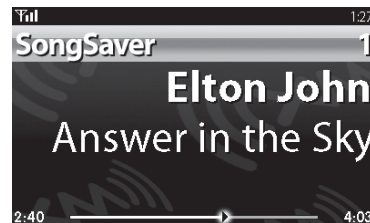

- 2 Press the number for the desired song.

 **TIP!** To see your list of saved songs, press << or >>. Select a song and press  to listen to it.

Special Features

60 minute replay

Tracks (up to 60 minutes) are saved in the order they were played on the channel.

To pause:


- 1 Press >||.
- 2 To resume play, press >|| again.

To rewind:

- 1 Press <<.
- 2 If the current track has been playing for longer than 5 seconds, it is played from its beginning. If the current track has been playing for less than 5 seconds, the previous track is played.
- 3 Press << to skip back to a previous track.



 **TIP!** Press and hold << for 3 seconds to skip to the first track.


To fast forward:

- 1 Press >>.
 - 2 If you paused or rewound the current track, live play resumes. If you are listening to a previous track, the next track is played.
-  **TIP!** To return to the live XM broadcast, press and hold >> button until "Live" appears.


TuneSelect favorite artists or songs


You can select up to 20 of your favorite artists or songs so that you will be notified when any are currently played on any XM channel.

- 1 When you hear a favorite artist or song, press and hold  for 3 seconds.
- 2 Select **TuneSelect Artist** to be notified when any song by the artist is played on any channel. Press .

Select **TuneSelect Song** to be notified when the song is played by any artist on any channel. Press .

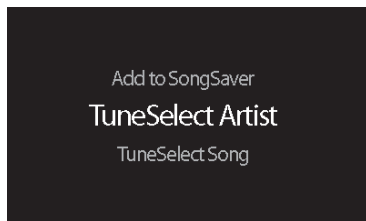

Special Features





- 3 When an artist or song that you have TuneSelected plays on any channel, you'll hear a special tone and message. To switch to that channel, press .



To remove an artist or song from your TuneSelect list:

- 1 Press **menu**.
- 2 Select **Edit Alerts**, and press .
- 3 Select **Edit TuneSelect**, and press .

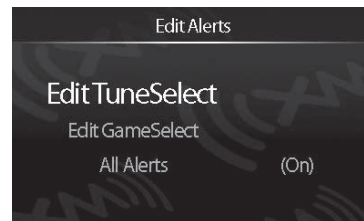

- 4 Select the artist or song you want to remove from your TuneSelect list, and press .

Special Features



- 5 Select **Do Not Alert** to keep the artist or song on your list but to no longer be alerted when the artist or song plays on a channel. Press **OK**.

Select **Delete** to remove the artist or song from your list. Press **OK**.

TIP! You can switch between artists and tunes on your TuneSelect list.

- For an artist, select **Alert on Song** so that the song is added as a TuneSelect Song. The artist is removed as a TuneSelect Artist. Press **OK**.
- For a song, select **Alert on Artist** so that the performer of the song is added as a TuneSelect Artist. The song is removed as a TuneSelect Song. Press **OK**.

You can also TuneSelect artists and songs in Replay mode or in SongSaver.

GameSelect favorite sports or teams

You can select up to 50 of your favorite sports and teams, you can view their scores and stats at any time. In addition, you will be notified when they play on any XM channel.

- 1 Press **menu**.
- 2 Select **Info Extras**, and press **OK**.
- 3 Select **Sports**, and press **OK**.
- 4 Select a favorite sport, and press **OK**.
- 5 If your favorite sport is played by teams, select your favorite team, and press **OK**.
- 6 A check mark appears next to sports/teams you have selected.



Special Features

- To view current scores and stats for the sports and teams on your list, press **info**.
- When your sport/team plays on any channel, you'll hear a special tone and message. To switch to that channel, press **Ⓜ**.



To remove a sport or team from your list:

- Press **menu**.
- Select **Info Extras**, and press **Ⓜ**.
- Select **Sports**, and press **Ⓜ**.
- Select the sport (or team's sport) to be removed and press **Ⓜ**.

- If applicable, select the team to be removed, and press **Ⓜ**.

To not be alerted when your sport/team plays:

- Press **menu**.
- Select **Edit Alerts**, and press **Ⓜ**.
- Select **Edit GameSelect**, and press **Ⓜ**.
- Select the sport or team you no longer want to be alerted about, and press **Ⓜ**.




Get stock quotes


You can track the price and daily movement for up to 20 of your favorite stock symbols.

NOTE! Information about most stocks and indices listed on the NYSE, AMEX, or NASDAQ is available. Market information is delayed approximately 25 minutes. Stock data provided by ComStock, Inc.


- Press **menu**.
- Select **Info Extras**, and press **Ⓜ**.


Special Features

- 3 Select **Stocks**, and press .
- 4 If you already have stocks in your list, select **Add Stock** and press . If not, then skip this step.
- 5 Turn the knob to select the letters for the stock symbol. Press  after each letter.






 **TIP!** XpressRC will help you complete the symbols for more than 9,000 regularly traded stocks.




- 6 When finished, press .
- 7 Press **info** to see your stock quotes.

 **TIP!** To turn on/off the scrolling of stock prices, refer to Changing the display appearance on page 35.

To remove a stock:

- 1 Press **menu**.
- 2 Select **Info Extras**, and press .
- 3 Select **Stocks**, and press .
- 4 Select **Erase Stocks**, and press .
- 5 Select the stock you want to remove from your list, and press .
- 6 Select **Yes**, and press .

 **TIP!** To remove your entire stock list, select **Erase All Stocks**, press , select **Yes**, and press .

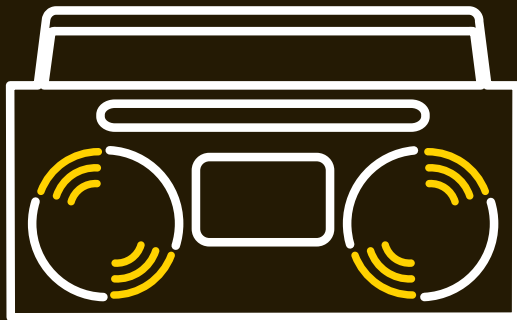

How Else Can You Use Your Xpress^{RC}?

XM offers a variety of accessories that allow you to adapt your Xpress^{RC} solution to your lifestyle and enhance your listening experience. With such accessories, you can take your single radio and also use it in the home, the office, multiple vehicles or almost any location you like.

- **In the Home, Office, etc.** – With a Home Kit, you can plug your Xpress^{RC} into your existing home, office, or other stereo system/powered speakers via RCA inputs and hear XM programming in high-quality stereo sound.
- **In Multiple Vehicles** – With a Car Kit, you can take your Xpress^{RC} between vehicles without having to remove your primary radio mount, antenna, etc. You can go from your workday commuter car to your spouse's car to a family car for weekends to a rental car while traveling.
- **In Almost Any Location You Like** – With a desktop and portable sound systems you have the freedom to experience XM where and when you want, from the bedroom, to the office, to the kitchen, to outside on the deck, to a picnic.

For more information on XM accessories or to purchase an XM accessory, please visit your local retailer or www.xmradio.com/accessories.




Configuring your Xpress^{RC}

Turn the FM modulator on/off

(Car cradle only. For use with XM SureConnect or FM Direct adapter (sold separately).


If you are using the SureConnect or FM Direct Adapter to transmit audio, you must turn the FM Modulator on and set the FM frequency on both your Xpress^{RC} and your car radio.


- 1 Press **menu**.
- 2 Select **Vehicle Mode**, and press **OK**.
- 3 Select **FM Modulator**, and press **OK**.

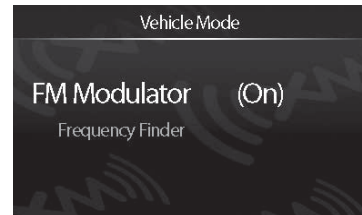

- 4 Select **On**, and press **OK**.


Configuring your Xpress^{RC}

- 5 Your Xpress^{RC} automatically scans for all available FM frequencies.
- 6 Locate a suitable FM frequency from the list and press .
- 7 Set your car radio to the frequency selected.

 **TIP!** The best FM frequency to use is displayed at the top of the list. It is recommended to choose that frequency. However, if you are not satisfied with the sound quality, select a different FM frequency within the list (or select View All Frequencies to see 100 frequencies), press XM, and tune your car stereo to that frequency.




Find an FM frequency


If necessary, you can make your Xpress^{RC} search for FM frequencies at any time.

- 1 Press and hold **jump** for two seconds.
- 2 Your Xpress^{RC} automatically scans for all available FM frequencies.
- 3 Locate a suitable FM frequency from the list and press .
- 4 Set your car radio to the frequency selected.

OR

- 1 Press **menu**.


- 2 Select **Vehicle Mode**, and press .
- 3 If the **FM Modulator** is OFF, turn it ON and press .
- 4 Select **Frequency Finder**, and press .

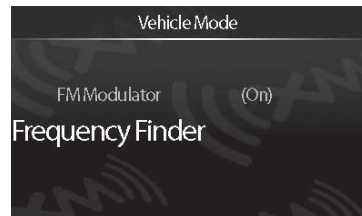

- 5 Your Xpress^{RC} automatically scans for all available FM frequencies.



Configuring your Xpress^{RC}



- 6 Locate a suitable FM frequency from the list and press .
- 7 Set your car radio to the frequency selected.


Set the Line Out Level


To connect the Line Out on the Xpress^{RC} car cradle directly to your car's stereo to transmit audio, you can:

- Use the cassette adapter
- Use your car stereo's audio input called "Aux In"



Either of these methods will give you the best audio quality. When using either of these methods to transmit audio through your car's stereo, you can adjust Xpress^{RC}'s audio level to match other audio sources.

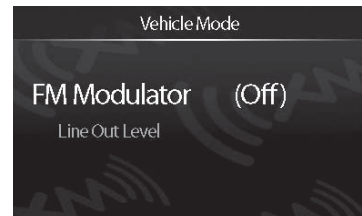- 1 Press **menu**.
- 2 Select **Vehicle Mode**, and press .
- 3 Select **Line Out Level**, and press .



- 4 Turn the knob to increase or decrease the level.
- 5 Press .

Do not use the Line Out Level menu item as a volume control; use the volume control on your car stereo instead. Line Out Level is used to adjust the volume level to match other audio sources (your CD player, other FM stations, or MP3 player).

 **TIP!** If using your XpressRC in a home stand (sold separately) or audio system (sold separately), press , then select Line Out Level.

Set the tone

(Audio system option -- audio systems are sold separately)

You can adjust the bass and treble to suit the kind of music you're listening to.

Configuring your Xpress^{RC}

- 1 Press **menu**.
- 2 Select **Set Tone**.
- 3 Select **Bass** or **Treble**.
- 4 Turn the knob to change the level.
- 5 Press **⏸**.
- 6 Press **menu** to return to normal operation.

Aim antenna for best reception

For best reception, your XM antenna should have an unobstructed view of the XM satellites in the southern sky. In large cities, XM has a network of ground repeaters to help increase the signal coverage.

Your Xpress^{RC} can help you aim the antenna for best reception.

- 1 Press **menu**.
- 2 Select **Antenna Aiming**, and press **⏸**.
- 3 The Satellite and Terrestrial bars show the level of your current signal

- 4 Slowly turn and tilt the antenna until either bar is filled as much as possible.
- 5 Press **⏸**.

Backlight Settings

To change the display's brightness, backlight timer, and Auto Dimming status:

- 1 Press **menu**.
- 2 Select **Change Display**, and press **⏸**.
- 3 Select **Display Setting**, and press **⏸**.
- 4 Change:
 - **Brightness** – Select **Brightness**, and press **⏸**. Turn the knob to adjust the brightness. Press **⏸** when finished.
 - **Backlight** – Select **Backlight**, and press **⏸**. Select the timer setting for the backlight. Press **⏸** when finished.

Configuring your Xpress^{RC}

Display appearance

At times, cold weather can negatively affect the visual quality of scrolling text. You disable or enable display scrolling globally. By default, display scrolling is On so that you can scroll through all display items, such as Artist Name, Song Title, Info Extras, and Stock information. Turning off display scrolling lets you view only by page.

- 1 Press **menu**.
- 2 Select **Change Display**, and press **OK**.
- 3 Select **Display Appearance**, and press **OK**.
 - **Stocks** – Select **Stocks**, and press **OK**. Select either **Scrolling** (the stock ticker will scroll across the screen) or **Paging** (stock information will appear one page at a time). Press **OK** when finished.
 - **Sports** – Select **Sports**, and press **OK**. Select either **Scrolling** (scores will scroll across the screen) or **Paging** (scores will appear one page at a time). Press **OK** when finished.

Set time

The time is automatically set for you.

To set your time zone:

- 1 Press **menu**.
- 2 Select **Set Time**, and press **OK**.
- 3 Select **Set Clock**, and press **OK**.
- 4 Select **Select Time Zone**, and press **OK**.
- 5 Turn the knob to your time zone, and press **OK**.

To turn on/off Daylight Savings Time:

- 1 Press **menu**.
- 2 Select **Set Time**, and press **OK**.
- 3 Select **Set Clock**, and press **OK**.
- 4 Select **Daylight Savings Time**, and press **OK**.

Configuring your Xpress^{RC}

5 Turn the knob to:

- **On** if your area participates in Daylight Savings Time
- **Off** if your area does not participate in Daylight Savings Time

6 Press .

To change the format of the time:

1 Press **menu**.

2 Select **Set Time**, and press .

3 Select **Set Clock**, and press .

4 Select **Hour Mode**, and press .

5 Turn the knob to:

- **12** to show time using a standard clock
- **24** to show time using a 24-hour clock

6 Press .

Automatic power

Usually, your Xpress^{RC} turns on automatically when it is plugged in and receiving power. You can change this so you must manually turn the radio on/off each time.

1 Press **menu**.

2 Select **Set Time**, and press .

3 Select **Automatic Power**, and press .

4 Turn the knob to:

- **On** to have your radio turn on automatically when it plugged in
- **Off** to turn your radio on manually after it is plugged in

5 Press .

Delayed power

This option is available if you are using the car cradle and the cigarette lighter is always powered.


1 Press **menu**.

2 Select **Set Time**, and press .

Configuring your Xpress^{RC}

3 Select **Delayed Power**, and press .

- Turn the knob to choose the amount of time (60, 90, 120, or 180 minutes) that should pass before the radio turns off automatically.

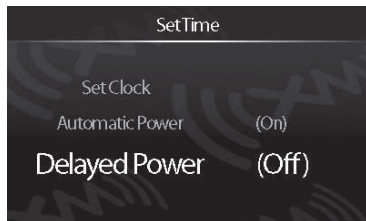

4 Press .

Sleep timer

The Sleep Timer is available only with the home stand (sold separately).

Your Xpress^{RC} has a sleep timer that can automatically shut off the unit after a period of time. By default, the sleep timer is set to OFF but you can set it for 60, 90, 120, or 180 minutes.

1 Press **menu**.

2 Select **Set Time**, and press .

3 Select **Sleep Timer**, and press .

- Turn the knob to choose the amount of time (60, 90, 120, or 180 minutes) that should pass before the radio turns off automatically.



4 Press .



Factory defaults

You can clear all of your personal settings (such as Favorite Channels, SongSaver, Tune-Select, GameSelect, Stocks, and Sports) and return the radio to its out-of-the-box state.

1 Press **menu**.



2 Select **Factory Defaults**, and press .


Configuring your Xpress^{RC}

- 3 Select **Restore Factory Defaults**, and press .
- 4 Turn the knob to:
 - **Yes** to clear your personal settings
 - **No** to keep your personal settings
- 5 Press .

Demo mode

A sales demo will play when your Xpress^{RC} has not been activated and is not receiving a signal. After that, the sales demo will not appear. If desired, you can activate the demo after your Xpress^{RC} is activated.

- 1 Make sure your Xpress^{RC} is not receiving a signal.
- 2 Press **menu**.
- 3 Select **Factory Defaults**, and press .
- 4 Select Sales Demo, and press .

- 5 Turn the knob to
 - **On** to play the sales demo
 - **Off** when you're ready to turn the sales demo off
- 6 Press .



Troubleshooting

Xpress^{RC} has been designed and built to be trouble-free but if you experience a problem, try this:


- Check that all connections are firm and secure.
- Make sure the cigarette lighter/auxiliary power socket is clean and free of corrosion.
- If you are using Xpress^{RC} in your vehicle, check the 12V adapter fuse by unscrewing the ribbed end of the 12V adapter. If required, replace with a 1-amp fuse only. If the 12V adapter does not have a removable end-cap, it has an internal fuse that resets itself after it is left unplugged for a period of time.

If you see this on the screen:	Try this
No signal	<p>Make sure the XM antenna is mounted outside of the vehicle.</p> <p>Move your XM antenna away from the obstructed area. For example, if you are parked in an underground garage, you should receive a signal after leaving the garage. If you are using Xpress^{RC} at home, move the antenna to a south-facing window.</p>
Antenna	<p>Make sure that the antenna cable is firmly and securely plugged into the cradle. Make sure the cable is not bent or broken.</p> <p>Turn Xpress^{RC} off, then on, to reset this message.</p>

Troubleshooting

If you see this on the screen:	Try this
Off Air	The channel you've selected is not currently broadcasting. Tune to another channel.
Loading	Your Xpress ^{RC} is acquiring audio or program information from the XM signal. This message usually goes away in a few seconds.
Updating	XM is updating your Xpress ^{RC} with the latest encryption code. Wait until the update is done. OR You may be trying to tune to a channel that is blocked or unavailable. Tune to another channel.
—	No program information, such as artist name, song title, or channel exists.
If this happens:	Try this
Xpress ^{RC} shuts off unexpectedly	If the sleep timer is set, the Xpress ^{RC} will turn off after the selected length of time. Turn off the Delayed Power feature.
You do not receive all the XM channels you subscribed to	If you have not yet activated your XM Satellite Radio service, refer to Activation on page 22.
No audio	Check all cables between your Xpress ^{RC} and your stereo system for a firm and secure connection.
No song title or artist name is displayed	The information may not be available or updates may be in progress.

If this happens:	Try this
No audio when listening to via an FM radio	Check that your Xpress ^{RC} and your car radio are tuned to the same FM frequency.
Audio fades or has static when listening	Check all cables for a firm and secure connection. If the problem persists, it might be interference from another FM channel. Refer to Setting the FM Frequency on page 52.
Audio sounds too soft	Raise or lower the FM audio level until the sound quality improves. Refer to Setting the Line Out Level on page 54
XM Instant Traffic and Weather channels sound different from other channels	These channels use a different audio technology than the other XM channels so they often sound different from other channels.

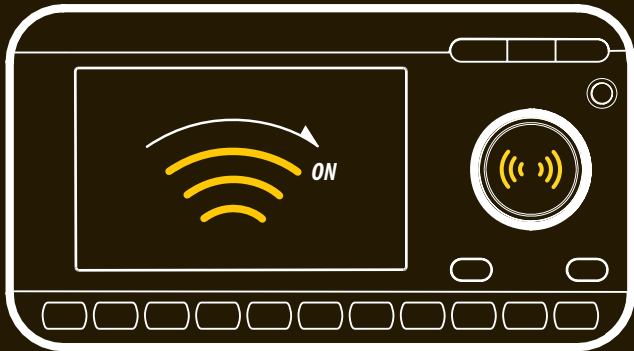

Product Specifications

Dimensions

Xpress ^{RC}	115 mm(W) X 63 mm(H) X 17 mm(D) 4.5 in (W) X 2.5 in (H) X 0.68 in (D)
Remote	40 mm (W) X 119 mm (H) X 14 mm (D) 1.5 in (W) X 4.7 in (H) X .55 in (D)

Weight

Xpress ^{RC}	90 g (3.2 oz)
Remote	40 g (1.4 oz)

Audio Output

3.5 mm mini-stereo jack

Antenna Connector (car cradle)

RM SMB

External Power

Voltage	5 V DC
Current	2000 mA
Polarity	

Remote Battery

Type	CR2032
Voltage	3 V

Model Numbers

Xpress ^{RC}	SA10316
Xpress home kit	XMH-10A
Xpress car kit	XMC-10A

Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in receivers compatible with the XM Satellite Radio system. Furthermore, the AMBE® voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The software is licensed solely for use within this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in an XM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

Environmental Information

Follow local guidelines for waste disposal when discarding packaging and electronic appliances.

Your Satellite Radio receiver is packaged with cardboard, polyethylene, etc., and does not contain any unnecessary materials.

Please note that the power cable that has been supplied with your device is supplied with permanently attached ferrite beads. It is the responsibility of the user to use the power cable with the ferrite beads.

The user is cautioned that changes or modifications not expressly approved by XM Satellite Radio Inc. can void the user's authority to operate this device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna of the affected receiver.
- Increase the separation between the XM equipment and the affected receiver.
- Connect the XM equipment into an outlet on a circuit different from that to which the affected receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! The FCC and FAA have not certified this Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, XM Satellite Radio cannot support this type of application or installation

Warranty

Delphi Limited Consumer Warranty

Delphi Product and Service Solutions (“Delphi”) warrants all XM Satellite Radio Products sold by Delphi (each “Product”) to be free of defects in material and workmanship, subject to the following conditions:

The duration of Delphi’s warranty with respect to each Product is limited to one (1) year from the date of sale to the original consumer purchaser.

NO OTHER EXPRESS WARRANTIES ARE MADE WITH RESPECT TO ANY PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE WARRANTY PERIOD SET FORTH HEREIN. THIS WARRANTY IS NOT TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL CONSUMER PURCHASER OF THE PRODUCT.

Delphi will, as its sole obligation under this warranty, replace or repair, at its option, any Product that does not conform to this warranty. Products may be repaired or replaced with new or with refurbished items. This limited warranty does not cover defects in appearance, cosmetic or decorative items, including any non-operative parts. Under no circumstances will Delphi be liable for any incidental or consequential damages under this warranty or any implied warranties. These remedies are the customer’s exclusive remedies for breach of warranty. This limited warranty only extends to customers who purchase the Products in the United States. Delphi will not be responsible for damage resulting from any (i) deviation of Delphi’s operating instructions as printed in Delphi’s catalog or on any packaging, labels or other literature provided with a Product, (ii) installation of a Product in a manner which is inconsistent with Delphi’s written

instructions, (iii) alteration or modification of a Product, (iv) misuse, (v) neglect, (vi) abuse, (vii) accident, (viii) normal wear and tear, (ix) commercial use, (x) improper storage, (xi) environmental conditions, including excessive temperature or humidity, (xii) service by anyone other than a Delphi authorized repair facility, (xiii) other improper application, installation or operation of this Product, or (xiv) defects or malfunctions of which Delphi is not advised within ten (10) days of the expiration of the limited warranty period.

How you (the Customer) can get service

To obtain warranty service during the first thirty (30) days after the date of purchase, you must return the defective Product with the original receipt to the original place of purchase. To obtain warranty service during the first thirty (30) days for Products purchased from www.delphi.com and for all products for the remainder of the limited warranty period, you must contact Delphi by phone at 1.877.GO DELPHI (1.877.463.3574). If further clarification or additional information is required from Delphi, you may call Delphi at 1.877.GO DELPHI (1.877.463.3574). If warranty service is needed at any time during the warranty period, the purchaser will be required to furnish a sales receipt/proof of purchase indicating the date of purchase, amount paid, and place of purchase. Customers who fail to provide such proof of purchase will be charged for the repair/replacement of any Product.

How state law relates to the warranty

Some states do not allow limitations on the duration of implied warranties, or the exclusion or the limitation of incidental or consequential damages. So the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state. NO PERSON IS AUTHORIZED BY DELPHI TO MODIFY OR ADD TO THIS LIMITED WARRANTY.

Owner's Record

The model number is located below and the serial number is located on the label on the back of the Xpress^{RC}.

Record the serial number in the space provided below. Refer to these numbers whenever you call your dealer regarding this product.

Model No.: SA10316

Serial No.: _____

DELPHI

SA10316

Delphi Corporation
1441 West Long Lake Road
Troy, Michigan 48098-5090 U.S.A.

1.877.GO.DELPHI

www.delphi.com

XM name and related logos are registered trademarks of XM Satellite Radio Inc. All other trademarks are the property of their respective owners.

♻️ Printed on Recycled Paper
© 2007 Delphi Corporation. All rights reserved.

DPSS-07-E-072



XM-9800-127-00