

Doc. n. OIM09039 Rev. 01 24/06/09 Date Page 1 of 13

Installation and operational manual Title :

**Project GT Stove 2** 

**RF** handset

Written by: C.Menegazzo

Verified by: M. Santello

A. Vendramini Approved by:



 Doc. n.
 :
 OIM09039

 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 2 of 13

### 1. Revisions index

Rev.	Date	Description	Author
00	24/04/09	Document emission	C.Menegazzo
01	01/1209	Regulatory Compliance (FCC)	A.Vendramini



 Doc. n.
 :
 OIM09039

 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 3 of 13

### 2. Index

1.	Revisions index	2			
2.	Index	3			
3.	Abstract	5			
4.	Definitions				
5.	Related document	5			
6.	Product description	6			
6.1	1 Power supply	6			
6.2	2 Environmental conditions	6			
7.	Reference drawings	7			
7.1					
7.2	2 LCD display view	8			
8.	Use's instructions	9			
8.1	1 Preliminary operations	9			
9.	Operations	9			
9.1	1 Clock regulation	9			
9.2	2 Switching ON/OFF	9			
9.3	3 Automatic/Manual mode selection	10			
9.4	4 Manual mode burner level selection	10			
9.5	5 Automatic mode operation	10			
10.	Menu navigation	10			
10.	0.1 Fan Control AUTO	11			
10.	0.2 Sleep function SLEEP	11			
10.	0.3 Crono program function PROGRAM	11			
	Keyboard lock/unlock				
11.	13U Y DUGI U 1UUN UIIIUUN	1 <i>4</i>			



 Doc. n.
 :
 OIM09039

 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 4 of 13

12.	°C/°F	12
13.	Battery level indication	12
14.	WEEE statement	13
15.	FCC Notice	Fehler! Textmarke nicht definiert.



 Doc. n.
 :
 OIM09039

 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 5 of 13

#### 3. Abstract

This document describes the installation procedure and the operational requirements to operate properly the GT Stove 2 system RF handset.

#### 4. Definitions

Automatic mode Thermostatic: the flame level is automatically set by the remote depending on the SET room

temperature and the actual room temperature

Manual mode The flame level is set manually by the user

STANDBY The appliance is off.

CRONO Time program mode: the remote switches ON/OFF the burner depending on the set time

program

#### 5. Related document

Electrical schematic: 7510181



Doc. n. : OIM09039
Rev. : 01
Date : 24/06/09
Page : 6 of 13

### 6. Product description

The RF handset is a remote control based on RF transmission, specifically designed to operate with GT Stove 2 system, in combination with a specific RF receiver module.

#### 6.1 Power supply

Nr. 3 AAA batteries.

#### **6.2** Environmental conditions

Temperature	0°C ÷ +50°C
Humidity	≤ 85%



 Doc. n.
 :
 OIM09039


 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 7 of 13

### 7. Reference drawings


#### 7.1 Front view

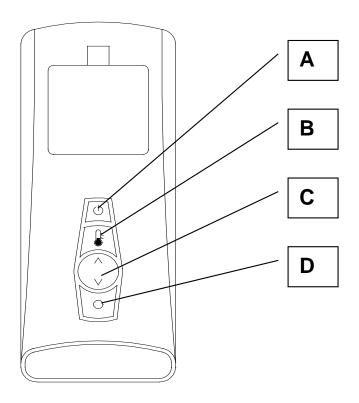



Doc. n. : OIM09039
Rev. : 01
Date : 24/06/09
Page : 8 of 13

### 7.2 LCD display view

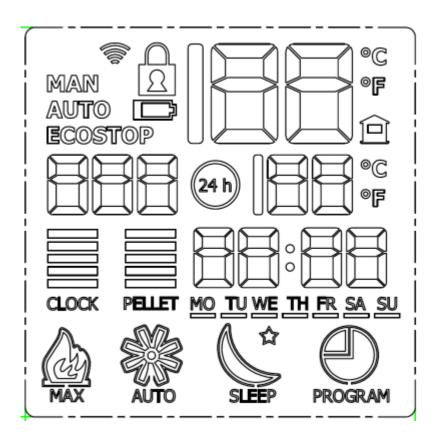



Doc. n. : OIM09039 Rev. : 01 Date : 24/06/09 Page : 9 of 13

#### 8. Use's instructions

#### 8.1 Preliminary operations

Insert the 3 AAA batteries in the back battery seat.

### 9. Operations

#### 9.1 Clock regulation

#### Quick description: clock regulation is done by mean of keys C and D.

After first power on (batteries insertion).

As soon as the batteries are newly inserted the time's digits blink.

The keys "C", increments ("UP" side) and decrements ("DOWN" side) the hour, minute and week's day value, the keys "D" set the on going modification's value among hour, minutes, and week's day. After week's day regulation, pushing "D" key sets automatically the operational mode "OFF".

#### During operation

During operation, press contemporarily for 3 seconds the pushbuttons "D" and "B", the written "CLOCK" will appear. To change the clock settings, repeat the above described operations.

#### 9.2 Switching ON/OFF

#### Quick description: keep key "A" pressed at least 2 seconds.

By pressing the pushbutton "A" for at least 2 seconds, the stove and the handset are switch ON/OFF. When the remote is switched OFF, the display shows the time, day, room temperature and if enabled, "CRONO" symbol.



Doc. n. : OIM09039 Rev. : 01 Date : 24/06/09 Page : 10 of 13

#### 9.3 Automatic/Manual mode selection

### Quick description: press "B" key

With stove lighted, by pressing "B" key the operational mode is switched from manual to automatic (see par. 4) and vice versa.

When automatic mode is active, the display shows the SET temperature value and the "AUTO" icon.

When manual mode is active, the display shows the "MAN" icon, the flame's icon and the actually set flame level. If level 5 is currently active, the icon "MAX" below the flame's icon appears

#### 9.4 Manual mode burner level selection

#### Quick description: press "C" key

Press "C" ("UP" and "DOWN") key to move upward and downward in burner flame's level. The operation is not cyclic.

In manual mode it's not possible to have a flame level lower than level 1.

#### 9.5 Automatic mode operation

When automatic mode is selected, the remote checks the room temperature by mean of an internal NTC at a fixed time interval. Depending on the difference between set room temperature and actual room temperature, the remote proceeds to modulate the flame increasing or decreasing the flame level with 1 level's step.

The remote modulates the flame by means of RF signals at 315MHz.

### 10. Menu navigation

#### Quick description: by "D" key pressure.

By pressing "D" key, it's possible to move sequentially to the accessory functions "fan level", "sleep" and "program", in this order; with a further pressure of "D" key the display operation comes back to the active operational mode

If no key is pressed within 7 seconds from the menu navigation's activation, the display comes back to the active operational mode.



10.1

### Preliminary

 Doc. n.
 :
 OIM09039

 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 11 of 13



There is 2 Fans; every Fan has 5 speed level + auto level + OFF level. The level is settable by "C". If display shows number 1 it means that the user is setting the first FAN, if press "D" button, display shows number 2 and the user can set second FAN speed level.

# 10.2 Sleep function SLEEP

"Sleep function" can be set, after having accessed to the related menu (see par. 10). The activation of sleep function is postponed from the activation of a fixed time, settable (increase/decrease) at 15 minutes interval. The remaining time to sleep activation substitutes the current time indication on the display.

After the deactivation of sleep menu (7 seconds without any key pressure or further "D" key pressure), the countdown to sleep activation appears on the display. As soon as sleep mode activation's occurs, the current time is again shown.

If, during the sleep activation waiting interval a STANDBY activation is scheduled by CRONO program, it is ignored and the operation proceeds until SLEEP intervention, while a manual STANDBY or shut OFF disables the previous SLEEP command.

When SLEEP is on air, the shape of SLEEP icon is only active.



#### 10.3 Crono program function PROGRAM

"CRONO" mode program can be set directly by "D" key pressure is the burner is OFF, otherwise accessing to MENU navigation (see par. 10).

Once entered in program MENU navigation, the last set program is loaded, also OFF if the CRONO was previously disabled.

When CRONO is on air, the shape of CRONO icon is only active while the filled icon appears only during regulation.

There are 10 weekly programs P1-P10 and 60 personal program settable in P99.

When the user is setting a personal program a icon (24 h) appears.

To disable CRONO operation set the "OFF" selection.

This function is settable also if the RF handset is OFF pressing "D" button.



Doc. n. : OIM09039
Rev. : 01
Date : 24/06/09
Page : 12 of 13

### 11. Keyboard lock/unlock

By ke	eping pressed	"D" key	al least for	5 seconds,	the keyboard is	locked/unlocked.	The locking	icon
-		-			-		_	
anneai	rs: \( \bar{\Omega} \).							
аррса								
<b>12.</b>	°C/°F							

With remote OFF, keeping pressed "B" key at least for 5 seconds, the temperature unit changes from Celsius to Fahrenheit degrees and vice versa.

### 13. Battery level indication



 Doc. n.
 :
 OIM09039

 Rev.
 :
 01

 Date
 :
 24/06/09

 Page
 :
 13 of 13

#### 14. WEEE statement

In conformity with European directive 2002/96/CE, this product is classed in the category of electrical and electronic equipment subject to the requirements for separate waste collection and recycling. It carries the selective waste disposal mark. This indicates that it should not be disposed of with other domestic waste, but should be left at an appropriate collection point provided by your local authority. It will be returned to an approved centre which will reuse and recycle its constituent parts, whilst neutralising any possible substances harmful to health or the environment. By participating in separate waste collection, you are contributing to reducing wastefulness of our natural resources.

### 15. Regulatory Compliance (FCC)

This equipment has been tested and found to comply with Part 15 of the FCC Rules.

#### NOTE:

Any changes or modification not approved by SIT LA PRECISA S.p.A. could void the user's authority to operate the equipment.