



9.957.033 002

584 PROFLAME G FIRE TRANSMITTER

USE AND INSTALLATION INSTRUCTIONS



Read the instructions before use.

IMPORTANT

The 584 PROFLAME G Fire Transmitter is integrating part of the 584 PROFLAME G System, which is composed of:

- 584 PROFLAME G Fire Transmitter
- 584 PROFLAME G Fire Receiver

The 584 PROFLAME G Fire Transmitter is designed and realized to be used exclusively with the 584 PROFLAME G Fire Receiver.

Please use this Installation Manual in conjunction with the 584 PROFLAME G Fire System, for complete installation instructions.

The SIT 584 PROFLAME G Fire Transmitter is a device that allows, when used with the 584 PROFLAME G Fire Receiver and in conjunction with the Combination Gas Control, to command appliances like fireplaces and log sets.

With the 584 PROFLAME G Fire Transmitter it is possible to turn the appliance on and off.

The 584 PROFLAME G Fire Transmitter is the Remote Control that commands the Receiver. See Fig. 1.

Moving the side slider in the direction of the transmission light it is also possible to disconnect the electric supply of the internal batteries (child safety feature).

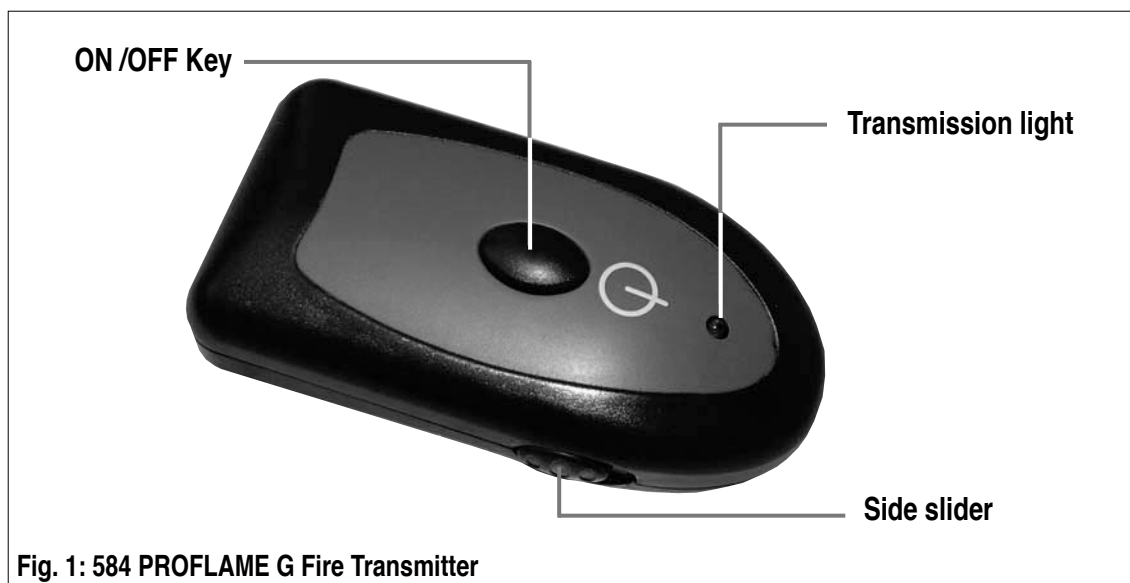


Fig. 1: 584 PROFLAME G Fire Transmitter

TECHNICAL DATA

Supply voltage	4.5 V (Three AAA batteries)
Ambient temperature ratings	0 - 60 °C (32 - 140 °F)
Radio frequency	315 MHz

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND**
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.**

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USERS'S AUTHORITY TO OPERATE THE EQUIPMENT.

Check the functionality of the Remote Control

The Remote Control is powered by three AAA 1.5 V batteries in the proper compartment with the correct polarity; see Fig. 2. The correct power of the Remote Control can be checked observing the presence of the red light when ON/OFF button is pressed; see Fig. 1.



Fig. 2



CAUTION

Property Damage Hazard.

Excessive heat can cause property damage

The fireplace can stay ignited for many hours. Take care to turn off the fireplace if it is unattended by adult people.

Do not leave the Remote Control where children can reach it.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and Receiver.
- Connect the equipment into an outlet on a circuit different from that to which the Receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.