

SKLZ® PITCHBACK®

INSTRUCTIONS

COMPONENTS


PART #	QUANTITY	DESCRIPTION	
1	3	31.75" Straight Tube	
2	2	31" L-Shaped Tube (Female)	
3	2	31" L-Shaped Tube (Male)	
4	2	21" L-Shaped Tube (Female)	
5 & 6	2	21" L-Shaped Tube (Male)	
7	2	30" Extending Straight Tube	
8	2	3.5" Straight Connector Fitting	
9	2	Butterfly Nut and Bolt 2.5"	
10	4	Butterfly Nut and Bolt 2.25"	
11	26	Net Hooks	
12	1	Net	
13	4	Ground Stakes	
14	1	White Target Ribbon	

ASSEMBLY INSTRUCTIONS

ATTACHING HOOKS AND GROUND STAKES:

- » Slide 5 Net Hooks (part #11) onto two of the Straight Tubes (part #1), 5 hooks per tube.
- » Slide 8 Net Hooks onto each Long Female L-Shaped Tube (part #2).
- » Then take the remaining Straight Tube (part #1) and slide on 2 Ground Stakes (part #13).
- » Slide the two remaining Ground Stakes onto each L-Shaped Tube (part #5 and #6).

Note: Make sure all hooks face the same way during assembly.

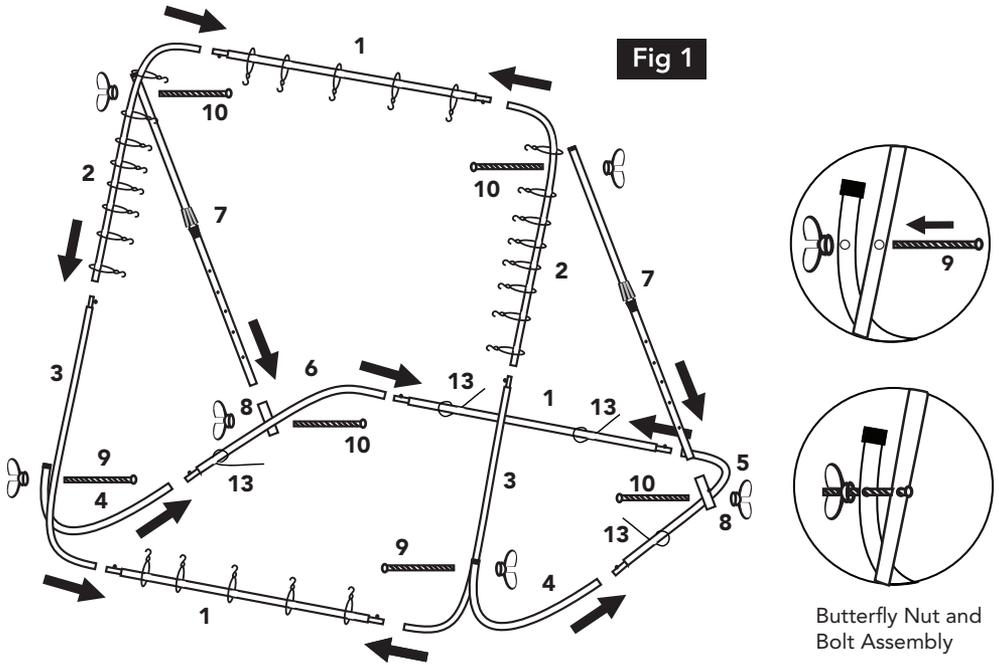

ASSEMBLING THE PITCHBACK FRAME:

- » Follow the illustration in Figure #1 to assist in assembling the rest of the frame.
- » Fit tubes #2 and #3 together on each side, then fit two Straight Tube (part #1 with net hooks) between them at the top and bottom to create the main net frame.
- » Attach tubes #4 the bottom of the frame with the large Butterfly Nuts and Bolts (part #9).
- » Fit Straight Tube (part #1 with ground stakes) into tubes #5 and #6 and fit into tubes #4 to finish the bottom frame.
- » Attach both Straight Connector Tubes (part #8) to the bottom of the frame with the two small Butterfly Nuts and Bolts (part #10).
- » Fit each Extending Tube (part #7) into the Straight Connector Tubes (part #8), attach the top of each Extending Tube to the top of the frame with the small Butterfly Nuts and Bolts (part #10).

HOW TO ATTACH THE NET:

- » Spread out the Net Hooks (Part #11) along the frame, making sure they are all still facing the same way.
- » **Attach the net by following the numbered sequence illustrated in Figure #2.** Start by taking the Net (Part #12) and attaching one of the squares with a red tab to the top left net hook. Skip one net square between the top and side hook and attach the side hook for this corner.
- » Find the square with the other red tab and repeat this procedure for the top right corner.
- » Attach the net to the remaining two corners, making sure that each corner of the net is attached to two net clips. *Study the net clip configuration as shown in Diagram #2. This represents the best clip positioning for optimum performance.*

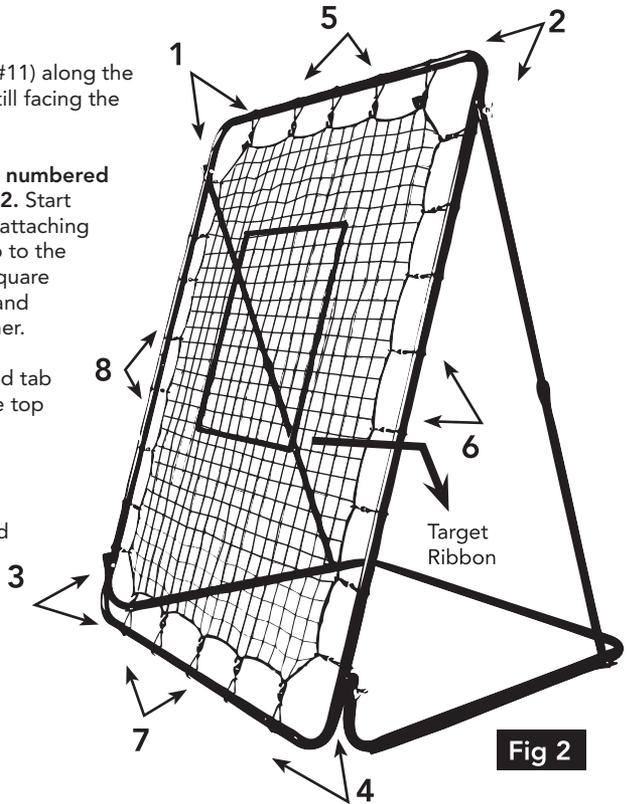


Fig 2

WARNING: USE EXTREME CAUTION WHEN ASSEMBLING THIS NET TO THE FRAME. THE BUNGEE CORDS WILL BE UNDER EXTREME TENSION AND MUST BE ATTACHED CAREFULLY. ADULT ASSEMBLY IS STRONGLY RECOMMENDED.

HOW TO ATTACH THE TARGET RIBBON:

- » Attach the White Target Ribbon (Part #14) by weaving the ribbon through the net (10 squares across and 14 down) and tying off at the ends. See Figure #3




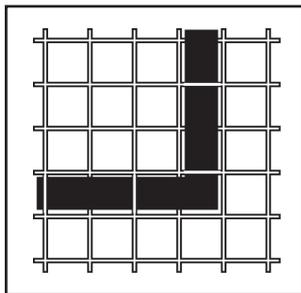


Fig 3

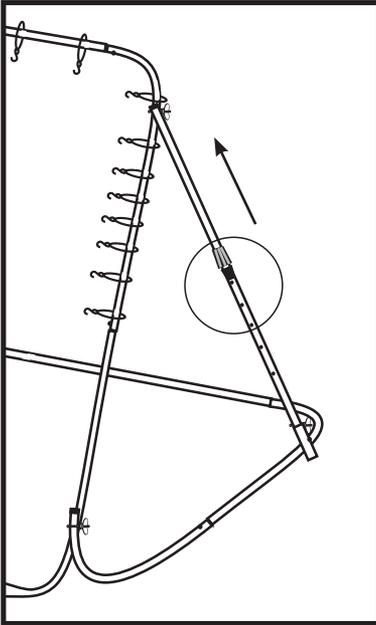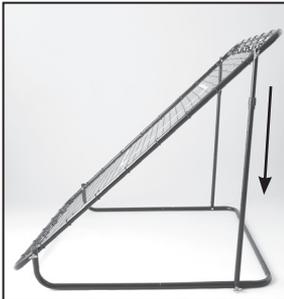


HOW TO ADJUST THE ANGLE:


- » You are able to adjust the PitchBack to 10 different angles for Pop Flies, Line Drives and Grounders.
- » First unscrew the support bracket on each Extending Straight Pole (part #7).
- » Push in the push pin and adjust the height up or down. Make sure each pin is locked into place and the pins are at the same level on each side.
- » Once you have the correct angle tighten the support bracket on each side.

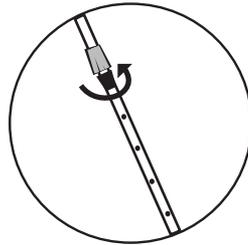

» Pop Flies

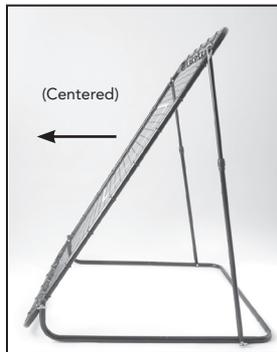

» Line Drives

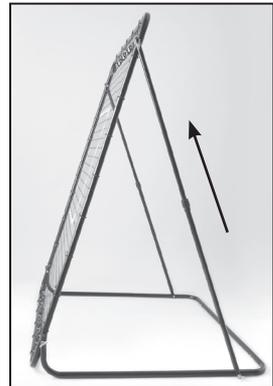

» Grounders

Safety Warning: All rebounders should be utilized with adult supervision to ensure safe use. Thrown balls may rebound more quickly than anticipated. Be sure to practice throwing balls at slow speeds to become accustomed to the way a ball returns when thrown.