



1. When press the button “I”, the machine 1 shooting a target.
2. When press the button “II”, the machine 2 shooting a target.
3. When press the button “B”, machine 1 and machine 2 both shooting a target.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.