

delay is 15 seconds, with a visual count down, before the system is armed.

6.2 DISARMING THE ALARM SYSTEM

Using the Wireless Alarm Panel:

Enter your 4-digit PIN (or default PIN **1234**) followed by **✓** to disarm the system.

Using the Remote Control:

Press the **☰** button on the remote control to leave the mode. The default entry delay time is 30 seconds, with a visual count down, before the siren is activated.

7. OPERATING THE ALERT SYSTEM

*Make sure that you are in **STANDBY** mode before taking any further steps.

To make sure you are in **STANDBY** mode:

Enter your 4-digit PIN (or default PIN of **1234**) then press **✓**.
 The **🔔** symbol on the display will then disappear.

7.1 GO INTO ALERT MODE

Via the Wireless Alarm Panel:

Enter your 4-digit PIN (or default PIN **1234**) followed by **✓** then press **🎵** to activate **ALERT** mode.

Via the Remote Control:

Press the **🎵** button on the remote control to activate **ALERT** mode.

7.2 EXIT ALERT MODE

Via the Wireless Alarm Panel:

Enter your 4-digit PIN (or default PIN **1234**) followed by **✓** to exit **ALERT** mode.

Via the Remote Control:

Press the **☰** button on the remote control to exit **ALERT** mode.

8. MUTING THE AUDIBLE COUNTDOWN

When the Wireless Alarm Panel is armed, the audible countdown (beeper) can be silenced by pressing the **🔇** button, during the countdown. To reactivate the audible countdown (beeper) the **🔇** button should be pressed again.



12-MONTH WARRANTY
 For additional information visit: www.mace.com



Quick Start Guide



MAW-WA-SYS

1. GETTING STARTED

 
Please check that all of the following items were included in the package before installing the system:

- Wireless Alarm Panel
- Keychain Remote Control
- Pet Immune Motion Sensor
- 2x Magnetic Door & Window Sensors
- AC Adaptor for Wireless Alarm Panel
- Double-Sided Adhesive Pads For Window & Door Sensors
- Screws & Wall Plugs (2 Sets)
- Wall Mount Bracket
- Desktop Kickstand
- Quick Start Guide
- User Guide

2. INSTALLING THE BATTERIES & POWERING UP THE SYSTEM

Door/Window Sensor


Requires a AAA alkaline battery (included). Slide off the battery cover and insert the batteries noting the polarity (Fig. 1). Replace the cover.

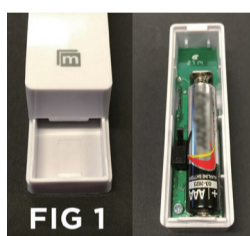


Wireless Alarm Panel

Lithium battery & AC adaptor (included)

 
STEP 1: Unscrew the battery compartment and remove the cover (Fig. 2)

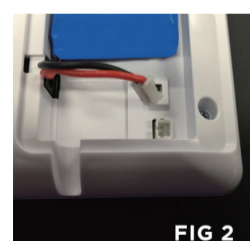

 STEP 2: Connect the lithium battery to the battery connection port (Fig. 3) (**Note:** The connector has a notch that guides it into place) and plug the AC adaptor into the Wireless Alarm Panel (Fig. 4)

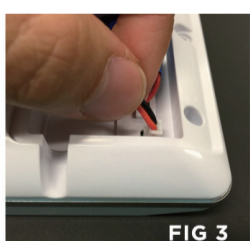

 STEP 3: Replace the cover and screw, and connect the AC adaptor to a wall socket. (Fig. 5)

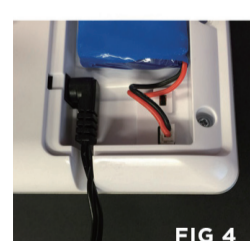

3. STATUS ICON

3.1 ARM MODE

In **ARM** mode, the Wireless Alarm Panel's **alarm** will sound and the DISPLAY will flash when the system is triggered.

3.2 ALERT MODE

In **ALERT** mode, the Wireless Alarm Panel's **chime** will sound and the DISPLAY will flash when a visitor is detected.

3.3 HOME MODE

In **HOME** mode, the system can operate in both the **ARM** and **ALERT** modes in different zones. The system comes with default settings that allow the system to operate directly after opening the package, but the settings can be adjusted to suit individual requirements (see User Guide).

4. SETTING YOUR PIN

To program your new 4-digit PIN:

*Make sure that you are in **STANDBY** mode before taking any further steps.

To make sure you are in **STANDBY** mode:

Enter default PIN of **1234** then press **✓**.
 The **🔔** symbol on the display will then disappear.

Step 1: Enter factory default PIN of **1234** again then press **✓**.

The **🔔** symbol on the display will then disappear.

Step 2: Press **🔑** then **1** to set new PIN.

Step 3: Enter your new 4-digit PIN then **✓**.

Step 4: Re-enter your 4-digit PIN plus **✓** to confirm.

The system will produce a chime sound indicating the new PIN has been accepted.

5. ENROLLING THE REMOTE CONTROL

Note: Before the Keychain Remote Control supplied with the system is able to work it first needs to be enrolled (added onto the system) as follows:

*Make sure that you are in **STANDBY** mode before taking any further steps.

To make sure you are in **STANDBY** mode:

Enter your 4-digit PIN (or default PIN of **1234**) then press **✓**.
 The **🔔** symbol on the display will then disappear.

Step 1: Enter your 4-digit PIN (or default PIN of **1234**) then press **✓**.
 The **🔔** symbol on the display will then disappear.

Step 2: Press **🔑** then **2** to enter Remote Control Enroll Mode

Step 3: Then press any key on the Remote Control to enroll it onto the system

Step 4: Press **✓** to complete the enrollment

The system will produce a chime sound indicating the new Remote Control has been added.

6. OPERATING THE ARM MODE

*Make sure that you are in **STANDBY** mode before taking any further steps.

To make sure you are in **STANDBY** mode:

Enter your 4-digit PIN (or default PIN of **1234**) then press **✓**.
 The **🔔** symbol on the display will then disappear.

6.1 ARM THE ALARM SYSTEM

Using the Wireless Alarm Panel:

Enter your 4-digit PIN (or default PIN of **1234**) followed by **✓** by then press **🔒** to activate the **ARM** mode.

Using the Remote Control:

Press the **☰** button on the remote control to activate the **ARM** mode. The default exit

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

The MaceAlert Smart Panel complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.