



TriggerLinc™

INSTEON® Wireless Door Window Sensor (Open/Close)

Model : 2843-2



SMARTHOME™

I
N
S
T
E
O
N

TriggerLinc Owner's Manual

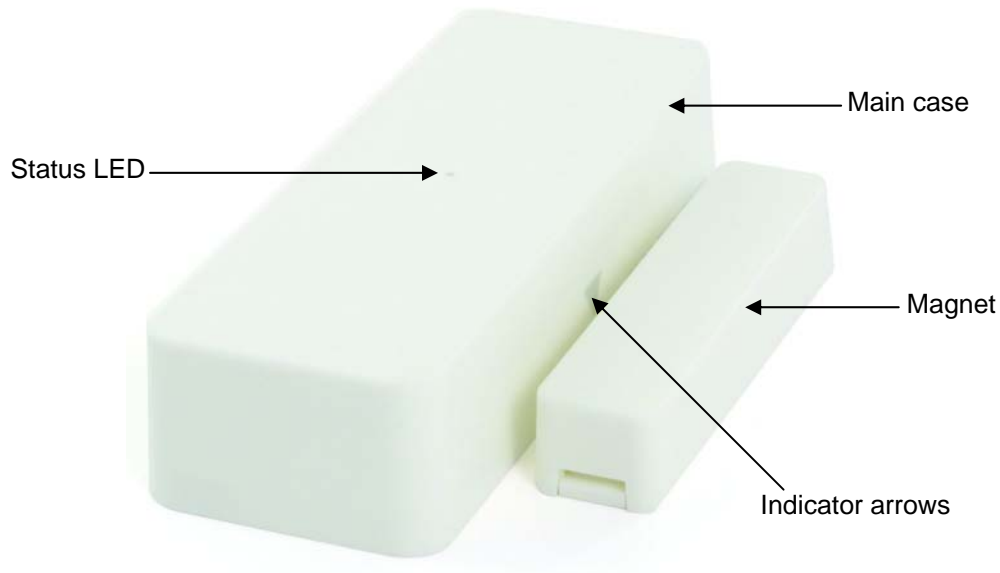


TABLE OF CONTENTS

ABOUT TRIGGERLINC	3
Key TriggerLinc Features	3
What is Included with TriggerLinc	3
WHAT IS INSTEON?	4
INSTALLATION	5
TriggerLinc Hardware	5
Installing TriggerLinc	6
Connecting an External Sensor to TriggerLinc	6
CONTROLLING INSTEON RESPONDERS FROM TRIGGERLINC	7
Linking TriggerLinc to an INSTEON Responder	7
Unlinking an INSTEON Responder from TriggerLinc.....	7
Using TriggerLinc's Multi-Scene Mode.....	8
CREATING INSTEON SCENES	9
ADVANCED FEATURES	9
Advanced Use of External Sensors with TriggerLinc	9
Restoring Power to TriggerLinc.....	9
Resetting TriggerLinc to its Factory Default Settings	10
ABOUT INSTEON	10
Using Dual-Band INSTEON Devices to Upgrade Your Network.....	10
Important Note about INSTEON Networks; Split Single-Phase vs. 3-Phase Installation	10
Further Enhancing Reliability	11
ADDITIONAL RESOURCES	11
SPECIFICATIONS, CERTIFICATION, AND WARRANTY	11
Specifications	11
FCC & Industry Canada Compliance Statement.....	11
Limited Warranty	12

ABOUT TRIGGERLINC

TriggerLinc can wirelessly control lights or appliances throughout your home. Program any INSTEON device to react when the magnetic contact is broken and re-established on TriggerLinc. Useful for doors, windows, drawers, cabinets, or anything else that opens. You can optionally connect an external contact closure sensor of any type (e.g., hidden contacts or doorbell button).



Key TriggerLinc Features

- Installs and Links to other INSTEON devices in minutes
- Operates via radio frequency (RF) to eliminate unsightly and inconvenient wiring
- Battery-operated for easy installation
- Wires standard security sensors to TriggerLinc to monitor several doors or windows
- Excellent range – up to 150 feet from the nearest access point
- Indicates INSTEON setup mode activity and operational states with a Status LED
- Stores setup state in memory so settings aren't lost when batteries are removed
- Two-year warranty

What is Included with TriggerLinc

- TriggerLinc – INSTEON Wireless Door Window Sensor (Open/Close)
- Magnet
- One (1) AA battery
- Quick-Start Guide

WHAT IS INSTEON?

Since its inception in 2005, INSTEON has become a best-selling home-control networking technology, offering more reliability and flexibility than any other home management system on the market. INSTEON systems are simple, reliable, and affordable. Simple, because each device takes mere minutes to install. Reliable, because every INSTEON device works as a network repeater, ensuring your commands will not be lost. Affordable, because INSTEON can be integrated into any number of devices easily and at a very low cost. An INSTEON home grows in value with each added INSTEON device, making life more convenient, safe, and fun.

How Does INSTEON Work?

What makes INSTEON the most reliable home automation network is its dual-mesh network. INSTEON devices use both radio frequency (RF) signals and the home's existing wiring to talk to each other. In an INSTEON network, every INSTEON device also acts as a repeater, receiving and sending every message to all other devices in the network. So by integrating more INSTEON devices you will strengthen the network and ensure no commands will be lost.

No central controller or networking setup is required with an INSTEON network. Simply install your devices and then use a series of button presses or taps to Link your devices together. Throughout this Owner's Manual, you may see the terms "Controller" or "Responder". These generic INSTEON terms refer to the components of an INSTEON scene, and are used on a scene-by-scene basis.

- **Controller** – sends INSTEON commands to other devices
- **Responder** – reacts to commands sent out by another INSTEON device

An INSTEON device may act as a Controller, Responder, or sometimes both.

INSTEON networks are also extremely secure. Each INSTEON device is assigned a unique INSTEON ID, so unless neighbors or would-be hackers have access to your particular device's INSTEON ID, they won't be able to control your home, even if they are using similar products.

INSTALLATION

TriggerLinc Hardware

Reed Switch

Used by TriggerLinc to detect whether the included magnet is within ½ inch of the main case:

- Reed switch is in the closed state when the magnet is inside ½ inch
- Reed switch is in the opened state when the magnet is further than ½ inch

Jumper

When the jumper is installed (default), TriggerLinc will send an INSTEON ON command when it opens and an OFF command when it closes. When the jumper is uninstalled (as in Multi-Scene Mode), TriggerLinc will activate Scene 1 when it opens and activate Scene 2 when it closes.

NOTE: When installing or uninstalling the jumper, the battery will need to be removed and then reinstalled for the new jumper setting to take effect.

Set Button

Used to:

- Link to other INSTEON devices (Responders)
- Control Linked Responders (Scene 1): tap to toggle between on and off

External Sensor Terminals

When using an external sensor, TriggerLinc is in the closed state when **either** the external sensor terminals or the reed switch are closed. In other words, TriggerLinc opens when **both** the external sensor terminals and reed switch are open. See *Advanced Use of External Sensors with TriggerLinc* for more information.

Status LED

Indicates:


- Change in state (opens or closes)
- TriggerLinc is in Linking/Unlinking Mode (Status LED is blinking)

Arrows

Arrows indicate the location of the reed switch inside the main case, so the magnet should be installed as close as to them as possible.

Magnet

Included magnet is installed on opposing plane than TriggerLinc main case. It should be less than ½ inch away from the main case when the door/window, etc. is closed and further than ½ inch when open.

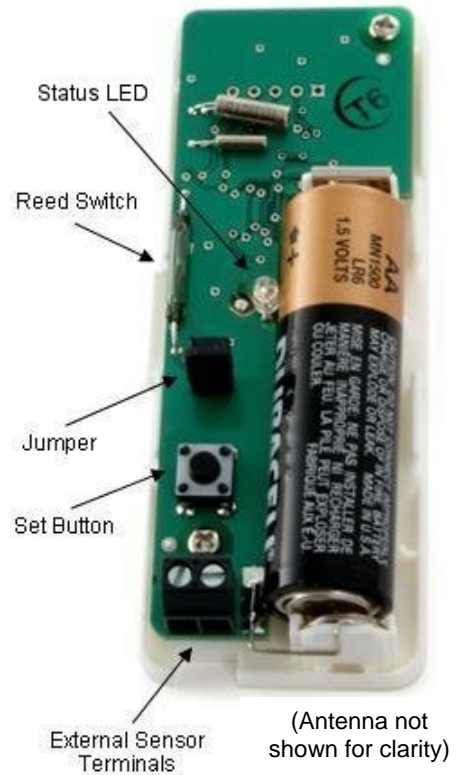

Installing TriggerLinc

- 1) RF-only devices require at least one dual-band INSTEON device, such as an Access Point (#2443), for communication. For the best INSTEON network performance, be sure you have properly installed at least two dual-band INSTEON devices.
- 2) Use a screwdriver to remove the cover of the TriggerLinc main case and install one AA battery (included)
- 3) Unless the location where you plan to mount TriggerLinc is in direct view of the Status LED on a dual-band INSTEON device, have someone watch the Status LED on the nearest dual-band device. Then, hold TriggerLinc in the location where you intend to mount it and tap its Set button.

The TriggerLinc Status LED will flash once

The dual-band device's Status LED will also flash once or twice to confirm TriggerLinc is within range

- If the TriggerLinc Status LED doesn't flash, replace the battery
 - If the TriggerLinc Status LED flashes, but the dual-band device's Status LED doesn't flash, TriggerLinc might be out of range. Try moving the dual-band device to other locations or add additional dual-band devices.
- 4) When mounting TriggerLinc, ensure the main case and magnet are as close to each other as possible. The magnet must be within ½ inch of the case to work properly. The arrows on the side of the case and the magnet must also align and face each other.

Screws or double-stick tape can be used for mounting. Depending on the style of your door or window frame, you might need to use some double-stick tape beneath one of the pieces to ensure they are at the same relative height.

NOTE: The included double-stick tape is very strong; you may wish to reduce its adhesion by first pressing it lightly against a piece of fabric or carpet.

- 5) Mount the TriggerLinc magnet to the door/window as close to the edge as possible
- 6) Mount the TriggerLinc case to the door/window trim. If you plan to mount the unit with screws, remove the battery to mount and then reinstall the battery.
- 7) If you plan to Link Responders, see *Linking TriggerLinc to an INSTEON Responder* and then replace the battery cover.

Connecting an External Sensor to TriggerLinc

NOTE: For the basic use of TriggerLinc's external sensor terminals, it is not recommended to also use TriggerLinc's internal reed switch to help ensure the desired behavior. If connecting multiple sensors to TriggerLinc's external sensor terminals and/or using TriggerLinc's reed switch in addition to an external sensor, see *Advanced Use of External Sensors with TriggerLinc*.

- 1) Use a small screwdriver to remove the cover of the TriggerLinc main case
- 2) Strip the sensor wire about ¼ inch
- 3) Unscrew the external sensor terminals, connect the sensor wire, and then screw the terminals in
- 4) Test by opening and closing the sensor

The TriggerLinc Status LED will flash once when the sensor opens or closes

- 5) If you haven't already done so, Link the desired Responders before replacing the cover. See *Linking TriggerLinc to an INSTEON Responder*.
- 6) Replace the TriggerLinc main case cover

CONTROLLING INSTEON RESPONDERS FROM TRIGGERLINC

Linking TriggerLinc to an INSTEON Responder

In default mode, TriggerLinc will:

- Turn on Responders when it opens
- Turn off Responders when it closes

This mode is ideal for garage doors, closets, sheds, etc., where you want the lights on when door/windows are opened and off when they are closed. If you require more flexible functionality, see *Using TriggerLinc's Multi-Scene Mode*.

To use TriggerLinc as an INSTEON Controller, follow these steps to Link TriggerLinc and an INSTEON Responder (the device you wish to control with TriggerLinc) together. Refer to the Responder's Owner's Manual for detailed instructions on how to properly install and Link it to TriggerLinc.

The following will work for the most common INSTEON devices:

- 1) If using the default mode, ensure the TriggerLinc jumper is installed. If using Multi-Scene Mode, the jumper should be uninstalled (or removed).
NOTE: When changing the jumper setting, the battery will need to be removed and then reinstalled for the new jumper setting to take effect.
- 2) At the Responder, set it to the state you wish to activate from TriggerLinc (turn it on if you wish it to be on or off if you wish it to be off when TriggerLinc activates the scene)
- 3) Set TriggerLinc to Linking Mode by pressing & holding the Set button for 3 seconds
The TriggerLinc Status LED will begin blinking
You will have 4 minutes to complete the next step before Linking Mode automatically times out.
- 4) Press & hold the Responder's Set button for 3 seconds
The TriggerLinc Status LED will stop blinking and turn on solid
- 5) Confirm that Linking was successful by opening and closing the magnet/sensor
The Responder will respond appropriately
- 6) If you wish to Link multiple Responders to the same TriggerLinc, repeat steps 2-4 with each Responder

Unlinking an INSTEON Responder from TriggerLinc

If you are no longer going to use an INSTEON Responder that has been Linked to TriggerLinc, it is very important that you Unlink it. Otherwise, TriggerLinc will retry any commands repetitively, thus slowing down the system.

The following will work for the most common INSTEON devices:

- 1) If the Responder is a multi-scene device, tap the Scene button you wish to remove control from until its LED illuminates
- 2) Set TriggerLinc to Linking Mode by pressing & holding the Set button for 3 seconds
The TriggerLinc Status LED will begin blinking
- 3) Set TriggerLinc to Unlinking Mode by pressing & holding the Set button for 3 seconds again
The TriggerLinc Status LED will continue blinking
You will have 4 minutes to complete the next step before Unlinking Mode automatically times out.
- 4) Press & hold the Responder's Set button for 3 seconds
The TriggerLinc Status LED will stop blinking and turn on solid
- 5) Confirm that Unlinking was successful by opening and closing the magnet/sensor
The Responder will no longer respond

NOTE: If you are using Multi-Scene Mode, devices Linked to Scene 2 will not respond when the Set button on TriggerLinc is tapped.

Using TriggerLinc's Multi-Scene Mode

In Multi-Scene Mode, TriggerLinc will:

- Activate Scene 1 when it opens
- Activate Scene 2 when it closes

This mode is ideal when you need more flexibility:

- For rooms where you want the lights left on after the door is closed – simply don't Link any Responders to Scene 2 in this case
- Turning lights on at full-bright when a door is opened and dim when the door is closed
- Activating two independent scenes when a door/window is opened as opposed to closed

Linking in Multi-Scene Mode

- 1) Open the TriggerLinc cover and ensure the jumper is uninstalled (or removed). When uninstalling the jumper, the battery will need to be removed and then reinstalled for the new jumper setting to take effect
- 2) Move the TriggerLinc magnet away from the main case, putting it in the open state
If TriggerLinc was closed, its Status LED will flash once
- 3) Link the desired Responders for when TriggerLinc opens (Scene 1). See *Linking TriggerLinc to an INSTEON Responder*.
Scene 1 will activate whenever TriggerLinc is opened and will toggle on and off when the Set button is tapped (while TriggerLinc is opened)
- 4) Move the TriggerLinc magnet close to the main case, putting it in the closed state
The TriggerLinc Status LED will flash once
- 5) Link the desired Responders for when TriggerLinc opens (Scene 2)
Scene 2 will activate whenever TriggerLinc is closed and will toggle on and off when the Set button is tapped (while TriggerLinc is closed)
- 6) Test that the Responders are working as expected by opening and closing your door or window
Scene 1 will activate when the door or window is opened and Scene 2 will activate when closed

Unlinking in Multi-Scene Mode

- 1) Open the TriggerLinc cover and ensure the jumper is uninstalled (or removed)
- 2) Move the TriggerLinc magnet away from the main case, putting it in the open state
If TriggerLinc was closed, its Status LED will flash once
- 3) Unlink the desired Responders from Scene 1. See *Unlinking an INSTEON Responder from TriggerLinc*.
The Responders will no longer respond when TriggerLinc is opened or the Set button is tapped
- 4) Move the TriggerLinc magnet close to the main case, putting it in the closed state
The TriggerLinc Status LED will flash once
- 5) Unlink the desired Responders from Scene 2
The Responders will no longer respond when TriggerLinc is closed or the Set button is tapped
- 6) Test by opening and closing your door or window
The Responders will no longer respond when TriggerLinc is opened or closed

CREATING INSTEON SCENES

INSTEON scenes let you activate dramatic lighting moods with the tap of just one button. For example, you can set all the lights in a scene to dim to 50% or turn certain lights on while turning others off, all with the tap of a button on a Controller.

INSTEON scenes are very easy to set up – just Link more than one Responder to the same On/Off or Scene button on a Controller. Then, when you tap any of the Linked buttons on the Controller, all of the INSTEON devices Linked in the scene will respond as a group.

ADVANCED FEATURES

Advanced Use of External Sensors with TriggerLinc

For advanced users, a single TriggerLinc can be used to:

- Monitor several doors/windows
- Monitor several different types of sensors
- Monitor external sensors in addition to its internal reed switch

To achieve the desired behavior when using TriggerLinc for any of the above, please observe the following tips:

Using Several Sensors

When several sensors (even of different types) are connected to the TriggerLinc external sensor terminals, keep in mind that TriggerLinc only has two states: opened and closed. So if you have several sensors connected in the following configurations, note the TriggerLinc behavior (it is assumed in this example that the TriggerLinc internal reed switch is not being used).

- Several sensors connected in **series** – TriggerLinc will show open if *any* of the sensors are open and closed when *all* sensors are closed
- Several sensors connected in **parallel** – TriggerLinc will show open when *all* sensors are open and closed if *any* sensors are closed

NOTE: If magnetic door/window contacts are used, there are two types:

- Normally open – when the door/window is closed, the sensor will show *open*. When the door/window is open, the sensor will show *closed*
- Normally closed – when the door/window is closed, the sensor will show *closed*. When the door/window is open, the sensor will show *open*

Using the Internal Reed Switch and External Sensors

When the TriggerLinc external sensors input is used in conjunction with its internal reed switch, TriggerLinc behaves much like several sensors connected in parallel (above), meaning:

- TriggerLinc will be open when *both* the internal reed switch and external reed switch sensor terminals show open
- TriggerLinc will be closed when *either* the internal reed switch or external sensor terminals show closed

Restoring Power to TriggerLinc

TriggerLinc stores all of its settings, such as Links to other INSTEON devices, with non-volatile memory. Because settings are saved in this non-volatile memory, they will not be lost when the battery is removed.

Resetting TriggerLinc to its Factory Default Settings

The factory reset procedure can be used to clear the TriggerLinc memory of all INSTEON Links, etc.

- 1) If you are using TriggerLinc to control any Responders, Unlink them from TriggerLinc. See *Unlinking an INSTEON Responder from TriggerLinc*.
- 2) Use a small screwdriver to gently remove the TriggerLinc main case
- 3) Remove the battery and wait at least 15 seconds
- 4) Press & hold the Set button on TriggerLinc while reinstalling the battery
- 5) Release the Set button when the Status LED turns on

The TriggerLinc Status LED will stay on for about 4 seconds and then turn off

ABOUT INSTEON

Using Dual-Band INSTEON Devices to Upgrade Your Network

What are phases?

The majority of single-family homes in North America have two phases (or “legs”) of 110 Volts coming into their electricity panels. From the panel, they are distributed throughout the home, providing power to outlets and wall switches. These phases come together in some parts of the home to provide 220 Volts of power to large appliances, such as an electric oven or pool pump.

Why do I need to bridge these phases?

Single-band power line devices send commands via the home’s electricity, but only on a single phase. If the command is intended for a device on the opposite phase, there is a good chance the command will go unnoticed. Installing dual-band INSTEON devices, such as Access Points (#2443), on each phase will allow for devices to communicate between the two phases via RF.

Dual-band INSTEON devices embody the full potential of a true INSTEON mesh network. Taking the power line band signal and working in conjunction with the RF band signal, its dual-band function plays out in two ways:

- Phase bridger – a receiver of commands, reacting to and translating signals sent from one power phase to the opposite via RF
- Signal repeater – a participant in an INSTEON network, repeating commands intended for other devices whether those commands are generated from RF or power line-only devices. To ensure reliability, every INSTEON device confirms that it has received a command. If a Controller does not receive this confirmation, it will automatically retransmit the command up to five times.

While using at least one dual-band device is required when using an RF-only device, at least two dual-band devices are recommended in any INSTEON network to ensure reliable communication across two-phase home wiring systems. For larger applications, it is recommended to install at least one dual-band device for every 750 – 1,000 square feet.

Search for dual-band INSTEON devices at: www.smarthome.com/dualband

Important Note about INSTEON Networks; Split Single-Phase vs. 3-Phase Installation

For the best INSTEON network performance, be sure you have properly installed at least two dual-band INSTEON devices. INSTEON has only been officially tested in a split single-phase residential environment but has been known to work in many 3-phase systems, where three dual-band devices are used (one on each phase). However, due to the potential complexity of its troubleshooting, the INSTEON Gold Support Line is unable to support INSTEON in 3-phase environments.

Further Enhancing Reliability

As signals travel via the power line or RF throughout the home, they naturally become weaker the farther they travel. The best way to overcome weakened signals is to increase the coverage of the mesh network by introducing more INSTEON devices.

It is possible that some audio-video devices, computers, power strips, or other electrical equipment may attenuate INSTEON signals on the power line. You can temporarily unplug suspected devices to test whether the INSTEON signal improves. If it does, then you can plug in filters that will permanently fix the problem.

ADDITIONAL RESOURCES

Find home automation solutions, helpful tips, interactive demos, videos, user forums, and more at the Smarthome Learning Center: www.smarthome.com/learningcenter.html

SPECIFICATIONS, CERTIFICATION, AND WARRANTY

Specifications

View specifications for TriggerLinc at: www.smarthome.com/2421.html

FCC & Industry Canada Compliance Statement

This device complies with FCC Rules Part 15 and Industry Canada RSS-210 (Rev. 8). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The digital circuitry of this device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause such interference, which can be verified by turning the device off and on, the user is encouraged to eliminate the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna of the device experiencing the interference
- Increase the distance between this device and the receiver
- Connect the device to an AC outlet on a circuit different from the one that supplies power to the receiver
- Consult the dealer or an experienced radio/TV technician

WARNING: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Limited Warranty

Seller warrants to the original consumer purchaser of this product that, for a period of two years from the date of purchase, this product will be free from defects in material and workmanship and will perform in substantial conformity to the description of the product in this Owner's Manual. This warranty shall not apply to defects or errors caused by misuse or neglect. If the product is found to be defective in material or workmanship, or if the product does not perform as warranted above during the warranty period, Seller will either repair it, replace it, or refund the purchase price, at its option, upon receipt of the product at the address below, postage prepaid, with proof of the date of purchase and an explanation of the defect or error. The repair, replacement, or refund that is provided for above shall be the full extent of Seller's liability with respect to this product. For repair or replacement during the warranty period, call the INSTEON Gold Support Line at 800-762-7845 with the Model # and Revision # of the device to receive an RMA# and send the product, along with all other required materials to:

Smarthome, Inc.
ATTN: Receiving Dept.
16542 Millikan Ave.
Irvine, CA 92606-5027



Limitations

The above warranty is in lieu of and Seller disclaims all other warranties, whether oral or written, express or implied, including any warranty or merchantability or fitness for a particular purpose. Any implied warranty, including any warranty of merchantability or fitness for a particular purpose, which may not be disclaimed or supplanted as provided above shall be limited to the two-year of the express warranty above. No other representation or claim of any nature by any person shall be binding upon Seller or modify the terms of the above warranty and disclaimer.

Home automation devices have the risk of failure to operate, incorrect operation, or electrical or mechanical tampering. For optimal use, manually verify the device state. Any home automation device should be viewed as a convenience, but not as a sole method for controlling your home.

In no event shall Seller be liable for special, incidental, consequential, or other damages resulting from possession or use of this device, including without limitation damage to property and, to the extent permitted by law, personal injury, even if Seller knew or should have known of the possibility of such damages. Some states do not allow limitations on how long an implied warranty lasts and/or the exclusion or limitation of damages, in which case the above limitations and/or exclusions may not apply to you. You may also have other legal rights that may vary from state to state.

INSTEON Technology Patent

U.S Patent No. 7,345,998, International patents pending

© Copyright 2012

Smarthome, 16542 Millikan Ave., Irvine, CA 92606, 800-762-7845, www.smarthome.com

Rev 04-06-2011