

User Manual of Entertainment Tablet series MID

Thank you for purchasing MID products. This user manual introduces every function of the MID briefly, which let you have an easy control in it and enjoy its value fully. Please read this manual carefully before use. The version number of this manual is Ver1.0.

Announcements

1. Please noted that the new battery is only able to achieve the best performance after two or three charge and discharge cycles completely.
2. For the first three times charge battery, please make sure the charging time should be 8-10 hours at least. After it, the battery can be full charged about 4 hours. These make lithium battery achieved its best performance in the future.
3. To prevent data loss, it is recommended that users should be back up important data, especially before the firmware upgrade. We are not be responsible for any losses caused by data loss.
4. This machine is a high-precision electronic product, please do not disassemble by yourself.
5. Please avoid any strong beat or collide the player.
6. Avoid using the player in the following environments: high temperature, low temperature, humid, dusty, powerful magnetic field and long-term exposure under sunlight.
7. It's allow to wipe the device's casing gently by wet cloth drying, and any other chemical solution cleaning is strictly prohibited.
8. The device can not be suffered any drip and splash, and it should not be placed near something like cups filled liquid.
9. To avoid hearing damage, please choose the appropriate volume while listening.
10. Do not alter any part of the device.
11. Please only use the batteries, chargers and accessories manufacturers allowed. It will be violate the warranty regulations or may be dangerous if you use any other ones
12. Please follow the relevant local environmental regulations to dispose the discarded device and accessories.
13. If there is any questions during using, please contact the local dealer or our company's customer service center directly.
14. All specifications or others are subject to change without notice.

Manual Catalogue:

 
- 一、 Product specifications
- 二、 Appearance and Key Description
- 三、 Operation keys introduction
- 四、 Getting Started
 - (一) Open the player
 - (二) Transfer data
 - (三) The use of functions
 - 1. WIFI
 - 2. Play Music
 - 3. Play video
 - 4. Picture browsing
 - 5. Photograph
 - 6. Recording
 - 7. G-SENSOR
 - 8. Download and Use Application
 - (四) Charging Step
 - 1. Charge the unit via MIC-USB adapter.
 - (五) Abnormal restart
- 五、 Frequently Asked Questions
 - 一、 Product specifications

- Model: Touch Smart Slim 3Gi
- FCC ID: 2ABFV-S3GI

- FLASH Capacity: 16GB
- DDR Capacity: 1GB
- USB port: micro USB
- Display: 7.85 inch (type); 1024 x 768 (Display pixels)
- Battery: Rechargeable polymer lithium ion battery 3000mA / h

- Power Adapter: Input: 100-240V~50/60HZ Output: 5V/2.0A
-

二、The appearance and button description:

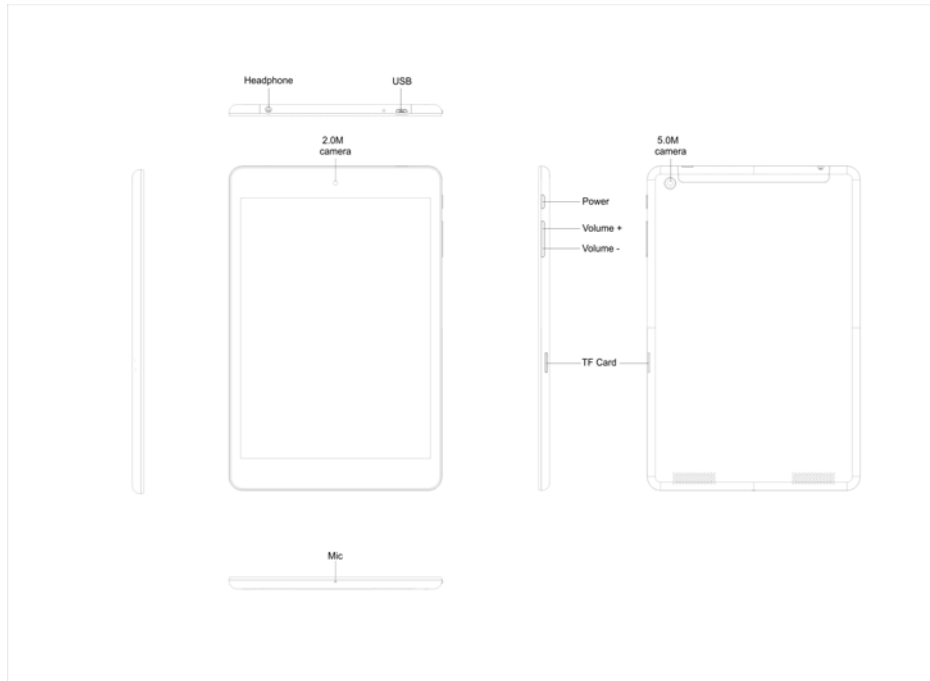

三、The operation keys:

1. Power: Long press to open the device, short press to wake up the device while standby, long press to off the device.
2. Volume +/- : Short press to adjust the volume.

四、Using the entry

(一) Boot device

According to "Power" button in the Appearance and Keys description, long press it to turn on the device.

(二) Transfer data

Connect the device with computer PC through the USB cable in package, a PC with a computer connection (to open USB data connection), the need to transfer music / video / file copy in the computer's hard drive, switch to the MID disk paste can achieve data transfer.

(三) The use of functions:

 
1. WIFI

Turn on the WIFI in "Settings" menu, click search, select the available network and connect it via enter the correct password.



2. Music

Simply click the "Music" into the music player interface, you can download different styles of Music players according to your preference. The unit can support music format of MP3, wav, aac or ogg.

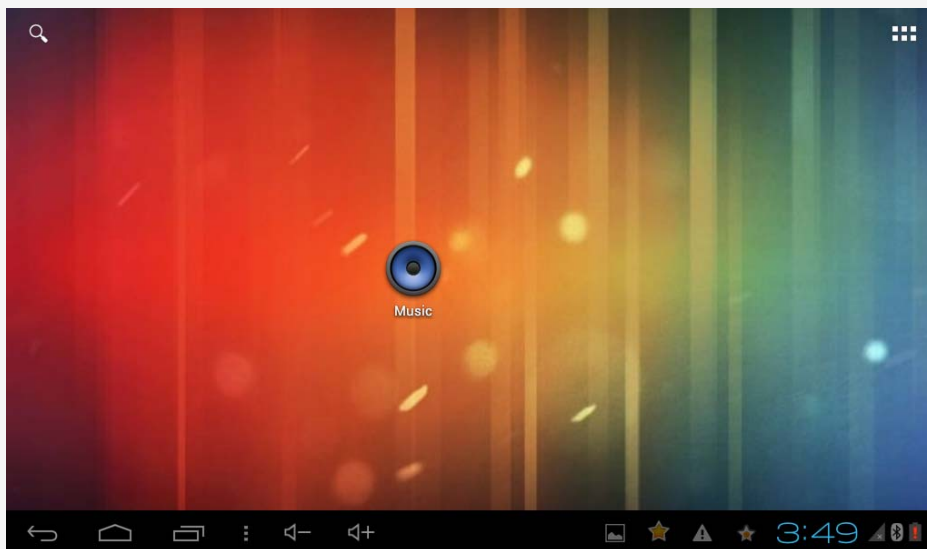


3. Video

Click on the "video" video playback, according to preferences in downloading different style Video player, this product can support video format: 3gp、webm、mov、MP4、flv、mkv

4. Picture

 Simply click the "Music" into the music player interface, you can download different styles of Music players according to your preference. The unit can support music format of MP3, wav, aac or ogg.

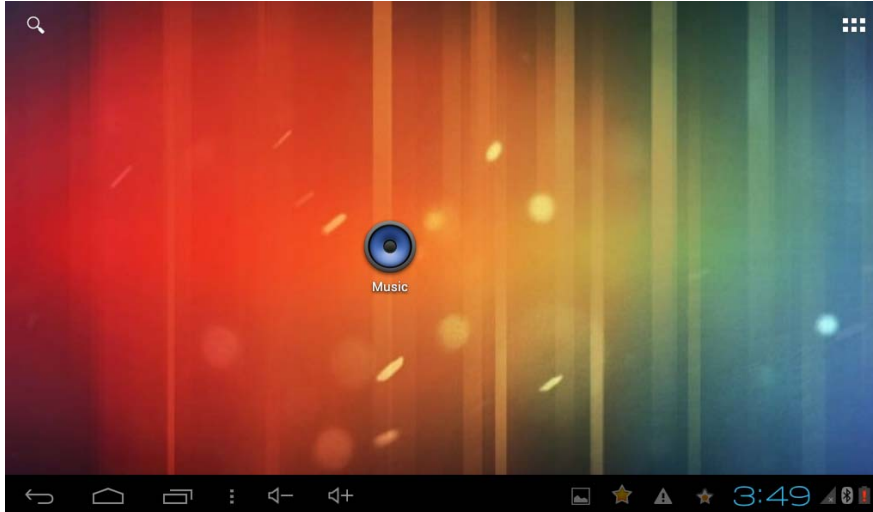


5. 20W&200W Camera

Select the camera phase selection in the menu, can operate the camera and camera features, insert TF card, can also be saved in TF Cary


6 Sound recording

 Click the "Record" menu directly for enter the recording interface.

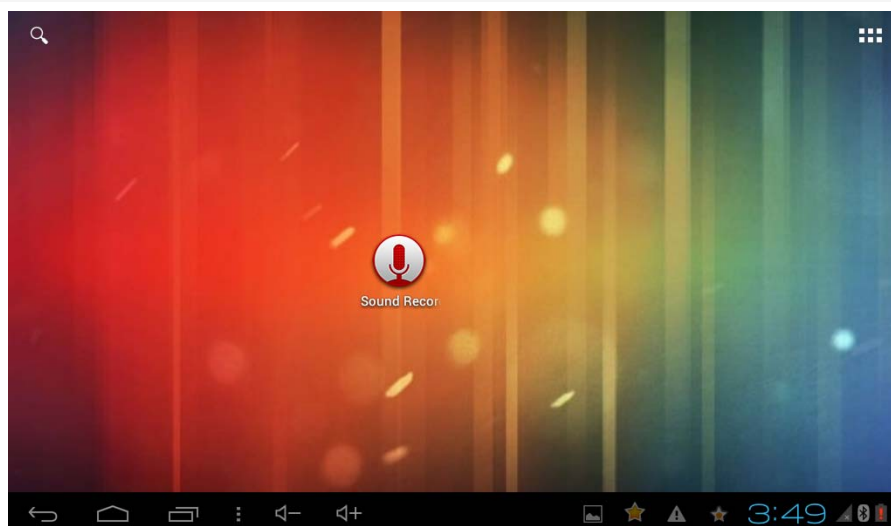

7. G-SENSOR

 G-SENSOR can be turned on or off from the "Display" in the "Settings", and auxiliary functions in the lower right corner of the menu or "settings".

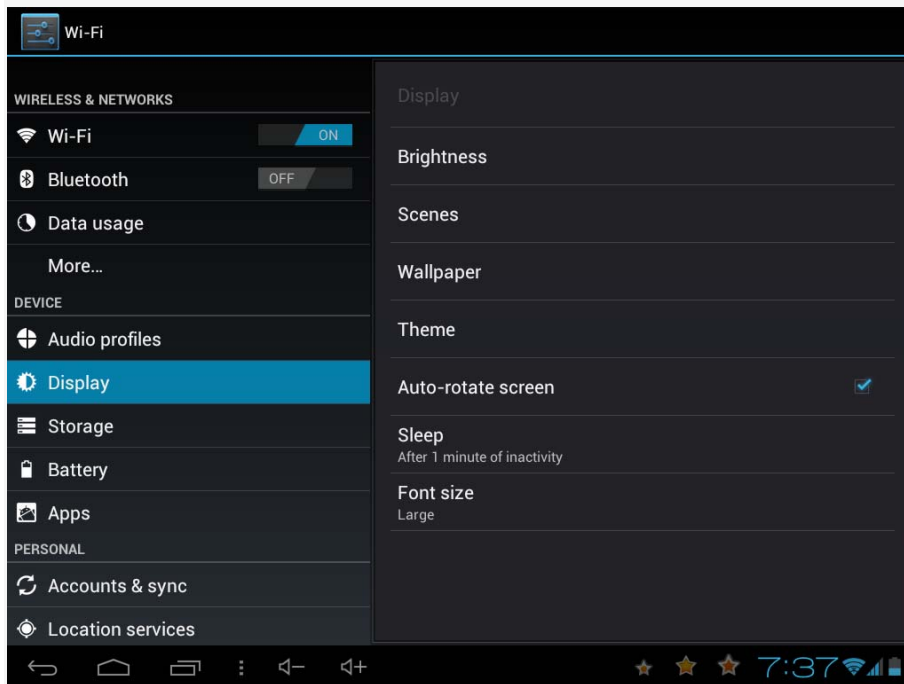

8. Application to download and use

1. Method 1: Copy APK from the computer to the device then installed.

2. In Settings - security, open "Unknown source", then open the file manager to find the corresponding APK.

3. Click the APK will need to install, then there is one prompt dialog box shows "Install" "Cancel". Click "Install" and waiting for installing APK. After finish, it will shows "Application is already installed". Click "Finish" to continue to install other or click "Open" to open the current installed application directly.

Method 2: The application installation method downloaded from Network

1. Install and download ". Apk " market applications through "APK installer". For example, eoeMarket / Google Market, etc.

2. Open the page, you can find a large number of sorted applications. Click on any application, there will be shows the option of "Install", then click "Install", it will prompt "Downloading ----> Finished download ----> Download is finished and is being installed ----> Install succeed". At this time, you can open this application or click " Uninstall " to uninstall it.

3. You can also download the application by any web page directly.

<http://www.eoemarket.com>

<http://www.apkok.com>

<http://www.ggdown.com/>

<http://www.mtxt800.com/>

(四) Charging Step

1. Using adapter for charging

Special note: The adapter's specification must be accord with the following requirement. Any accident or failure based on not accord with the adapter requirement, we regard it as man-made damage.

Name: Adapter

Input: AC100V~240V-50/60Hz Max:100mA

Output: DC5V~2000mA(USB)

Interface Standard: USB MICO standard interface

(五) Abnormal restart:

If there is anomalies caused by illegal operation, such as fixed screen, can not operate etc., all can be got right after reset it through the "RESET" which in the side of the device and then turn on device again.

五、 Frequently Asked Questions

① The players can not boot

- Check battery with power or not
- Connect the adapter and check again
- If it still can not boot after charging, please contact our customer service.

② The earphone can not hear sound

- Check the volume is set to 0 or not.
- Check the earphone connection is OK or not

③ Button does not work

- Please confirm whether the electronic lock is locked or not. If locked, try again after slipping upward lock or power button to unlock.

④ Serious noise

- Check the earphone plug is clean or not, dirt can cause noise.
- Check the music file is damaged or not. Try to confirm it by playing other music. If the file has been damaged, it may cause very serious noise or skips.

⑤ The screen garbled

- Check that you have set the correct language or not. You can find and set it in < Settings> -- <System settings> -- <Language selection>.

⑥ Can not download files

- Make sure the computer and player is properly connected
- Check the storage space of memory is full or not
- Check the USB cable is damaged or not

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Entertainment Tablet (FCC ID: 2ABFV-S3GI) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, product specific (wireless router), and simultaneous transmission conditions are 0.18W/kg, 0.55W/kg, 1.02W/kg, and 1.17W/kg respectively. Compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.