Android Platform to introduce and use of guidance

MAY 2015

Version 4.4.2

CONTENTS

	How Introduction	4 -
	Introduction phone keys	4 -
	Introduction widgets	4 -
	Information Function	5 -
	Contact Features	9 -
	Call History Features	11 -
	Paste the text / copy Features	12 -
	E-mail Features	13 -
	Desktop Features	14 -
	Delete the desktop icon	18 -
	Edit page	18 -
	Music Function	19 -
	FM function	20 -
	Bluetooth Function	22 -
	Wifi Features	22 -
	Flight mode Function	23 -
	Black unlock	24 -
	Restore to factory default	24 -
	Storage Settings	
	English language switching phone	25 -
	Replacement mobile phone input method	27 -
	Android phone data cable links	27 -
	Introduce cross-screen display	28 -
	Browser Features	
Q/A	A - 30 -	
		20
	How to turn off the software running in the background too much	
	How to quickly set up Email How do I view the capacity of SD card case	
	4. How to save electricity	
	5. How lock screen, to prevent others from using	
	6. Why does not the USB data cable links your computer	
	7. How to install a program on a non-Android Market	
	8. In browsing the web or other applications, how to switch to other ap	
	31 -	piloations-
	9. How to enter the silent mode quickly	- 31 -
	10. How to forward SMS / MMS	
	11. how to paste and copy text	
	12. In the phone program group is installed too many applications, how	
	32 -	, to doive-
	13. Contacts are sorted, can change	32 -

14. Contacts whether to support the group	- 32 -
15. contacts and SMS storage capacity limits the number of	- 32 -
16. How to set the SD card, personalized ring tones	- 32 -
17. How to sync the phone contacts to the original	- 33 -
18. How to use the access Wifi (WLAN)	- 33 -
19. How to Find Contact	- 33 -
20 How do I delete the downloaded software	- 33 -
21. How to view mobile phone version information	- 33 -
22. How do I copy SIM card contact information	- 33 -
23 why the message has a different time and date display	
24. whether to support the Java	- 33 -
25.How to open developer options	
26.Gestures	

Basic terms

Root: Super Android system is the administrator user account, which has the authority to control the whole system, and only have the privileges to the original system can be refreshed for the revision of the various systems;

APK: Android application types, with the cab and the Windows Mobile platform, like exe files, the user can be installed directly;

Eclari: The name of one of the Android platform, version, and the corresponding version number is 4.4.2, V3 use this version;

Webkit: Core Android platform, browser, and now Apple's Safari, Google's Chrome and FireFox are using this kernel as a web page rendering mechanism;

GPhone: To use Google Android mobile phone operating system developed collectively, TECNO, etc.;

ActiveSync: Push email solution to support Microsoft proprietary technology, pre-primary mailbox servers at Microsoft (Exchange server) to provide support, and now Google's Gmail also provided support

G-Sensor: Is the acceleration sensors for mobile phones can provide the direction of gravity sensors, which begin with the letter G represents the gravity, the latter Snesor meant to represent the sensor

How Introduction

Introduction phone keys

Menu button: Click on the program display the corresponding menu item, the user can choose the corresponding sub-menu functions;

Home button: Click on the background into the current application will, and enter the main interface; Note that using this key will not really exit the application, the application will continue to run in the background;

Back button: Click to fall back to previous step of the operation of the interface;

Introduction widgets

1, add widgets to the main screen: in the idle interface - > Long press the main screen to add widget interface. Long press a widget to add to the standby interface or directly drag the widget to the target page.


- 2, change the position of widgets: in the main interface, Long press a widget, sliding the widget can change the position of the widget in the main screen
- 3. Delete widgets: in the main interface, Long press a widget, the top of the main screen will be delete ", sliding the widget to deleted, when there is red ", can let go, the widget is deleted or we can Press the small icon activates delete state, then Click on the small icon delete icon top left corner.





Information Function


To sort the information by contacts, the conversational arrangement, user understanding of the history of the entire communication information, information sorted according to first contacts, including contact name for the first numbers, then letters (A-Z)

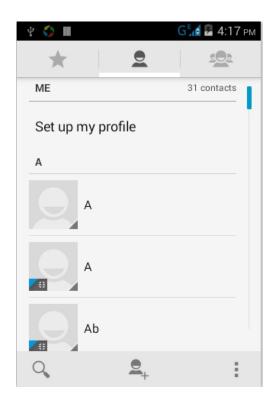


Send MMS

New information -"click , add "function - " to select the desired additional content;


New information-click the menu button -add theme

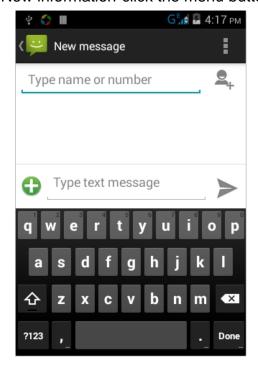


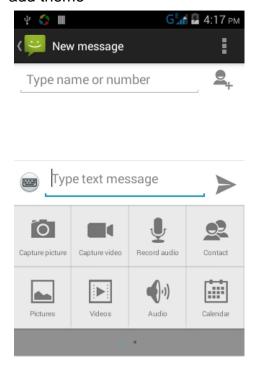

Replacement SMS reminder tone

Access to the information interface - "click the menu button, select "Settings "function - " Select "Select Ringtone function;

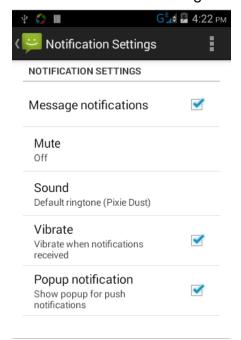


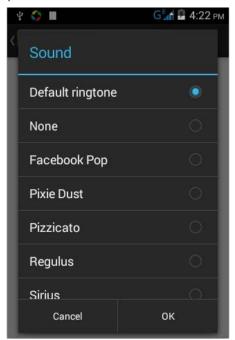

View the sender information

Access to the information screen - "Select the message - " click == -


"click ,can view the sender information

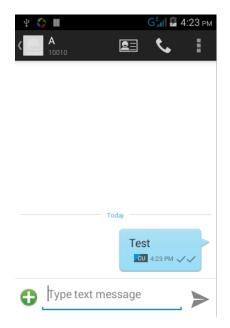




Forwards

Access to the information screen - "Select the message - " Long press the Information, there shortcut keys - "select"Forward "function

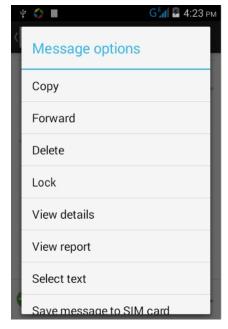


View information details

Access to the information screen- "Select the message-" Long press the Information, there shortcut keys -"select View details "function

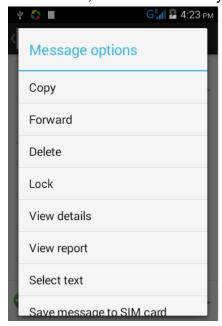

Delete information session specific information on a particular Access to the information screen - "Select the message - " Long press and Information, there shortcut keys - "select "Delete "function

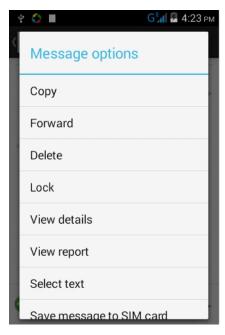


Contact Features

contacts groups, contacts and favorites feature;


Book description

By the first number, then sort the way English characters (A-Z)

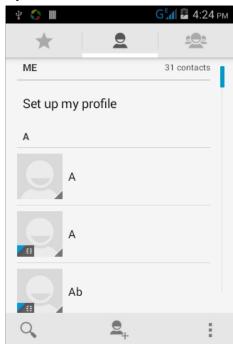

Favorites Introduction


Included collection of contacts, and users often call the recent contact information, part of the overall fabric Top of the contact information for the user collection, lower often call into the system default contact information;

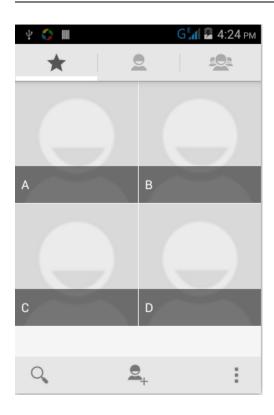

Contact Search

Into the contact interface - "click utton

Search supported by the first letter and the entire search string

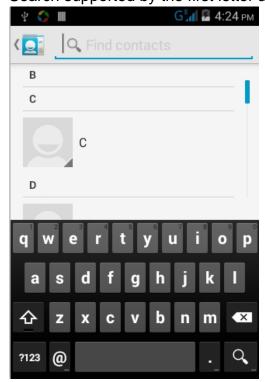

Import contact information methods using Bluetooth to achieve data synchronization


phone and the original binding, using Bluetooth to achieve synchronization of contacts;


Call History Features

One by one to delete call records

Enter the call log interface - "Click the menu button –Select the delete

Function- " Choose the delete call records- click ok button

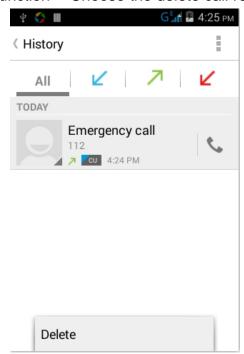

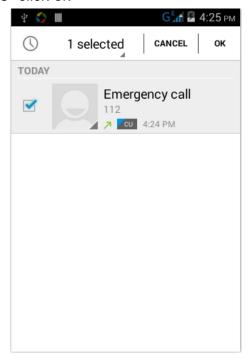

Contact information stored call records


Enter the call log screen - "Select the Save call log - " click- "select "Add to Contacts "feature

Or directly into the call log entry, -click



button -select "Add to Contacts

"feature

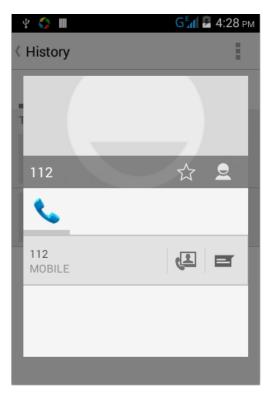

Paste the text / copy Features

Into the input field - "input string, long press and enter the region, there shortcut keys - " select All " " cut All " ,"copy All","paste All"



E-mail Features

Configuring mail account

Enter the Program Group screen - "Select"Email"application - "Enter e-mail address and password

If the system automatically recognizes the mailbox information, will automatically configure; if the system does not recognize, will require users to type IMAP mailbox, or POP3, enter the appropriate configuration information.


Gmail For example:

E-mail Address: zhusen99@163.com

Password:12345678


Configure multiple email accounts

Enter the Program Group screen - "Select"Email"application -" Click on the menu button-select setting function -select "Add Account"feature

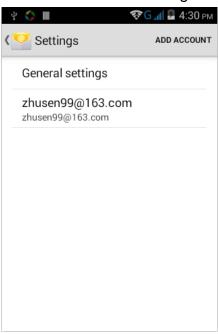


Delete email account

Enter the Program Group screen - "Select"Email"application - Click on the menu button-select setting function -select account - " select the "Remove Account"function

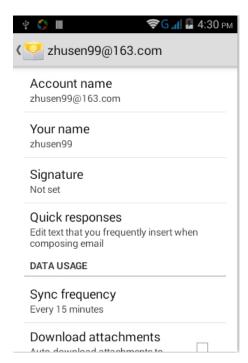

Email check frequency setting

Enter the Program Group screen - "Select"Email"application - Click on the menu button-select setting function -select account - " select Sync frequency "function

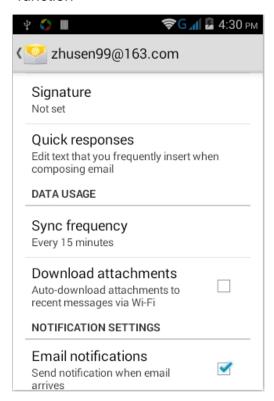

Desktop Features

The common features into the desktop Interface into the program group - "Select the desktop into the application -"long by application, the application will be placed to the desktop;



Wallpapers

In the desktop space – Then Click on the menu button, select wallpaper option

Application Packet


In the desktop space – sliding the application to another application – click the application to open New Folder






Change the folder name


Open the folder on the desktop - " click Input box - Rename Folder

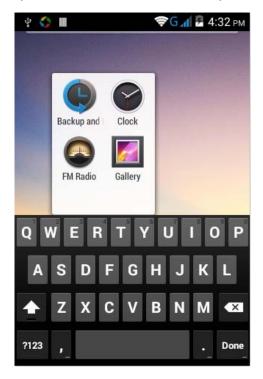

Change wallpaper

Slide it to the edit control page, choose the wallpaper option,

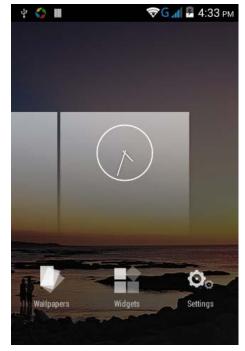

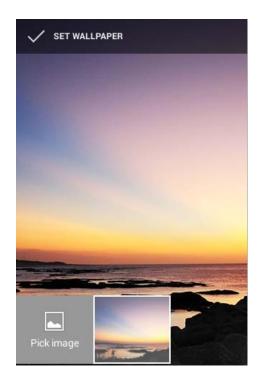

Add a shortcut to the desktop

Slide it to the edit control page, choose the add option, The Add screen, click the application icon you want to the target page



Add contacts to your desktop

In the widgets space -long press the contact widget -" choose a contact






Add URL to the desktop

In the widgets space -long press the Bookmark widget -" choose a bookmark



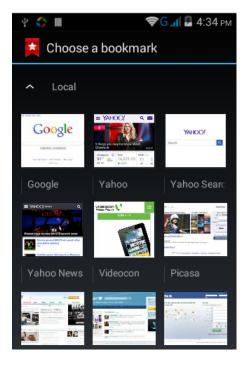

Delete the desktop icon


Slide it to the edit control page, choose the arrange option ,then the shortcuts converted to delete state, which you want to delete ,click on the upper left corner of the delete icon




Music Function

Play music


Music player into the main interface, select the song you want to play,

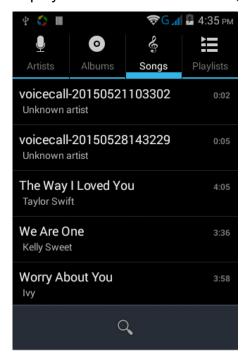


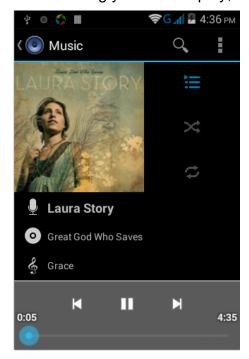

Switch the display mode

The default is the grids shows that if you want to switch to the list shows, left to enter the Options menu, select list mode

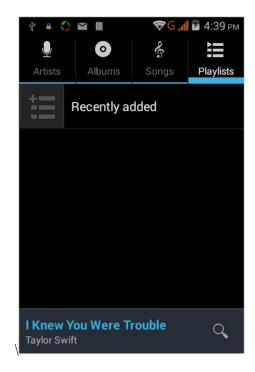


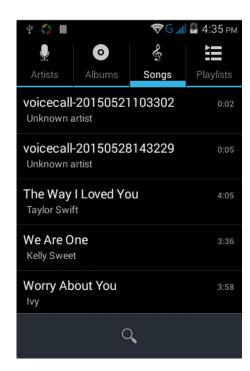

FM function


Open radio


Enter radio interface, click the switch button, turn on the radio

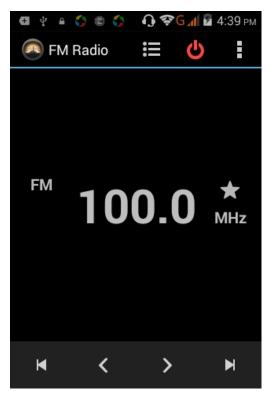

Search Channel

Enter the Options menu, select the search channel, enter the search channel interface

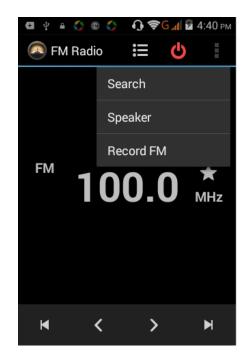

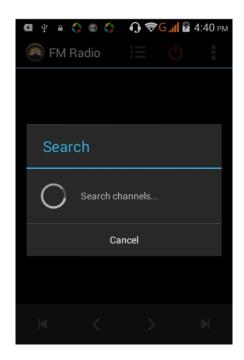


Switch to Speaker


FM player interface, enter the Options menu, choose speakers play



Bluetooth Function


Select "Settings" -" Select "Bluetooth"function,

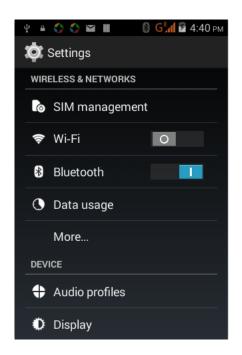

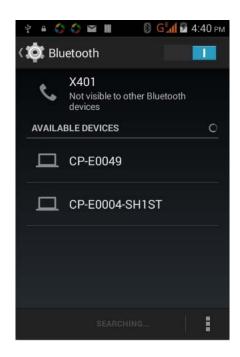

Wifi Features


Select "Settings"-"Select Wi-Fi"- select "Add NETWORK ", select the desired access APN

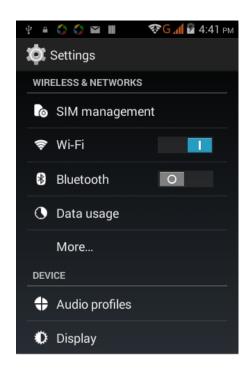




Flight mode Function

Select "Settings"-"Select More"-" choose "Flight Mode"function

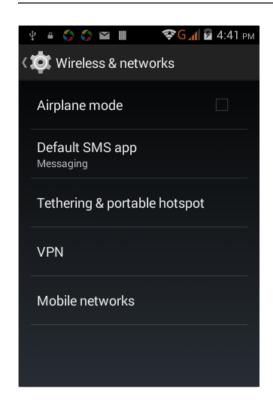



Or select the phone, "Off"button - "select the Flight Mode "function"

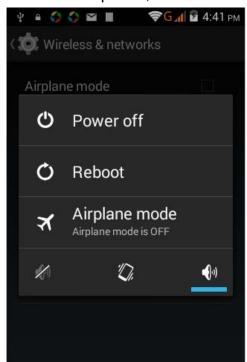

Black unlock


Select "Settings"-"Select " security "-" Select the " Screen lock"-Pattern

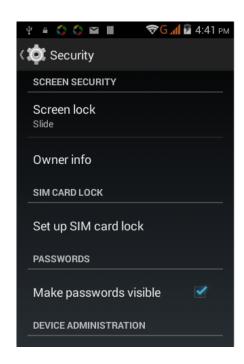


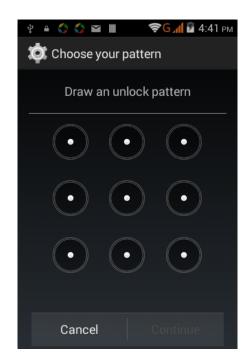

Restore to factory default


Select "Settings"-"Select"Backup&reset "-" select "Factory data reset"

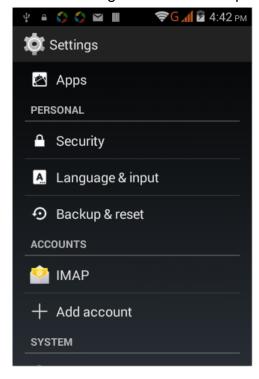

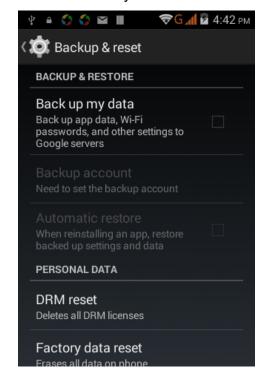


Storage Settings


Select "Settings"-"Select"storage"

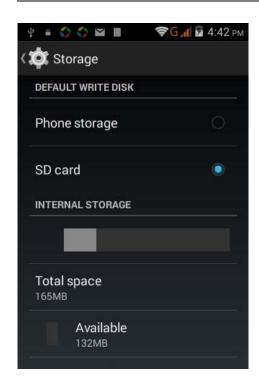

English language switching phone

Select "Settings"- "Language & input "-" Select " Language ", select English or other

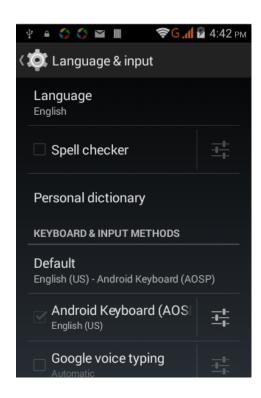


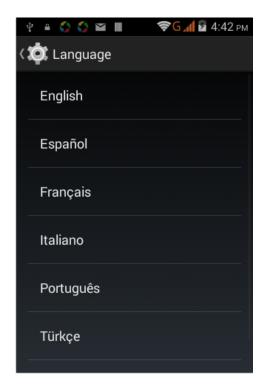

Input set


Select "Settings"- " Language & input "-click



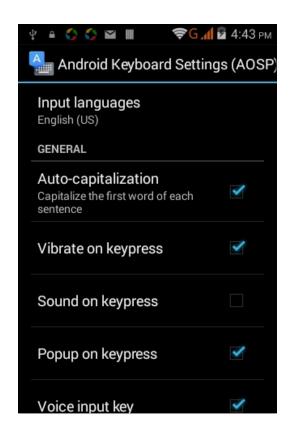


Replacement mobile phone input method

Select "Settings"- " Language & input "-Default

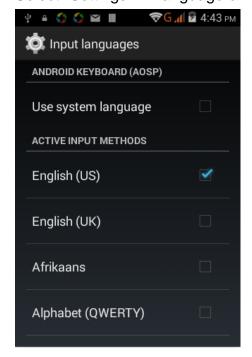


Android phone data cable links


Select "Settings"-"Select"Developer options"-"Check"USB debugging " Products installed on your computer drive, the link on the USB cable;

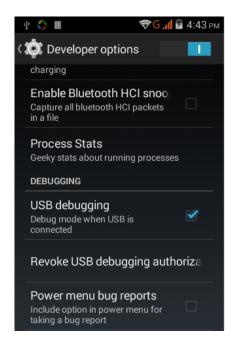

Introduce cross-screen display

Select "Settings"-""Display "-"Check"Auto- rotate screen, " according to the phone automatically change the direction of rotation

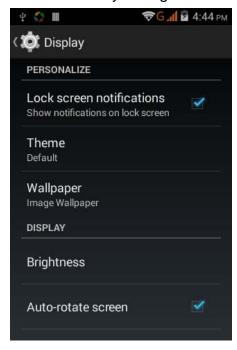

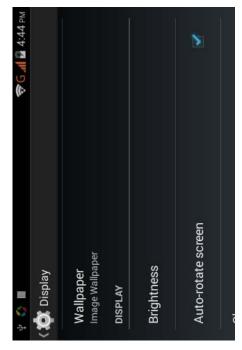

Browser Features

Visit the website

Browser - "Click url input area "-" Enter the URL of web browsing-click




button



Download Web page images or other objects Browser - "browse the web, long press on the picture, there shortcut keys, choose "Save Image "function



Browser settings / search page
Browser - "browse the web -"click "menu button",-select settings / find on page

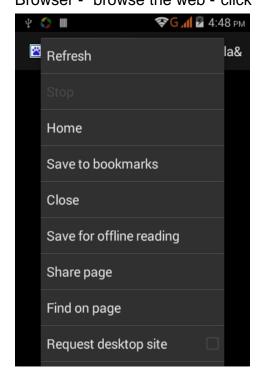

Q/A

1. How to turn off the software running in the background too much

Download Advanced Task Manager Advanced Task Manager and select install, it can help you achieve, automatic end of the program services, to switch between programs, display memory information, exclusion list, an end of all widgets, fast uninstall program and other functions, To free up memory space, reducing the CPU's operation long pressure, increase speed, to extend the purpose of standby time.

2. How to quickly set up Email

In the Android system, can automatically set the POP3 or IMAP e-mail most accounts, the e-mail application, directly enter the e-mail address and password, if not automatically fit in the mailbox, the mailbox will be required by user Server information. See details in front of the "E-mail Features" section.

3. How do I view the capacity of SD card case

Select the "Settings"-Select Storage -select "SD card and phone memory", will see the current SD card capacity information phone

4. How to save electricity

First, reduce the screen brightness can be used in peacetime by reducing the brightness to reduce battery consumption, in the "Settings" in the "sound and display" found on "brightness", and then sliding scale in respect of the brightness can be set Android phones;

Close GPS global positioning, in the "Settings" and select "location services" -uncheck the following "Enable GPS satellite set" can be;

Usually if you do not use the Wi-Fi, Bluetooth headset can be improved by turning off these options to the standby time, turn off the WLAN search can save about 30% to 40% of standby time;

Usually close calls and text messages to remind vibration;

5. How lock screen, to prevent others from using

In the "Settings", select "Security "and then select "screen lock""pattern", to set individual unlock pattern, to prevent strangers use or purpose of ensuring privacy of confidential documents.

6. Why does not the USB data cable links your computer

Confirmed in the phone's "Settings"-""Developer options"-" in the "USB debugging"functionality check; also installed the correct USB driver

7. How to install a program on a non-Android Market

Select "Settings"-"" Security ", the "unknown source "function check

8. In browsing the web or other applications, how to switch to other applications

If you need to open when browsing other applications, you can long press the Home key to achieving long task switch, long press return directly to the desktop (note that the system default task only last 6 months)

9. How to enter the silent mode quickly

In addition to continuing foreign long press the volume down key, and directly Into the status bar select the silent mode.

10. How to forward SMS / MMS

Long press and Information applications in the information content of an item in the list, until the pop-up shortcut menu, select "Forward" can be realized.

11. how to paste and copy text

Into the input field - "input string, long press and enter the region, there shortcut keys - " select All " " cut All " ,"copy All","paste All"

12. In the phone program group is installed too many applications, how to solve

In the desktop space – sliding the application to another application – click the application to open New Folder

13. Contacts are sorted, can change

Sort of way platform, the first number, then letters, then the Chinese way of sorting; the user can not set their own sort

14. Contacts whether to support the group

Enter contacts - > select group, you can create groups, then will contact man to join the corresponding group

15. contacts and SMS storage capacity limits the number of

Platform reason, contacts and SMS storage for no clear limit value, depending on the size of the current mobile phone memory space

16. How to set the SD card, personalized ring tones

In the SD card, are established "ringtones" (ringtones) "alarms" (alarm tone) "notifications" (SMS notification tone), the ring tones into a different folder, the phone can be automatically identified.

17. How to sync the phone contacts to the original

using Bluetooth the way, the two cellphone, sync contacts;

18. How to use the access Wifi (WLAN)

Wifi signal at the scene to ensure that the premise of the specific see "Wifi function "

19. How to Find Contact

Into the contact interface, select the "Search"menu, you can search for contacts, you can use the first letter of query letters;

20 How do I delete the downloaded software

"Settings" - ""Manage app"-"Select the application to be deleted

21. How to view mobile phone version information

"Settings" - "" About phone "mobile phone version information can be obtained, including the Android version, Linux version, software version, hardware version, etc.

22. How do I copy SIM card contact information

Into the Contacts application, click the menu button, select "Import Contacts", then you can see the SIM card contacts, if only to import one, you can click an item. If all the import needs to long press the menu key, select Import to import all.

23 why the message has a different time and date display

Message displayed on the principle that the display of the day time and date have shown that non-day

24. whether to support the Java

Platform reason, does not support Java, if you need to install third-party Java applications, you need to install the Java runtime environment.

25. How to open developer options

Enter the Settings -- the About phone -- click the Build number four times, system will be generated developer options

26.Gestures

If the phone is not turned unlock pattern:

- 1. When you double-click on the screen, you can light up the screen
- 2. When the slide to the left of the screen, you can receive information directly into the interface
- 3. When you slide the screen to the right, you go directly dial interface
- 4. When you slide up the screen, you can go directly to the camera interface
- 5. When you slide down the screen, you go directly to MP3 player interface

If the phone is turned unlock pattern:

- 1. Double-click the screen lights up, directly into the unlock screen
- 2. Directly into the left slide to unlock screen, then manually enter the unlock received information interface
- 3. Slide to unlock directly into the interface, and then manually enter the dialing interface solution
- 4. Slide up to unlock directly into the interface, and then manually enter the camera interface solution
- 5. Slide down directly into the unlock screen, then manually enter the MP3 player interface solution

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This PHONE meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: X401 (FCC ID: 2ACLMX401F) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.11W/kg and when properly worn on the body is 0.62W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories

that maintain a **1.0cm** separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **1.0 cm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.