

 
SonicWall® TZ570 and TZ570 Wireless

Quick Start Guide

Regulatory Model Number / Product:
APL262-0F7 / TZ570
APL62-0F8 / TZ570W



1 TZ570 / TZ570W Front

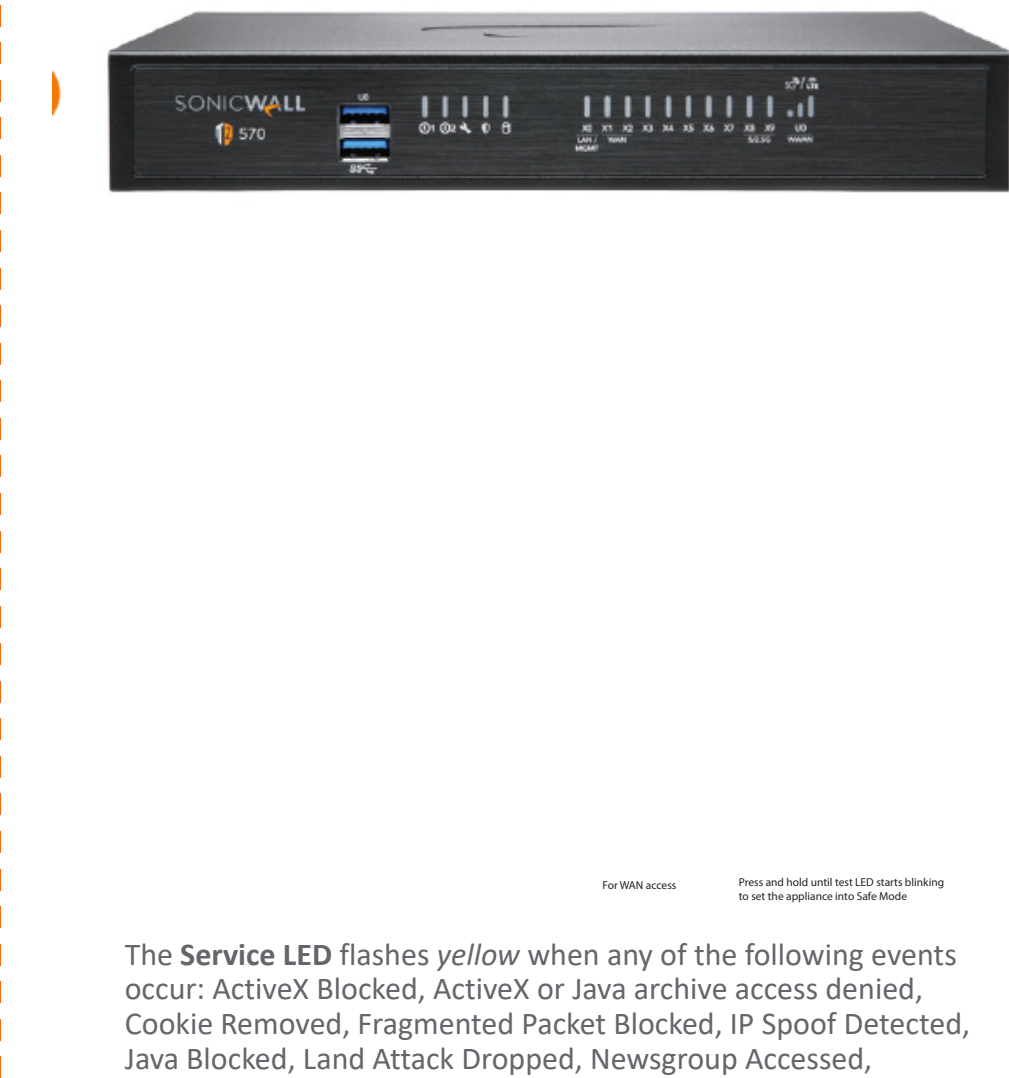

Newsgroup Blocked, Ping of Death Blocked, Proxy Access Blocked, Smurf Amplification Dropped, TCP SYN/FIN Packet Dropped, TCP Xmas Tree Packet Dropped, Unauthorized TCP Packet Denied, Unauthorized UDP Packet Denied, Unauthorized ICMP Packet Denied, Website Accessed, Website Blocked.

2 Check Package Contents

- Verify that your package has the following contents:
- SonicWall TZ570 or TZ570 Wireless appliance
 - Antennas (2) (*TZ570 Wireless appliance only*)
 - Ethernet cable
 - Power adapter
 - Power cord
 - Quick Start Guide
 - Safety Environmental Regulatory Information (SERI)

① **NOTE:** The included power cord is approved for use only in specific countries or regions. Before using a power cord, verify that it is rated and approved for use in your location.



3 Deploy Using Zero-Touch



 
Your SonicWall appliance is *Zero-Touch* enabled.

Zero-Touch makes it easy to register your unit and add it to Capture Security Center for management and reporting in 3 simple steps.


For information about using Zero-Touch, see the **Zero-Touch Deployment Guide** on the Support portal. After completing the Zero-Touch deployment process, you can skip to **Mounting the TZ Appliance** in this guide. For non Zero-Touch deployments, continue with the next section.

4 Connect Interfaces and Power On

- Connect the WAN interface (X1) to your Internet connection using a standard Ethernet cable.
- Connect the LAN interface (X0) to your computer using a standard Ethernet cable.

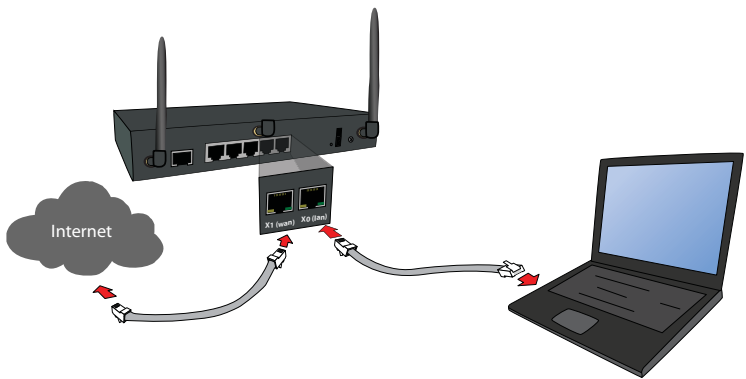

 - Connect the antennas to the appliance (*TZ570 Wireless appliance only*).
- Connect the power adapter to the appliance and to the power cable. Plug the power cable into an appropriate outlet (100-240 volts AC).

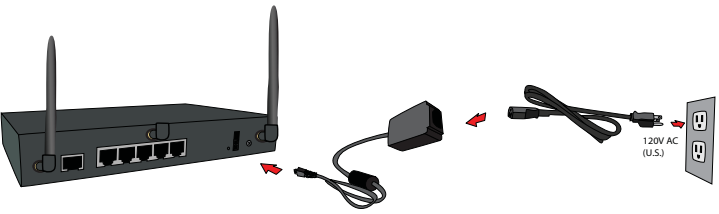

- The TZ appliance powers on, and the Test LED lights up during the boot sequence and then turns off when boot sequence is complete.



⚠ **CAUTION:** Only use the included power adapter with this appliance. Do not use a power adapter that is damaged or from another appliance.

5 Run the Setup Wizard

 
- Navigate to **https://192.168.168.168** in your Web browser.

① **TIP:** Your computer should be using DHCP IP addressing.

- Click on the link in “To launch the SonicWall **Setup Guide**, click **here**.”



- The SonicOS Startup Guide opens.

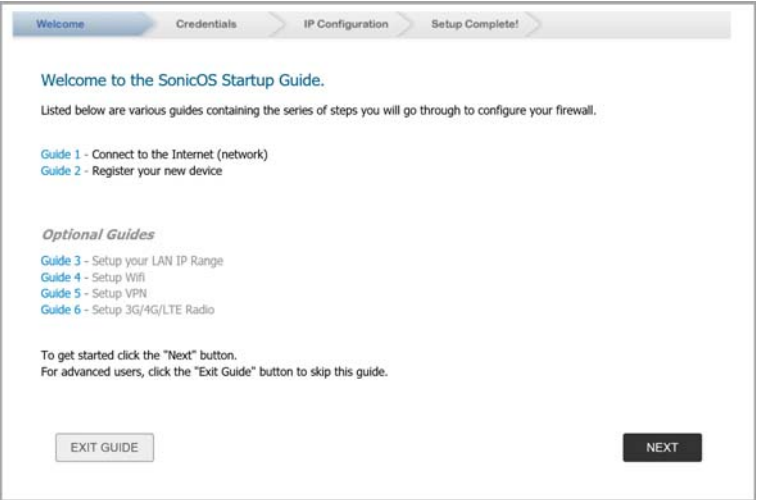


- Click **NEXT** and follow the prompts in the Startup Guide.

- In the Credentials screen, enter a new administrator password. Click **NEXT**.

① **NOTE:** The default administrator credentials are **Username: admin** **Password: password**

 - The automatically assigned DHCP IP settings are displayed in the IP Configuration screen. Click **NEXT**.

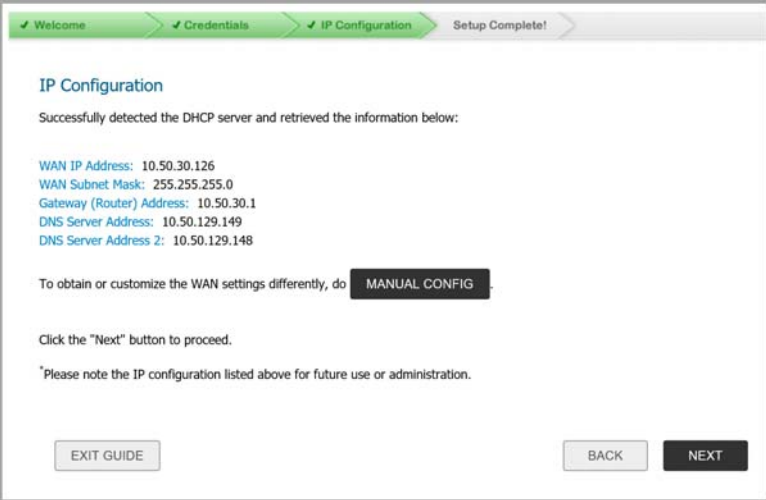

① **NOTE:** For manual configuration, refer to the latest *SonicOS Quick Configuration* administration documentation.


- In the Setup Complete screen, review the settings and then click **DONE**. The SonicOS login screen displays.

6 Register Product

Registration is an important part of the setup process and is necessary in order to receive the benefits of SonicWall security services, firmware updates, and technical support.

To register the appliance from SonicOS:

- Continue from the Setup Guide or point your browser to the appliance LAN IP address (default <https://192.168.168.168>) and log in using the administrator credentials.
- Click **Register** in the top banner *or* on the **MONITOR | Current Status | System Status** page under **Security Services**.

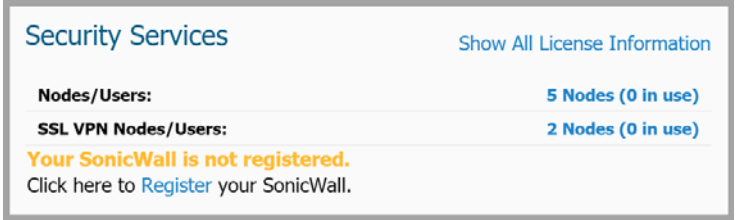 

TIP: Registering the appliance from SonicOS requires that DNS Server settings are configured on the WAN (X1) interface.

- Log in using your MySonicWall account name and password. If you do not have a MySonicWall account, go to <http://www.mysonicwall.com> to create an account.
- MySonicWall directly obtains the necessary information from the appliance. When finished, you will see a message that registration has been completed. Click **Continue**.



Lithium Battery Warning

The Lithium Battery used in the SonicWall security appliance may not be replaced by the user. Return the SonicWall security appliance to a SonicWall-authorized service center for replacement with the same or equivalent type recommended by the manufacturer. If, for any reason, the battery or SonicWall security appliance must be disposed of, do so following the battery manufacturer's instructions.

Cable Connections

All Ethernet and RS232 (Console) cables are designed for intra-building connection to other equipment. Do not connect these ports directly to communication wiring or other wiring that exits the building where the SonicWall appliance is located.

Power Supply Information

If the power supply is missing from your SonicWall product package, please contact SonicWall Technical Support at <https://support.sonicwall.com/contact-support> for a replacement. This product should only be used with a UL listed power supply marked "I.T.E. LPS" with an output rated 12V DC, minimum 5.0 A, Tma: minimum 40 degree C.

EU and EFTA

This SonicWall appliance contains radio equipment to provide 2.4 GHz and 5 GHz RLAN/WLAN. To maintain Radio Equipment Directive 2014/53/EU compliance, use only SonicOS software and accessories provided with this appliance and by SonicWall.

Diese SonicWall Appliance enthält Funkanlagen zur Bereitstellung von RLAN/WLAN im Frequenzbereich von 2,4 GHz und 5 GHz. Verwenden Sie zur Einhaltung der Funkanlagenrichtlinie 2014/53/EU (Radio Equipment Directive - RED) ausschließlich SonicOS Software und Zubehör, das mit dieser Appliance und von SonicWall bereitgestellt wird.

To maintain safe exposure levels to electromagnetic fields, place appliance a minimum of 20 cm from all persons and domestic animals.

Zur Einhaltung unbedenklicher Expositionswerte durch elektromagnetische Felder sollte sich die Appliance mindestens 20 cm von Personen und Haustieren entfernt befinden.



This SonicWall wireless appliance is restricted to indoor use.


Diese SonicWall Appliance ist auf die Nutzung in Innenräumen beschränkt.

TZ570 Wireless (RM: APL62-0F8) RF Transmitter Bands and Power

Frequency Band MHz	Maximum Radio-Frequency Power Transmitted dBm EIRP
2412 - 2472	19.81
5180 - 5240	22.99
5260 - 5320	22.92
5500 - 5700	29.93

7 Configuring Wireless LAN Settings

 - Log in to your TZ appliance and click **QUICK CONFIGURATION** at the top of the screen.
- Select the radio button for the **Wireless Guide** wizard.

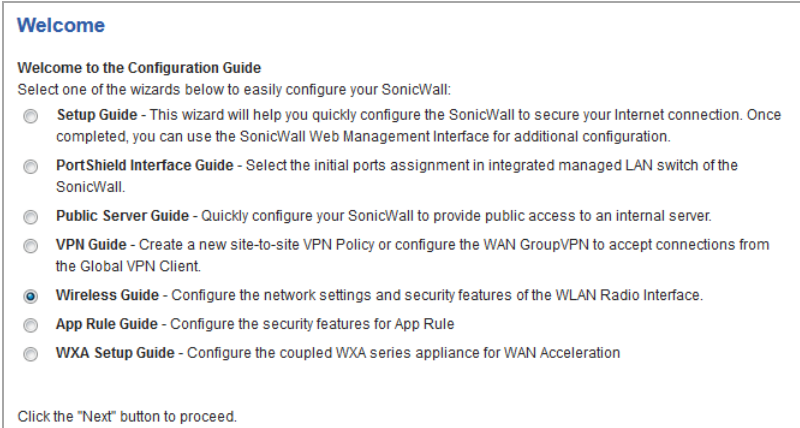

- Click **Next** and follow the prompts in the Wireless Guide wizard. For more information and complete procedures, refer to the latest *SonicOS Quick Configuration Guide*.

You are asked to select a country code when using the Wireless Guide or when you initially navigate to the **Wireless > Settings** page. Be sure to select the country code for the country in which the appliance will be deployed, even if you are not currently in that country.

IMPORTANT: When sold into USA list will be restricted to USA. When sold into Canada valid selection will be restricted to Canada.

8 Getting the Latest Firmware

- In a Web browser, navigate to <http://www.mysonicwall.com>.
- Navigate to **Resources & Support > My Downloads** and select **TZ570 or TZ350W Firmware** from the **Product Type** drop-down menu.

Simplified EU/CE Declaration of Conformity

Hereby, SonicWall Inc. declares that the radio equipment type 2.4 GHz and 5 GHz RLAN/WLAN is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following Internet address: <https://www.sonicwall.com/support>

Hierbij verklaar ik, SonicWall Inc., dat het type radioapparatuur 2.4 GHz and 5 GHz RLAN/WLAN conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <https://www.sonicwall.com/support>

Hiermit erklärt SonicWall Inc., dass der Funkanlagentyp 2.4 GHz und 5 GHz RLAN/WLAN der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.sonicwall.com/support>

Le soussigné, SonicWall Inc., déclare que l'équipement radioélectrique du type 2.4 GHz and 5 GHz RLAN/WLAN est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://www.sonicwall.com/support>

С настоящото SonicWall Inc. декларира, че този тип радиосъоръжение 2.4 GHz and 5 GHz RLAN/WLAN е в съответствие с Директива 2014/53/ЕЕ. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <https://www.sonicwall.com/support>

Tímto SonicWall Inc. prohlašuje, že typ rádiového zařízení 2.4 GHz and 5 GHz RLAN/WLAN je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <https://www.sonicwall.com/support>

Hermed erklærer SonicWall Inc., at radioudstyrtypen 2.4 GHz and 5 GHz RLAN/WLAN er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <https://www.sonicwall.com/support>

Με την παρούσα ο/η SonicWall Inc., δηλώνει ότι ο ραδιοεξοπλισμός 2.4 GHz and 5 GHz RLAN/WLAN πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://www.sonicwall.com/support>

Por la presente, SonicWall Inc. declara que el tipo de equipo radioeléctrico 2.4 GHz and 5 GHz RLAN/WLAN es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://www.sonicwall.com/support>


Käesolevaga deklareerib SonicWall Inc., et käesolev raadioseadme tüüp 2.4 GHz and 5 GHz RLAN/WLAN vastab direktiivi 2014/53/EL nõuetele. Eli vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <https://www.sonicwall.com/support>

SonicWall Inc. vakuuttaa, että radiolaitetyypin 2.4 GHz and 5 GHz RLAN/WLAN on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <https://www.sonicwall.com/support>

SonicWall Inc. ovime izjavljuje da je radijska oprema tipa 2.4 GHz and 5 GHz RLAN/WLAN u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <https://www.sonicwall.com/support>

SonicWall Inc. igazolja, hogy a 2.4 GHz and 5 GHz RLAN/WLAN típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelősségi nyilatkozat teljes szövege elérhető a következő internetes címen: <https://www.sonicwall.com/support>

- Click the link for the firmware you want and save the file to a location on your computer.
- On the TZ appliance, navigate to the **MANAGE | Updates > Firmware & Backups > Upload Firmware** page. Click the **Upload New Firmware** button.
- Click the **Choose File** button to select the firmware you just downloaded, then click **Upload**.

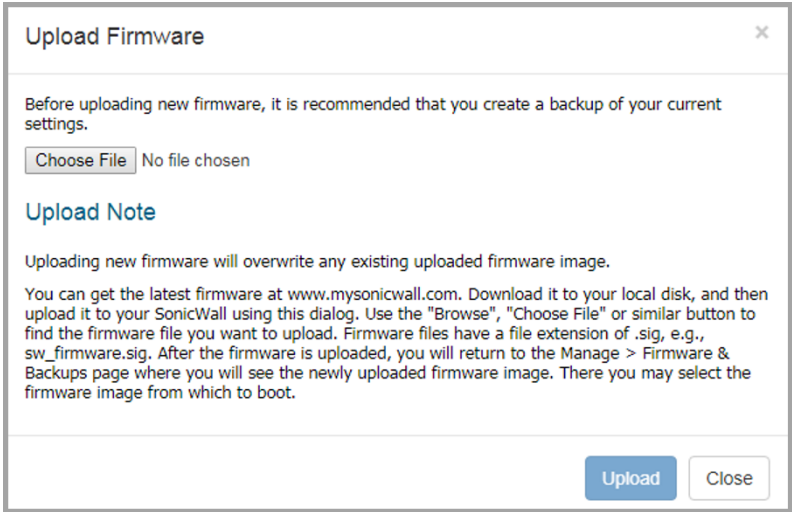 

- Click the **Boot** icon for your new firmware.

9 Mounting the TZ Appliance

WARNING: Do not mount the appliance on the ceiling, it is not designed for secure ceiling mounting.

For optional wall mounting, you need:

- Screwdriver
- Drill with appropriate size bit
- For mounting on drywall:
 - Two #6 pan-head screws, 1 inch long (7mm diameter head, 25mm long)

Il fabbricante, SonicWall Inc., dichiara che il tipo di apparecchiatura radio 2.4 GHz and 5 GHz RLAN/WLAN è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://www.sonicwall.com/support>

Aš, SonicWall Inc., patvirtinu, kad radijo įrenginių tipas 2.4 GHz and 5 GHz RLAN/WLAN atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <https://www.sonicwall.com/support>

Ar šio SonicWall Inc. deklarė, ka radioiekārta 2.4 GHz and 5 GHz RLAN/WLAN atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <https://www.sonicwall.com/support>

B'dan, SonicWall Inc., niddikjara li dan it-tip ta' taghmir tar-radju 2.4 GHz and 5 GHz RLAN/WLAN huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformita tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej: <https://www.sonicwall.com/support>

SonicWall Inc. niniejszym oświadcza, że typ urządzenia radiowego 2.4 GHz and 5 GHz RLAN/WLAN jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <https://www.sonicwall.com/support>

Prin prezenta, SonicWall Inc. declară că tipul de echipamente radio 2.4 GHz and 5 GHz RLAN/WLAN este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <https://www.sonicwall.com/support>

SonicWall Inc. týmto vyhlasuje, že rádiové zariadenie typu 2.4 GHz and 5 GHz RLAN/WLAN je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <https://www.sonicwall.com/support>

SonicWall Inc. potrjuje, da je tip radijske opreme 2.4 GHz and 5 GHz RLAN/WLAN skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <https://www.sonicwall.com/support>

NOTE: Additional regulatory notifications and information for this product can be found online at <https://www.sonicwall.com/support>.

Verwarnung Weitere Hinweise zur Montage

Wählen Sie für die Montage einen Ort, der keinem direkten Sonnenlicht ausgesetzt ist und sich nicht in der Nähe von Wärmequellen befindet. Die Umgebungstemperatur darf nicht mehr als 40 °C betragen.

Führen Sie die Kabel nicht entlang von Stromleitungen, Leuchtstoffröhren und Störquellen wie Funksendern oder Breitbandverstärkern.

Das im Lieferumfang enthaltene bzw. die im Lieferumfang enthaltenen Netzkabel sind nur für die Verwendung in bestimmten Ländern und Regionen zugelassen. Überprüfen Sie bitte vor der Verwendung eins Netzkabels, ob es für die Verwendung in Ihrem Land oder Ihrer Region zugelassen ist und den geforderten Normen entspricht.

Stellen Sie sicher, dass das Gerät vor Wasser und hoher Luftfeuchtigkeit geschützt ist.

Stellen Sie sicher, dass die Luft um das Gerät herum zirkulieren kann und die Lüftungsschlitze an der Seite des Gehäuses frei sind. Hier ist ein Belüftungsabstand von mindestens 26 mm einzuhalten.

Prüfen Sie den Anschluss des Geräts an die Stromversorgung, damit der Überstromschutz sowie die elektrische Leitung nicht von einer eventuellen Überlastung der Stromversorgung

- Two wall anchors
- For mounting on solid wood or metal:
 - Two #6 pan-head wood or machine screws, 1 inch long (7mm diameter head, 25mm long)

To mount the appliance on the wall:

- Drill two holes 4.5 inches (11.5 cm) apart in the wall where you want to mount the appliance.
- If using wall anchors, insert a wall anchor into each hole.
- Insert a screw into each wall anchor (into each hole if not using wall anchors), leaving 3/16 inches (0.45 cm) of the screws exposed (including screw head).
- Position the appliance mounting slots over the screws and press in and down until the appliance is securely mounted.

10 Safety and Regulatory Information

WARNING: For your safety, follow all instructions listed in this section.

Installing the Appliance

Install in a location away from direct sunlight and sources of heat. A maximum ambient temperature of 104° F (40° C) is recommended.

Route cables away from power lines, fluorescent lighting fixtures, and sources of noise such as radios, transmitters, and broadband amplifiers.

The included power cord(s) are approved for use only in specific countries or regions. Before using a power cord, verify that it is rated and approved for use in your location.

Ensure that no water or excessive moisture can enter the unit.

Allow unrestricted airflow around the unit and through the vents on the side of the unit. A minimum of 1 inch (25.44mm) clearance is recommended.

Consideration must be given to the connection of the equipment to the supply circuit. Appropriate consideration of equipment nameplate ratings must be used when addressing this concern. Do not overload the circuit.

This equipment is not intended for use at workplaces with visual display units, in accordance with §2 of the German ordinance for workplaces with visual display units. To avoid incommoding reflections at visual display workplaces this device must not be placed in the direct field of view.

beeinflusst werden. Prüfen Sie dabei sorgfältig die Angaben auf dem Aufkleber des Geräts. Überlasten Sie nicht den Stromkreis.

Dieses Gerät ist nicht zur Verwendung an Arbeitsplätzen mit visuellen Anzeigegeeräten gemäß § 2 der deutschen Verordnung für Arbeitsplätze mit visuellen Anzeigegeeräten vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

Verwarnung Hinweis zur Lithiumbatterie

Die in der Internet Security Appliance von SonicWall verwendete Lithiumbatterie darf nicht vom Benutzer ausgetauscht werden. Zum Austauschen der Batterie muss die SonicWall in ein von SonicWall autorisiertes Service-Center gebracht werden. Dort wird die Batterie durch denselben oder entsprechenden, vom Hersteller empfohlenen Batterietyp ersetzt. Beachten Sie bei einer Entsorgung der Batterie oder der SonicWall Internet Security Appliance die diesbezüglichen Anweisungen des Herstellers.

Verwarnung Kabelverbindungen

Alle Ethernet- und RS232-C-Kabel eignen sich für die Verbindung von Geräten in Innenräumen. Schließen Sie an die Anschlüsse der SonicWall keine Kabel an, die aus dem Gebäude herausgeführt werden, in dem sich das Gerät befindet.

Informationen zur Stromversorgung

Wenn die Stromversorgung von der SonicWall-Produktpaket fehlt, wenden SonicWall den Technischen Support unter <https://www.sonicwall.com/support/contact-support>.

Dieses Produkt sollte nur mit einem für den Europäischen Markt genehmigten Netzteil mit dem Logo "I.T.E. LPS" und einer Ausgangsleistung von12 VDC, mind. 5.0 A, Tma: mind. 40 Grad C, betrieben werden.

台灣RoHS

限用物質含有情況標示資訊請參考下列網址： <https://www.sonicwall.com/support>.

操作說明：

輸入產品型號並搜尋

選擇 Technical Documentation

選擇 Safety and Regulatory Reference Guide

Download this document 下載此文件