

## Line Pressure Solenoid A & B

**Part No.**  
**33431G**

**NOTE:** TCC Solenoid **33425G** is also available from Sonnax. See **Figure 1** for correct locations.

### Jatco/Nissan JF010E (RE0F09A)



#### 1. Disassembly

Remove OE line pressure solenoid A or B (**Figure 1**).

#### 2. Installation & Assembly

- Lubricate O-rings on Sonnax replacement solenoid; install and secure solenoid into proper location (**Figure 1**).
- After solenoid replacement, reset TCM keep-alive memory (KAM) and shift adaptations according to OE specification.

