

Sonos® PLAY:3

Where to Begin

New to Sonos?


It takes just a few steps to get your Sonos Wireless Music System up and running. See page 4 to make sure your home network is ready for Sonos, and then turn to the Setup Instructions packaged with your PLAY:3. Once you've set up your music system, you can add additional Sonos components any time.



Note: If you don't plan to listen to music in the room where your broadband router is located, you can connect a Sonos ZoneBridge™ (purchased separately) to your router to activate the SonosNet™ wireless mesh network, and place the Sonos PLAY:3 wherever you want to listen to music.

Adding to an existing Sonos system?

The Sonos Wireless Music System can be easily expanded room by room. If you are adding this PLAY:3 to an existing Sonos system, you can turn directly to page 11.

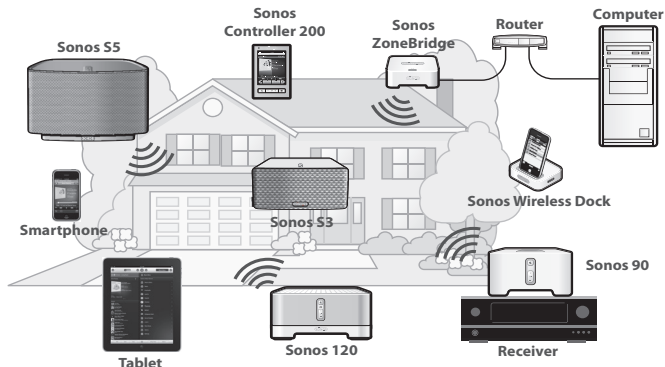

The Sonos PLAY:3...

The Sonos PLAY:3 is a wireless music system that lets you use any Sonos Controller (see page 6 for more information) to control and enjoy all the music you want all over your house.

- A 3 driver system delivers pure, clean, room-filling sound — perfect for bringing room filling music to a kitchen, bedroom, office, or just about any room in your home.
- Its small size and multiple orientations make it perfect for fitting on bookshelves, nightstands, corners, or just about anywhere.
- Works seamlessly with the complete range of Sonos products.

Your Home Network

To access Internet music services, Internet radio, and any digital music stored on your computer or Network-Attached Storage (NAS) device, your home network must meet the following requirements:

Home network requirements

- High-speed DSL/Cable modem, or fiber-to-the-home broadband connection for proper playback of Internet-based music services. (If your Internet service provider only offers Satellite Internet access, you may experience playback issues due to fluctuating download rates.)
- If your modem is not a modem/router combination and you want to take advantage of Sonos' automatic online updates, or stream music from an Internet-based music service, **you must install a router in your home network.** If you do not have a router, purchase and install one before proceeding.
 - If you are going to use a Sonos Controller application on an Android™ smartphone, iPhone®, iPod Touch®, iPad® or other tablet, you may need a *wireless* router in your home network. Please visit our Web site at <http://faq.sonos.com/apps> for more information.
- Connect at least one Sonos component to your home network router using an Ethernet cable, and then you can add other Sonos components wirelessly.
- For best results, you should connect the computer or NAS drive that contains your personal music library collection to your home network router using an Ethernet cable.

Compatible operating systems

- Windows® XP and higher
- Macintosh® OS X



Note: Please visit our Web site at <http://faq.sonos.com/specs> for the latest system requirements, including supported operating system versions.

Technical Support

- **Web site**
 - Visit our Web site at www.sonos.com/support. There you can visit our Forums, browse our Frequently Asked Questions (FAQ) pages, or request assistance.
- **Email:** support@sonos.com
- **Text-Chat and Phone:** www.sonos.com/support/contact
 - US/Canada: +1.800.680.2345 toll-free
 - United Kingdom: 0808 2346596

If your country is not listed here, please visit the **Text-Chat and Phone** link to find the correct telephone number for your country.

Sonos Controllers

You can use any Sonos Controller with the Sonos PLAY:3, including:

- **The Sonos Controller 200 or 100** (purchased separately)
- **The Sonos Controller for Android** Touch the **Market** button on your smart-phone to download the free Sonos Controller application from the Android Market™
- **The Sonos Controller for iPhone or the Sonos Controller for iPad**
Tap the **App Store** button on your iPhone, iPod touch or iPad to download the free Sonos Controller application, or you can download the application from iTunes®. (If you download from iTunes, you will need to *sync* before you see the Sonos logo display on your device)
- **The Sonos Controller for Mac or PC** (install using the CD-ROM packaged with your PLAY:3)

Sonos is always working on new ways to help you control the music any way you want. For the latest list of Sonos Controllers, please visit our Web site at ***www.sonos.com/products***.

To read more about the features and functions of your new Sonos system, please download the latest product documentation from our Web site at ***www.sonos.com/support/documentation*** or start the Sonos Controller for Mac or PC, and select **Sonos System Help** from the **Help** menu.

Sonos PLAY:3 Front



Important: The Sonos PLAY:3's front grille is not removable. Tampering with the grille may result in damage to your PLAY:3.

On/Off

- Using a handheld Sonos Controller, select **Pause All** from the **Zone Menu**.
- Using the Sonos Controller for Mac or PC, select **Pause All** from the **Play** menu.

Your Sonos Wireless Music System is designed to be always on; the system uses minimal electricity whenever it is not playing music. To quickly stop streaming music in all rooms, you can use the **Pause All** feature.

Status indicator

- *Flashes white* when powering up or connecting to your Sonos Wireless Music System.
- *Solid white* when powered up and connected to your Sonos Wireless Music System (normal operation).

Mute button

- *Lights solid green* when sound is muted.
- *Flashes green rapidly* when household mute or unmute is about to take place.
- *Flashes green slowly* when a Sonos component is connecting to your music system.

Volume up (+)**Volume down (-)**

Indicates the current status of the PLAY:3. When the PLAY:3 is in normal operation, you can turn the white status indicator light on and off. For additional information, see the online help system included with your Sonos Controller for Mac or PC.


For a complete list of status indications, please go to <http://faq.sonos.com/led>.

To mute/unmute: Press the **Mute** button to mute or unmute the Sonos component.

To mute/unmute all: Press and hold the **Mute** button for 3 seconds to mute all Sonos components in your household. Press and hold for 3 seconds to unmute them all.

Press these buttons to adjust the volume up and down.

Rear Panel Connectors

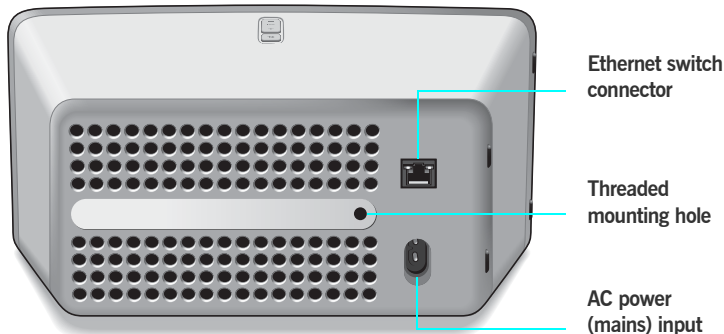

Threaded mounting hole
1/4 inch (6.75mm) /
20-thread

Ethernet switch connector

The Sonos PLAY:3 has an integrated mounting hole on the back of the unit so it can be wall-mounted if desired (mounting bracket not included.) See "Wall mounting the PLAY:3" on page 11 for more information.

Use Category 5 Ethernet cable to connect to a router, computer, or additional network device such as a network-attached storage (NAS) device.

LED indicators:

- Flashing Yellow (network activity)
- Green (link connection)


AC power (mains) input
(~100-240 V, 50-60 Hz)

Use the supplied power cord to connect to power outlet.

Selecting a location for your PLAY:3

You can locate the Sonos PLAY:3 just about anywhere. Its compact size makes it easy to place the PLAY:3 on the kitchen counter, or take it out to the patio with you. For maximum enjoyment, we have a few guidelines:

- The Sonos PLAY:3 can be positioned either horizontally or vertically to accommodate the desired space.

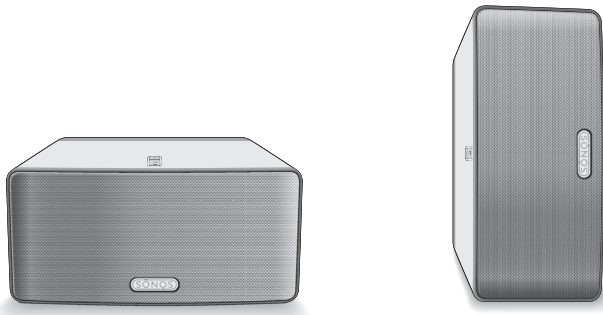

- The PLAY:3 is designed to work well even when placed next to a wall or other surface. For optimum performance, maintaining more than 1 inch (2.5 cm) clearance around the back of the unit is recommended.
- Care should be taken if placing the Sonos PLAY:3 close to an older CRT television. If you notice any discoloration or distortion of your picture quality, simply move the PLAY:3 further from the television.
- The Sonos PLAY:3 is not water-resistant. Don't leave it outside during a rain storm or position it near water.

Wall mounting the PLAY:3

The Sonos PLAY:3 has an integrated, threaded mounting hole. If desired, you can easily wall mount your PLAY:3 using a suitable mounting bracket (not included). Simply choose a location that's close to an electrical outlet, taking care to avoid heat, steam, dripping water or hidden wiring, and follow the instructions included with your wall mount kit.



Note: Be sure the wall mount bracket you purchase will support at least 6 lbs. (2.7 kgs).

Adding to an Existing Sonos System

Once you've got your Sonos Wireless Music System set up, you can easily add more Sonos components any time (up to 32 zones).

If your house has structured (built-in) network wiring, you can make a *wired* connection to the new Sonos component(s). If you don't have structured network wiring, our built-in wireless technology is ideal for you.

1. Select a location for your Sonos PLAY:3 (see page 10 for optimal placement guidelines.)
2. Attach the power cord to the Sonos PLAY:3, and apply power.
3. If you are making a wireless connection, skip this step and continue on to step 4. If you are making a wired connection, connect a standard Ethernet cable from your router or another Sonos component (or a live network wall plate if you have

built-in wiring) to one of the Ethernet switch connections on the back of the new Sonos component.

4. Choose one of the following options:

- Using a handheld Sonos Controller, select **Add a Sonos Component** from the **Settings Menu** and follow the on-screen prompts to add this component to your Sonos Wireless Music System.
- Using the Sonos Controller for Mac or PC, select **Zones**→**Add a Sonos Component** and follow the prompts to add this component to your Sonos Wireless Music System.

Playing Music

You can use any Sonos Controller to select music— simply touch to select from the **Music Menu** on a handheld Controller, or click to select from the **Music Library** pane on a Sonos Controller for Mac or PC.

Radio

Sonos includes a radio guide that provides immediate access to thousands of free Internet radio stations and broadcast programs. You can easily find radio from all over the world— music, news, and variety programming, including archived shows and podcasts.

To select an Internet radio station, simply select **Radio** and choose a station.

Music services

A music service is an online music store or online service that sells audio on a per-song, per audiobook, or subscription basis. Sonos is compatible with several music services - you can visit our Web site at www.sonos.com/howitworks/music/partners for the latest list. (Some music services may not be available in your country. Please check the individual music service's Web site for more information.)

If you are currently subscribed to a music service that's compatible with Sonos, simply add your music service user name and password information to Sonos as needed and you'll have instant access to the music service from your Sonos system.

1. To add a music service, touch **More Music** from the **Music Menu** on your handheld Controller.
2. Select the Sonos-compatible music service you would like to add.

3. Select **I already have an account**. Type your music service user name and password, and then touch **OK**. Your user name and password will be verified with the music service.

As soon as your credentials have been verified, the music service displays on the **Music Menu**.

Free music service trials are available in some countries. (Please check the individual music service's Web site for more information.) If there is a music service trial visible on your **More Music** menu, simply touch it to select. Touch **I'm new to** [*music service*], and then follow the prompts to activate the music trial. After the trial period is up, you will need to subscribe to the music service to keep the music playing.

*If you are using the Sonos Controller for Mac or PC, select **Sonos System Help** from the **Help** menu and click **Music Services** for more information.*

Music folders

The Sonos Wireless Music System can play music from any computer or network-attached storage (NAS) device on your home network where you have shared music folders. During the Sonos setup process, you are guided through the process of accessing your shared music folders (such as your iTunes library.)

To make changes to your shared folders list, select the **Settings** menu from a handheld Sonos Controller and then choose one of the following options:

- To add a new music folder to Sonos, select **Music Library Management**→**Music Library Setup**→**Add New Share**.
- To remove a music folder, select **Music Library Management**→**Music Library Setup**. Touch the share you wish to remove and then select **Remove Share**.

The Sonos Wireless Music System indexes your music folders so you can view your music collection by categories (such as artists, albums, composers, genres, or tracks.) If you add new music to a folder that is already indexed, simply update your music index to add this music to your Sonos music library.

- To update your music index, select **Music Library Management**→**Update Music Index Now** from the **Settings** menu. If you'd like your music index to update automatically each day, select **Schedule Music Index Updates** and then select a music index update time.

*If you are using the Sonos Controller for Mac or PC, select **Sonos System Help** from the **Help** menu and click **Managing Music Folders** for more information.*

Equalization Settings

The Sonos PLAY:3 ships with the equalization settings preset to provide the optimal playback experience. If desired, you can change the sound settings (bass, treble, balance, or loudness) to suit your personal preferences.

1. From the **Settings** menu, select **ZonePlayer Settings**.
2. Touch to select a zone.
3. Select **Music Equalization**, and then drag your finger across the bass, treble, or balance sliders to make adjustments.
4. To change the **Loudness** setting, touch **On** or **Off**. (The loudness setting boosts certain frequencies, including bass, to improve the sound at low volume.)

*If you are using the Sonos Controller for Mac or PC, select **Sonos System Help** from the **Help** menu and click **Equalization** for more information.*

Basic Troubleshooting



Warning: Under no circumstances should the product be repaired by anyone other than an authorized Sonos repair center, as this will invalidate the warranty. Please contact Sonos Customer Support for more information. Do not open the system as there is a risk of electric shock.

If a problem occurs, you can try the troubleshooting suggestions listed below. If one of these doesn't remedy the problem, or you are not sure how to proceed, please contact the Sonos Customer Support team and we'll be happy to help.

Sonos PLAY:3 not detected during setup

A network or a firewall issue may be preventing the PLAY:3 from connecting to your Sonos system. If this is a wireless PLAY:3, try moving the Sonos components closer together, or wire the PLAY:3 temporarily to see if the problem is related to wireless interference.


If you encounter this message when installing the first Sonos component (wired to your router), you can try the steps below to resolve this issue. If you are still experiencing problems, please contact Sonos Customer Support.

1. Check the firewall

Firewall software installed on the computer may be blocking the ports that Sonos uses to operate. First, disable all your firewalls and try to connect again. If this resolves the problem, you should configure your firewall to work with the Sonos Controller for Mac or PC. Please go to our Web site at <http://faq.sonos.com/firewall> for additional information. If this does not resolve the problem, you can try step 2 below.

2. Check the router

You can bypass your router's switch to determine whether there are any router configuration issues by connecting a ZoneBridge (or other Sonos component) as depicted in the following illustration (note that the ZoneBridge and the computer still have Internet access in this configuration):

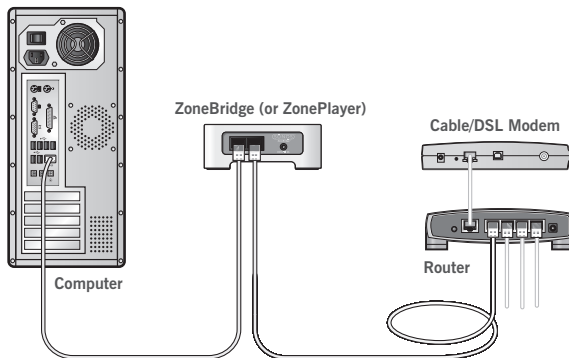

- Be sure that your cable/DSL modem is connected to the router's WAN (Internet) port.
- Temporarily remove any other components that are wired to your network.
- Connect an Ethernet cable from the computer directly to the back of the Sonos component, and then connect another Ethernet cable from the Sonos component directly to one of the LAN ports on your router.

- When you make a change to your network configuration, you may need to power cycle the Sonos component by unplugging the power cord, and then plugging it back in.
- If you are not using a router, you can visit our Web site at <http://faq.sonos.com/norouter> for more information.

3. Check the wiring

Check the link/activity lights on both the router and the Sonos component. The link lights should be lit solid and the activity lights should be blinking.

- If the link lights are not lit, try connecting to a different port on your router.
- If the link lights still do not light, try connecting a different Ethernet cable.

The Controller is acting sluggish, or all rooms aren't visible

You are probably experiencing wireless interference. Change the wireless channel your Sonos system is operating on by following the steps below. If this does not resolve the problem, please contact the Sonos Customer Support team and we'll be glad to help.

Change the wireless channel your Sonos system is operating on.

- Using the Sonos Controller for Mac or PC: From the **File** (or **Sonos**) menu, select **Preferences**. Click the **Advanced** tab, and select another wireless channel from the **Wireless Channel** list.
- Using the Sonos Controller 200: Touch **Music Menu**→**Settings**→**Advanced Settings**. Touch **Wireless Channel** and then choose another wireless channel from the list.

Important Safety Information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.

12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

13. The Mains plug should be readily available to disconnect the equipment.



14. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.



Note: Household cleaners or solvents can damage the finish on your Sonos components. Clean only with a dry soft cloth.

SONOS

THE WIRELESS HiFi SYSTEM

Important Product Information

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT NOTICE.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including but not limited to photocopying, recording, information retrieval systems, or computer network without the written permission of Sonos, Inc.

SONOS, THE WIRELESS HI-FI SYSTEM, PLAY:3, PLAY:5 and all other Sonos product names and slogans are trademarks or registered trademarks of Sonos, Inc. SONOS Reg. U.S. Pat. & Tm. Off.

The Sonos PLAY:3 and PLAY:5 are protected by patents including: U.S. Patents US7,696,816 and US7,378,903. Other patents are pending.

iPhone®, iPod®, iPad® and iTunes® are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

Android® is a trademark of Google Inc.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Sonos uses MSNTP software, which was developed by N.M. Maclaren at the University of Cambridge.

© Copyright, N.M. Maclaren, 1996, 1997, 2000; © Copyright, University of Cambridge, 1996, 1997, 2000.

All other products and services mentioned may be trademarks or service marks of their respective owners.

© 2004-2011 by Sonos, Inc. All rights reserved.



To reduce our use of paper, we have moved our product documentation online. For the latest Sonos user guides, please go to www.sonos.com/guides.

Technical Support

- Web site
 - Visit our Web site at www.sonos.com/support. There you can visit our Forums, browse our Frequently Asked Questions (FAQ) pages, or request assistance.
- Email: support@sonos.com
- Telephone
 - US/Canada: +1.800.680.2345 toll-free
 - United Kingdom: 0800 2346596
 - Deutschland: 0800 0005339
 - France: 0800 910769

If your country is not listed here, please visit www.sonos.com/support/contact to find the correct telephone number for your country.

Regulation Information

Europe

Sonos declares that this product herewith complies with the requirements of the EMC Directive 2004/108/EC, the Low Voltage Directive 2006/95/EC and the R&TTE Directive 1999/5/EC when installed and used in accordance with the manufacturer's instructions. A copy of the full Declaration of Conformance may be obtained at www.sonos.com/support/policies.

Europa

Sonos erklärt hiermit, dass dieses Produkt den Anforderungen der EMV-Richtlinie 2004/108/EC, der Niederspannungsrichtlinie 2006/95/EC und der R&TTE-Richtlinie 1999/5/EC entspricht, sofern es den Anweisungen des Herstellers gemäß installiert und verwendet wird. Die vollständige Konformitätserklärung finden Sie unter www.sonos.com/support/policies.

Europe

Sonos certifie que ce produit est conforme aux exigences de la directive CEM 2004/108/EC, de la directive basse tension 2006/95/EC et de la directive 1999/5/EC sur les équipements hertziens et les équipements terminaux de télécommunications, sous réserve d'une installation et d'une utilisation conformes aux instructions en vigueur du fabricant. Une copie complète de la Déclaration de conformité est disponible sur le site www.sonos.com/support/policies.

⚠ ⚠ Attention In France, operation is limited to indoor use within the band 2.454-2.4835 GHz. (Attention. En France, l'utilisation en intérieur est limitée à la bande de fréquences 2,454-2,4835 GHz.)

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can

be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The installer of this radio equipment must ensure that the product is located such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site www.hc-sc.gc.ca/rpb. As mentioned before, the installer cannot control the antenna orientation. However, they could place the complete product in a way that causes the problem mentioned above.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Canada

Cet appareil numérique de classe B est conforme aux normes ICES-003 et RSS-210 en vigueur au Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas créer d'interférences nuisibles. (2) Cet appareil doit tolérer toutes les interférences reçues, y compris les interférences pouvant entraîner un fonctionnement indésirable.

L'installateur du présent matériel radio doit veiller à ce que le produit soit placé ou orienté de manière à n'émettre aucun champ radioélectrique supérieur aux limites fixées pour le grand public par le ministère fédéral Santé Canada ; consultez le Code de sécurité 6 sur le site Web de Santé Canada à l'adresse : www.hc-sc.gc.ca/rpb. Comme indiqué auparavant, l'installateur ne peut pas contrôler l'orientation de l'antenne. Il peut néanmoins placer le produit tout entier de manière à provoquer le problème décrit ci-dessus.

Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

Les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

RF Exposure Requirements

To comply with FCC and Industry Canada exposure essential requirements, a minimum separation distance of 20cm (8 inches) is required between the equipment and the body of the user or nearby persons.

Recycling Information



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead please deliver it to the applicable collection point for the recycling of electrical and electronic equipment. By recycling this product correctly, you will help conserve natural resources and prevent potential negative environmental consequences. For more detailed information about

recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Important Safety Information (English)

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos components.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.

12. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

13. The Mains plug should be readily available to disconnect the equipment.



14. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.

Wichtige Sicherheitsinformationen (Deutsch)

1. Lesen Sie diese Anweisungen.

2. Bewahren Sie diese Anweisungen auf.

3. Beachten Sie alle Warnungen.

4. Befolgen Sie alle Anweisungen.

5. Verwenden Sie das Gerät nicht in der Nähe von Wasser.

6. Reinigen Sie die Geräte nur mit einem trockenen, weichen Tuch.

7. Blockieren Sie keine Lüftungsöffnungen. Befolgen Sie bei der Installation die Anweisungen des Herstellers.

8. Installieren Sie das Produkt nicht in der Nähe von Wärmequellen, wie z. B. Heizkörpern, Warmluftauslässen, Öfen oder anderen Geräten, die Wärme produzieren.
9. Verhindern Sie, dass auf das Netzkabel getreten oder dass es geklemmt wird. Dies gilt insbesondere für Stecker und den Austrittsort der Kabel am Gerät.
10. Verwenden Sie ausschließlich die durch den Hersteller spezifizierten Zubehörprodukte.
11. Trennen Sie das Gerät bei Gewitter oder längeren Nutzungspausen von der Stromversorgung.
12. Lassen Sie alle Wartungsarbeiten von qualifiziertem Sonos-Service-Personal durchführen. Eine Wartung ist erforderlich, wenn das Gerät beschädigt wurde, z. B. bei beschädigten Netzkabeln oder Steckern, wenn Flüssigkeit über dem Produkt verschüttet wurde oder Objekte hineingefallen sind, das Gerät Feuchtigkeit oder Regen ausgesetzt war, nicht ordnungsgemäß funktioniert oder heruntergefallen ist.
13. Der Netzstecker sollte gut zugänglich sein, um das Gerät jederzeit von der Stromversorgung trennen zu können.



14. Warnung: Setzen Sie das Gerät nicht Regen oder Feuchtigkeit aus, um das Risiko eines Brandes oder Stromschlags zu reduzieren.

15. Platzieren Sie keine mit Flüssigkeit gefüllten Behälter, wie z. B. Vasen, auf dem Gerät, um es vor Spritzwasser zu schützen.

Belangrijke veiligheidsinformatie (Nederlands)

1. Lees deze instructies.
2. Bewaar deze instructies.
3. Neem alle waarschuwingen in acht.
4. Volg alle instructies op.
5. Gebruik deze apparatuur niet in de buurt van water.
6. Maak de apparaten alleen schoon met een droge, zachte doek. Huishoudelijke schoonmaak- of oplosmiddelen kunnen de afwerking van Sonos-componenten beschadigen.
7. Blokkeer de ventilatiegaten niet. Installeer apparaten volgens de instructies van de fabrikant.
8. Installeer apparaten niet in de buurt van warmtebronnen, zoals radiatoren, ventilatieroosters, kachels of andere apparaten die warmte afgeven.
9. Zorg ervoor dat er niet over het netsnoer kan worden gelopen en dat dit niet bekneld kan raken, vooral niet bij de stekkers, bij stopcontacten en op het punt waar de snoeren het apparaat verlaten.
10. Gebruik alleen door de fabrikant gespecificeerde accessoires.
11. Haal bij onweer of als u het apparaat gedurende een lange periode niet gebruikt, de stekker uit het stopcontact.

12. Laat alle onderhoud uitvoeren door gekwalificeerd onderhoudspersoneel van Sonos. Onderhoud is nodig wanneer het apparaat schade heeft opgelopen, bijvoorbeeld wanneer een netsnoer of stekker is beschadigd, vloeistof of een voorwerp in het apparaat is terechtgekomen, het apparaat is blootgesteld aan regen of vocht, het apparaat niet naar behoren functioneert of het apparaat op de grond is gevallen.

13. De stekker in het stopcontact moet gemakkelijk bereikbaar zijn om de stroomvoorziening af te kunnen sluiten.



14. Waarschuwing: Stel het apparaat niet bloot aan regen of vocht om het risico op brand of elektrische schokken te beperken.

15. Stel het apparaat niet bloot aan druppels of spatten en plaats geen met vloeistof gevulde voorwerpen, zoals vazen, op het apparaat.

Viktig säkerhetsinformation (Svenska)

1. Läs dessa instruktioner.
2. Behåll dessa instruktioner.
3. Beakta alla varningar.
4. Följ alla instruktioner.
5. Använd inte apparaten nära vatten.
6. Rengör endast med torr, mjuk trasa. Rengöringsmedel eller lösningsmedel för hushållsbruk kan skada ytfinishen på dina Sonos-komponenter.
7. Blockera inte ventilationsöppningarna. Installera enligt tillverkarens instruktioner.
8. Installera inte i närheten av värmekällor så som element, spisar och/eller andra apparater som avger värme.
9. Skydda nätkabeln från tramp och klämning, särskilt vid kontakterna, uttag eller på andra ställen där de kommer ut ur apparaten.
10. Använd endast tillbehör som specificerats av tillverkaren
11. Koppla bort apparaten från nätet under åskväder eller om den inte skall användas under längre tid.

12. All service skall utföras av Sonos kvalificerade servicepersonal. Service är nödvändig om apparaten har skadats, exempelvis om nätkabeln eller stickproppen är skadad, om vätska har spillts eller föremål har kommit in i apparaten, om den utsatts för regn eller fukt, inte fungerar normalt eller har tappats.

13. Nätkontakten skall vara lätt tillgänglig för urkoppling av apparaten.



14. Varning: Minska risken för brand eller elektriska stötar genom att inte utsätta apparaten för regn eller fukt.

15. Utsätt inte apparaten för dropp eller stänk och placera inte föremål fyllda med vätska, så som vasar, på apparaten.

Informations importantes relatives à la sécurité (Français)

1. Lisez attentivement ces instructions.
2. Conservez ces instructions.
3. Respectez tous les avertissements.
4. Suivez toutes les instructions.
5. N'utilisez pas cet appareil à proximité de l'eau.
6. Nettoyez cet appareil uniquement à l'aide d'un chiffon sec et doux.

7. N'obstruez aucun orifice de ventilation. Installez cet appareil conformément aux instructions du fabricant.
8. Ne placez pas cet appareil à côté d'une source de chaleur telle qu'un radiateur, une bouche de chauffage, une cuisinière ou tout autre appareil produisant de la chaleur.
9. Protégez le câble d'alimentation afin de ne pas marcher dessus, ni le pincer, en particulier au niveau des fiches, des prises de courant et de l'endroit d'où ils sortent de l'appareil.
10. Utilisez uniquement les équipements/accessoires recommandés par le fabricant.
11. Débranchez cet appareil en cas d'orage ou lorsqu'il n'est pas utilisé pendant une longue période.
12. Confiez la réparation et l'entretien à un personnel qualifié de Sonos. L'appareil nécessite réparation lorsqu'il est endommagé de quelque manière que ce soit, notamment si le cordon d'alimentation ou la fiche est endommagé(e), si du liquide a été versé sur l'appareil, si des objets sont tombés à l'intérieur, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas correctement ou s'il est tombé.
13. La prise d'alimentation secteur doit être facilement accessible pour débrancher l'appareil.



14. Avertissement : afin de limiter les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie, ni à l'humidité.

15. N'exposez jamais cet appareil aux projections ou aux écoulements d'eau et ne posez jamais un récipient contenant un liquide, tel qu'un vase, sur l'appareil.

Información de seguridad importante (Español)

1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Preste atención a todas las advertencias.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca del agua.
6. Límpielo solamente con un paño suave y húmedo. Los productos de limpieza o disolventes domésticos podrían dañar el acabado de los componentes de Sonos.
7. No bloquee los orificios de ventilación. Realice la instalación de conformidad con las instrucciones del fabricante
8. No instale el aparato cerca de fuentes de calor, tales como radiadores, registradores de calor, estufas o cualquier otro aparato que produzca calor.
9. Proteja el cable de alimentación a fin de que no sea pisado o pellizcado, de forma particular en los enchufes, en los receptáculos y en el punto de salida del aparato.
10. Utilice solamente accesorios especificados por el fabricante.
11. Desenchufe el aparato durante tormentas de relámpagos o si deja de utilizarse por lapsos prolongados de tiempo.

12. Todo tipo de servicio debe ser realizado por personal de servicio de Sonos calificado. El aparato requiere servicio si se ha dañado de cualquier modo; por ejemplo, si se daña el cable o enchufe de alimentación, si se derraman líquidos o se introducen objetos en el aparato, si el aparato se ha expuesto a la lluvia o humedad, si no opera normalmente o si se cae.

13. El enchufe principal debe estar a la mano a fin de desconectar el equipo.



14. Advertencia: A fin de reducir el riesgo de ignición o de choque eléctrico, no exponga el aparato a la lluvia o humedad.

15. No exponga el aparato a goteos o salpicaduras y no coloque objetos que contengan líquidos, tales como vasos, encima del aparato.

Informazioni importanti per la sicurezza (Italiano)

1. Leggere le seguenti istruzioni.

2. Conservare queste istruzioni.

3. Prestare attenzione a tutti gli avvisi.

4. Seguire tutte le istruzioni.

5. Non utilizzare questo dispositivo in prossimità dell'acqua.

6. Pulire solo con un panno morbido asciutto. I detersivi o solventi per le pulizie di casa possono danneggiare la rifinitura dei componenti Sonos.

7. Non ostruire i fori di aerazione. Effettuare l'installazione in modo conforme alle istruzioni del costruttore.
8. Non installare in prossimità di fonti di calore, ad esempio termosifoni, stufe o altri apparati che generino calore.
9. Evitare che il cavo di alimentazione sia calpestato o schiacciato, soprattutto in corrispondenza delle spine, delle prese multiple e del punto di uscita dall'apparecchio.
10. Utilizzare solo accessori indicati dal costruttore.
11. Scollegare il dispositivo dalla presa di corrente durante temporali o se non viene utilizzato per lunghi periodi di tempo.
12. Rivolgersi per l'assistenza solo a personale qualificato Sonos. L'assistenza è necessaria quando il dispositivo subisce qualsiasi tipo di danno, ad esempio al cavo di alimentazione o alla spina, se si versano liquidi o cadono oggetti sul dispositivo, se il dispositivo è stato esposto alla pioggia o all'umidità, se non funziona correttamente oppure è caduto per terra.
13. La spina che si inserisce nella presa di corrente deve essere facilmente raggiungibile per scollegare rapidamente il dispositivo.



14. Avviso: Per ridurre il rischio di incendio o di scossa elettrica, non esporre il dispositivo a pioggia o umidità.
15. Il dispositivo non deve essere esposto a gocciolamenti o spruzzi e nessun tipo di oggetto contenente liquidi, ad esempio vasi, deve essere appoggiato su di esso.

重要な安全上の情報 (日本語)

1. 説明書をお読みください。
2. 説明書を保管しておいてください。
3. 警告には従ってください。
4. 指示にはすべて従ってください。
5. 機器を水の近くで使用しないでください。
6. 乾いた柔らかい布できれいにしてください。家庭用クリーナーや溶剤によって、Sonos コンポーネントの表面が破損する可能性があります。
7. 換気口を防がないでください。製造元の指示に従ってインストールを行ってください。
8. ラジエーター、ヒートレジスター、ストーブ、もしくは暖房器具の近くに設置しないでください。
9. 電源ケーブル、特にプラグ、延長コード、およびそれらが機器から出ている部分が踏まれたり、ねじれたりすることがないように保護してください。
10. 製造元が指定した付属品またはアクセサリーのみを使用してください。
11. 雷雨のとき、および長期にわたり使用しない場合は、電源を抜いてください。

12.すべての修理に関しては認定サービス員にお問い合わせ下さい。電源ケーブルまたはプラグが破損した、液体をこぼした、物を機器に落とした、機器を風雨にさらした、正常に動作しない、または落下させてしまったなどの事情で、装置が破損した場合は修理が必要となります。

13.電源プラグは、万が一の場合にすぐに抜けるように、手の届き易い場所に差し込んでください。



14.警告：火災や電気ショックを避けるために、機器を風雨にさらさないようにしてください。

15.機器を水にさらさないでください。機器の上に花瓶などの液体の入った物体をおかないでください。

重要安全信息 (简体中文)

1. 阅读这些说明。
2. 保留这些说明。
3. 注意所有警告。
4. 遵循所有说明。
5. 切勿在近水的地方使用本设备。

6. 只能用软干布清洁本设备。家用清洁剂或溶剂可能会损坏 Sonos 组件的表面。
7. 切勿阻塞任何通风口。按照厂家提供的说明书进行安装。
8. 切勿将本设备安装在热源（例如散热器、热暂存器、炉子）或其他会产生热的装置附近。
9. 防止电源线被踩到或夹到，尤其要小心保护插头、电源插座及其在本设备上的出口点。
10. 只使用厂家指定的附件 / 配件。
11. 雷雨天气或长期不使用本设备时，应拔出其电源插头。
12. 本设备的一切维修应由合格的 Sonos 维修人员执行。一旦本设备受到任何损坏，就需要进行维修——损坏情况包括：电源线或插头损坏；有液体渗入或异物落入到本设备中；本设备接触到雨水或湿气，不能正常工作，或被摔落。
13. 电源插头应能随时从插座拔出。



14. 警告： 为了降低火灾或触电风险，切勿让本设备接触到雨水或湿气。

15. 不要让本设备接触到滴落物或溅出物，不要将装有液体的物体（例如花瓶）放在本设备上。

许可协议和有限保修

购买适用的 SONOS 产品（此类硬件和软件统称为“产品”）之前，请仔细阅读 SONOS EUROPE B.V.（“SONOS”）提供的许可协议和有限保修（以下简称“协议”）的条款，其中就软件以及相关固件和文档（统称为“软件”）的使用作出了规定。

购买此产品，即表示：(1) 您已年满 18 周岁；(2) 您有权合法约束自身或您所任公司（如适用）的行为；以及 (3) 同意遵守本协议的所有条款。如果您不完全同意这些条款或无法作出此类陈述，则请勿购买此产品。

1. 许可证的授予

(a) 根据本协议的条款和条件，Sonos 将授予您全球范围适用、非排他、不可转让的个人许可证（不得转授），使您可以：(i) 出于操作产品之目的而使用产品内含的软件；(ii) 在有效期内，在您拥有或控制的任何个人计算机上使用软件的桌面应用程序部分。不得将软件传输到任何其他计算机或将软件从产品中移除。不管 Sonos 在本协议中授予任何许可证，您都承认并同意，您对于自身在使用软件过程中遵守美国及国际版权法的情况负全部责任。

(b) 您同意不在适用的强制性法律禁止的情况下对产品进行复制、修改、反向工程、反编译或反汇编。除本协议授予的有限许可外，Sonos 及其供应商对软件内含的全球范围适用的知识产权保留所有权利。Sonos 保留所有其他权利。您承认并同意，产品所含和用于创造产品的技术是极具价值的商业秘密，且是 Sonos 的专有技术，您不会向任何第三方披露您所掌握的此类商业秘密。

(c) Sonos 没有义务提供任何产品的更新或升级服务，但如果有提供，此类更新、升级以及所有文档均应被视为“产品”，且应受本协议的条款和条件限制。

2. 协议条款

(a) 您只需通知 Sonos、停止使用产品并从计算机中将软件清除，便可以随时终止本协议。

(b) 如果您违反本协议中的第 1 条和 / 或第 3 条，本协议将自动终止。

(c) 因任何原因终止本协议或协议期满后，第 1(b)、2(c)、3、6(c)、7 和 9 条仍继续有效。

3. 遵守版权法

Sonos 一贯遵守美国及国际版权法，鉴于本协议授予的许可证，您也同意遵守这些法律。您承认，这些版权法禁止未经授权复制或发布音乐或其他使用产品访问的内容（以下简称“内容”），且您同意未经版权拥有者的书面授权，不会直接或间接复制或发布任何内容。此外，您也同意依照第 3 部分条款的规定向 Sonos 或其许可方赔偿由 Sonos 或其许可方引起或与您的失误相关的所有损失、损坏、债务和费用。

4. SONOS 隐私政策

Sonos 产品的使用受 Sonos 隐私政策限制，该隐私政策被引入作为本协议的一部分，详情请浏览 www.sonos.com/legal/privacy_policy.htm。Sonos 隐私政策概括了 Sonos 可以从您那里收集的信息类型及其对这些信息所具有的使用权。您务必要阅读并理解该隐私政策的条款。

5. 第三方内容和技术支持

Sonos 有时会通过产品向第三方内容供应商提供访问权限。此外，Sonos 也可能支持某些第三方技术，如特定文件格式或编解码器。在任何时候、任何情况下，Sonos 均保留对停止访问和/或支持此类第三方内容或技术的权利。在选择或继续支持任何此类第三方内容或技术方面，Sonos 不作任何声明或保证。

6. 保修和免责声明

(a) **有限保修。** Sonos 向您保证，自购买产品之日起一年内，凡由于生产材料和制造工艺引起的质量缺陷均予以免费保修。SONOS 不保证产品在工作过程中不会中断或无错误，也不保证所有错误都可以修正。如果您是用户，本保修是在您的法定权利基础之上补充提供的，并不影响您的法定权利。除第 4(C) 条规定以及与任何强制性消费者权益保护法有抵触外，Sonos 将决定其唯一责任以及您的唯一补救措施为维修或更换产品。如果上述两种措施均不适用，将会退还您支付金额的一部分，因为您已经使用过产品。

(b) **限制。** 上述保证不适用于由于以下原因导致的产品问题：(i) 未成功实施 Sonos 提供的产品错误修复或错误修正；(ii) 以未经本协议规定或授权的方式使用该产品；或 (iii) 将该产品与其他产品，以及非 Sonos 提供且不符合 Sonos 文档规定的硬件或产品一同使用。

(c) **免责声明。** 除上述明确规定外，Sonos 不对产品作出任何明示、暗示或法定保证。Sonos 及其供应商在此特别声明，拒绝承担所有其他明示、法定和暗示的保证和条款，包括适销性、特定使用的适合性、不侵犯性以及满意质量的隐含条件等暗示保证。除第 6(A) 条明确规定外，产品均“按原样”提供，不附带任何保证。您对于有目的性的产品选择、安装和使用负有全部责任。**某些司法管辖区不允许限制暗示保证，因此上述免责声明可能对您（尤其当您**

是用户时) 不适用。在您所在司法管辖区的法律范围内，任何情况下，您所在司法管辖区的法律允许的所有暗示保证均遵守上述有限保修分条款 (a) 中的规定，在一年之内有效。

7. 责任限制

(a) 在法律允许的最大范围内，任何情况下，Sonos 及其供应商均有义务承担任何附带损害、特殊损害、间接损害、惩罚性损失赔偿或间接损害，包括但不限于任何原因引起的和基于所有责任理论的弥补费用、数据丢失、利润损失、业务中断、商业信息丢失，或由于使用（或无法使用）产品而引起的其他经济损失。

(b) 除法律另有规定外，任何情况下，Sonos 对一个或多个原因导致的所有损害的赔偿总额不得超过您为该产品支付的金额。

(c) 即使您曾经提醒 Sonos、其供应商或经销商可能会发生此类损失或曾告知要使用的方式，第 7 条中的限制仍适用。这些限制也同样适用于未达到任何有限补救措施的实质目的的情况。这些限制反映了对风险的合理分配。

(d) 第 7 条中的限制不适用于因 Sonos 一方故意或者重大过失所造成的损失。第 7 条中的限制也不适用于因 Sonos、其主管或任何第三方因故意、重大过失或未履行合同约定义务而引起的人身伤亡所造成的损失。对于产品责任，第 7 条中的限制仅适用于与产品责任有关的强制性规则允许的范围。

(e) 第 7 条中的限制不会对您作为用户所拥有的法定权利造成影响。

8. 侵权赔偿

(a) **赔偿。**如果您依照本协议规定和授权指控产品的任何部分侵犯了任何第三方的版权或侵占了该第三方的商业秘密，则只要发生以下情形，Sonos 均应对您提出的索赔、要求、诉讼或申诉（“索赔”）进行辩护或处理：(i) 及时向 Sonos 提出了索赔书面通知；(ii) 给予 Sonos 控制和安排辩护和处理索赔的排他权利；(iii) 向 Sonos 提供所有与索赔相关的必要信息和协助，相关费用由 Sonos 承担（但不补偿您损失的宝贵时间）。Sonos 应支付由此类索赔引致的所有理赔金额、损失和费用。您自行承担参与索赔辩护的费用。Sonos 无须承担任何未经事先书面规定的费用。

(b) **赔偿限制。**尽管有上述规定，但发生以下情形时，Sonos 概不对索赔负责：(i) Sonos 书面通知您如果继续使用该产品将可能产生此诉讼风险超过三十 (30) 天后，您仍可继续使用产品，并扣除部分折旧费后退还您购买产品的费用，以作为您停止使用所有产品的补偿；(ii)

将产品或其中任何部件与其他非 Sonos 生产的硬件或产品配合使用（如果该产品从未这样配合使用，索赔事件应避免这种情况发生）；或 (iii) 未经本协议授权使用该产品。

(c) **全部责任。**关于产品任何实际或被指控侵权或侵占知识产权方面，上述第 8 条规定列出了 Sonos 的全部责任和义务以及您的唯一补救措施。

9. 其他

您确认该产品受购买产品时相关出口管制法律法规的限制，并承诺将遵守所有相关的法律法规。本协议应受荷兰法律管辖，但不适用于与其冲突的法律规定。《联合国国际货物销售合同公约》不适用于本协议。本协议包含了您与 Sonos 就相关主题事件达成一致的所有条款，取代所有之前此处未明确规定的口头或书面说明、沟通或协议。如根据司法法令或决议，本协议任何条款经发现为无效或无强制力时，则依照其条款规定，本协议的其他条款仍有效且具有约束力。未经 Sonos 书面同意前，无论是否依照法律，均不得转让本协议或本协议下的任何权利或义务。如果您是用户，不得无理拒绝此书面同意。任何试图不经事先书面同意的转让行为均为无效。

如对本协议有任何疑问，请发送电子邮件至 support@sonos.com。

License Agreement and Limited Warranty

Sonos, Inc.

READ THE TERMS OF THIS LICENSE AGREEMENT AND LIMITED WARRANTY ("AGREEMENT") GOVERNING THE USE OF THE SOFTWARE AND RELATED FIRMWARE AND DOCUMENTATION (COLLECTIVELY, THE "SOFTWARE") PROVIDED TO YOU BY SONOS ("SONOS") CAREFULLY BEFORE USING THE APPLICABLE SONOS PRODUCT (SUCH HARDWARE, TOGETHER WITH THE SOFTWARE, REFERRED TO AS THE "PRODUCT").

BY OPENING THIS PACKAGE, INSTALLING AND USING THE PRODUCT, YOU ARE (1) REPRESENTING THAT YOU ARE OVER THE AGE OF 18, (2) REPRESENTING THAT YOU HAVE THE RIGHT AND AUTHORITY TO LEGALLY BIND YOURSELF OR YOUR COMPANY, AS APPLICABLE, AND (3) CONSENTING TO BE LEGALLY BOUND BY ALL OF THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ALL THESE TERMS OR CANNOT MAKE SUCH REPRESENTATIONS, DO NOT USE THE PRODUCT. IF YOU ELECT NOT TO ACCEPT THE TERMS OF THIS AGREEMENT, YOU MAY RETURN THE NEW, UNUSED PRODUCT WITHIN THIRTY (30) DAYS OF PURCHASE TO THE RETAIL LOCATION WHERE YOU PURCHASED IT, WITH ALL ORIGINAL PACKAGING FOR A FULL REFUND.

1. GRANT OF LICENSE

(a) Subject to the terms and conditions of this Agreement, Sonos grants to You a worldwide, non-exclusive, non-transferable, personal license (without the right to sub-license) to (i) use the Software as embedded in the Product for the purpose of operating the Product, and (ii) use the desktop application portion(s) of the Software on any personal computer owned or controlled by You during the Term. Except as provided above, You may not transfer the Software to any other computing device or otherwise remove the Software from the Product. Notwithstanding any license granted herein by Sonos, You acknowledge and agree that it is Your sole responsibility to comply with U.S. and international copyright laws with respect to Your use of the Software.

(b) You agree not to copy, modify, reverse engineer, decompile or disassemble the Product to the extent that such restriction is not prohibited by law. Except for the limited license granted herein, Sonos and its suppliers hereby retain all right, title and interest in and to all worldwide intellectual property rights embodied in the Software. All other rights are reserved by Sonos. You acknowledge and agree that the technology embedded in and used to create the Product constitute the valuable trade secrets and know-how of Sonos, and to the extent you discover any such trade secrets, You will not disclose them to any third party.

(c) Sonos shall have no obligation to provide any updates or upgrades to the Product, but in the event that it does, such updates, upgrades and any documentation shall be deemed the "Product", and shall be subject to the terms and conditions of this Agreement.

2. TERM OF AGREEMENT

(a) You may terminate this Agreement at any time by notifying Sonos, discontinuing use of the Product and purging the Software from Your computing device.

(b) This Agreement will automatically terminate if You violate any of its terms.

(c) Sections 1(b), 3, 4, 6(c), 7 and 9 shall survive termination or expiration for any reason.

3. COMPLIANCE WITH COPYRIGHT LAWS

Sonos complies with U.S. and international copyright laws and in consideration of the licenses granted herein, You agree to do the same. You acknowledge that unauthorized copying or distribution of music or other content accessed using the Product ("Content") is prohibited by such copyright laws, and You agree that You will not, directly or indirectly, copy or distribute any Content without the express written authorization of the copyright holder. You agree to indemnify and hold harmless Sonos and its licensors from and against any and all claims, suits, losses, damages, liabilities, costs and expenses incurred by Sonos or its licensors arising out of or related to Your failure to comply with the terms of this Section 3.

4. SONOS PRIVACY POLICY

Use of Sonos Products is subject to the Sonos Privacy Policy, which can be found at www.sonos.com/legal/privacy_policy.htm and by reference is made a part of this Agreement. The Sonos Privacy Policy outlines the type of information that may be collected from you by Sonos and how such information may be used by Sonos. It is important that you read and understand the terms of the Privacy Policy.

5. THIRD PARTY CONTENT AND TECHNOLOGIES SUPPORT

From time to time, Sonos may provide access to third party content providers via the Product. In addition, Sonos may support certain third party technologies, such as specific file formats or codecs. Sonos reserves the right to discontinue access to and/or support for such third party content or technologies at any time, and for any reason. Sonos makes no representations or warranties whatsoever regarding the selection of, or continuing support for, any such third party content or technologies.

6. WARRANTY AND DISCLAIMER

(a) Limited Warranty. Sonos warrants to You that for a period of one (1) year after the date of original purchase of the Product, the Product will be free from defects in materials and workmanship. SONOS DOES NOT WARRANT THAT THE PRODUCT WILL OPERATE WITHOUT INTERRUPTION OR WILL BE ERROR-FREE, OR THAT ALL ERRORS MAY BE CORRECTED. EXCEPT AS SET FORTH IN SECTION 6(C), SONOS' SOLE LIABILITY, AND YOUR SOLE REMEDY, FOR BREACH OF THE FOREGOING WARRANTY WILL BE, AT SONOS' SOLE DISCRETION, REPAIR OR REPLACEMENT OF THE PRODUCT, OR, IF NEITHER OF THE FOREGOING ARE REASONABLY AVAILABLE, A REFUND OF THE AMOUNT YOU PAID, LESS AMOUNTS ATTRIBUTABLE TO YOUR PRIOR USE.

(b) Limitations. The foregoing warranty does not extend to problems in the Product that result from: (i) Your failure to implement all bug fixes or error corrections to the Product which are made available by Sonos; (ii) any use of the Product in a manner for which it was not designed or as not authorized under this Agreement; or (iii) any use of the Product with other products, hardware or products not supplied by, and inconsistent with the documentation provided by, Sonos.

(c) Disclaimer. EXCEPT AS EXPRESSLY SET FORTH ABOVE, SONOS MAKES NO WARRANTIES, WHETHER EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCT. SONOS AND ITS SUPPLIERS HEREBY SPECIFICALLY DISCLAIM ALL OTHER EXPRESS, STATUTORY AND IMPLIED WARRANTIES AND CONDITIONS, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND THE IMPLIED CONDITION OF SATISFACTORY QUALITY. EXCEPT AS EXPRESSLY STATED IN SECTION 6(A), THE PRODUCT IS SUPPLIED ON AN "AS IS" BASIS WITHOUT WARRANTY. YOU ASSUME ALL RESPONSIBILITIES FOR SELECTION OF THE PRODUCT TO ACHIEVE YOUR INTENDED RESULTS, AND FOR THE INSTALLATION AND USE OF THE PRODUCT. Some jurisdictions do not allow a limitation on implied warranties, and so the foregoing disclaimer may not apply to You. In any event, any implied warranties that may exist under the laws of Your jurisdiction are limited to the one (1) year period set forth in the limited warranty given under subsection (a) above.

7. LIMITATION OF LIABILITY

(a) TO THE MAXIMUM EXTENT ALLOWED UNDER LAW, IN NO EVENT WILL SONOS OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO, INCIDENTAL, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INDIRECT DAMAGES, AND INCLUDING BUT NOT LIMITED TO, COST OF COVER, LOSS OF DATA, LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS ARISING FROM THE USE OF (OR INABILITY TO USE) THE PRODUCT, NO MATTER HOW CAUSED AND ON ANY THEORY OF LIABILITY. BECAUSE SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU, BUT THEY SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

(b) IN NO EVENT SHALL SONOS' TOTAL LIABILITY TO YOU FOR ALL DAMAGES IN ANY ONE OR MORE CAUSES OF ACTION EXCEED THE AMOUNT PAID BY YOU FOR THE PRODUCT.

(c) The limitations in Section 7 will apply even if Sonos, its suppliers or dealers have been advised of the possibility of such damage or of any type of use intended by You. These limitations shall apply notwithstanding the failure of essential purpose of any limited remedy. You acknowledge that these limitations reflect a reasonable allocation of risk.

8. INFRINGEMENT INDEMNITY

(a) Indemnity. Sonos shall defend or settle any claim, demand, suit, proceeding or action ("Claim") against You to the extent that such Claim is based on an allegation that any portion of the Product, as furnished to You under this Agreement and used as authorized in this Agreement, infringes any third party's U.S. copyright or misappropriates such third party's trade secrets, provided that You: (i) give prompt written notice of the Claim to Sonos; (ii) give Sonos the exclusive authority to control and direct the defense or settlement of such Claim; and (iii) give Sonos, at Sonos' expense (except for the value of Your time), all necessary information and assistance with respect to the Claim. Sonos shall pay all settlement amounts, damages and costs finally awarded to the extent attributable to such Claim. You may participate in the defense of Claim at Your expense. Sonos will not be liable for any costs or expenses incurred without its prior written authorization.

(b) Limit on Indemnity. The foregoing notwithstanding, Sonos shall have no liability for a Claim to the extent based on: (i) the use by You of any Product more than thirty (30) days after Sonos notifies You in writing that continued use of the Product may give rise to such Action; (ii) the combination of the Product, or any part thereof, with other hardware or products not provided by Sonos, which Claim would have been avoided if the Products had not been so combined; or (iii) use of the Products other than as authorized under this Agreement.

(c) Entire Liability. THE FOREGOING PROVISIONS OF THIS SECTION 8 STATE THE ENTIRE LIABILITY AND OBLIGATIONS OF SONOS, AND YOUR EXCLUSIVE REMEDY, WITH RESPECT TO ANY ACTUAL OR ALLEGED INFRINGEMENT OF OR MISAPPROPRIATION OF ANY INTELLECTUAL PROPERTY RIGHT BY THE PRODUCT.

9. MISCELLANEOUS

You acknowledge that the Product is subject to the export control law and regulations of the United States, and any amendments thereto. You warrant that You will comply in all respects with United States exports laws and regulations. This Agreement shall be governed by the laws of the State of California, without reference to its conflict of law principles. You consent to the jurisdiction of the federal and state courts sitting in the State of California. This Agreement constitutes the entire agreement between You and Sonos with respect to the subject matter hereof, and supersedes all prior oral or written understandings, communications or agreements not specifically incorporated herein. If any provision of this Agreement is found to be invalid or unenforceable pursuant to judicial decree or decision, the remainder of this Agreement shall remain valid and enforceable according to its terms. You may not assign this Agreement, or any of its rights or obligations hereunder, whether by operation of law or otherwise, without the prior written consent of Sonos. Any attempted assignment by You without prior written consent shall be void.

For inquiries or questions regarding this Agreement, please send an e-mail to support@sonos.com or call (800) 680-2345.

Sonos, Inc.

www.sonos.com