

CXN5001 Users Manual

Oct 1, 2009

SONY corp.
Semiconductor business group
HSS div. Information device dept.



Fixed transmitting power module(S/N:1003/1004)



1. Connect the USB cable mini-B connector to the CXN5001.
2. Connect the module and the coupler(antenna) with the U.FL coax cable.
3. Apply DC power supply +5V to the module through the USB cable.

 Variable transmitting power module(S/N:1001/1002) operation 

0. Preparation

- Linux Fedora core8 installed PC
- USB cable(A – mini B)

1. Powered on the PC

2. Select Fedora

3. Input the account and pass word

4. Tie the CXN5001 and the coupler(antenna) with the U.FL coax cable

5. Connect the CXN5001 to the PC with an USB cable

6. Click the “raptor_tool” on the desk top

7. In the shell, enter No.1 & 80 to set the TX power output
or set to the minimum power8. If “80” is selected, variable TX power setting is available,
to increase the TX power, input “1”,
to decrease the TX power, input “2”.