

SONY[®]

3-097-195-11(1)

Micro HI-FI Component System

Operating Instructions

Owner's Record

The model and serial numbers are located on the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____



CMT-DH7BT

© 2007 Sony Corporation


WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Notice for the customers in the U.S.A.

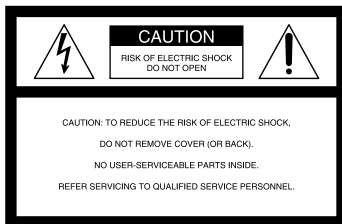

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Note to CATV system installer:

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUT

You ar
modifi
this m
operat

This ec
operat
antenn

This ec
radiati
uncon
FCC r
Guidel
This ec
level tl
FCC r
Guidel
without
evalua
it shou
least 2
and pe
hands,

U.S.A mode



CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has a very low RF energy level that is deemed to comply with FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).

U.S.A., Canadian and Australian models only



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

About this manual

- Icons, such as **CD**, listed at the top of each explanation indicate what kind of media can be used with the function being explained.
- The English on-screen display is used for illustration purposes only.
- The Control Menu items may be different depending on the disc.
- The Setup Menu items may be different depending on the area.

Table of Contents

About this manual 3
Playable discs 5
Guide to parts and controls 8

Getting Started

Hooking up the system 14
Hooking up the TV 17
Setting the clock 19
Performing QUICK SETUP 20
Using the THEATRE SYNC
function 21

Disc

Playing a disc 23
– Normal Play
Using play mode 27
Searching/selecting a disc 31
Playing MP3/JPEG discs 34
Adjusting the delay between the
picture and sound 39
– A/V SYNC
Restricting playback of the disc 39
– CUSTOM PARENTAL CONTROL,
PARENTAL CONTROL
Using the DVD setup menu 43

Tuner

Listening to the radio 48

Bluetooth

Using the Bluetooth function 52

Sound Adjustment

Adjusting the sound 58

Other operations

Using the timer 59
Changing the display 60
Viewing information about the
disc 61
Hooking up optional
components 64

Additional Information

Troubleshooting 66
Precautions 75
Specifications 76
Guide to the Control Menu
display 79
Language code list 82
Bluetooth wireless technology 84
Playable Bluetooth devices 85
Glossary 86
Index 89

















¹⁾ MP3
data.

²⁾ JPEG
File S
Tech

³⁾ A log
Stanc

Playable discs

Type	Characteristics	Icon used in this manual	Logo
DVD VIDEO	<ul style="list-style-type: none"> • DVD VIDEO • DVD-R*/-RW*/+R/+RW in DVD VIDEO format <p>* also in video mode</p>		
VR mode	<ul style="list-style-type: none"> • DVD-R/-RW in VR (Video Recording) mode 		
VIDEO CD	<ul style="list-style-type: none"> • VIDEO CD • Super VCD* • CD-ROM*/-R*/-RW* <p>* in VIDEO CD or Super VCD format</p>		
CD	<ul style="list-style-type: none"> • AUDIO CD* • CD-R*/-RW* <p>* in AUDIO CD format</p>		 
DATA CD	<ul style="list-style-type: none"> • CD-ROM/-R/-RW in DATA CD format, containing MP3 audio tracks¹⁾ and/or JPEG image files²⁾, and conforming to ISO 9660³⁾ Level 1 or Level 2, or Joliet (expansion format). 		   
DATA DVD	<ul style="list-style-type: none"> • DVD-ROM/-R/-RW/+R/+RW in DATA DVD format containing MP3 audio tracks¹⁾ and/or JPEG image files²⁾, and conforming to UDF (Universal Disk Format). 		

This system can also play back discs with the following disc logos:




¹⁾ MP3 (MPEG 1 Audio Layer 3) is a standard format defined by ISO/MPEG which compresses audio data. MP3 audio tracks must be in MPEG 1 Audio Layer 3 format.

²⁾ JPEG image files must conform to the DCF image file format. (DCF "Design rule for Camera File System": Image standards for digital cameras regulated by Japan Electronics and Information Technology Industries Association (JEITA)).

³⁾ A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

"DVD+RW", "DVD-RW", "DVD+R", "DVD VIDEO", and the "CD" logos are trademarks.

Continued  5^B


Discs that cannot be played

- CD-ROMs recorded in PHOTO CD format
- DATA CDs recorded in MP3 PRO format
- Data part of CD-Extras¹⁾
- Data part of Mixed CDs²⁾
- Super Audio CDs
- DVD Audio discs
- DVD-RAMs
- A DVD VIDEO with a different region code.
- A disc that has a non-standard shape (e.g., heart, square, star).
- A disc that has the adhesive cellophane tape or a sticker still left on it.

¹⁾ CD-Extra: This format records audio (AUDIO CD data) on the tracks in session 1 and data on the tracks in session 2.

²⁾ Mixed CD: This format records data on the first track and audio (AUDIO CD data) on the second and subsequent tracks of a session.

Region code of DVD VIDEOS you can play back on this system

Your system has a region code printed on the back of the unit and will only play back DVD VIDEOS labeled with identical region code. DVD VIDEOS labeled  will also be played back on this system. If you try to play back any other region code DVD VIDEO, the message "Playback prohibited by area limitations." will appear on the TV screen. Depending on the DVD VIDEO, no region code indication may be labeled even though playing the DVD VIDEO is prohibited by area restrictions.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to Compact Disc (CD) standard, playback on this product is not guaranteed.

Notes on CD-R/-RW and DVD-R/-RW/+R/+RW

- In some cases, CD-Rs/-RWs and DVD-Rs/-RWs/+Rs/+RWs cannot be played back on this system due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not be played back if it has not been correctly finalized. For more information, see the operation instructions for the recording device.
- Note that some playback functions may not work with some DVD+RWs/+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback.
- A disc created in Packet Write format cannot be played back.

Note on playback operations of DVD VIDEOS and VIDEO CDs

Some playback operations of DVD VIDEOS and VIDEO CDs may be intentionally set by software producers.

Since 1
VIDE
the dis
design
not be
instru
VIDE

Mus copy

This p
discs t
(CD) ;
discs €
techn
record
among
do not
may n

Not

- This
Sess
(or ;
the ;
audi
recc
play
• If th
AUI
only
back
• The
Sess
is a
form
syst
the ;
CD

Since this system play back DVD VIDEOS and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVD VIDEOS or VIDEO CDs.

Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Notes on Multi Session disc

- This system can play back Multi Session discs when an MP3 audio track (or a JPEG image file) is contained in the first session. Any subsequent MP3 audio tracks (or JPEG image files) recorded in later sessions can also be played back.
- If the first session is recorded in AUDIO CD or VIDEO CD format, only the first session will be played back.
- The system will recognize a Multi Session disc as an AUDIO CD if there is a session recorded in AUDIO CD format on the disc. However, the system will only play back the disc if the first session is recorded in AUDIO CD format.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

- This system incorporates Dolby* Digital and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

**Manufactured under license from Digital Theater Systems, Inc.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.


- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- The XM name and related logos are registered trademarks of XM Satellite Radio Inc.
- (c) 2006 SIRIUS Satellite Radio Inc. "SIRIUS" and the SIRIUS dog logo are registered trademarks of SIRIUS Satellite Radio Inc.

Guide to parts and controls


This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

Unit (HCD-DH7BT/Compact Disc Receiver)

Front panel

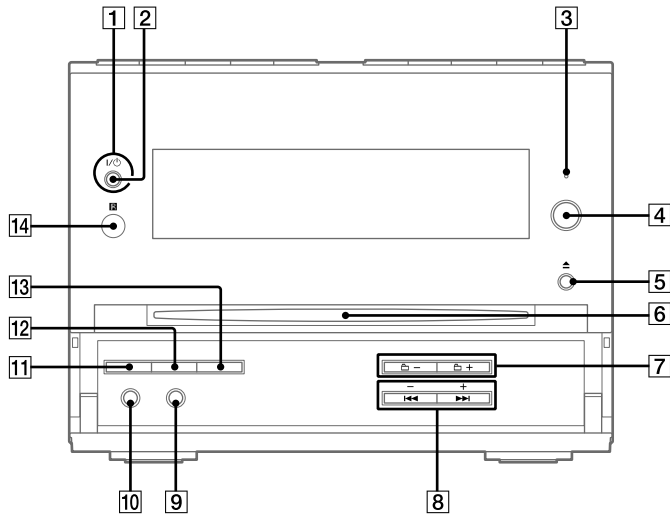


Top panel

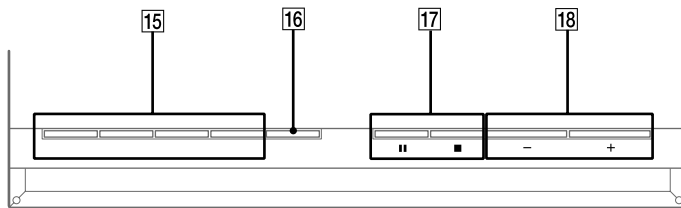

- 11
- 3C
- 3E
- 34
- 3C
- 3E
- 31
- 3C
- 29
- 2E
- 8
- 17
- 27

- 1
- Unit: 79)
- Remo (11)
- Press t
- Press t
- 2
- STAN
- Lights

Remote control (RM-SCD30)

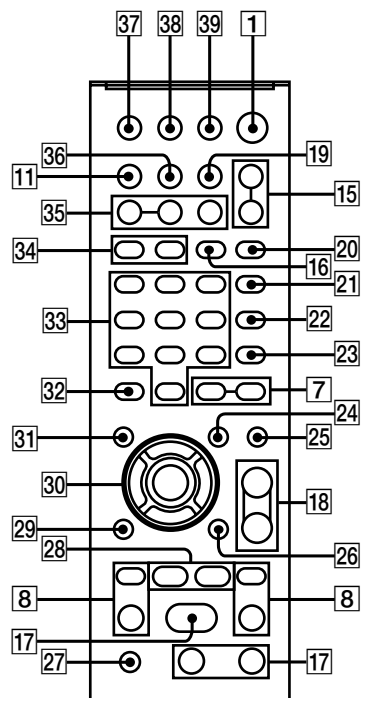

- 1**
Unit: I/⏻ (on/standby) (11, 69, 79)
Remote: TV I/⏻²⁾ (on/standby) (11)
Press to turn on the system.
Press to turn on the TV.
- 2**
STANDBY indicator (71)
Lights up when the system is turned off.

- 3**
BLUETOOTH indicator (60, 80)
Lights up when the Bluetooth function is active.
- 4**
BLUETOOTH OPR (57)
Press to make a connection, disconnection, or pairing with a Bluetooth device.
- 5**
▲ (eject) (59, 72)
Press to eject the disc.
- 6**
Disc slot (73)
- 7**
⏮ +/- (15, 19)
Press to select an album.
- 8**
PRESET +/- (XX)
Press to return the settings to the default setting.
◀◀/▶▶ (go backward/forward) (19, 54)
Press to select a track or file.
Remote: TV CH +/-²⁾ (11)
Press to change the TV channels.
Remote: SLOW ◀/▶ (34)
Press to watch the slow-motion play.
Remote: TUNING +/- (51)
Press to tune in the desired station.
◀◀/▶▶ (rewind/fast forward) (34, 54)
Press to find a point in a track or file.

Continued

- 9**
AUDIO IN jack (55, 56, 68)
 Connect to an optional audio component.
- 10**
PHONES jack (55)
 Connect the headphones.
- 11**
DISPLAY (19)
 Press to display the disc information or clock in the front panel display.
- 12**
PROGRESSIVE (XX, XX)
 Press to change the output video format (INTERLACE or PROGRESSIVE format).
- 13**
DSGX (XX)
 Press to select the sound effect.
- 14**
IR Receptor (52)
- 15**
Unit: DVD ► (play) (XX, XX)
 Press to select the DVD function.
 Press to start playback of a disc.
- Unit: BLUETOOTH ► (XX, XX)**
 Press to select the Bluetooth function.
 Press to start playback of the music on the Bluetooth device (Bluetooth mobile phone, etc.).
- Unit: TUNER/BAND (XX, XX)**
 Press to select the TUNER function.
 Press to switch among FM, AM, XM and SIRIUS band.

- Unit: AUDIO IN (XX, XX)**
 Press to select the AUDIO IN function.
- FUNCTION +/- (14, 51, 54, 63, 70, 78)**
 Press to select the function.
- 16**
Unit: REPEAT/FM MODE (XX, XX)
Remote: FM MODE (53)
Remote: REPEAT (25)
 Press to select FM reception mode (monaural or stereo).
 Press to listen to a disc, a single track or file repeatedly.
- 17**
■ (stop) (19, 39, 52, 54, 70, 81)
■ (pause) (19, 54)
 Press to stop or pause playback.
Remote: ▷¹ (play) (19, 42, 54, 56, 68, 70)
 Press to start playback.
- 18**
Remote: TV VOL +/-¹⁾²⁾ (11)
 Press to adjust the TV volume.
VOLUME +/-¹⁾ (51, 69, 73, 79)
 Press to adjust the volume.
- 19**
DIMMER (20)
 Press to adjust the brightness of the display.
- 20**
PICTURE NAVI (29)
 Press to select the VIEWER format for searching the chapters, titles and tracks.
 Press to display the thumbnail pictures.

- 21**
AUDI
 Press t
 on the
- 22**
SUBT
 Press t
 subtitl
- 23**
ANGI
 Press t
 with n
- 24**
DVD/
 Press t
 TV sc:
 Press t
- 25**
EQ (5
 Press t
- 26**
DI!
92)
 Press t
 TV sc:
- 27**
TV²⁾ (
 Press t
- 28**
ADV/
 Press t
 playba
REPL
 Press t
 playba

21
AUDIO (29, 37, 63, 78)
 Press to display the current audio signal on the TV screen.

22
SUBTITLE (38)
 Press to switch the language of the subtitle (DVD VIDEO).

23
ANGLE (38)
 Press to change the angle (DVD VIDEO with multi-angles only).

24
DVD/TUNER MENU (25, 51)
 Press to display the MENU items on the TV screen.
 Press to preset the radio station.

25
EQ (57, 78)
 Press to adjust the sound level.

26
☰ DISPLAY (15, 21, 23, 39, 63, 75, 92)
 Press to display the Control Menu on the TV screen.

27
TV²⁾ (11)
 Press to operate the TV functions.

28
ADVANCE ●→ (20)
 Press to advance the current scene during playback.
REPLAY ←● (20)
 Press to replay the previous scene during playback.

◀|| STEP/ STEP ||▶ (20)
 Press to play one frame at a time when playback is paused.

29
RETURN (26)
 Press to return to the previous menu on the TV screen.

30
▲/◆/◆/▶ (14, 22, 39, 50, 58, 69, 84)
 Press to select the MENU items.
ENTER (14, 19, 39, 50, 63, 69)
 Press to enter the settings.

31
DVD TOP MENU (25)
 Press to display the DVD title on the TV screen.

32
CLEAR (15, 48)
 Press to delete a pre-programmed track or file.
 Press to delete a SIRIUS Parental Lock password entry.
 Press to erase the pairing registration information of the Bluetooth device.
-/--²⁾ (11)
 Press to change the entering mode for a single digit and double digit number.

33
Numeric buttons¹⁾ (11, 19, 40, 53)
 Press to select a track, file or satellite channel.
 Press to enter a SIRIUS Parental Lock password.
 Press to enter a Bluetooth passcode.
10/0²⁾
 Press to enter a double digit number.

Continued 

34

XM (XX, XX)

Press to select XM band.

SIRIUS (XX, XX)

Press to select SIRIUS band.

35

CATEGORY +/- (XX, XX)

Press to select a satellite radio category.

CATEGORY MODE (XX, XX)

Press to select the tuning mode for XM or SIRIUS band.

36

TIME/TEXT (73)

Press to change the information in the front panel display.

37

TV/VIDEO²⁾ (11)

Press to switch the input sources.

SLEEP (53, 69)

Press to set the Sleep Timer.

38

TIMER MENU (14, 69)

Press to set the clock and the timers.

39

THEATRE SYNC (XX, XX)

Press to register the input sources and functions.

Press to activate the THEATRE SYNC function.

¹⁾ The numeric button 5, TV VOL +, VOLUME + and ► buttons have a tactile dot. Use the tactile dot as a reference when operating the system.


²⁾ This button is used to operate a Sony TV. For details, see "Operating a Sony TV" on page 11.

Displa

15

1 Inc
2 Inc
3 Liq
4 Liq
(x)
5 Liq
(6)
6 Inc
7 Liq
8 Liq
sel
9 Liq
is s


Display

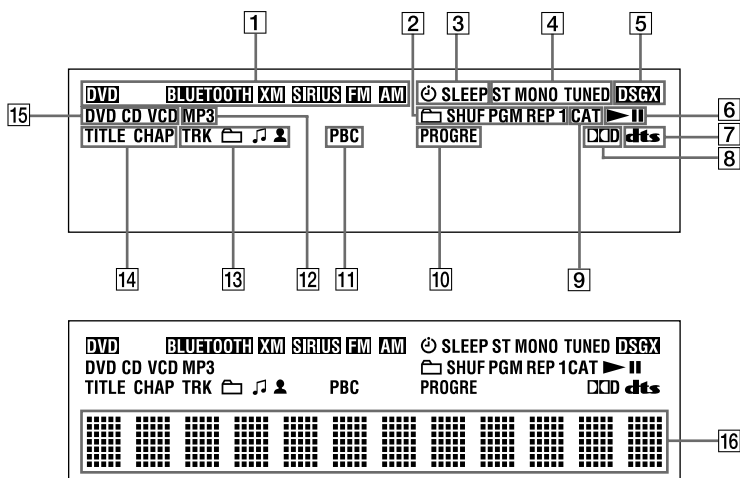

- 1** Indicates the selected function. (21)
- 2** Indicates the selected play mode. (16)
- 3** Lights up when timer is set. (56)
- 4** Lights up when a station is tuned in. (xx)
- 5** Lights up when DSGX is turned on. (62)
- 6** Indicates the Playback status. (xx)
- 7** Lights up when DTS is selected. (63)
- 8** Lights up when Dolby Digital is selected. (xx)
- 9** Lights up when CATEGORY MODE is selected. (xx)
- 10** Lights up when "P AUTO" or "P VIDEO" is selected. (xx)
- 11** Lights up when playing VIDEO CD with PBC. (xx)
- 12** Lights up when an MP3 disc is loaded. (xx)
- 13** Indicates the track/file information. (xx)
- 14** Lights up when chapter or title number is displayed. (xx)
- 15** Indicates the type of disc being played back. (xx)
- 16** Displays the text information. (xx)

Getting Started

Hooking up the system

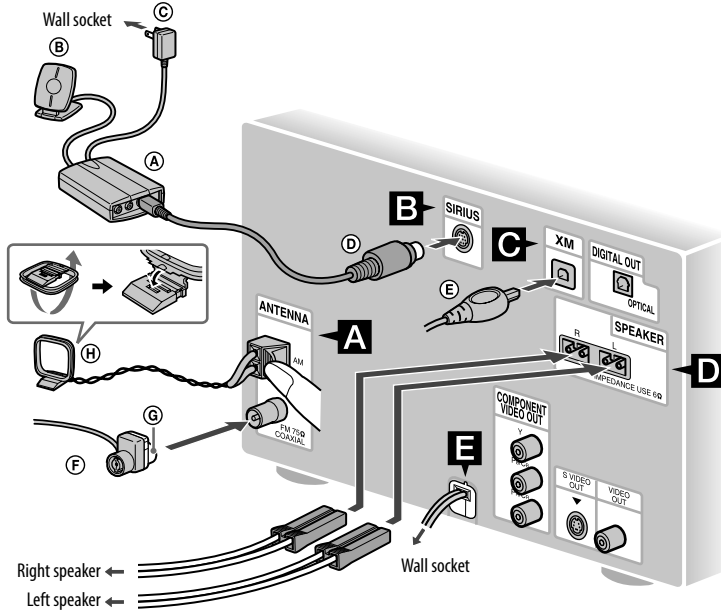

- (A) SiriusConnect Home tuner (not supplied)
- (B) Home indoor/outdoor antenna (not supplied)*
- (C) AC power adaptor (not supplied)*
- (D) DIN cable (not supplied)*
- (E) XM Mini-Tuner and Home Dock (not supplied)
- (F) FM lead antenna (Extend it horizontally.)
- (G) Connect white side.
- (H) AM loop antenna

* Supplied with SiriusConnect Home tuner

A FM/AM antennas

Find a location and an orientation that provide good reception, and then set up the antenna.

Keep the antennas away from the speaker cords and the power cord to avoid picking up noise.

B SI

Conne
When
tuner
the AC
tuner
Keep t
antenn
from t
cord to

C XM

Conne
Dock.
Satelli

D Sp

E Po

Conne
If the
not fit
the plu
an ada

Inset batt



Note

If you c
of time
damage

B SIRIUS antenna

Connect the SiriusConnect Home tuner. When you use the SiriusConnect Home tuner with this system, be sure to connect the AC power adaptor supplied with the tuner to a wall socket.

Keep the SiriusConnect Home tuner, antenna, and AC power adaptor away from the speaker cords and the power cord to avoid picking up noise.


C XM antenna

Connect the XM Mini-Tuner and Home Dock. For details, see “To receive the XM Satellite Radio” (page xx)

D Speakers**E Power**

Connect the power cord to a wall socket. If the supplied adaptor on the plug does not fit your wall socket, detach it from the plug (only for models equipped with an adaptor).

Inserting two R6 (size AA) batteries into the remote

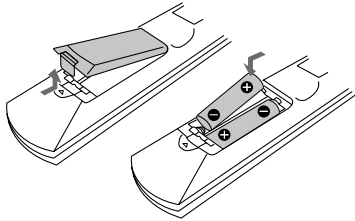**Note**


If you do not use the remote for a long period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Tip

With normal use, the batteries should last for about six months. When the remote no longer operates the system, replace both batteries with new ones.

Attaching the speaker pads

Attach the supplied speaker pads at each corner on the bottom of the speakers to stabilize the speakers and to prevent them from slipping.

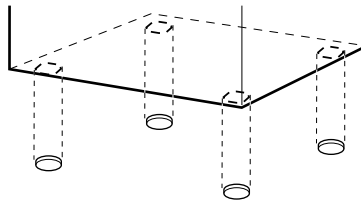Front speaker of SS-CDH3**When carrying this system**

Perform the following procedure to protect the DVD mechanism. Use buttons on the unit for the operation.

- 1** Press I/⏻ [1] to turn on the system, then press DVD [15].
- 2** Make sure that no disc is loaded in the system and check that “No Disc” appears.
- 3** Press I/⏻ [1] to turn off the system and check that “STANDBY” disappears.
- 4** Unplug the power cord.

Continued ➞

Receiving the XM Satellite Radio

ABOUT XM SATELLITE RADIO

XM offers over 170 digital radio channels: the most commercial-free music channels, premier news, sports, talk, and traffic and weather in 21 metro markets. XM's on-air hosts broadcast live from studios in Washington, D.C., New York City and Nashville.

For more information or to subscribe in the US, visit xmradio.com or call Listener Care at 1-800-XMRADIO (1-800-967-2346).

XM READY® LEGAL

XM monthly service subscription sold separately. XM Mini-Tuner and Home Dock required (each sold separately) to receive XM service. Installation costs and other fees and taxes, including a one-time activation fee may apply. Subscription fee is consumer only. All fees and programming subject to change. Channels with frequent explicit language are indicated with an XL. Channel blocking is available for XM radio receivers by calling 1-800-XMRADIO (1-800-967-2346). For a full listing of the XM commercial-free channels and advertising supported channels, visit lineup.xmradio.com. Subscriptions subject to Customer Agreement available at xmradio.com. XM service only available in the 48 contiguous United States. XM Satellite Radio and XM Ready are trademarks of XM Satellite Radio Inc. (C)2006 XM Satellite Radio Inc. All rights reserved.

XM READY® SUBSCRIPTIONS

Once you have installed the XM Mini-Tuner Dock, inserted the XM Mini-Tuner, connected the XM Dock to your XM Ready® home audio system, and installed the antenna, you are ready to subscribe and begin receiving XM programming.

There are three places to find your eight character XM Radio ID: on the XM Mini-Tuner, on the XM Mini-Tuner package, and on XM Channel 0. Record the Radio ID in the following eight squares for reference.

--	--	--	--	--	--	--	--

Note: The XM Radio ID does not use the letters "I", "O", "S" or "F". Activate your XM Satellite Radio service in the U.S. online at <http://activate.xmradio.com> or call 1-800-XM-RADIO (1-800-967-2346). You will need a major credit card. XM will send a signal from the satellites to activate the full channel lineup. Activation normally takes 10 to 15 minutes, but during peak busy periods you may need to keep your XM Ready home audio system on for up to an hour. When you can access the full channel lineup on your XM Ready home audio system you are done.

Rec Ra

SIRIU

On Ra

With e
music t
talk an
always

- The c
musi
musi
heard
- Live j
bigge
week
and c
a wee
over
exclu
- Enter
be fo
of He
Jeff F
Maxi
- Espe
her t
Cosn
Radi
- Worl
Fox,
weatl
- Fami
with
Laug

Receiving the SIRIUS Satellite Radio


SIRIUS Satellite Radio: The Best Radio On Radio

With everything from 100% commercial-free music to in-depth sports coverage, plus news, talk and the hottest entertainment — you can always hear exactly what you want.

- The only home of 100% commercial-free music. Whether you're discovering new music, or rediscovering songs you haven't heard in years — you'll hear it all on SIRIUS.
- Live play-by-play and expert talk from the biggest leagues. NFL, every game, every week, everywhere. Plus NFL Radio 24/7 news and opinions from top NFL pros, 40 games a week from NBA and College Sports from over 150 schools. Plus NASCAR moving exclusively to SIRIUS in January 2007.
- Entertainment, Comedy and Talk that can't be found anywhere else. From 2 channels of Howard Stern, Blue Collar Comedy with Jeff Foxworthy and Larry the Cable Guy to Maxim and Playboy Radio.
- Especially for Women. Martha Stewart and her team will inspire you 24/7 along with Cosmo Radio, Deepak Chopra Wellness Radio and other exclusive talk show hosts.
- World Class News, traffic and weather. Fox, CNN, NPR and BBC. Local traffic and weather for the top 20 cities.
- Family & Kids: G-rated fun for everyone with Radio Disney, Discovery Kids Channel, Laugh Comedy and more.


Hooking up the TV

Connect the video input jack of your TV to the VIDEO OUT jack with the supplied video cord.

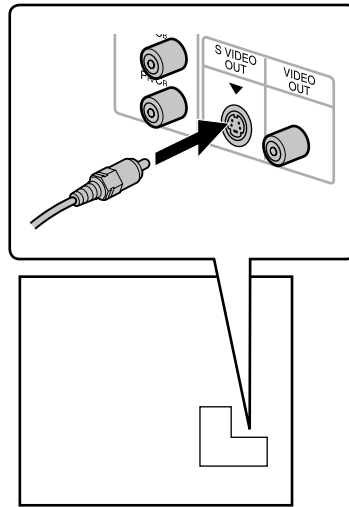

When connecting a video deck

Connect the video deck to the TV using a video cord (not supplied). However, do not connect this unit to the TV through the video deck. Otherwise, you may experience video leakage when watching video images from this system. Connect this unit directly to the TV as shown below.

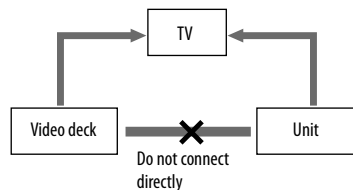

Continued

Tip

For higher quality video images:

- Use the optional component video cords to connect the COMPONENT VIDEO input jacks on your TV to the COMPONENT VIDEO OUT jacks of this unit. If your TV is compatible with progressive format file signals, use this connection and press PROGRESSIVE on the unit repeatedly until “P AUTO” or “P VIDEO” appears in the display (page 16).
- You can use an optional S Video cord to connect the S VIDEO input jack on your TV to the S VIDEO OUT jack of this unit.

Changing the format of the video signal output from COMPONENT VIDEO OUT jacks

Progressive is a method for displaying TV images that reduces flickering and sharpens the image. To use this method, you need to connect to a TV that can accept progressive signals.

You can output video signals from COMPONENT VIDEO OUT jacks in INTERLACE or PROGRESSIVE format.

- 1 Press FUNCTION +/- [15] repeatedly to select “DVD” (or press DVD ► [15] on the unit).
- 2 Press PROGRESSIVE [12] on the unit repeatedly.
Select “P AUTO” or “P VIDEO” if your TV accepts progressive signals and the TV is connected to the COMPONENT VIDEO OUT jacks. Otherwise, select “INTERLACE”.

P AUTO (PROGRESSIVE AUTO):

The system automatically detects the software type and selects the appropriate conversion method.

P VIDEO (PROGRESSIVE VIDEO):

The system fixes the conversion method to PROGRESSIVE VIDEO for video-based software. Select this if the image is not clear when you select “P AUTO”.

About DVD VIDEO software types and the conversion method

The DVD VIDEO software can be divided into 2 types:

- Film-based software
Film-based software is derived from film and displays the images at 24 frames per second.
- Video-based software
Video-based software is derived from TV, such as dramas and sitcoms and displays images at 30 frames or 60 fields per second.

Some DVD VIDEO contains both types of software. In order for these images to appear in your TV naturally when the video output is in progressive format, the progressive signals need to be converted to match your DVD VIDEO software.

Note

There would be no image on your TV or the image is not clear if your setting does not match your TV or connection.

When using a TV

Turn on the TV and select the video input so that you can view the pictures from this system.

Operating a Sony TV

You can use the following buttons to operate a Sony TV. These buttons have been marked in orange.

To	Hold down TV [27] and press
Turn the TV on or off	TV I/⏻ [1]
Switch the TV's input source between the TV and other input sources	TV/VIDEO [37]
Select the TV channels	TV CH +/- [8] or numeric buttons [33] *
Adjust the volume of the TV speaker(s)	TV VOL +/- [18]

* For double digit number, hold down TV **[27]** and press **-/- [32]**, then press the number. (For example, hold down TV **[27]**, press **-/- [32]**, then 2 and 5 for entering 25.)

Setting the clock

Use buttons on the remote to set the clock.

- 1 Press I/⏻ **[1]** to turn on the system.
- 2 Press TIMER MENU **[38]**.
The hour indication flashes in the display.
If "PLAY SET?" flashes in the display, press **▲** or **▼ [30]** repeatedly to select "CLOCK SET?"; then press ENTER **[30]**.
- 3 Press **▲** or **▼ [30]** repeatedly to set the hour.
- 4 Press ENTER **[30]**.
The minute indication flashes in the display.
- 5 Press **▲** or **▼ [30]** repeatedly to set the minute.
- 6 Press ENTER **[30]**.
The clock starts functioning.

Note

The clock settings are canceled when you disconnect the power cord or if a power failure occurs.

To display the clock when the system is off

Press DISPLAY **[11]**.

The clock is displayed for about 8 seconds.

Continued 

Performing QUICK SETUP

Before using the system, you can make the minimum basic adjustments in QUICK SETUP. If you do not want to perform QUICK SETUP, press CLEAR [32] in step 3. The guide message will disappear from the TV screen.

1 Turn on your TV and select the video input.


2 Press I/⏻ [1] to turn on the system.

Note

Make sure there is no disc in the unit. Otherwise, the guide message does not appear. To perform QUICK SETUP, press ▲ [5] on the unit to remove the disc.

3 Press FUNCTION +/- [15] repeatedly to select "DVD" (or press DVD ► [15] on the unit). The guide message appears at the bottom of the TV screen.

4 Press ENTER [30] without inserting a disc. The "LANGUAGE SETUP" display appears on the TV screen.

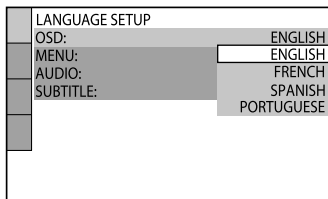

5 Press ↑ or ↓ [30] repeatedly to select a language, then press ENTER [30].

Tips

- The selected language is for "OSD", "MENU" and "SUBTITLE".
- The selectable language is different depending on the area.

The setting is selected and the "SCREEN SETUP" display appears on the TV screen.

6 Press ↑ or ↓ [30] repeatedly to select the setting that matches your TV type.

If you have a 4:3 standard TV:

Select 4:3 LETTER BOX or 4:3 PAN SCAN (page 45)

If you have a wide-screen TV or a 4:3 standard TV with wide-screen mode:

Select 16:9 (page 45)

7 Press ENTER [30].

The setting is selected and the "QUICK SETUP is complete." display appears on the TV screen.

The system is ready for playback. If you want to change each setting individually, see "Using the DVD setup menu" on page 43.

To quit QUICK SETUP

Press ⏻ DISPLAY [26].

To rec

1 Pre
is st
The
scr


 




 



 
2 Pre
sel
ENT

3 Pre
"QU

Note

The gu
the TV
for the
(see pa

To recall of QUICK SETUP settings

- 1 Press  DISPLAY  when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press  or   repeatedly to select  (SETUP), then press ENTER .
- 3 Press  or   repeatedly to select "QUICK", then press ENTER .

Note

 
 


The guide message appears at the bottom of the TV screen when you turn on the system for the first time or after performing "RESET" (see page 84).

Using the THEATRE SYNC function

THEATRE SYNC allows you to turn on your Sony TV and this system, changes the system's function to "DVD" and then switches the TV's input source you have set with just one button.

Preparing to use the THEATRE SYNC function

Register the TV's input source connected to this system.

Hold down SLEEP  and press	To select the following TV's input source
0	No input source (Default)
1 to 8	VIDEO 1 to VIDEO 8
9	COMPONENT 1
CLEAR 	COMPONENT 2
 -	COMPONENT 3
 +	COMPONENT 4

The selected TV's input source is memorized into the remote.

Continued 

Operating the THEATRE SYNC function

Keep the remote pointed in the direction of the TV until the TV is turned on and the input source is changed correctly, then press THEATRE SYNC **[39]**.

If this function does not work, change the transmission time. The transmission time varies depending on the TV.

To change the transmission time

Hold down ▶▶ [8] and press	To select the following transmission time
1	0.5 (Default)
2	1
3	1.5
4	2
5	2.5
6	3
7	3.5
8	4

Disc


Playing a disc

— Normal Play

DVD-V DVD-VR VIDEO CD C D DATA CD
DATA DVD


Depending on the DVD VIDEO or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with the disc.

Example: When playing a DVD VIDEO

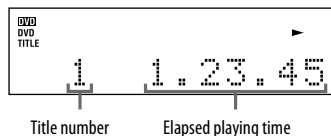

1 Press FUNCTION +/- [15] repeatedly to select "DVD" (or press DVD ► [15] on the unit).

2 Insert a disc with the label side facing up.

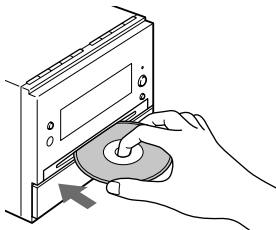

3 Press ► [17].

4 Press VOLUME +/- [18] to adjust the volume.

Notes

- Depending on the system status, the volume level may not appear on the TV screen.
- When you turn on the system, the disc is not pulled into the disc slot until "No Disc" appears in the display. Do not attempt to push in the disc until "No Disc" appears.
- Do not load an 8 cm disc with an adaptor. Doing so may cause the system to malfunction.
- When you remove a disc, handle the disc by its edge and pull it straight out of the disc slot. Do not touch the surface.

Other operations

To	Press
Stop playback	■ [17].
Pause playback	⏸ [17]. Press ⏸ [17] again or ► [17] to resume playback.
Select a track ¹⁾ , chapter or video file	◀◀ or ▶▶ [8] repeatedly during playback. Or, press the numeric buttons [33] when the Control Menu is turned off, then press ENTER [30] ²⁾ .
Select an album ³⁾	◀ +/- [7] repeatedly during playback or when playback is paused.
Locate a point quickly in fast forward or fast reverse (Lock Search) ⁴⁾⁵⁾	◀◀ or ▶▶ [8] during playback. Each time you press ◀◀ or ▶▶ [8], the playback speed changes cyclically. To return to normal playback, press ► [17].

Continued ➡

To	Press
Watch frame by frame (Slow-motion Play) ⁶⁾	SLOW ◀ or SLOW ▶ [8] when playback is paused. Each time you press SLOW ◀ or SLOW ▶ [8], the playback speed changes. To return to normal playback, press ▷ [17].
Play one frame at a time (Freeze Frame) ⁶⁾	STEP II▶ [8] to go to the next frame when playback is paused. Press ◀II STEP [8] ⁷⁾ to go to the preceding frame when playback is paused. To return to normal playback, press ▷ [17].
Replay the previous scene	REPLAY ◀• [28] during playback. (Instant Replay) ⁷⁾
Briefly fast forward the current scene	ADVANCE •▶ [28] during playback. (Instant Advance) ⁷⁾
Switch to DVD function from another source	FUNCTION +/- [15] repeatedly (or press DVD ▶ [15] on the unit) (Automatic Source Selection).
Remove the disc	▲ [5] on the unit.

- ¹⁾ You cannot select an audio track during Lock Search operation of MP3 audio tracks.
- ²⁾ DVD VIDEO, DVD-R/-RW in VR mode, VIDEO CD and AUDIO CD only.
- ³⁾ MP3 audio tracks and JPEG image files only.
- ⁴⁾ Except for JPEG image files.
- ⁵⁾ Depending on the disc, the actual speed may differ.
- ⁶⁾ DVD VIDEO, DVD-R/-RW in VR mode, and VIDEO CD only.
- ⁷⁾ DVD VIDEO and DVD-R/-RW in VR mode only.

Notes

- You cannot search for a still picture on a DVD-R/-RW in VR mode.
- You may not be able to use the Instant Replay or Instant Advance function in Repeat Play mode or with some scenes.

Displaying multi-angles and subtitles

Changing the angles

(DVD VIDEO only)

You can change the viewing angle while playing a DVD VIDEO on which various angles (multi-angles) for a scene are recorded.

Press ANGLE [23] repeatedly during playback. Each time you press ANGLE [23], the angle changes.

Note

Depending on the DVD VIDEO, you may not be able to change the angle, even if multi-angles are recorded on the DVD VIDEO.

Displaying the subtitles

(DVD VIDEO and DVD-R/-RW in VR mode only)

You can turn the subtitles on or off while playing a DVD VIDEO or DVD-R/-RW in VR mode on which subtitles are recorded. You can also change the language of the subtitles with DVD VIDEO, DVD-R/-RW in VR mode on which multilingual subtitles are recorded.

Press S during SUBT chang

Note
Depend not be multilin VIDEO subtitle

Other


 
Change
When in mul the au VIDEO tracks

When CD or the so and lis chann speak track v and th you ca speak

Press . playba want. The de

When
Deper option varies. When digits “Lang the sar more l in mu

a
Replay
Play

Press **SUBTITLE**  repeatedly during playback. Each time you press **SUBTITLE** , the subtitle language changes or turns off.

Note


Depending on the DVD VIDEO, you may not be able to change the subtitles even if multilingual subtitles are recorded on the DVD VIDEO. You also may not be able to turn the subtitles off.

Other useful functions

Changing the sound

When playing a DVD VIDEO recorded in multiple audio formats, you can select the audio format you want. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language.

When playing a VIDEO CD, AUDIO CD or MP3 audio tracks, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. For example, when playing a track with the vocals on the right channel and the instruments on the left channel, you can hear the instruments from both speakers by selecting the left channel.

Press **AUDIO**  repeatedly during playback to select the audio signal you want.

The default settings are underlined.

When playing a DVD VIDEO:

Depending on the DVD VIDEO, the option of language and audio format varies.

When a 4-digit number is displayed, the digits represent a language code (see "Language code list" on page 97). When the same language is displayed two or more times, the DVD VIDEO is recorded in multiple audio formats. Note that the

sound changes automatically depending on the disc.

When playing a DVD-R/-RW in VR mode:

The number of audio tracks recorded on a disc are displayed.

Example:

- 1: MAIN: the main sound of the audio track 1.
- 1: SUB: the sub sound of the audio track 1.
- 1: MAIN+SUB: the main and sub sound of the audio track 1.
- 2: MAIN*: the main sound of the audio track 2.
- 2: SUB*: the sub sound of the audio track 2.
- 2: MAIN+SUB*: the main and sub sound of the audio track 2.

* These items do not appear if only one audio stream is recorded on the disc being played back.

When playing a VIDEO CD, AUDIO CD, or MP3 audio track:

- STEREO: the standard stereo sound.
- 1/L: the sound of the left channel (monaural).
- 2/R: the sound of the right channel (monaural).

When playing a Super VCD:

- 1: STEREO: the stereo sound of the audio track 1.
- 1: 1/L: the sound of the left channel of the audio track 1 (monaural).
- 1: 2/R: the sound of the right channel of the audio track 1 (monaural).
- 2: STEREO: the stereo sound of the audio track 2.
- 2: 1/L: the sound of the left channel of the audio track 2 (monaural).
- 2: 2/R: the sound of the right channel of the audio track 2 (monaural).

Continued 

25^{GB}

Disc

while
various
:

ly not
-angles

VR

while

ne

on
orded.

Playing VIDEO CDs with PBC functions (Version 2.0) — PBC Playback

(VIDEO CD only)

You can use the PBC (Playback Control) menus on your TV screen to enjoy the disc's interactive software. The menu format and structure may differ depending on each disc.

- 1 Press \triangleright $\boxed{17}$ to start playing a VIDEO CD with PBC functions (Version 2.0). The PBC menu appears on the TV screen. Depending on the VIDEO CD, the menu may not appear.
- 2 Press the numeric buttons $\boxed{33}$ to select the item number you want.
- 3 Press ENTER $\boxed{30}$.
Depending on the VIDEO CD, "Press ENTER" may appear as "Press SELECT" in the operating instructions supplied with the disc. In this case, press \triangleright $\boxed{17}$.
- 4 Continue playback according to the instructions on the menus.
Refer to the operating instructions supplied with the VIDEO CD, as the operating procedure may differ depending on the VIDEO CD.

To return to the previous menu

Press RETURN $\boxed{29}$.

Note

PBC playback is canceled when Shuffle Play, Program Play or Repeat Play is activated.

To cancel playback with PBC functions

- 1 Press \lll or \ggg $\boxed{8}$ repeatedly or press the numeric buttons $\boxed{33}$ to select a track when playback is stopped.

- 2 Press \triangleright $\boxed{17}$ or ENTER $\boxed{30}$.

Playback starts from the selected track. Still images, such as the menu screens, will not be shown.

To return to PBC playback, press \blacksquare $\boxed{17}$ twice, then press \triangleright $\boxed{17}$.

Resuming playback from the point you stopped the disc — Resume Play

This system memorizes the point where you stopped the disc so you can resume playback from that point. Resume Play is not canceled when you turn off the system except for MP3 audio tracks and JPEG image files.

- 1 While playing a disc, press \blacksquare $\boxed{17}$ to stop playback.
"Resume" appears in the display.
- 2 Press \triangleright $\boxed{17}$.
The system starts playback from the point you stopped the disc in step 1.

Notes

- You cannot perform Resume Play during Shuffle Play or Program Play.
- This function may not work properly with some discs.
- Resume Play is canceled when
 - you press \blacksquare $\boxed{17}$ when playback is stopped.
 - you eject the disc.
 - you change the function.
 - you change the settings in the Setup Menu.

- Dependent on the system.
- If "Resume Play" is displayed on the VIDEO CD screen.

Tip

To play a disc, press \blacksquare .

Resume Play (DVD)

This system memorizes the point where you stopped the disc so you can resume playback from that point. Resume Play is not canceled when you turn off the system except for MP3 audio tracks and JPEG image files.

Note

If "Resume Play" is displayed on the VIDEO CD screen.

- Depending on where you stopped the disc, the system may not resume playback from the exact same point.
- If “MULTI-DISC RESUME” is set to “ON”, Resume Play is not canceled for DVD VIDEO and VIDEO CD when you eject the disc or change the function.

Tip

To play back from the beginning of the disc, press **[17]** twice, then press **[> 17]**.

Resuming playback of a disc that was stopped — Multi-disc Resume

(DVD VIDEO and VIDEO CD only)
 This system can store the point where you stopped the playback of the disc for up to 40 discs and resumes playback when you insert the same disc again. If you store a playback resume point for the 41st disc, the playback resume point for the first disc will be deleted.
 To activate this function, set “MULTI-DISC RESUME” in “CUSTOM SETUP” to “ON” (page 47).

Note

If “MULTI-DISC RESUME” is set to “ON”, the system may play back the next recorded disc such as a DVD-RW from the playback resume point for the current recorded disc.

Using play mode

Creating your own program


— Program Play



Disc

You can make a program of up to 99 steps in the order you want them to be played back.
 You can only program the tracks from the current disc.

- 1 Press **[DISPLAY 26]**.
 The Control Menu appears on the TV screen.
- 2 Press **[UP]** or **[DOWN]** repeatedly to select **[PROGRAM]**, then press **[ENTER 30]**.
 The options for “PROGRAM” appear on the TV screen.
- 3 Press **[UP]** or **[DOWN]** repeatedly to select “SET→”, then press **[ENTER 30]**.

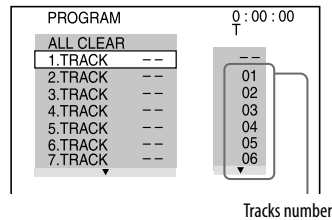

Continued

4 Press \rightarrow **30**.

The cursor moves to the track row "T" (in this case, "01").

PROGRAM		0:00:00
ALL CLEAR		
1:TRACK --	--	--
2:TRACK --	--	01
3:TRACK --	--	02
4:TRACK --	--	03
5:TRACK --	--	04
6:TRACK --	--	05
7:TRACK --	--	06

To change a programmed step:

Press \uparrow or \downarrow **30** repeatedly to select the programmed step number you want to change. Then, press \rightarrow **30**.

To delete a programmed step:

Press \uparrow or \downarrow **30** repeatedly to select the programmed step number you want to change. Then, press CLEAR **32**.

To delete all of the programmed steps in the program list:

Press \uparrow **30** to select "ALL CLEAR". Then, press ENTER **30**.

5 Select the track you want to program.

For example, select track "02".

Press \uparrow or \downarrow **30** repeatedly to select "02" under "T", then press ENTER **30**.

Selected track

PROGRAM		0:15:30
ALL CLEAR		
1:TRACK (02)	--	--
2:TRACK --	--	01
3:TRACK --	--	02
4:TRACK --	--	03
5:TRACK --	--	04
6:TRACK --	--	05
7:TRACK --	--	06

Total time of the programmed tracks

6 To program other tracks, repeat steps 4 to 5.

7 Press \triangleright **17**.

Program Play starts.

When the Program Play ends, you can restart the same program by pressing \triangleright **17**.

To cancel Program Play

Press CLEAR **32** or select "OFF" in step 3. To play back the same program again, select "ON" in step 3 and press ENTER **30** or \triangleright **17**.

To turn off the Control Menu

Press \square DISPLAY **26** repeatedly until the Control Menu disappears from the TV screen.

Notes

- When Program Play is activated, the "REPEAT" setting is automatically changed to "ON" if the current setting is "DISC" or "TRACK".
- You cannot perform Program Play with VIDEO CDs during PBC playback.

Tip

The Program Play is canceled and the program list is cleared when

- you eject the disc.
- you turn off the system.
- you change the function.

Play

— Sh

VIDEO C

You ca
currer
you pe
order
Shuffle
tracks

1 Pr
pl:
Th
scr

2 Pr
se
pr
Th
on

3 Pr
se

WI
AL

•
(
WI
• (

1
WI
• (

Playing in random order

— Shuffle Play

VIDEO CD C D DATA CD DATA DVD

You can play back the tracks on the current disc in random order. Each time you perform Shuffle Play, the playing order may differ.

Shuffle Play is only available for the tracks on the current disc.

1 Press DISPLAY during playback.
The Control Menu appears on the TV screen.

2 Press or repeatedly to select (SHUFFLE), then press ENTER .

The options for “SHUFFLE” appear on the TV screen.

3 Press or repeatedly to select the setting you want.

When playing a VIDEO CD or AUDIO CD:

- TRACK: all tracks on the current disc is played back randomly.

When Program Play is activated:

- ON: all tracks in the program list is played back randomly.

When playing a DATA CD/DVD:

- ON: all MP3 audio tracks in the selected album on the current disc is played back randomly.
When no album is selected, the first album is played back randomly.

4 Press ENTER .

Shuffle Play starts.

To cancel Shuffle Play, press CLEAR or select “OFF” in step 3.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu disappears from the TV screen.

Notes

- Shuffle Play is canceled when
 - you eject the disc.
 - you turn off the system.
 - you change the function.
 - you perform Track/Index Search.
- You cannot perform Shuffle Play with VIDEO CDs during PBC playback.
- The same song may be played back repeatedly for MP3 audio tracks.

Playing repeatedly

— Repeat Play

DVD-V DVD-VR VIDEO CD C D DATA CD
DATA DVD

You can play back all the titles, tracks, files or a single title, chapter, track or file on a disc repeatedly.

You can select Shuffle Play and Program Play at the same time.

1 Press DISPLAY .

The Control Menu appears on the TV screen.

Disc

Continued

29^{GB}

2 Press **▲** or **▼** **[30]** repeatedly to select **[REPEAT]** (REPEAT), then press **ENTER** **[30]**.
The options for “REPEAT” appear on the TV screen.

3 Press **▲** or **▼** **[30]** repeatedly to select the setting you want.

- OFF (default setting)
- DISC
- TITLE (DVD VIDEO or DVD-R/-RW in VR mode)
- CHAPTER (DVD VIDEO or DVD-R/-RW in VR mode)
- TRACK¹⁾ (AUDIO CD, VIDEO CD, DATA CD/DVD²⁾)
- ALBUM (DATA CD/DVD)
- ON (Shuffle Play or Program Play).

4 Press **ENTER** **[30]**.
Repeat Play starts.
To cancel Repeat Play, press **CLEAR** **[32]** or select “OFF” in step 3.

¹⁾ You cannot select “TRACK” when “MODE (MP3, JPEG)” is set to “IMAGE (JPEG)”.

²⁾ MP3 audio tracks only.

To turn off the Control Menu

Press **DISPLAY** **[26]** repeatedly until the Control Menu disappears from the TV screen.

Notes

- You can also change the Repeat Play setting by pressing **REPEAT** **[16]** repeatedly.
- “REP” lights up in the display when Repeat Play is set to “DISC”, “ALBUM” or “ON”.
- “REP1” lights up in the display when Repeat Play is set to “TITLE”, “CHAPTER”, “TRACK” or “FILE”.
- Depending on the DVD VIDEO, you cannot perform Repeat Play.
- You cannot perform Repeat Play with VIDEO CDs during PBC playback.
- When playing a DATA CD/DVD which contains MP3 audio tracks and JPEG image files, the audio sound will not match the image if their playing time are different.
- You cannot select “TRACK” when “MODE (MP3, JPEG)” is set to “IMAGE (JPEG)” (page36).
- Repeat Play is canceled when
 - you eject the disc.
 - you turn off the system.
 - you change the function.

Searching/selecting a disc

Playing DVD VIDEOS using the menu

DVD-V

Some DVD VIDEOS have menus to help you enjoy the DVD VIDEOS. You can play back DVD VIDEOS using these menus on the TV screen.

Using DVD TOP MENU

A DVD VIDEO contains a lot of sections of picture or music feature called "title". When you play back a DVD VIDEO which contains several titles, you can select the title you want using DVD TOP MENU.

Using DVD MENU

Some DVD VIDEOS allow you to select the disc contents using a menu. When you play back these DVD VIDEOS, you can select items such as the language for the subtitles and the language for the sound using MENU.

- 1 Press DVD TOP MENU **[31]** or DVD/TUNER MENU **[24]**.
The menu appears on the TV screen. The contents of the menu vary depending on the disc.
- 2 Press **↑** and **↓** or **←** and **→** **[30]** or the numeric buttons **[33]** to select the title or item you want to play back.
- 3 Press ENTER **[30]**.

Selecting "ORIGINAL" or "PLAY LIST" on a DVD-R/-RW in VR mode

DVD-VR

This function is only available for DVD-Rs/-RWs in VR mode with a playlist created.

- 1 Press **[26]** DISPLAY **[26]** when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press **↑** or **↓** **[30]** repeatedly to select **[▶▶▶]** (ORIGINAL/PLAY LIST), then press ENTER **[30]**.
The options for "ORIGINAL/PLAY LIST" appear on the TV screen.
- 3 Press **↑** or **↓** **[30]** repeatedly to select the setting you want.
 - PLAY LIST: play back according to the playlist created on the disc.
 - ORIGINAL: play back according to the originally recorded sequence.
- 4 Press ENTER **[30]**.

Disc

Continued 

31^{GB}


Using the on-screen display to search for a title/chapter/scene/track/index/album/file




You can search by different information recorded on a disc, such as title, track, and album. Each item is assigned a unique number on the disc, and you can select the numbered item you want from the Control Menu. You can also search for a particular point using the time code (Time Search) (DVD VIDEO and DVD-R/-RW in VR mode only).

- 1 Press **DISPLAY** [26]. (When playing a DATA CD/DVD with JPEG image files, press **DISPLAY** [26] twice.)

The Control Menu appears on the TV screen.

- 2 Select the search item (**UP**/**DOWN** [30]).
Example: when you select  (CHAPTER) “** (**)” is selected (** refers to a number). The number in parentheses indicates the total number of titles, chapters, tracks, indexes, scenes, albums or files.

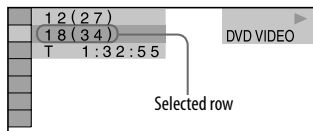

- 3 Press **ENTER** [30].
“** (**)” change to “- - (**)”.

- 4 Select the title, track, album, etc. or file number (**UP**/**DOWN** [30] or numeric buttons [33]).
If you make a mistake, press **CLEAR** [32] to cancel the number.

- 5 Press **ENTER** [30].
The system starts playback from the selected title, track, album, etc.

To turn off the Control Menu


Press **DISPLAY** [26] repeatedly.

Tip

When the Control Menu display is turned off, you can search for a chapter (DVD VIDEO and DVD-R/-RW in VR mode) or track (AUDIO CD and VIDEO CD) by pressing the numeric buttons [33] and **ENTER** [30].

To search for a particular point using the time code — Time Search

(DVD VIDEO and DVD-R/-RW in VR mode only)

- 1 Press **DISPLAY** [26].
- 2 Press **UP** or **DOWN** [30] repeatedly to select  (TIME/TEXT).
“T **:*:**” (elapsed playing time of the current title) is selected.
- 3 Press **ENTER** [30].
“T **:*:**” changes to “T--:--:--”.
- 4 Input the time code using the numeric buttons [33], then press **ENTER** [30].
For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, enter “2:10:20”.
If you make a mistake, press **CLEAR** [32] to cancel the number.


Note

Depending on the disc, you cannot perform Time Search.

Searching by scene

— Picture Navigation

DVD-V VIDEO CD


 



 
1 Press PICTURE NAVI  repeatedly to select the VIEWER format you want to search in.

- CHAPTER VIEWER (DVD VIDEO)
- TITLE VIEWER (DVD VIDEO)
- TRACK VIEWER (VIDEO CD or Super VCD)

2 Press ENTER .




The first scene of the first 9 chapters, titles or tracks appears. If there are more than 9 chapters, titles, or tracks, “▼” appears at the bottom right of the screen.

1	2	3	
4	5	6	
7	8	9	▼

3 Press ///  to select a chapter, title or track, then press ENTER .

 The system starts playing from the selected scene.

 
 

 
To cancel searching

Press RETURN  or  DISPLAY .

Note

Depending on the disc, you may not be able to select some items.

Tip

To display the remaining chapters, titles, or tracks, select a scene at the bottom row and press  . To return to the previous scene, select a scene at the top row and press  .

Disc

Playing MP3/JPEG discs

DATA CD DATA DVD

Notes

- Depending on the software you use to create the DATA CD or DATA DVD, the playback order may differ.
 - The playback order above may not be applicable if there are more than 200 albums and 300 tracks/files in each album.
 - The system can play back up to 200 albums, including albums that do not contain MP3 audio tracks and JPEG image files. The system will not play back any albums beyond the 200th album.
 - The maximum number of MP3 audio tracks or JPEG image files on an album which this system can recognize is:
 - 600 when “MODE (MP3, JPEG)” is set to “AUDIO (MP3)” or “IMAGE (JPEG)”.
 - 300 when “MODE (MP3, JPEG)” is set to “AUTO”.
 - The system can play back MP3 audio tracks and JPEG image files. The system will play back any data with the extension “.MP3”, “.JPG” or “.JPEG” even if they are not in MP3 or JPEG format. Playing this data may generate a loud noise which could damage your speaker system.
 - Depending on the encoding/writing software, recording device, or the recording media used to record an MP3 audio track, you may encounter problems such as cannot play back, sound interruptions and noise.
- The following discs/situations can increase the time it takes to start playback:
 - a disc recorded with a complicated tree structure.
 - a disc recorded in Multi Session.
 - a disc to which data can be added (non-finalized disc).
 - when the tracks or files in another album have just been played back.
 - Some CD-Rs/-RWs or DVD-Rs/-RWs/+Rs/+RWs cannot be played back on the system depending on the file format.
 - When playing a DATA CD or DATA DVD containing both MP3 audio tracks and JPEG image files, select “MODE (MP3, JPEG)” from the Control Menu after the disc’s TOC reading is complete. If you want to play back
 - both MP3 audio tracks and JPEG image files, set “MODE (MP3, JPEG)” to “AUTO”.
 - MP3 audio tracks only, set “MODE (MP3, JPEG)” to “AUDIO (MP3)”.
 - JPEG image files only, set “MODE (MP3, JPEG)” to “IMAGE (JPEG)”.
 - The system can play back to a depth of 8 folders only.

Selecting an MP3 audio track or album

- 1 Insert a disc in the disc slot.
The list of albums appears.



- 2 Press \uparrow or \downarrow [30] repeatedly to select an album.

Playing an album:


Press \triangleright [17].

The system starts playback from the first track of the selected album.

Playing a track:

- 1 Press ENTER [30].

The list of MP3 audio tracks of the selected album appears.

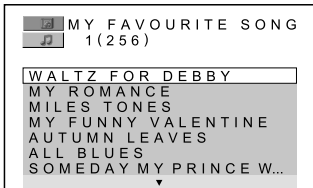

- 2 Press \uparrow or \downarrow [30] repeatedly to select the MP3 audio track you want, then press ENTER [30].
The system starts playing the selected MP3 audio track.

To display the next or previous page of track list or album list

Press \leftarrow or \rightarrow [30] repeatedly when the track list or album list is displayed.

To play back the next album of MP3 audio tracks

You can select the next album by pressing \triangleright [8] repeatedly until the last track of the current album is selected, then press \triangleright [8] once. The first track of the next album is selected. However, you cannot select the previous album by pressing \triangleleft [8] repeatedly. To select the previous album, select the album from the album list.

To return to the album list display when the track list is displayed

Press RETURN [29].

To turn on or off the display of album list or track list

Press DVD/TUNER MENU [24] repeatedly.

Selecting a JPEG image file or album

- 1 Insert a disc in the disc slot.
The list of albums appears on the TV screen.
- 2 Press \uparrow or \downarrow [30] repeatedly to select an album.

Playing an album:

Press \triangleright [17].

The system starts a slide show from the first image file of the selected album.

Disc

Continued

35^{GB}

Playing an image file:


- 1 Press PICTURE NAVI **[20]**.

Thumbnail picture for the first 16 JPEG image files in the selected album is displayed.

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16

If there are more than 16 image files in the selected album, the scroll bar appears at the right.

- 2 Press **▲/▼/◀/▶** **[30]** to select the image you want to view, then press **▷** **[17]**.
The slide show starts from the selected image file.

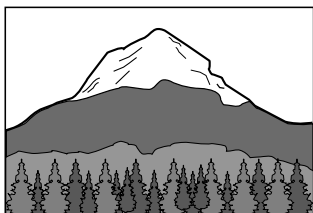

To display the next or previous page of album list

Press **◀** or **▶** **[30]** repeatedly when the album list is displayed.

To display the next or previous JPEG image file

Press **◀** or **▶** **[30]** repeatedly during the slide show.

To play back the next album of JPEG image files

You can select the next album by pressing **▶** **[30]** repeatedly until the last file of the current album, then press **▶** **[30]** once. The first file of the next album is selected. However, you cannot select the previous album by pressing **◀** **[30]** repeatedly. To select the previous album, select the album from the album list.

To turn on or off the display of album list

Press DVD/TUNER MENU **[24]** repeatedly.

To rotate a JPEG image file

When a JPEG image file is displayed on the TV screen, you can rotate the image by 90 degrees.

Press **▲** or **▼** **[30]** repeatedly while viewing an image.

Press CLEAR **[32]** to return to the original view.




 
 

 

 



Notes

 - The PICTURE NAVI **[20]** button does not work when "MODE (MP3, JPEG)" is set to "AUDIO (MP3)".
- When you press **◀** or **▶** **[30]** to select the next or previous image, the image will return to its original view even if you have rotated the image previously.
- The slide show stops when you press **▲** or **▼** **[30]**.


 



Playing MP3 audio tracks and JPEG image files as a slide show with sound

DATA CD DATA DVD

You can play back a slide show with sound by first placing both JPEG image files and MP3 audio tracks in the same album on a DATA CD/DVD.

- 1 Insert a disc in the disc slot.
The list of albums appears on the TV screen.
- 2 Press  DISPLAY .
- 3 Press  or   repeatedly to select  (MODE (MP3, JPEG)), then press ENTER .
- The options for “MODE (MP3, JPEG)” appear on the TV screen.
 - AUTO: (default setting) Play back both JPEG image files and MP3 audio tracks in the same album as a slide show with sound.
 - AUDIO (MP3): Play back MP3 audio tracks continuously.
 - IMAGE (JPEG): Play back JPEG image files as a slide show.
- 4 Press  or   repeatedly to select “AUTO”, then press ENTER .
- 5 Press DVD/TUNER MENU .

The list of albums appears on the TV screen.

- 6 Press  or   repeatedly to select the album you want, then press  .

The slide show with sound starts from the selected album.

To turn on or off the display of album list

Press DVD/TUNER MENU  repeatedly.

To cancel slide show with sound

Select “AUDIO (MP3)” or “IMAGE (JPEG)” in step 4.

Notes

- In some cases, you cannot change the “MODE (MP3, JPEG)” setting when “MODE (MP3, JPEG)” has been set to
 - “IMAGE (JPEG)” and the selected disc only contains MP3 audio tracks.
 - “AUDIO (MP3)” and the selected disc only contains JPEG image files.
- The maximum number of MP3 audio tracks or JPEG image files on an album which this system can recognize is:
 - 600 when “MODE (MP3, JPEG)” is set to “AUDIO (MP3)” or “IMAGE (JPEG)”.
 - 300 when “MODE (MP3, JPEG)” is set to “AUTO”.
- If there are no MP3 audio tracks in the disc, “No audio data” appears on the TV screen and the disc cannot be played back.
- If there are no JPEG image files in the disc, “No image data” appears on the TV screen and the disc cannot be played back.
- If you play back a large data size of MP3 audio tracks and JPEG image files at the same time, the sound may skip.


 




 

 


Disc

Continued 

37^{GB}

Specifying the slide show speed

(JPEG image files only)


 





- 1 Press  DISPLAY  repeatedly until the Control Menu for JPEG image files appears on the TV screen.
- 2 Press  or   repeatedly to select  (INTERVAL), then press ENTER .
The options for “INTERVAL” appear on the TV screen.
- 3 Press  or   repeatedly to select the transition interval you want. The intervals become longer in the order from “FAST”, “NORMAL” (default setting), “SLOW 1”, to “SLOW 2”.
- 4 Press ENTER .
The selected setting takes effect.


 
 
Note

Some JPEG image files (especially progressive JPEG image files or JPEG image files with 3,000,000 pixels or more) may take a longer time to display than others, which may make the transitions seem longer than that of the option you selected.


Selecting a transition effect for image files in the slide show

(JPEG image files only)

- 1 Press  DISPLAY  repeatedly until the Control Menu for JPEG image files appears on the TV screen.
- 2 Press  or   repeatedly to select  (EFFECT), then press ENTER .
The options for “EFFECT” appear on the TV screen.

- 3 Press  or   repeatedly to select the setting you want.

 - MODE 1: (default setting) The image sweeps in from top to bottom of the screen.
- MODE 2: The image sweeps in from left to right of the screen.
- MODE 3: The image stretches out from the center of the screen.
- MODE 4: The images randomly cycle through the effects.
- MODE 5: The next image slides over the current image.
- OFF: Turns off this function.

- 4 Press ENTER .
The selected setting takes effect.

Adjusting the delay between the picture and sound

— A/V SYNC

DVD-V DVD-VR VIDEO CD DATA CD DATA DVD

When the sound does not synchronize with the pictures on the screen, you can adjust the delay between the picture and sound.

A/V SYNC does not work for MP3 audio tracks and JPEG image files in DATA CD/DVD.

- 1 Press DISPLAY when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press or repeatedly to select (A/V SYNC), then press ENTER .
- 3 Press or repeatedly to select the setting you want.
 - OFF: (default setting) Does not adjust.
 - ON: Adjusts the difference between picture and sound.
- 4 Press ENTER .

Note

Depending on the input stream, this function may not be effective.

Restricting playback of the disc

— CUSTOM PARENTAL CONTROL, PARENTAL CONTROL

DVD-V VIDEO CD C D

You can set 2 kinds of playback restrictions for the disc you want.

Custom Parental Control

You can set playback restrictions so that the system will not play back inappropriate discs.

Parental Control

You can limit the playback of some DVD VIDEOS according to a predetermined level such as the age of the users. When a limited scene is played back, that scene may be skipped or replaced with different scenes.

The same password is used for both Custom Parental Control and Parental Control.

Preventing playback of specific discs

— CUSTOM PARENTAL CONTROL

You can set the same Custom Parental Control password for up to 40 discs. When you set the 41st-disc, the playback restriction for the first disc is canceled.

- 1 Insert the disc you want to set the playback restriction.
If the disc is playing, press to stop playback.
- 2 Press DISPLAY when playback is stopped.
The Control Menu appears on the TV screen.

Continued 39^{GB}

- Press **▲** or **▼** **[30]** repeatedly to select **[PARENTAL CONTROL]**, then press **ENTER [30]**. The options for “PARENTAL CONTROL” appear on the TV screen.

- Press **▲** or **▼** **[30]** repeatedly to select “ON →”, then press **ENTER [30]**. To turn off the Custom Parental Control function, select “OFF →”, then press **ENTER [30]**.

If you have not entered a password:

The display for registering a new password appears.



Enter a 4-digit password using the numeric buttons **[33]**, then press **ENTER [30]**.

The display for confirming the password appears on the TV screen.

When you have already registered a password:

The display for entering the password appears on the TV screen.

- Enter or re-enter your 4-digit password using the numeric buttons **[33]**, then press **ENTER [30]**.


“Custom parental control is set.” appears on the TV screen and the screen returns to the Control Menu.

If you make a mistake when entering your password

Press **◀ [30]** repeatedly to delete the number you have entered, then re-enter your password again.

To play back a disc for which Custom Parental Control is set

- Insert the disc for which Custom Parental Control is set. The “CUSTOM PARENTAL CONTROL” display appears.

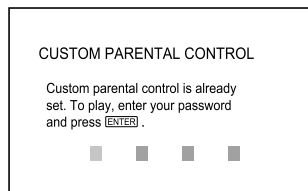

- Enter your 4-digit password using the numeric buttons **[33]**, then press **ENTER [30]**.

The system is ready for playback.

Tip

If you forget your password, enter the 6-digit number “199703” using the numeric buttons **[33]** when the “CUSTOM PARENTAL CONTROL” display asks you for your password, then press **ENTER [30]**. The display will ask you to enter a new 4-digit password.

Lim
— PA

(DVD
You ca
VIDE
level s

1 Pr
pli
Th
scr

2 Pr
to
CC
Th
CC

3 Pr
se
EN

If)
pa
Th
pa

En
nu
EN
Th
pa

WI
a p
Th
apj

Limiting playback for children

— PARENTAL CONTROL


(DVD VIDEO only)

You can limit the playback of some DVD VIDEOS according to a predetermined level such as the age of the users.

- 1 Press DISPLAY when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press or repeatedly to select (PARENTAL CONTROL), then press ENTER .
The options for "PARENTAL CONTROL" appear on the TV screen.
- 3 Press or repeatedly to select "PLAYER →", then press ENTER .

If you have not entered a password:

The display for registering a new password appears.

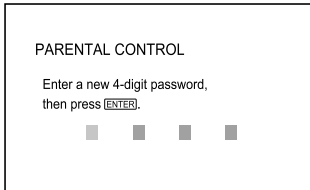


Enter a 4-digit password using the numeric buttons , then press ENTER .
The display for confirming the password appears on the TV screen.

When you have already registered a password:

The display for entering the password appears on the TV screen.

- 4 Enter or re-enter your 4-digit password using the numeric buttons , then press ENTER .

The display for setting the playback limitation level appears.

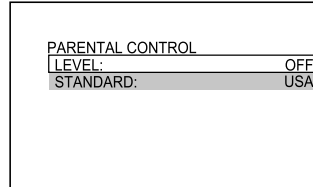

- 5 Press or repeatedly to select "STANDARD", then press ENTER .
The options for "STANDARD" appear on the TV screen.
- 6 Press or repeatedly to select a geographic area as the playback limitation level, then press ENTER .
The area is selected.
When you select "OTHERS →", enter the area code for the geographic area you want according to the "Parental Control Area Code List" on page 43 by using the numeric buttons .
- 7 Press or repeatedly to select "LEVEL", then press ENTER .

The options for "LEVEL" appear on the TV screen.

Continued

- 8** Press **▲** or **▼** **[30]** repeatedly to select the level you want, then press **ENTER** **[30]**.
Parental Control setting is completed.
The lower the value, the stricter the limitation.
To turn off the Parental Control function, set “LEVEL” to “OFF”.

If you make a mistake when entering your password

Press **←** **[30]** repeatedly to delete the number you have entered, then re-enter your password again.

To play back a disc for which Parental Control is set

- 1 Insert the disc and press **▷** **[17]**.
The display for entering your password appears on the TV screen.
- 2 Enter your 4-digit password using the numeric buttons **[33]**, then press **ENTER** **[30]**.
The system starts playback.

Notes

- The Control Menu display will show different items depending on the disc type.
- When you play back DVD VIDEOS which do not have the Parental Control function, playback cannot be limited on this system.
- Depending on the DVD VIDEO, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If Resume Play is canceled, the level returns to the original level.

Tip

If you forget your password, remove the disc and repeat steps 1 to 3 of “Limiting playback for children”. When you are asked to enter your password, enter “199703” using the numeric buttons **[33]**, then press **ENTER** **[30]**. The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password, reinsert the disc and press **▷** **[17]**. When the display for entering your password appears, enter your new password.

Changing the password

- 1 Press **□** **DISPLAY** **[26]** when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press **▲** or **▼** **[30]** repeatedly to select **[PARENTAL CONTROL]**, then press **ENTER** **[30]**.
The options for “PARENTAL CONTROL” appear on the TV screen.
- 3 Press **▲** or **▼** **[30]** repeatedly to select “PASSWORD →”; then press **ENTER** **[30]**.
The display for entering the password appears on the TV screen.
- 4 Enter your 4-digit password using the numeric buttons **[33]**, then press **ENTER** **[30]**.

- 5 Enter a new 4-digit password using the numeric buttons **[33]**, then press ENTER **[30]**.
- 6 To confirm your password, re-enter it using the numeric buttons **[33]**, then press ENTER **[30]**.

If you make a mistake when entering your password

Press **◀ [30]** repeatedly to delete the number you have entered, then re-enter your password again.

Using the DVD setup menu

By using the DVD setup menu, you can make various adjustments to items such as picture and sound.

Note

Playback settings stored in the disc take priority over the DVD setup menu settings. Therefore, some of the DVD setup menu settings may not be performed.

- 1 Press **[DISC]** DISPLAY **[26]** when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press **▲** or **▼ [30]** repeatedly to select **[SETUP]** (SETUP), then press ENTER **[30]**.
The options for "SETUP" appear on the TV screen.
- 3 Press **▲** or **▼ [30]** repeatedly to select "CUSTOM", then press ENTER **[30]**.
The Setup menu appears on the TV screen.

Disc


Continued 

43^{GB}

- 4 Press \uparrow or \downarrow $\boxed{30}$ repeatedly to select the setup item from the displayed list: "LANGUAGE SETUP", "SCREEN SETUP" or "CUSTOM SETUP". Then press ENTER $\boxed{30}$.


The setup item is selected.
Example: SCREEN SETUP

Selected item

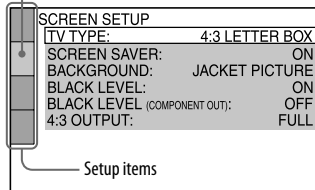


- 5 Press \uparrow or \downarrow $\boxed{30}$ repeatedly to select the item you want, then press ENTER $\boxed{30}$.

The options for the selected item appear on the TV screen.
Example: TV TYPE

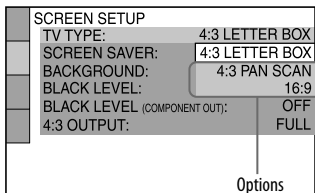

- 6 Press \uparrow or \downarrow $\boxed{30}$ repeatedly to select the setting you want, then press ENTER $\boxed{30}$.
The setting is selected and setup is completed.

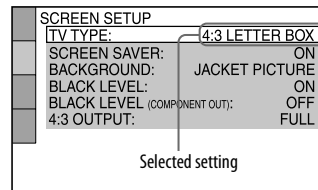


DVD setup menu item list

The default settings are underlined.

Setting the language – LANGUAGE SETUP

Set various languages for the on-screen display or sound track.

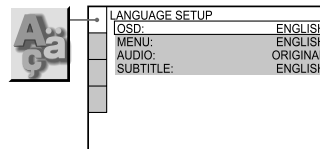

OSD

(On-Screen Display) Switches the language of the on-screen display.

MENU*

(DVD VIDEO only) Select the language for the DVD menu.

AUDIO*

(DVD VIDEO only) Switches the language of the sound track.
When you select "ORIGINAL", the language given priority in the disc is selected.



TO
is
BOX
ON
SURE
ON
OFF
FULL
E
een
ILISH
ILISH
ILISH
age
s


SUBTITLE*

(DVD VIDEO only) Switches the language of the subtitle. When you select "AUDIO FOLLOW", the language for the subtitles changes according to the language you selected for the sound track.

* When you select a language in "MENU", "SUBTITLE", or "AUDIO" that is not recorded on the DVD VIDEO, one of the recorded language is automatically selected. However, depending on the disc, the language may not be selected automatically. If you select "OTHERS →" in "MENU", "SUBTITLE", and "AUDIO", enter a language code from the "Language code list" (page 97) using the numeric buttons **33**.

Setting the TV screen — SCREEN SETUP

Choose the settings according to the TV you connected.

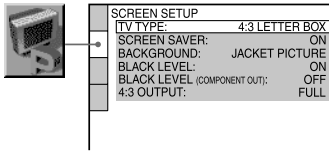

TV TYPE¹⁾

(DVD VIDEO only)

16:9: Select this when you connect a wide-screen TV or a TV with a wide mode function.

4:3 LETTER BOX: Select this when you connect a 4:3 screen TV. This setting displays a wide picture with bands on the upper and lower portions of the screen.

4:3 PAN SCAN²⁾: Select this when you connect a 4:3 screen TV. This setting displays the wide picture on the entire screen and cuts off the portions that do not fit.

SCREEN SAVER

The screen saver will help prevent your display device from becoming damaged (ghosting). Press **▷ 17** to turn off the screen saver.

ON: The screen saver image appears when playback is stopped or paused for 15 minutes or when you play back an AUDIO CD or MP3 audio tracks for more than 15 minutes.

OFF

BACKGROUND

Selects the background color or picture to be displayed on the TV screen. The background color or picture is displayed when playback is stopped or while playing an AUDIO CD and MP3 audio tracks.

JACKET PICTURE: The jacket picture (still picture) appears in the background, but only when the jacket picture is already recorded on the disc (DVD VIDEO, CD-EXTRA, etc.). If the disc does not contain a jacket picture, the "GRAPHICS" picture appears.

GRAPHICS: A preset picture stored in the system appears in the background.

BLUE

BLACK

BLACK LEVEL

Select the black level (setup level) for the video signals output from the video jacks other than COMPONENT VIDEO OUT jacks.

ON: Standard level

OFF: Lower the standard black level. Use this when the picture becomes too white.

Disc

Continued

BLACK LEVEL (COMPONENT OUT)

Select the black level (setup level) for the video signals output from the COMPONENT VIDEO OUT jacks. You cannot select "BLACK LEVEL (COMPONENT OUT)" when the system outputs progressive signal.

OFF: Standard level

 
ON: Raise the standard black level. Use this when the picture becomes too black.

4:3 OUTPUT³⁾

Change this setting to watch 4:3 aspect ratio progressive signals. If you can change the aspect ratio on your progressive format (525p/625p) compatible TV, change the setting on your TV.

FULL: Select this when you can change the aspect ratio on your TV.

NORMAL: Select this when you cannot change the aspect ratio on your TV. Shows a 16:9 aspect ratio signal with black bands on left and right sides of the image.



16:9 aspect ratio TV

 
¹⁾ The default setting varies depending on the country.



16:9



4:3 LETTER BOX




4:3 PAN SCAN

²⁾ Depending on the DVD VIDEO, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" or vice versa.

³⁾ This setting is effective only when

- you set "TV TYPE" in "SCREEN SETUP" to "16:9".
- "P AUTO" or "P VIDEO" is selected (page 13).

Setting playback options — CUSTOM SETUP

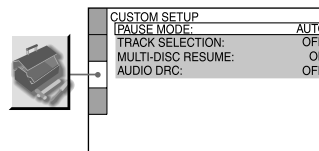

PAUSE MODE

(DVD VIDEO and DVD-R/-RW in VR mode only)

AUTO: The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.

FRAME: The picture, including subjects that do not move dynamically, is output in high resolution.

TRAC
(DVD
sound
numb
a DVI
(PCM
Digita
OFF: 1
AUTO

MULT
(DVD
ON: S
OFF: 1
point i
the res
curren

AUDIO
Comp
(DVD
mode
OFF: 1
STAN
track v
the rec
for wa
at nigh
MAX:

¹⁾ If each
numl
audic
DTS,

²⁾ When
"AUI
"TR/
prior
"LAN
depe
be pe

³⁾ AUD
Dolb

TRACK SELECTION

(DVD VIDEO only) Gives priority to the sound track which contains the highest number of channels when you play back a DVD VIDEO on which multiple audio (PCM, DTS, MPEG audio, or Dolby Digital) formats¹⁾ are recorded.

OFF: No priority given.

AUTO²⁾: Priority given.

MULTI-DISC RESUME

(DVD VIDEO and VIDEO CD only)

ON: See page 23.

OFF: Does not store the resume playback point in the memory. Playback starts at the resume playback point only for the current disc in the system.

AUDIO DRC³⁾ (Dynamic Range Compression)

(DVD VIDEO and DVD-R/-RW in VR mode only)

OFF: No compression of dynamic range.

STANDARD: Reproduces the sound track with the kind of dynamic range that the recording engineer intended. Useful for watching movies at low volume late at night.

MAX: Narrows the dynamic range fully.

¹⁾ If each audio sound track has the same number of channels, the system selects the audio sound tracks in the order from PCM, DTS, Dolby Digital, to MPEG.

²⁾ When you set "TRACK SELECTION" to "AUTO", the language may change. The "TRACK SELECTION" setting has higher priority than the "AUDIO" settings in "LANGUAGE SETUP" (page 44). However, depending on the disc, this function may not be performed.

³⁾ AUDIO DRC can only be performed with Dolby Digital sources.

atically
sa.

:TUP"

1 (page

OM

AUTO
OFF
ON
OFF

VR

:cts
th no

jects
tput

Tuner

Listening to the radio

You can listen to a radio station either by selecting a preset station, or by manually tuning in the station.

Listening to FM or AM

- 1 Press FUNCTION +/- [15] repeatedly to select "TUNER FM" or "TUNER AM" (or press TUNER/BAND [15] on the unit repeatedly to select "FM" or "AM").
- 2 Press and hold TUNING +/- [8] until the frequency indication changes and then release. Scanning stops automatically when a station is tuned in and "TUNED" lights up in the display. When a FM stereo program is tuned in, "ST" lights up in the display.



If "TUNED" does not appear and the scanning does not stop, press TUNING +/- [8] repeatedly to tune in the station you want.

To stop automatic scanning

Press ■ [17].

To change the AM tuning interval

The factory setting for AM tuning interval is 9 kHz (or 10 kHz for some areas).

- 1 Press FUNCTION +/- [15] repeatedly to select "TUNER FM" or "TUNER AM" (or press TUNER/BAND [15] on the unit repeatedly to select "FM" or "AM").
- 2 Press I/⏻ [1] to turn off the system.
- 3 Press DISPLAY [11] to display the clock.
- 4 Hold down TUNER/BAND [15] and then press I/⏻ [1] to turn on the system. "AM 9k Step" or "AM 10k Step" appears in the display. When you change the interval, all the AM preset stations are erased.

Tips

- To improve broadcast reception, adjust the supplied antennas, or connect an external antenna.
- When an FM stereo program has static noise, press FM MODE repeatedly until "MONO" lights up in the display. There will be no stereo effect, but the reception will improve.

Listening to satellite radio

You can operate and listen to XM or SIRIUS satellite radio by connecting an optional antenna or tuner. Before using the system, connect the XM Mini-Tuner and Home Dock or the SiriusConnect Home tuner to the system. See "Hooking up the system securely" (page xx) for details about connection.

- 1 Select "XM" or "SIRIUS."
Press XM or SIRIUS [34] (or TUNER/BAND [15] repeatedly).
- 2 Select the All Channel mode.
Press CATEGORY MODE [35] repeatedly until "CAT" disappear.

3 Tu
Pr

4 Ac
Pr

To sel

1 Pre
BAN

2 Pre
rep

3 Pre

4 Pre

To sel
butto

Enter
using
ENTE

To che
numb

Press t
ENTE

Notes

- If you
butto
chan;
- You c
TUN
for th

3 Tune in the desired channel.
Press TUNING +/- [8] repeatedly.

4 Adjust the volume.
Press VOLUME +/- [18].

To select a channel by Category mode

- 1 Press XM or SIRIUS [34] (or TUNER/BAND [15] repeatedly).
- 2 Press CATEGORY MODE [35] repeatedly until "CAT" appears.
- 3 Press CATEGORY +/- [35] repeatedly.
- 4 Press TUNING +/- [8] repeatedly.

To select a channel using the numeric buttons

Enter the 3 digits of the desired channel using the numeric buttons [33], then press ENTER [30].

To check your XM Radio ID or SIRIUS ID number

Press the numeric button 0 [33], then press ENTER [30] to select the channel 0.

Notes

- If you select a channel using the numeric buttons in Category mode, the tuning mode changes to All Channel mode automatically.
- You cannot select a SIRIUS channel using TUNING +/- [8] if the Parental Lock is set for the channel.

Listening to preset radio station

- 1 Tune in the desired station (see "Listening to the radio" (page 48)).
- 2 Press DVD/TUNER MENU [24].
"Memory?" flashes in the display.
- 3 Press ENTER [30].
A preset number flashes in the display.
The stations are stored from preset number 1.



- 4 Press PRESET +/- [8] repeatedly to select the preset number you want.
- 5 Press ENTER [30].
"Complete!" appears in the display.
The station is stored.
- 6 Repeat steps 1 to 6 to store other stations.

You can preset up to 20 FM, 10 AM, 20 XM and 20 SIRIUS stations. The preset stations are retained for half a day even if you unplug the power cord or if a power failure occurs.

Tuner

Continued 

49^{GB}

- 7 To listen to a preset station, press PRESET +/- [8] repeatedly to select the preset station you want.

You can also press the numeric buttons [33], then press ENTER [30] to select a preset station.

To cancel presetting

Press DVD/TUNER MENU [24].

Notes on presetting XM or SIRIUS stations

- You cannot preset XM or SIRIUS stations except when you receive the station.
- You cannot operate CATEGORY +/- [35] in preset tuning mode.
- If you select a channel using the numeric buttons [33] in preset tuning mode, the tuning mode changes automatically to All Channel mode.

Restricting access to specific channels (SIRIUS only)

— Parental Lock

You can restrict access to certain channels using your own password. The password is set to "0000" as the default. Change the password before you use this function for the first time (see "To change the password").

- 1 Select "SIRIUS."
Press SIRIUS [34] (or TUNER/BAND [15] repeatedly).
- 2 Tune in the desired channel (see "Listening to satellite radio" (page xx)).
- 3 Press DVD/TUNER MENU [24].

- 4 Press ↑ or ↓ [30] repeatedly until "Lock?" appears, then press ENTER [30].
"EnterKey" appears.

- 5 Enter your 4-digit password using the numeric buttons [33].
"Complete!" appears and the Parental Lock is set.

To delete the numbers you have entered

Press CLEAR [32] repeatedly.

To change the password

- 1 Press SIRIUS [34] (or TUNER/BAND [15] repeatedly) to select "SIRIUS."
- 2 Press DVD/TUNER MENU [24].
- 3 Press ↑ or ↓ [30] repeatedly until "Edit Key?" appears, then press ENTER [30].
"OLD Key" appears.
- 4 Enter your current 4-digit password using the numeric buttons [33].
"NEW Key" appears.
- 5 Enter a new 4-digit password using the numeric buttons [33].
- 6 To confirm your new password, re-enter it using the numeric buttons [33].
"Complete!" appears and the new password is set.

To list

- 1 Pre rep
- 2 Sele liste [33]. "En
- 3 Ent the

To ren

- 1 Wh in, p the "Un
- 2 Pre "Cc is u

Notes

- Whe: TUN Categ
- The c indic made been

Notes

- Whe: settir to the settir
- You c
- If you chan: chan:
- You c 0 or 1

until

33.
rental

15

"Edit
30.

word

ing

re-
ons

7

To listen to the locked channels

- 1 Press SIRIUS **34** (or TUNER/BAND **15** repeatedly) to select "SIRIUS."
- 2 Select a locked channel you want to listen to using the numeric buttons **33**.
"EnterKey" appears.
- 3 Enter your 4-digit password using the numeric buttons **33**.

To remove the Parental Lock

- 1 When the locked channel is tuned in, press DVD/TUNER MENU **24**, and then press **▲** or **▼** **30** repeatedly until "Unlock?" appears.
- 2 Press ENTER **30**.
"Complete!" appears and the channel is unlocked.

Notes

- When you select a channel using TUNING +/- **8** in All Channel mode or Category mode, locked channels are skipped.
- The display will return to the original indication if you press **■** **17** or if no entry is made for a set period of time after you have been prompted to enter the password.

Notes on SIRIUS Parental Lock

- When the system is reset to the factory settings, the Parental Lock password returns to the default ("0000"), but Parental Lock settings are not removed.
- You cannot preset locked channels.
- If you set the Parental Lock for a preset channel, the preset information for that channel returns to the default.
- You cannot set the Parental Lock for channels 0 or 184.

Tuner

Bluetooth

Using the Bluetooth function

This system supports Bluetooth A2DP and AVRCP profiles. For details on Bluetooth wireless technology, see "Bluetooth wireless technology" (page 34).

Check the websites below for the latest information about compatible devices.

For customers in the U.S.A.:

<<http://www.sony.com/shelfsupport>>

For customers in Canada:

<<http://www.sony.ca/ElectronicsSupport/>>

For customers in Europe:

<<http://sonydigital-link.com/dna>>

For customers in Latin America:


<<http://www.sony-latin.com/pa/info>>

For customers in Asia and Oceania:

<<http://www.css.ap.sony.com/>>

Listening to music of a Bluetooth mobile phone or Bluetooth device

You can listen to music from your Bluetooth mobile phone or Bluetooth device over a wireless connection.

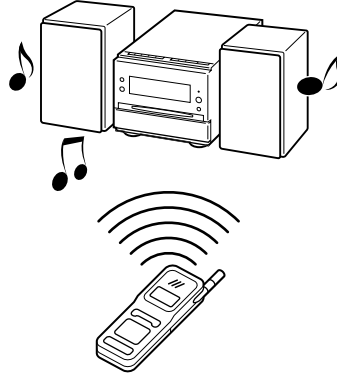

Follow the procedure below to listen to music from Bluetooth devices with this system.

Pairing this system with a Bluetooth device



Connecting to registered devices



Playing music of a Bluetooth device

For details about the operations of the Bluetooth device, also refer to the operation manual supplied with your Bluetooth device.

Pairing device

Pairing device before to pair device perform perform complete a Blue

1 Pl: co 1 r

2 Se Pr to Bl

3 Of an

of: Fo the op Bl

W/ wi the Bl

on Th "C

W/ thi

(A de no car

op

Pairing this system with a Bluetooth device

Pairing is an operation where Bluetooth devices register with each other beforehand. Use the procedure below to pair the system with your Bluetooth device. Once a pairing operation is performed, it does not need to be performed again. If pairing is already completed, proceed to “Playing music of a Bluetooth device” (page 16).

- 1 Place the Bluetooth device to be connected to this system within 1 meter of the system.
- 2 Select the Bluetooth function.
Press FUNCTION +/- [15] repeatedly to select “Bluetooth” (or press Bluetooth ► [15] on the unit).
- 3 Operate the Bluetooth device and perform the pairing operation.

For details about the operations of the Bluetooth device, refer to the operation manual supplied with your Bluetooth device.

When searching for this system with the Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device.

This system appears as “CMT-DH7BT.”

When establishing a connection with this system, select the audio profile (A2DP, AVRCP) at the Bluetooth device. If the Bluetooth device does not support the AVRCP profile, you cannot perform playback or other operations with the system (page 16).

4 Enter the passcode.

Passcode entry may be required depending on the type of Bluetooth device.

When “PIN?” and a countdown appear, enter the passkey at the system as follows:



Press the numeric buttons [33] (or +/- [7] and [8] on the unit) to enter the same passkey that was entered at the Bluetooth device, and then press ENTER [30] (or BLUETOOTH OPR [4] on the unit). Once pairing is completed and the connection is established, the system display changes as follows: “Connect” → Name of the Bluetooth device

To cancel passcode entry partway

Press ■ [17].

Notes

- “Passcode” may be called “Passkey,” “PIN code,” “PIN number” or “Password,” etc. depending on the device.
- This system only supports numerical passcodes up to 4 digits.
- The pairing standby status of the system is cancelled after about 30 seconds. If pairing is not successful, redo the procedure from step 1.
- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.

To erase all the pairing registration information

- 1 Press FUNCTION +/- [15] repeatedly to select "BLUETOOTH" (or press BLUETOOTH ► [15] on the unit).
When the system is connected with a Bluetooth device (when the Bluetooth device name or other information appears in the system display), press and hold BLUETOOTH OPR [4] on the unit for about 2 seconds to put the system in Bluetooth standby mode.
- 2 Press CLEAR [32].
"Delete?" appears.
- 3 Press ENTER [30].
"Complete!" appears and all the pairing information is erased.

Note

In order to connect with a Bluetooth device after performing this operation, you must enter the passcode again.

Playing music of a Bluetooth device

You can operate a Bluetooth device by connecting the system and a Bluetooth device using AVRCP. If the system is not connected with a Bluetooth device using AVRCP, "Not In Use" appears when you operate the system.

- 1 Select the Bluetooth function.
Press FUNCTION +/- [15] repeatedly to select "BLUETOOTH" (or press BLUETOOTH ► [15] on the unit).
- 2 Establish a connection from the Bluetooth device.
For details about the operations of the Bluetooth device, refer to the operation manual supplied with your Bluetooth device.
Once the connection is established, the system display changes as follows:
"Connect" → Name of the Bluetooth device
- 3 Start playback.
Press ▷ [17] (or BLUETOOTH ► [15] on the unit).
Depending on the Bluetooth device, you may need to start up the AV software of the Bluetooth device beforehand.
- 4 Adjust the volume.
Press VOLUME +/- [18].

To check the address of a connected Bluetooth device

Press DISPLAY [11] while the Bluetooth device name appears in the system display.
The Bluetooth device address appears for 8 seconds.

To can Bluetooth

Press a on the BLUE

Other

To

Pause

Stop p

Select

Find a

file

View t

Bluet

device

Note

These c
ertain
actual c
connec

Notes device

- If you Bluetooth oper: Bluetooth
- Depend you c of the
- When is pre head; a con anot

To cancel the connection with a Bluetooth device

Press and hold **BLUETOOTH OPR** [4] on the unit for about 2 seconds until the **BLUETOOTH** indicator [3] turns off.

Other operation

To	Press
Pause playback	[17].
Stop playback	■ [17].
Select a file	◀◀/▶▶ [8].
Find a point in a file	Hold down ◀◀/▶▶ [8].
View the Bluetooth device address	DISPLAY [11] repeatedly when the system is on.

Note


These operations may not be available for certain Bluetooth devices. In addition, the actual operations may differ depending on the connected Bluetooth device.

Notes on connections with Bluetooth devices

- If you cannot connect with a paired Bluetooth device, perform the pairing operation between the system and the Bluetooth device again.
- Depending on the type of Bluetooth device, you can adjust the volume using the controls of the Bluetooth device.
- When **BLUETOOTH** ▶ [15] on the unit is pressed while connected to Bluetooth headphones, it may take some time until a connection is made to the system from another Bluetooth device.

Listening to music on this system using Bluetooth headphones

You can listen to music played on this system using your Bluetooth headphones over a wireless connection.

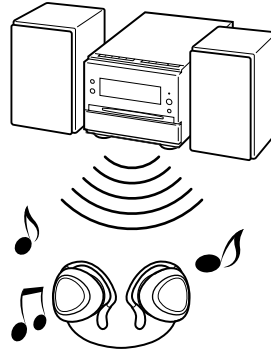

Follow the procedure below to listen to music on this system with Bluetooth headphones.

Pairing this system with Bluetooth headphones

↓
Connecting to registered headphones

↓
Playing music on this system

For details about the operations of the Bluetooth headphones, also refer to the operation manual supplied with your Bluetooth headphones.

BLUETOOTH

Continued ↗

55^{GB}

Pairing this system with Bluetooth headphones

Pairing is an operation where Bluetooth devices register with each other beforehand. Use the procedure below to pair the system with your Bluetooth headphones. Once a pairing operation is performed, it does not need to be performed again. If pairing is already completed, proceed to "Playing music on this system" (page 18).

- 1 Select a function other than the Bluetooth function.
Press FUNCTION +/- [15] repeatedly.
- 2 Place the Bluetooth headphones to be connected to this system within 1 meter of the system.
- 3 Put the Bluetooth headphones in pairing mode.
For details about the operations of the Bluetooth headphones, refer to the operation manual supplied with your Bluetooth headphones.
- 4 Press and hold BLUETOOTH OPR [4] on the unit for about 7 seconds until the BLUETOOTH indicator [3] flashes.
Sound output from the speakers is stopped.
- 5 Enter the passcode.
Follow the same procedure as in step 4 of "Pairing this system with a Bluetooth device" (page 14).
Once pairing is completed and the connection is established, the system display changes as follows:
"Connect" → Name of the Bluetooth device

To cancel passcode entry partway

Press ■ [17].

Notes

- "Passcode" may be called "Passkey," "PIN code," "PIN number" or "Password," etc. depending on the device.
- This system only supports numerical passcodes up to 4 digits.
- The pairing standby status of the system is cancelled after about 30 seconds. If pairing is not successful, redo the procedure from step 1.
- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.

To erase all the pairing registration information

- 1 Press FUNCTION +/- [15] repeatedly to select "BLUETOOTH" (or press BLUETOOTH ► [15] on the unit).
When the system is connected with a Bluetooth device (when the Bluetooth device name or other information appears in the system display), press and hold BLUETOOTH OPR [4] on the unit for about 2 seconds to put the system in Bluetooth standby mode.
- 2 Press CLEAR [32].
"Delete?" appears.
- 3 Press ENTER [30].
"Complete!" appears and all the pairing information is erased.

Note

To connect with Bluetooth headphones after performing this operation, you must enter the passcode again.

Playing music on this system

You can operate this system from Bluetooth headphones by connecting the system and Bluetooth headphones using AVRCP.

- 1 Select a function other than the Bluetooth function.

Press FUNCTION +/- [15] repeatedly.

- 2 Establish a connection with the Bluetooth headphones.

Press and hold BLUETOOTH OPR [4] on the unit for about 2 seconds until the BLUETOOTH indicator [3] lights up, then release the button.

If more than one Bluetooth device that has been connected in the past is present around the system, the system attempts to connect with up to 3 most recently connected devices. (Connection is attempted with up to 3 devices in order from the most recently connected device, and the attempts end when a connection is established.)

Once the connection is established, the system display changes as follows: "Connect" → Name of the Bluetooth device

- 3 Start playback of the music for the function selected in step 1.

Depending on the type of Bluetooth headphones, you can operate this system (playback, volume control, etc.) using the headphone's controls. For details about the operations of the Bluetooth headphones, refer to the operation manual supplied with your Bluetooth headphones.

- 4 Adjust the volume.

Press VOLUME +/- [18].

To cancel the connection with Bluetooth headphones

Press and hold BLUETOOTH OPR [4] on the unit for about 2 seconds until the BLUETOOTH indicator [3] turns off.

Notes

- If you cannot connect with paired Bluetooth headphones, perform the pairing operation between the system and the Bluetooth headphones again.
- When the system is changed to a function other than Bluetooth function and BLUETOOTH OPR [4] on the unit is pressed while connected to a Bluetooth device, it may take some time until a connection is made with the Bluetooth headphones.
- This system stores separate volume settings for when listening through headphones connected to the PHONES jack [10] on the unit, or when listening through Bluetooth headphones.
- This system stores separate volume settings for when listening through the speakers or PHONES jack [10] on the unit, or when listening through Bluetooth headphones.

BLUETOOTH

Sound Adjustment

Adjusting the sound

Generating a more dynamic sound (Dynamic Sound Generator X-tra)

You can reinforce the bass and create a more powerful sound. The DSGX setting is ideal for music sources.

Press DSGX **[13]** on the unit repeatedly.

Each time you press the button, the display changes as follows:
DSGX ON ↔ DSGX OFF

Tip

The default setting is “DSGX ON”.

Setting the sound effect

- 1 Press EQ **[25]** repeatedly to select “BASS” or “TREBLE”.
- 2 Press PRESET +/- **[8]** repeatedly to adjust the level.

Other operations

Using the timer

Falling asleep to music

— Sleep Timer

You can set the system to turn off after a certain time, so that you can fall asleep to music.

Press SLEEP **[37]** repeatedly.

Each time you press the button, the minute display changes cyclically as follows:

90min → 80min → 70min → ... → 10min → OFF

Other operations

To	Do this
Check the remaining time	Press SLEEP [37] once.
Change the time to turn off	Press SLEEP [37] repeatedly to select the time you want.
Cancel the Sleep Timer	Press SLEEP [37] repeatedly until "SLEEP OFF" appears in the display.

Setting the timer

— Play Timer

You can wake up to music at a preset time. Make sure you have set the clock (see "Setting the clock" on page18).

- 1 Prepare the sound source.
Insert a disc you want to play back.
Then press VOLUME +/- **[18]**.
- 2 Press TIMER MENU **[38]**.
- 3 Press **▲** or **▼** **[30]** repeatedly to select "PLAY SET?", then press ENTER **[30]**.
"ON" appears and the hour indication flashes in the display.
- 4 Set the time to start playback.
Press **▲** or **▼** **[30]** repeatedly to set the hour, then press ENTER **[30]**.
The minute indication flashes in the display. Use the procedure above to set the minute. "OFF" appears and the hour indication flashes in the display.
- 5 Set the time to stop playback using the same procedure as step 4.
- 6 Select the sound source.
Press **▲** or **▼** **[30]** repeatedly until the music source you want appears in the display, then press ENTER **[30]**. This display will show the timer settings.
- 7 Press I/⏻ **[1]** to turn off the system.

Continued 

Other operations

To	Do this
Check the setting	<ol style="list-style-type: none"> 1 Press TIMER MENU [38]. “TIMER SEL?” flashes in the display. 2 Press ENTER [30]. 3 Press ▲ or ▼ [30] repeatedly to select “PLAY SELECT?”, then press ENTER [30].
Change the setting	Start from step 1.
Cancel the Play Timer	<ol style="list-style-type: none"> 1 Press TIMER MENU [38]. “TIMER SEL?” flashes in the display. 2 Press ENTER [30]. 3 Press ▲ or ▼ [30] repeatedly to select “TIMER OFF?”, then press ENTER [30].

Notes

- The Play Timer will not be activated if the system is turned on or if “STANDBY” flashes in the display.
- The system turns on 30 seconds before the preset time. Do not operate the system from the time the system turns on until the recording starts.
- Before the system is turned off, if a connection is made with the Bluetooth headphones, sounds played by the Play Timer may be output to the Bluetooth headphones.

Changing the display

Checking the clock

Press DISPLAY **[11]** when the system is turned off. The clock is displayed for 8 seconds.

Adjusting the brightness of the display

Press DIMMER **[19]** repeatedly. Each time you press the button, the display changes cyclically as follows: DIMMER OFF → DIMMER 1 → DIMMER 2*
* DIMMER 2 is the darkest.

Viewing information about the disc

Viewing information about the disc in the front panel display

Press DISPLAY **[11]**.

Each time you press DISPLAY **[11]**, the display changes from ① → ② → ① → ...

- ① Disc information
- ② Clock display (for 8 seconds)

Checking the elapsed playing time, remaining time and titles

Press TIME/TEXT **[36]** during playback. Each time you press TIME/TEXT **[36]**, the display changes from ① → ② → ... → ① → ...

When playing a DVD VIDEO or DVD-R/-RW in VR mode:

- When the menu or the title without a chapter is played back
 - ① Elapsed playing time of the menu or the current title
 - ② Title of the disc¹⁾
- When a chapter other than above condition is played back
 - ① Elapsed playing time of the current title
 - ② Remaining time of the current title
 - ③ Elapsed playing time of the current chapter
 - ④ Remaining time of the current chapter
 - ⑤ Title of the disc¹⁾²⁾

When playing an AUDIO CD or VIDEO CD without PBC function:

- ① Elapsed playing time of the current track
- ② Remaining time of the current track
- ③ Elapsed playing time of the current disc³⁾
- ④ Remaining time of the current disc³⁾
- ⑤ Title of the disc¹⁾⁴⁾

When playing a VIDEO CD/Super VCD:

- ① Elapsed playing time of the current scene/track
- ② Title of the disc¹⁾⁴⁾

When playing MP3 audio tracks on a DATA CD/DVD:

- ① Elapsed playing time of the current track
- ② Title of the track

Checking the total playing time and titles

Press TIME/TEXT **[36]** repeatedly when playback is stopped. Each time you press TIME/TEXT **[36]**, the display changes from ① → ② → ① → ...

DVD VIDEO or DVD-R/-RW in VR mode:

- ① Total number of titles on the disc
- ② Title of the disc¹⁾

VIDEO CD without PBC playback or AUDIO CD:

- ① Total number of the tracks on the disc and the total playing time of the disc
- ② Title of the disc¹⁾

VIDEO CD with PBC playback:

- ① Total number of scene on the disc
- ② Title of the disc¹⁾

- 1) "NO TEXT" appears in the display if the DVD VIDEO is not a DVD-TEXT disc, the AUDIO CD is not a CD-TEXT disc or the VIDEO CD does not have text information.
- 2) The current chapter number and the current title number are displayed for 2 seconds before the display returns to elapsed playing time when you press TIME/TEXT **[36]** during display of title of the disc.
- 3) When Program Play or Shuffle Play is turned on, the elapsed playing time and the remaining time of the disc would be skipped.
- 4) The current track number and the current index number (for a disc without PBC) or the current scene number (for a disc with PBC) are displayed for 2 seconds before the display returns to elapsed playing time when you press TIME/TEXT **[36]** during display of the title of disc.

Notes


- If you play back a disc containing JPEG image files only, "JPEG" or "No Audio" appears in the display.
- You cannot use TIME/TEXT **[36]** to change the display of disc information when:
 - a JPEG image file is played back.
 - playback is stopped for DATA CD/DVD with MP3 audio tracks and/or JPEG image files.
- If the MP3 audio track title contains characters which cannot be displayed, these characters will be displayed as "*****".

Viewing information about the disc in the on-screen display

Press TIME/TEXT **[36]**.

Each time you press TIME/TEXT **[36]** while playing the disc, the display changes from ① → ② → ... → ① → ...

The time display that you can view on the TV screen depends on the disc you are playing.

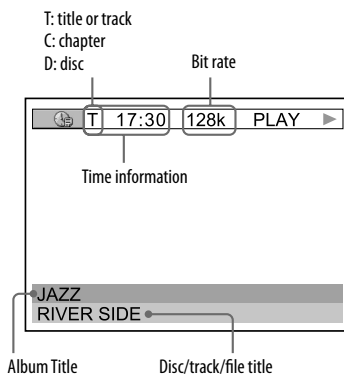

When playing a DVD VIDEO or DVD-R/-RW in VR mode:

- ① Elapsed playing time of the current title
- ② Remaining time of the current title
- ③ Elapsed playing time of the current chapter
- ④ Remaining time of the current chapter
- ⑤ Elapsed playing time of the current title and title of the disc

When playing a VIDEO CD/Super VCD:

Elapsed playing time of the current scene/track

When CD wi

- ① Elapsed playing time of the current track
- ② Remaining time of the current track
- ③ Elapsed playing time of the current disc
- ④ Remaining time of the current disc
- ⑤ Elapsed playing time of the current track

When Elapsed playing time of the current track/

Notes

- Only symbols are displayed.
- For MP3 audio tracks, ISO 8859-1 characters are displayed.

Displaying the disc information

(DVD) When during current playback, TV screen displays the following information:

When playing a DVD VIDEO or DVD-R/-RW in VR mode:

For example, when playing a DVD-VIDEO disc, the TV screen displays the following information:

 
Example: For DVD-VIDEO disc

DOLE

2 Front
1 Centre

the

6
D
on the
are



VD-
ent
tle
ent
hapter
ent

When playing an AUDIO CD or VIDEO CD without PBC function:

- ① Elapsed playing time of the current track
- ② Remaining time of the current track
- ③ Elapsed playing time of the current disc
- ④ Remaining time of the current disc
- ⑤ Elapsed playing time of the current track and title of the disc

When playing a DATA CD/DVD:

Elapsed playing time of the current track/file

Notes

- Only alphabet letters, numbers and some symbols can be displayed.
- Depending on the disc, the system can only display a limited number of characters.
- For MP3 audio tracks with format other than ISO 9660 Level 1 and Level 2, album title and track title may not be displayed.

Displaying the audio information of the disc

(DVD VIDEO only)


When you press AUDIO [21] repeatedly during playback, the format of the current audio signal is displayed on the TV screen.

When playing a DVD VIDEO:

For example, in Dolby Digital format, multiple signals ranging from monaural to 5.1 channel signals can be recorded on a DVD VIDEO.

Example:

For Dolby Digital 5.1 channel:

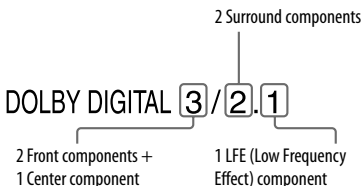


Checking the date information of JPEG image files

You can check the date information during playback when Exif* tag is recorded in the JPEG image files.

Press [] DISPLAY [26] repeatedly during playback.

The Control Menu appears.

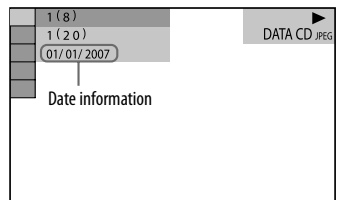

* "Exchangeable Image File Format" is a digital camera image format defined by the Japan Electronics & Information Technology Industries Association (JEITA).

Note


The date information format varies depending on the area.

Other operations


Hooking up optional components

To enhance your system, you can connect optional components. Refer to the operating instructions provided with each component.

Front panel

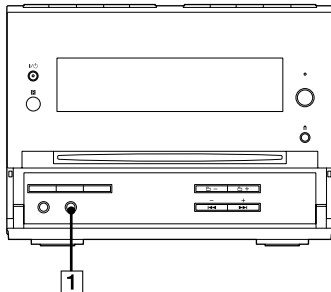

Rear panel

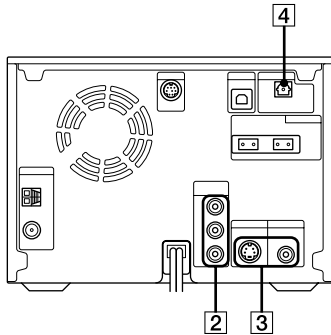

1 AUDIO IN jack

Connect the audio output jack of an optional component (portable audio player, etc.).

2 COMPONENT VIDEO OUT jacks

Connect the component video input jacks of the TV or projector. If your TV accept progressive format signals, you must use this connection and press PROGRESSIVE [12] on the unit repeatedly to select "P AUTO" or "P VIDEO". You can enjoy higher quality video images.

3 S VIDEO OUT/VIDEO OUT jacks

Connect the S Video/video input jack of the TV. You can enjoy higher quality video images when you select the S VIDEO.

4 DIGITAL OUT jack

Connect the digital optical input jack of an optional digital component (such as amplifier).

Note

Sound is output only when the system function is set to DVD.

Enjoying the multi channel sound with the optional amplifier

- 1** Connect the digital optical cord.
See “Hooking up optional components” on page 81.
- 2** Connect the speakers to an optional amplifier equipped with a decoder.
For the speakers placement, refer to the operating instructions supplied with the connected amplifier.
- 3** Start playing a multi channel source, such as a DVD VIDEO.
- 4** Select the audio format you want.
See “Changing the sound” on page xx.

Additional Information

Troubleshooting

Should you encounter a problem with your system, do the following:

- 1 Make sure the power cord and speaker cords are connected correctly and firmly.
- 2 Find your problem in the troubleshooting checklist below and take the indicated corrective action.

If the problem persists after doing all of the above, consult your nearest Sony dealer.

If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following items.

- If your system has a voltage selector, is the voltage selector set to the correct voltage?
- Are you using only the supplied speakers?
- Is anything blocking the ventilation holes on the rear of the system?

After the STANDBY indicator [2] stops flashing, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

The display starts flashing as soon as you plug in the power cord even though you have not turned on the system.

- Press I/⏻ [1] (see step 8 of “Hooking up the system” on page 11).

The clock or timer setting is canceled.

- The power cord is disconnected or a power failure occurred. Redo “Setting the clock” (page 14). If you have set the timer, redo “Waking up to music” (page 69).

“-:-” appears in the display.

- A power failure has occurred. Set the clock (page 14) and timer settings (page 69) again.

There is no sound.

- Press VOLUME + [18] repeatedly.
- The headphones are connected to the PHONES jack.
- Check the speaker connections (page 9).
- The system is in pause mode, in Slow-motion Play or in Lock Search. Press ▷ [17] to start the playback.
- If the BLUETOOTH indicator [3] is lit or flashing when a function other than the Bluetooth function is selected, no sound is heard through the speakers or PHONES jack [10]. Press and hold BLUETOOTH OPR [4] for about 2 seconds until the BLUETOOTH indicator [3] turns off.

There

- A T unit or V
- Mov nois
- Con outl
- Inst avai
- The ti**
- Che corr
- Can (pag

The re

- Ren rem
- Mov
- Poir
- Rep
- Loc: fluo

There

- Red

The c persis

- Turn on a irreg spea

THEA' work.

- If di unit wor

There is severe hum or noise.

- A TV or VCR is placed too close to the unit. Move the unit away from the TV or VCR.
- Move the unit away from the source of noise.
- Connect the unit to a different wall outlet.
- Install a noise filter (commercially available) to the power cord.

The timer does not function.

- Check the timer setting and set the correct time (page 69).
- Cancel the Sleep Timer function (page 69).

The remote does not function.

- Remove the obstacles between the remote and the unit.
- Move the remote closer to the unit.
- Point the remote at the unit's sensor.
- Replace the batteries (R6/size AA).
- Locate the unit away from the fluorescent light.

There is acoustic feedback.

- Reduce the volume.

The color irregularity on a TV screen persists.

- Turn off the TV set once, then turn it on after 15 to 30 minutes. If the color irregularity still persists, place the speakers farther away from the TV set.

THEATRE SYNC function does not work.

- If distance between the TV and this unit is too far, this function may not work. Install the unit near the TV.

 
Speakers**Sound comes from one channel or unbalanced left and right volume.**

- Place the speakers as symmetrically as possible.
- Check that the speaker are connected securely and correctly.
- The source being played back is monaural.

Disc Player**The disc does not eject.**

- Consult your nearest Sony dealer.

Playback does not start.

- Check whether a disc is loaded.
- Wipe the disc clean (page 87).
- Reinsert the disc.
- Insert the disc that this system can play back (page 6).
- Insert the disc in the disc slot with the label side facing up.
- Remove the disc and wipe away the moisture on the disc, then leave the system turned on for a few hours until the moisture evaporates.
- Press  **17** to start playback.
- The region code on the DVD VIDEO does not match the system.
- Cancel the Custom Parental Control function (page 39).

The sound skips.

- Wipe the disc clean (page 87).
- Reinsert the disc.
- Move the unit to a place without vibration (e.g., on top of a stable stand).
- Move the speakers away from the unit, or place them on separate stands. When you listen to a track with bass sounds at high volume, the speaker vibration may cause the sound to skip.

Continued 

Playback does not start from the first track.

- The system is in Program Play or Shuffle Play mode. Turn off Program Play and Shuffle Play.
- Resume Play has been selected. Press ■ [17] twice. Then, press ▷ [17] to start playback (page 21).
- The title of DVD VIDEO or PBC menu automatically appears on the TV screen.

Playback starts automatically.

- The DVD VIDEO features an auto playback function.

Playback stops automatically.

- Some discs may contain an auto pause signal. While playing such a disc, the playback stops at auto pause signal.

You cannot perform some functions such as Stop, Lock Search, Slow-motion Play, Repeat Play, Shuffle Play or Program Play.

- Depending on the disc, you may not be able to do some of the operations above. Refer to the operating instructions supplied with the disc.

The DATA CD (MP3 audio track/JPEG image file) cannot be played back.

- The DATA CD is not recorded in a format that conforms to ISO 9660 Level 1, Level 2, or Joliet (expansion format).
- The DATA DVD is not recorded in a format that conforms to UDF (Universal Disk Format).
- The MP3 audio track does not have the extension “.MP3”.
- The data is not stored in the desired format.

- The MP3 audio tracks in format other than MPEG 1 Audio Layer 3 cannot be played back.
- The system can playback to a depth of 8 folders only.
- For MP3/JPEG files, check the “MODE (MP3, JPEG)” setting (page 30).
- The disc contains more than 200 albums.
- The album contains more than 600 tracks/files.
- For MP3/JPEG files, the album contains more than 300 tracks/files when the “MODE (MP3, JPEG)” is set to “AUTO”.
- The JPEG image file does not have the extension “.JPG” or “.JPEG”.
- The JPEG image file is larger than 3,072 (width) × 2,048 (height) in normal mode, or more than 2,000,000 pixels in Progressive JPEG mode which is mainly used on the Internet website.
- JPEG image files with a high width to length ratio cannot be played back.

The MP3 audio tracks take longer time to play back than others.

- After the system reads all the tracks on the disc, playback may take more time than usual if:
 - the number of albums or tracks on the disc is very large.
 - the album and track organization structure is very complex.

The disc title, album title, track title, CD-TEXT and DVD-TEXT characters do not appear properly.

- Use a disc that conforms to the ISO 9660 Level 1, Level 2, or Joliet (expansion).

- The disp
- U
- L
- N
- S
- Oth
- corr

The si when or MP

- Che setti
- Dep outp char ever Doll

The si you p CD, M

- Mak prof

Bluet

Pairin

- Mov the :

Conn

- The to c and con:
- Ena Blue
- The has ope:

- The character code that can be displayed by this system are as follows:
 - Upper cases (A to Z)
 - Lower cases (a to z)
 - Numbers (0 to 9)
 - Symbols (< > * +, - / [] _)
 Other characters may not be displayed correctly.

The surround effect is difficult to hear when you are playing a Dolby Digital or MPEG audio sound track.

- Check the speaker connections and settings (pages 9 and 47).
- Depending on the DVD VIDEO, the output signal may not be the entire 5.1 channel. It may be monaural or stereo, even if the sound track is recorded in Dolby Digital or MPEG audio format.

The sound loses stereo effect when you play back an AUDIO CD, VIDEO CD, MP3 audio track or DVD VIDEO.

- Make sure the system is connected properly.

Bluetooth device

Pairing cannot be done.

- Move the Bluetooth device closer to the system.

Connection is not possible.

 
- The Bluetooth device you attempted to connect does not support the A2DP and AVRCP profiles, and cannot be connected with the system.
- Enable the Bluetooth function of the Bluetooth device.
- The pairing registration information has been erased. Perform the pairing operation again.

- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.

The sound skips or fluctuates, or the connection is lost.

- The system and the Bluetooth device are too far apart.
- If there are obstacles between the system and your Bluetooth device, remove or avoid the obstacles.
- If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other Bluetooth device, or a microwave oven nearby, move them away.


The sound of your Bluetooth device cannot be heard on this system.

- Turn up the volume on your Bluetooth device first, and then adjust the volume using VOLUME +/- .

Severe hum or noise

- If there are obstacles between the system and your Bluetooth device, remove or avoid the obstacles.
- If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other Bluetooth device, or a microwave oven nearby, move them away.
- Turn down the volume of the connected Bluetooth device.

 The sound from the Bluetooth headphones is distorted.

- Turn down the volume of the system using VOLUME - . If your headphones have a volume control, also adjust the volume using the headphone's volume control.

Picture

There is no picture.

- Press FUNCTION +/- [15] repeatedly to select "DVD" (or press DVD ► [15] on the unit).
- Check that the system is connected securely.
- The video cord is damaged. Replace it with a new one.
- Make sure you connect the unit to the video input jack of your TV (page 10).
- Make sure you turn on the TV and operate the TV correctly.
- Press PROGRESSIVE [12] on the unit repeatedly to select "INTERLACE" if you connect your TV to the unit's COMPONENT VIDEO OUT jacks and your TV cannot accept progressive signal.
- You have set to progressive format but your TV cannot accept the signal in progressive format. In this case, set to interlace format (the default setting) (page 16).
- Even if your TV is compatible with progressive format (525p/625p) signals, the image may be affected when you set to progressive format. In this case, set to interlace format (the default setting) (page 16).
- Make sure you select the video input on the TV so that you can view the pictures from the system.
- Make sure you connect the unit and your TV using only the supplied video code.

Picture noise appears.

- Clean the disc.

- If video signal from your system has to go through your VCR to your TV, the copy-protection applied to some DVD VIDEO programs could affect the picture quality. If you still experience problems after checking your connections, connect your unit directly to your TV's S Video input (page 10).
- Keep the speaker cords away from the antennas.
- When you connect your TV to the COMPONENT VIDEO OUT jacks and play back video-based software in progressive signal format, some sections of the image may appear unnatural due to the conversion process.

The aspect ratio of the TV screen cannot be changed even though you can set "TV TYPE" under "SCREEN SETUP" in the Setup Menu when you play back a wide picture.

- The aspect ratio is fixed on your DVD VIDEO.
- If you connect the unit with the S Video cord, connect directly to the TV. Otherwise, you may not change the aspect ratio.
- Depending on the TV, you may not change the aspect ratio.

Messages do not appear on the TV screen in the language you want.

- Select the language you want for the on-screen display in "OSD" under "LANGUAGE SETUP" in the Setup Menu (page 44).

The language for the sound track cannot be changed.

- Multilingual tracks are not recorded on the DVD VIDEO being played back.
- The DVD VIDEO prohibits changing the language for the sound track.

The su chang

- Mul
on t
back
- The
the :

The su

- The
subt

The a

- Mul
DV)
- The
the :

Tuner

The r:

- The
a pc
thar
stati

There ("TUN displa

- Set t
(pag
- Con
(pag
- Finc
prov
the :
goo:
you
exte
- Kee:
Hor
from
corc
- The
sign
sure
- Loc:
the :

The subtitles language cannot be changed.

- Multilingual subtitles are not recorded on the DVD VIDEO being played back.
- The DVD VIDEO prohibits changing the subtitles.

The subtitles cannot be turned off.

- The DVD VIDEO prohibits turning off subtitles.

The angles cannot be changed.

- Multi-angles are not recorded on the DVD VIDEO being played back.
- The DVD VIDEO prohibits changing the angles.

Tuner

The radio presetting is canceled.


- The power cord is disconnected or a power failure occurred for longer than half a day. Redo "Presetting radio stations" (page 51).

There is severe hum or noise. ("TUNED" or "ST" flashes in the display)

- Set the proper band and frequency (page 51).
- Connect the antenna properly (page 10).
- Find a place and an orientation that provide good reception, then set up the antenna again. If you cannot obtain good reception, we recommend that you connect a commercially available external antenna.
- Keep the antennas, SiriusConnect Home tuner, and AC adaptor away from the speaker cords and the power cord to avoid picking up noise.
- The supplied FM lead antenna receives signals along its entire length, so make sure you extend it fully.
- Locate the antennas as far away from the speaker cords as possible.

- Try turning off the surrounding electrical equipment.

A stereo FM program cannot be received in stereo.

- Press FM MODE  repeatedly until "MONO" disappears from the display.

The system cannot receive satellite channels at all.

- Check that the XM Mini-Tuner and Home Dock or the SiriusConnect Home tuner are connected properly.
- The receiving condition is not good. Move to the place where the condition is good.
- Check that you subscribed to the desired satellite radio service (page XX).

Optional components

There is no sound.


- Refer to General item "There is no sound." (page 79) and check the condition of the system.
- Connect the component properly (page 76) while checking:
 - if the cords are connected properly.
 - if the cord plugs are firmly inserted all the way.
- Turn on the connected component.
- Refer to the operating instructions supplied with the connected component and start playing.

If the system still does not operate properly after performing the above measures or other troubles not described above occur, reset the system as follows:

- 1 Unplug the power cord.
- 2 Plug the power cord back in.
- 3 Press I/⏻ [1] to turn on the system.
- 4 Press ■ [17], DISPLAY [11] and I/⏻ [1] at the same time.
“RESET” appears in the display.

The system is reset to the factory settings except for DVD settings. You should set the settings you made, such as the preset stations, clock and timer.

To return the DVD setup to the default settings*, perform reset as follows:

- 1 Press ◻ DISPLAY [26] when playback is stopped.
The Control Menu appears on the TV screen.
- 2 Press ▲ or ▼ [30] repeatedly to select  (SETUP), then press ENTER [30].
- 3 Press ▲ or ▼ [30] repeatedly to select “RESET”, then press ENTER [30].
- 4 Press ▲ or ▼ [30] repeatedly to select “YES”, then press ENTER [30].
It takes a few seconds to complete. Do not press I/⏻ [1] when resetting the system.

* Except for Parental Control settings

Self-diagnosis Function

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the system from malfunctioning, a 5-character service number (e.g. C 13 50) with a combination of a letter and 4 digits appears on the TV screen and the front panel display. In this case, check the following table.

First 3 characters of the service number	Cause and corrective action
C 13	This disc is dirty. • Clean the disc with a soft cloth (page 87).
C 31	The disc is not inserted correctly. • Restart the system, then re-insert the disc correctly.
E XX (XX is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. • Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

When on the

When version: number: Although for So: operate the sy: again

When displaying the version number on the TV screen

When you turn on the system, the version number [VER.X.XX] (X is a number) may appear on the TV screen. Although this is not a malfunction and for Sony service use only, normal system operation will not be possible. Turn off the system, and then turn on the system again to operate.



Messages

One of the following messages may appear or flash in the front panel display during operation.

DVD player, Tuner

Cannot Play

- A disc that cannot be played back was inserted.
- A DVD VIDEO with unsupported region code was inserted.

Data Error

- The MP3 audio track and JPEG image file you want to play back is damaged.
- The MP3 audio track does not conform to MPEG 1 Audio Layer 3 format.
- The JPEG image file does not conform to DCF format.
- The MP3 audio track has the extension “.MP3” but it is not in MP3 format.
- The JPEG image file has the extension “.JPG” or “.JPEG” but it is not in JPEG format.

No Disc

There is no disc in the disc slot.

Not In Use

You have pressed a button whose operation is not allowed or invalid at that time.

OFF TIME NG!

The on time and off time of Play Timer is the same.

PASSWORD

Custom Parental Control or Parental Control is set.

Please Wait

The system is doing initialization process.

Reading

The system is reading information of the disc. Some buttons are not available.

Bluetooth device**Connect**

Bluetooth communication was established.

Disconnect

Communication with a Bluetooth device was cut off for some reason, or Bluetooth communication was ended.

Not Connect

Connection was not possible.

No Device

A pairable Bluetooth device was not found.

Not In Use

The system is not connected with a Bluetooth device using AVRCP.

PIN?

The system is asking for the passcode. For details, see "Using the Bluetooth function" (page 14).

Please Wait

The system is reading for usage of a Bluetooth device.

XM**ANTENNA**

The XM Mini-Tuner and Home Dock are not connected. Check all the connections.

CH ---

You have entered an invalid channel number. The channel to be tuned-in is void due to the change by the broadcast service, or the receiving condition is not good.

LOADING

The system have not finished receiving the entire audio data or text information. Some buttons are not available.

NO SIGNAL

The receiving condition is not good. Try moving the antenna to another location. Make sure the antenna points south. For details about the antenna location, see the instructions supplied with the XM Mini-Tuner and Home Dock.

OFF AIR

The channel is not broadcasted now.

UPDATING

You have not subscribed for XM or the channel is not authorized. You need to subscribe for XM.

There is no text information or time information in the channel. This is not an error. The text information may not be displayed depending on the system condition, for example, right after the system has received a channel.

SIRIU!**ANTE**

The ar
Check
Sirius
antenn

ACQU

The re
movin
For de
see the
Sirius

Call 8

You ha
chann

CHEC

The Si
not co
conne
again.
suppli
tuner

Invali

You ha
numb
void d
servic
good.

SUB U

You ha
the ch
to sub

UPDA

Chanr
Home

There
inform
an err
be disj
condit
system

SIRIUS

ANTENNA

The antenna is not connected properly. Check the connection between the SiriusConnect Home tuner and the antenna.

ACQUIRING

The receiving condition is not good. Try moving the antenna to another location. For details about the antenna location, see the instructions supplied with the SiriusConnect Home tuner.

Call 888-539-SIRI

You have not subscribed for the selected channel.

CHECK SIRIUS

The SiriusConnect Home tuner is not connected properly. Check all the connections, and then turn the system on again. Also make sure if the AC adaptor supplied with the SiriusConnect Home tuner is connected to a wall socket.

Invalid

You have entered an invalid channel number. The channel to be tuned-in is void due to the change by the broadcast service, or the receiving condition is not good.

SUB UPDATED

You have not subscribed for SIRIUS or the channel is not authorized. You need to subscribe for SIRIUS.

UPDATING

Channel information or SiriusConnect Home tuner firmware is being updated.

There is no text information or time information in the channel. This is not an error. The text information may not be displayed depending on the system condition, for example, right after the system has received a channel.

Precautions

Discs that this system CANNOT play

- Discs of non-standard shape (for example, heart, square, star)
- Discs that have adhesive tape, paper, or sticker attached to them
- Rental or used discs with attached seals where the glue extends beyond the seal
- Discs that have labels printed using ink that feels tacky when touched

Notes on discs

- Before playing, wipe the disc with a cleaning cloth from the center out to the edge.
- Do not clean discs with solvents, such as benzene thinner, or commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.
- Do not use discs encircled with a protection ring. This may cause a malfunction to the system.

On operating voltage

Before operating the system, check that the operating voltage of the unit is identical with the voltage of your local power supply.

On safety

- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall socket, even if the unit itself has been turned off.
- Completely disconnect the power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again.
- The AC power cord can be changed only by a qualified service facility.

Continued 

On placement

- Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the unit or speakers on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the DVD player, and cause the system to malfunction. In this situation, remove the disc, and leave the system turned on for about an hour until the moisture evaporates.

On heat buildup

- Heat buildup on the unit during operation is normal and is not cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not obstruct the ventilation holes.

On the speaker system

This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the speakers far away from the TV.

IMPORTANT NOTICE

Caution: If you leave a still video image or on-screen display image displayed on your TV for an extended period of time via this system, you risk permanent damage to your TV screen. Projection TVs are especially susceptible to this.

Cleaning the cabinet

Clean this system with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzine, or alcohol.

Specifications

Main unit (HCD-DH7BT/Compact Disc Receiver)

AUDIO POWER SPECIFICATIONS POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, both channels driven, from 120 – 10,000 Hz; rated 50 watts per channel minimum RMS power, with no more than 10% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

DIN power output (rated)

40 W + 40 W (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference)

Front speaker:

50 W + 50 W (6 ohms at 1 kHz, 10% THD)

Inputs:

AUDIO IN (stereo mini jack):

Voltage 620 mV, impedance

47 kilohms

Outputs:

DIGITAL OUT (square optical connector jack):

Wavelength 660 nm

VIDEO OUT (phono jack):

Max. output level 1 Vp-p, unbalanced,

Sync. negative load impedance

75 ohms

COMPONENT VIDEO OUT:

Y: 1 Vp-p, 75 ohms

Pb/Cb: 0.7 Vp-p, 75 ohms

Pr/Cr: 0.7 Vp-p, 75 ohms

S VIDEO OUT (4-pin/mini-DIN jack):

Y: 1 Vp-p, unbalanced, Sync. negative

C: 0.286 Vp-p, load impedance

75 ohms

PHONES (stereo mini jack):

accepts headphones of 8 ohms or

more

Bluetooth section

- Communication system:
Bluetooth Standard version 2.0
- Output:
Bluetooth Standard Power Class 2
- Maximum communication range:
Line of sight approx. 10 m¹⁾
- Frequency band:
2.4 GHz band (2.4000 GHz – 2.4835 GHz)
- Modulation method:
FHSS
- Compatible Bluetooth profiles²⁾:
A2DP (Advanced Audio Distribution Profile)
AVRCP (Audio Video Remote Control Profile)
- Supported codecs:
Receive: SBC (Sub Band Codec), MP3
Transmit: SBC (Sub Band Codec)
- ¹⁾The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.
- ²⁾Bluetooth standard profiles indicate the purpose of Bluetooth communication between devices.

Disc player section

- System:
Compact disc and digital audio and video system
- Laser:
Laser Diode Properties:
Emission duration: continuous
Laser Output*: Less than 1000 μ W
* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.
- Semiconductor laser:
(DVD: $\lambda=650$ nm, CD: $\lambda=790$ nm)
- Frequency response:
DVD (PCM 48 kHz): 2 Hz – 22 kHz (± 1 dB)
CD: 2 Hz – 20 kHz (± 0.5 dB)
- Video color system format:
NTSC

Tuner section

- FM stereo, FM/AM superheterodyne tuner
- FM tuner section
Tuning range:
87.5 – 108.0 MHz (100 kHz step)
- Antenna:
FM lead antenna
- Antenna terminals:
75 ohms unbalanced
- Intermediate frequency:
10.7 MHz
- AM tuner section
Tuning range:
530 – 1,710 kHz (with the interval set at 10 kHz)
531 – 1,710 kHz (with the interval set at 9 kHz)
- Antenna:
AM loop antenna
- Antenna terminals:
External antenna terminal
- Intermediate frequency:
450 kHz

Speaker

Front speaker (SS-CDH3)

- Speaker system:
2-way, bass-reflex type, magnetically shielded
- Speaker units:
Woofers: 12 cm, cone type
Tweeter: 4 cm, cone type
- Nominal impedance:
6 ohms
- Dimensions (w/h/d):
Approx. 140 × 250 × 211 mm
- Mass:
Approx. 2.4 kg net per speaker

General

Power requirements:

120 V AC, 60 Hz

Power consumption:

40 W

Dimensions (w/h/d) (Approx.):

190 × 141 × 272 mm

Mass (Approx.):

xx.x kg

Supplied accessories:

Remote Commander (1)

R6 (Size AA) batteries (2)

AM loop antenna (1)

FM lead antenna (1)

Video cord (1)

Front speaker pads (8)

Design and specifications are subject to change without notice.



- Standby power consumption: 0.5 W
- Halogenated flame retardants are not used in the certain printed wiring boards.


Guide to the Control Menu display

Use the Control Menu to select a function and to view related information. Press **DISPLAY** repeatedly to turn on, turn off or change the Control Menu display as follows:

Control Menu display 1 → Control Menu display 2 (appears for certain discs only) → Control Menu display off → Control Menu display 1 → ...





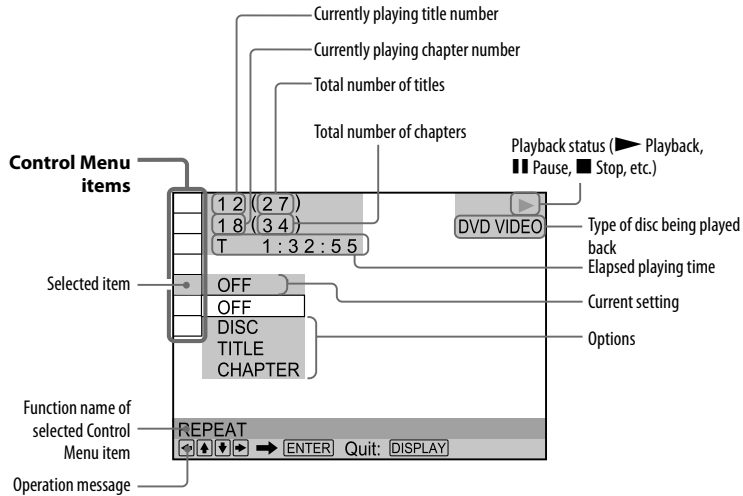





Control Menu display








The Control Menu display 1 and 2 will show different items depending on the disc type.
Example: Control Menu display 1 when playing a DVD VIDEO



Continued

List of Control Menu items

Item	Item Name, Relevant Disc Type, Function
	TITLE/SCENE/TRACK DVD-V DVD-VR VIDEO CD Selects the title, scene, or track to be played back.
	CHAPTER/INDEX DVD-V DVD-VR VIDEO CD Selects the chapter or index to be played back.
	TRACK C D DATA CD DATA DVD Selects the track to be played back.
	ORIGINAL/PLAY LIST DVD-VR Selects the playback sequence either to the originally recorded sequence or to the playlist created on the disc.
	TIME/TEXT DVD-V DVD-VR VIDEO CD C D DATA CD DATA DVD Checks the elapsed playing time and the remaining time. Input the time code for picture and music searching. Displays the text information on the CD-TEXT discs, DVD TEXT discs and MP3 audio tracks.
	PROGRAM VIDEO CD C D Play back the track in the order you want.
	SHUFFLE VIDEO CD C D DATA CD DATA DVD Play back the track in random order.
	REPEAT DVD-V DVD-VR VIDEO CD C D DATA CD DATA DVD Play back a disc repeatedly, the entire disc (all titles/all tracks/all albums) repeatedly or one title/chapter/track/album/file repeatedly.
	A/V SYNC DVD-V DVD-VR VIDEO CD DATA CD DATA DVD Sets the delay time between the sound and display.
	PARENTAL CONTROL DVD-V VIDEO CD C D Set to prohibit playback on this system.

Item	Item Name, Relevant Disc Type, Function
	<p>SETUP DVD-V DVD-VR VIDEO CD C D DATA CD DATA DVD</p> <p>QUICK Setup Use QUICK SETUP to choose the language of the on-screen display and the aspect ratio of the TV.</p> <p>CUSTOM Setup In addition to the Quick Setup setting, you can adjust other settings.</p> <p>RESET Returns the settings in "SETUP" to the default setting.</p>
	<p>ALBUM DATA CD DATA DVD</p> <p>Selects the album to be played back.</p>
	<p>FILE DATA CD DATA DVD</p> <p>Selects the JPEG image file to be played back.</p>
	<p>DATE DATA CD DATA DVD</p> <p>Displays the date when the picture was taken by a digital camera.</p>
	<p>INTERVAL DATA CD DATA DVD</p> <p>Specifies the duration for which the slides are displayed on the TV screen.</p>
	<p>EFFECT DATA CD DATA DVD</p> <p>Selects the transition effects to be used for changing slides during a slide show.</p>
	<p>MODE (MP3, JPEG) DATA CD DATA DVD</p> <p>Selects the data type: MP3 audio track (AUDIO), JPEG image file (IMAGE) or both (AUTO) to be played back when playing a DATA CD/DVD.</p>

Language code list

The language spellings conform to the ISO 639:1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1186	Scots Gaelic	1350	Malayalam	1513	Siswati
1028	Abkhazian	1194	Galician	1352	Mongolian	1514	Sesotho
1032	Afrikaans	1196	Guarani	1353	Moldavian	1515	Sundanese
1039	Amharic	1203	Gujarati	1356	Marathi	1516	Swedish
1044	Arabic	1209	Hausa	1357	Malay	1517	Swahili
1045	Assamese	1217	Hindi	1358	Maltese	1521	Tamil
1051	Aymara	1226	Croatian	1363	Burmese	1525	Telugu
1052	Azerbaijani	1229	Hungarian	1365	Nauru	1527	Tajik
1053	Bashkir	1233	Armenian	1369	Nepali	1528	Thai
1057	Byelorussian	1235	Interlingua	1376	Dutch	1529	Tigrinya
1059	Bulgarian	1239	Interlingue	1379	Norwegian	1531	Turkmen
1060	Bihari	1245	Inupiak	1393	Occitan	1532	Tagalog
1061	Bislama	1248	Indonesian	1403	(Afan) Oromo	1534	Setswana
1066	Bengali; Bangla	1253	Icelandic	1408	Oriya	1535	Tonga
1067	Tibetan	1254	Italian	1417	Punjabi	1538	Turkish
1070	Breton	1257	Hebrew	1428	Polish	1539	Tsonga
1079	Catalan	1261	Japanese	1435	Pashto; Pushto	1540	Tatar
1093	Corsican	1269	Yiddish	1436	Portuguese	1543	Twi
1097	Czech	1283	Javanese	1463	Quechua	1557	Ukrainian
1103	Welsh	1287	Georgian	1481	Rhaeto-Romance	1564	Urdu
1105	Danish	1297	Kazakh	1482	Kirundi	1572	Uzbek
1109	German	1298	Greenlandic	1483	Romanian	1581	Vietnamese
1130	Bhutani	1299	Cambodian	1489	Russian	1587	Volapük
1142	Greek	1300	Kannada	1491	Kinyarwanda	1613	Wolof
1144	English	1301	Korean	1495	Sanskrit	1632	Xhosa
1145	Esperanto	1305	Kashmiri	1498	Sindhi	1665	Yoruba
1149	Spanish	1307	Kurdish	1501	Sangho	1684	Chinese
1150	Estonian	1311	Kirghiz	1502	Serbo-Croatian	1697	Zulu
1151	Basque	1313	Latin	1503	Singhalese	1703	Not specified
1157	Persian	1326	Lingala	1505	Slovak		
1165	Finnish	1327	Laothian	1506	Slovenian		
1166	Fiji	1332	Lithuanian	1507	Samoan		
1171	Faroese	1334	Latvian; Lettish	1508	Shona		
1174	French	1345	Malagasy	1509	Somali		
1181	Frisian	1347	Maori	1511	Albanian		
1183	Irish	1349	Macedonian	1512	Serbian		

Code
2044
2047
2046
2057
2070
2079
2090
2092
2115

Parental Control area code list

Code	Area	Code	Area	Code	Area	Code	Area
2044	Argentina	2165	Finland	2362	Mexico	2149	Spain
2047	Australia	2174	France	2376	Netherlands	2499	Sweden
2046	Austria	2109	Germany	2390	New Zealand	2086	Switzerland
2057	Belgium	2248	India	2379	Norway	2528	Thailand
2070	Brazil	2238	Indonesia	2427	Pakistan	2184	United Kingdom
2079	Canada	2254	Italy	2424	Philippines		
2090	Chile	2276	Japan	2436	Portugal		
2092	China	2304	Korea	2489	Russia		
2115	Denmark	2363	Malaysia	2501	Singapore		

Additional Information

Bluetooth wireless technology

Bluetooth wireless technology is a short-range wireless technology linking digital devices, such as personal computers and digital still cameras. Using the Bluetooth wireless technology, you can operate the units involved within a range of about 10 meters.

The Bluetooth wireless technology is commonly used between two devices, but a single device can be connected to multiple devices.

You do not need wires to get connected as you do with a USB connection, and you do not need to place the devices face to face as you do with wireless infrared technology. You can use the technology with one Bluetooth device in your bag or pocket.

Bluetooth wireless technology is a global standard supported by thousands of companies. These companies produce products that meet the global standard.

Supported Bluetooth version and profiles

Profile refers to a standard set of capabilities for various Bluetooth product capabilities. This system supports the following Bluetooth version and profiles.

Supported Bluetooth version:

Bluetooth Standard version 2.0

Supported Bluetooth profiles:

A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio Video Remote Control Profile)

Effective communication range

Bluetooth devices should be used within approximately 10 meters (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions.

- When a person, metal object, wall or other obstruction is between the devices with a Bluetooth connection
- Locations where a wireless LAN is installed
- Around microwave ovens that are in use
- Locations where other electromagnetic waves occur

Effects of other devices

Bluetooth devices and wireless LAN (IEEE 802.11b/g) use the same frequency band (2.4 GHz). When using your Bluetooth device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, try the following remedies:

- Try connecting this system and Bluetooth mobile phone or Bluetooth device when you are at least 10 meters away from the wireless LAN equipment.
- Turn off the power to the wireless LAN equipment when using your Bluetooth device within 10 meters.

Effect

The ra
may ir
medic
may r
off the
mobil
the fol
— In h
at ge
flair
— Nea

Notes

- This comp as a r comr How depe: other perfo technr
- Sony for d: infor using
- Bluet guar: have
- Bluet must presc must wher speci the cl Bluet conn meth
- Nois cut o devic the c surro

Effects on other devices

The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system, Bluetooth mobile phone and Bluetooth device in the following locations:

- In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gasses may be present
- Near automatic doors or fire alarms

Notes

- This system supports security functions that comply with the Bluetooth specification as a means of ensuring security during communication using Bluetooth technology. However, this security may be insufficient depending on the setting contents and other factors, so always be careful when performing communication using Bluetooth technology.
- Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using Bluetooth technology.
- Bluetooth communication is not necessarily guaranteed with all Bluetooth devices that have the same profile as this system.
- Bluetooth devices connected with this system must comply with the Bluetooth specification prescribed by the Bluetooth SIG, Inc., and must be certified to comply. However, even when a device complies with the Bluetooth specification, there may be cases where the characteristics or specifications of the Bluetooth device make it impossible to connect, or may result in different control methods, display or operation.
- Noise may occur or the audio may cut off depending on the Bluetooth device connected with this system, the communications environment, or surrounding conditions.

Playable Bluetooth devices

You can check the websites below for the Bluetooth compatible devices.

For customers in the U.S.A.:

<<http://www.sony.com/shelfsupport>>

For customers in Canada:

<<http://www.sony.ca/ElectronicsSupport/>>

For customers in Europe:

<<http://sonydigital-link.com/dna>>

For customers in Latin America:

<<http://www.sony-latin.com/pa/info>>

For customers in Asia and Oceania:

<<http://www.css.ap.sony.com/>>

Glossary

Album

Section of a music or picture piece on a DATA CD or DATA DVD containing MP3 audio tracks, JPEG image files.

Chapter

Subdivision of a title on a DVD VIDEO. A title is composed of several chapters.

Dolby Digital

This sound format for movie theaters is more advanced than Dolby Surround Pro Logic. In this format, the surround speakers output stereo sound with an expanded frequency range and a subwoofer channel for deep bass is independently provided. This format is also called "5.1" because the subwoofer channel is counted as 0.1 channel (since it functions only when a deep bass effect is needed). All six channels in this format are recorded separately to realize superior channel separation. Furthermore, since all the signals are processed digitally, less signal degradation occurs.

DTS

Digital audio compression technology that the Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround. The surround channel is stereo and there is discrete subwoofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio. The good channel separation is realized because the all channel data is recorded discrete and processed in digital.

DVD VIDEO

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a AUDIO CD.

The data capacity of a single-layer and single-sided DVD VIDEO, at 4.7 GB (Giga Byte), is

7 times that of a AUDIO CD.

Furthermore, the data capacity of a dual-layer and single-sided DVD VIDEO is 8.5 GB, a single-layer and double-sided DVD VIDEO 9.4 GB, and a dual-layer and double-sided DVD VIDEO 17 GB.

The picture data uses the MPEG 2 format, one of the worldwide standards for digital compression technology. The picture data is compressed to about 1/40 of its original size. The DVD VIDEO also uses variable rate coding technology that changes the data to be allocated according to the status of the picture.

The audio data is recorded in Dolby Digital as well as in PCM, allowing you to enjoy more realistic audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD VIDEO.

DVD-RW

A DVD-RW is a recordable and rewritable disc that is the same size as a DVD VIDEO. The DVD-RW has two different modes: VR mode and Video mode. DVD-RWs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

DVD+

A DVDR and record the DVD

File

A JPEG CD or definit consist

Film b softw

DVD based image shown DVD or sitc (or 60

Interl

The In standa image frame betwe lines a lines, i

Multi-

Variou camer DVD

DVD+RW

A DVD+RW (plus RW) is a recordable and rewritable disc. DVD+RWs use a recording format that is comparable to the DVD VIDEO format.

File

A JPEG image file recorded on a DATA CD or DATA DVD. ("File" is an exclusive definition for this system.) A single file consists of a single image.

Film based software, Video based software

DVD VIDEOS can be classified as Film based or Video based software. Film based DVD VIDEOS contain the same images (24 frames per second) that are shown at movie theaters. Video based DVD VIDEOS, such as television dramas or sitcoms, displays images at 30 frames (or 60 fields) per second.

Interlace format (Interlaced scanning)

The Interlace format is the NTSC standard method for displaying TV images at 30 frames per second. Each frame is scanned twice-alternately between the even numbered scanning lines and then odd numbered scanning lines, at 60 times per second.

Multi-angle function

Various angles, or viewpoints of the video camera, for a scene are recorded on some DVD VIDEOS.

Multilingual function

Several languages for the sound or subtitles in a picture are recorded on some DVD VIDEOS.

Parental Control

A function of the DVD VIDEO to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback is completely prohibited, violent scenes are skipped or replaced with other scenes and so on.

Playback Control (PBC)

Signals encoded on VIDEO CDs (Version 2.0) to control playback. By using menu screens recorded on VIDEO CDs with PBC functions, you can enjoy playing simple interactive programs, programs with search functions, and so on.

Progressive format (sequential scanning)

In contrast to the Interlace format, the progressive format can reproduce 50 – 60 frames per second by reproducing all scanning lines (525 lines for the NTSC system, 625 lines for PAL system). The overall picture quality increases and still images, text and horizontal lines appear sharper. This format is compatible with the 525 or 625 progressive format.

Region Code

This system is used to protect copyrights. A region code is allocated on each DVD system or DVD VIDEO according to the sales region. Each region code is shown on the unit as well as on the disc packaging. The system can play back the discs that match its region code. The system can also play back discs with the "Ⓜ" mark. Even when the region code is not shown on the DVD VIDEO, the region limit may still be activated.

Scene

On a VIDEO CD with PBC functions, the menu screens, moving pictures and still pictures are divided into sections called "scenes".

Title

The longest section of a picture or a music piece on a DVD VIDEO; a movie, etc., for a picture piece on video software, or the entire album in audio software.

Track

Section of a picture or a music piece on a VIDEO CD, CD, or MP3. An album is composed of several tracks (MP3 only).

VIDEO CD

A compact disc that contains moving pictures.

The picture data uses the MPEG 1 format, one of the worldwide standards for digital compression technology. The picture data is compressed to about 1/140 of its original size. Consequently, a 12 cm VIDEO CD can contain up to 74 minutes of moving pictures.

VIDEO CDs also contain compact audio data.

Sound outside the range of human hearing are compressed while the sounds we can hear are not compressed. VIDEO CDs can hold 6 times the audio information of conventional AUDIO CDs.

There are 2 versions of VIDEO CDs.

- Version 1.1: You can play back only moving pictures and sounds.
- Version 2.0: You can play back high-resolution still pictures and enjoy PBC functions.

This system conforms to both versions.

Index

Numerics

16:9 69
4:3 LETTER BOX 69
4:3 OUTPUT 71
4:3 PAN SCAN 69

A

A2DP 41
AVRCP 41
A/V SYNC 41
ALBUM 29
Album 83
ANGLE 40
AUDIO 69
AUDIO DRC 72

B

BACKGROUND 70
Batteries 8
BLACK LEVEL 70
BLACK LEVEL
(COMPONENT OUT) 70
Bluetooth device address 41
BLUETOOTH OPR 41

C

Category 29
CATEGORY 29
CATEGORY MODE 29
CHAPTER 29
Chapter 83
COLD RESET 75
COLOR SYSTEM (VIDEO
CD) 70
COMPONENT VIDEO
OUT 19
Continuous play 22
Control Menu Display 89
Controlling the TV 53
CUSTOM 67
CUSTOM PARENTAL
CONTROL 60
CUSTOM SETUP 71

D

DATA CD 43, 47
DATA DVD 43, 47
DIMMER 59
DISPLAY 52
Dolby Digital 35, 83
DTS 35, 83
DVD 83
DVD+RW 84
DVD's menu 35
DVD-RW 37, 84

E

EFFECT 46

F

Fast forward 28
Fast reverse 28
FILE 29
File 84
Film based software 84
Freeze Frame 28
Front panel 87
Front panel display 38, 88

H

Handling discs 77

I

INDEX 29
Instant Advance 22
Instant Replay 22
INTERLACE 20
Interlace format 84
INTERVAL 46

J

JPEG 42, 43

L

Language Code List 86
LANGUAGE SETUP 69
Listening to other
components 23
Listening to the radio xx
Listening to TV sound 24
Locating a specific point by
watching the TV screen 28

M

MENU 69
Microphones 54
MODE (MP3, JPEG) 45
MOVIE/MUSIC 25
MP3 42, 43
Multi Session CD 7
Multi-angle function 40, 84
MULTI-DISC RESUME 72
Multilingual function 84

O

ORIGINAL 37
OSD 69
Other Component Hookup 21

Additional Information

Continued 

89^{GB}

P

PARENTAL CONTROL 61
Parental Control 84
Parental Lock 84
Pairing 41
PAUSE MODE 71
Passcode 41
Passkey 41
PBC Playback 49
PIN 41
PICTURE NAVI 30, 44
PLAY LIST 37
Play Timer xx
Playback Control (PBC) 84
Playing a CD/tape xx
Program Play 31
PROGRESSIVE AUTO 20
Progressive format 19, 84
PROGRESSIVE VIDEO 20

R

Radio 51
Radio Stations 50
Rear Panel 87
Region Code 7, 84
Remote 8, 53
Repeat Play 34
RESET 68
Resume Play 30

S

Satellite Radio 84
SIRIUS 84
SIRIUS ID 84
S VIDEO 18
Scan 28
SCENE 29
Scene 84
SCREEN SAVER 70
SCREEN SETUP 69
Searching 28
Selecting 25
SETUP 67
Setup Display 67, 93
Shuffle Play 33
SLEEP 58
Sleep Timer xx
Slide Show 45
Slow-motion Play 28
SUBTITLE 41, 69

T

THEATRE SYNC 53
TIME/TEXT 29
Timer xx
TITLE 29
Title 84
TRACK 29
Track 85
TRACK SELECTION 71
Troubleshooting 77
TV Hookup 18
TV TYPE 69

U


Unpacking 82
Usable discs 6

V

VIDEO CD 85

X

XM 85
XM Radio ID 85



Additional Information

Printed in China

<http://www.sony.net/>

CMT-DH7BT.GB.3-097-195-11(1)