

# Consumer of America Documentation Spring 2010

First Draft  
Review

Second

*3rd Draft*  
*Review/Legal*

Document Title: QSG , Safety Legal booklet  
Model Number(s): **YUME**

Project Coordinator: Rachel Gallegos  
Phone: 858-942-4091  
Fax: 858-942-9254  
E-mail: rachel.gallegos@am.sony.com

Please review this document(s) and return your changes no later than:  
Friday December 4, 2009@ 12PM (PST)

**APPROVED AS IS - No changes**

**OK, WITH CHANGES AS NOTED**

**Signature:** \_\_\_\_\_

**COMMENTS:**

...  
...  
...  
...  
...  
...  
...  
...  
...  
...

## SUPPORT AND REGISTRATION

### Helpful Hints & Troubleshooting.

- The unit should be installed near an easily accessible power outlet.

- To turn off or reset the unit, unplug it from the wall.

- Your unit should be placed within xd feet of your wireless access point for best performance.

- Your unit will automatically update the software from time to time.

- Recommended connection speed:  
Standard definition vide 2.5 Mbps,  
High-definition video 10Mbps.

### Produce Specifications

-Model name: Home Information Device HID-C10

-Power Requirements: AC 120V 0.6A 60Hz

-DC Input: 9.5V 1.5A 14.25W

-Dimensions: XX xYY XZZ inches (ss s yy s zz mm)

-Weight: NN lbs. (0.n kg)

### Registration and Support

To register your unit and access enhanced features, visit

<https://internet.sony.HID>

For further assistance, contact Sony at 866-918-2485

## PHOTOS /VIDEOS

### To add photos using Internet

1. Touch the **Home** button.
2. Click **Photos** and follow the on-screen instructions.

### To access video content

1. Touch the **Home** button.
2. Touch the video icon.
3. Flick to scroll the list of providers.
4. Touch a provider to start viewing video content.



### TIPS


- > You can access photos from your online album using Photobucket®. You must have an account to use this service.
- > Your device offers free video content from more than x providers.
- > You can play photos, music, and videos saved to a USB thumbdrive.

## INTERNET RADIO

### Connecting to an Internet radio station

Make sure you are connected to the Internet.

1. Click the **Home** button.
2. Click **Music**. The Music options displays.

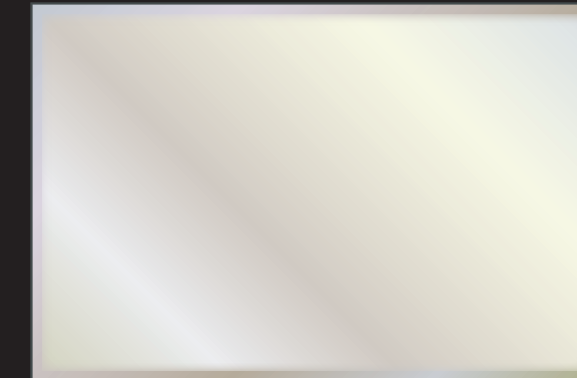

3. Select one of the Music features and follow the on-screen instructions.

### TIPS

- >
- >


## WIDGETS/ CHANNELS/ THEMES

**Widgets** are applications that deliver news, weather, entertainment, podcasts and more to your device.

**Channels** are like playlists and playlists are made up of a number of widgets you can customize directly on your device. You can also customize background **Themes** or use a default one.

### Setting up Widgets/ Channels/ Themes

1. Touch the **Home** menu button and select one of the features.
2. Follow the on-screen instructions.

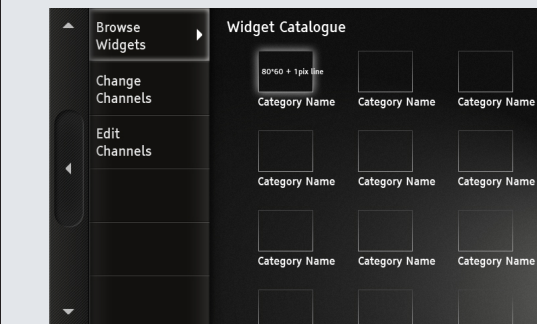

### TIPS

- > There are more than 1000 different widgets.
- > Your device comes pre-configured with one widget channel.
- > You can create additional channels for whatever widget you like.

**SONY**  
make.believe

03:26 PM

MON. JUL. 27. 2009

📶 A 07:00 am / Alarm name

**HID-C10**

San Diego



87°F

H:90° L:56°