



Digital Media Player
NWZ-A17



Use this manual when you have troubles or when you need to know how to use your WALKMAN®.

This “Help Guide” is an excerpted version that contains basic operations only. For details on other operations, see the full version by clicking the banner below. An Internet connection is required to see the full version.

[“Help Guide” \(Full\)](#)

For complete information on this Walkman, see the online “Help Guide” (Full).

How to Use

[Getting Started](#)



[Music](#)



[FM Radio](#)



[Bluetooth](#)



List of Topic

 
[How to Use](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



How to Use

Digital Media Player
NWZ-A17

Getting Started

[Parts and Controls](#)



 
[Power/Charging](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Music

[Playing Music](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation

SONY

Help Guide



How to Use

Digital Media Player
NWZ-A17

FM Radio

[Listening to FM Radio](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Bluetooth

[Connecting with Bluetooth Audio Devices](#)



 
[Listening to Sound Using a Bluetooth Audio Device](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

How to Use

Getting Started

Parts and Controls

- [Parts and controls](#)

Power/Charging

- [Turning the power on](#)

Music

Playing Music

- [Playing music](#)

FM Radio

Listening to FM Radio

- [Listening to FM radio](#)

Bluetooth

Connecting with Bluetooth Audio Devices

- [Connecting with a paired Bluetooth audio device](#)
- [Disconnecting a Bluetooth audio device](#)

Listening to Sound Using a Bluetooth Audio Device

- [Listening to sound using a Bluetooth audio device](#)

[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Before use

To make full use of this content, please read the following notes thoroughly. Please note that they are subject to change without prior notice.

Recommended system environment

The following system environments are recommended for displaying this content. You may not be able to view the content on other system environments.

For viewing on a computer

Recommended browser

- With Microsoft Windows
 - Microsoft Internet Explorer 8 or later
 - Mozilla Firefox: latest version
 - Google Chrome™ : latest version
- With Apple Mac OS
 - Apple Safari Ver. 5 or later
 - Mozilla Firefox: latest version
 - Google Chrome : latest version

For viewing on a smartphone or tablet

Basic operation has been confirmed on the standard browser for the noted devices running the following operating systems.

- Android™ 2.3 or later: Xperia series, Walkman running Android
- iOS 4 or later: iPhone, iPod touch, iPad

JavaScript

JavaScript is used with this content for viewing convenience. If JavaScript is disabled in your web browser settings, the content may not operate properly or it may not be displayed correctly.

Style Sheets

Cascading Style Sheets are used in designing this content. Page layout may not be as intended if you view the content with style sheets disabled or on a web browser that is not compatible with style sheets. However, operation will not be affected.

Cookies

This content uses cookies. To use services incorporating cookies, you need to set your browser to allow cookies.

 
Handling of personal information obtained from websites

Sony may use cookies, web beacons or similar technologies to make statistical analysis of customers' usage of this content while preserving anonymity.

Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Parts and Controls

[Parts and controls](#)

 
This section introduces the functions of buttons, jacks, and other parts of your Walkman.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Power/Charging

Turning the power on

Turn on the power to start your Walkman.



Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Playing Music

[Playing music](#)

 
Play music that you imported from your computer to your Walkman.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Listening to FM Radio

[Listening to FM radio](#)

Listen to FM radio on your Walkman.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Connecting with Bluetooth Audio Devices

[Connecting with a paired Bluetooth audio device](#)

Connect your Walkman with a Bluetooth audio device if they are paired but not connected with each other.



[Disconnecting a Bluetooth audio device](#)

 
End the connection between your Walkman and a Bluetooth audio device.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Listening to Sound Using a Bluetooth Audio Device

[Listening to sound using a Bluetooth audio device](#)

Once paired and connected, you can listen to the sound of your Walkman wirelessly through the Bluetooth audio device.



[Notes on use](#)

 
en-11(1)

Copyright 2014 Sony Corporation


 Digital Media Player
 NWZ-A17

 Parts and controls

This section explains the functions of buttons, jacks, and other parts of your Walkman.

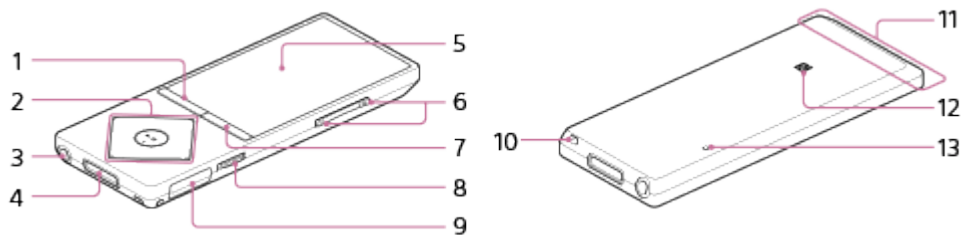

1. BACK/HOME button

Press to go up one list screen level or to return to the previous menu.

Press and hold to display the Home menu.

2. 5-way button

 
Press to start playback or navigate through the on-screen menus of your Walkman.

There is a tactile dot on the ► button to help you operate the buttons without looking.

3. Headphone jack (*1)

Insert the headphone plug until it clicks into place.

Sound will be impaired if the headphones are not connected properly.

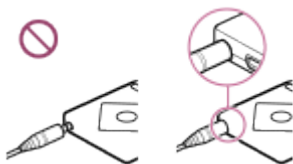

4. WM-PORT jack

Connect the USB cable (supplied) or other accessories that support WM-PORT (not supplied).

5. Display

6. VOL (Volume) +/- button

Press to adjust the volume.

There is a tactile dot on the + button to help you operate the buttons without looking.

7. OPTION/PWR OFF (Option/Power off) button

Press to display the option menu.

Press and hold to turn the screen off and enter standby mode.

8. HOLD switch

Set the HOLD switch to protect your Walkman against accidental operation during transport.

 
Slide the HOLD switch in the direction of the arrow ➡ to disable all operation buttons. Slide the HOLD switch to the opposite position to release the HOLD function.

9. microSD card slot
Insert a microSD card until it clicks into place to increase available memory for your Walkman.
10. Strap hole
Use to attach a strap (not supplied).
11. Built-in Bluetooth antenna
Do not cover the antenna part with your hands or other object when a Bluetooth connection is active. Doing so may interrupt the connection.
12. N-mark
Touch a Bluetooth device equipped with the NFC feature to this mark to connect it to your Walkman.
13. RESET button
Press the RESET button with a small pin, etc. to reset your Walkman.

(*1) You cannot listen to wired headphones while your Walkman is connected to a device via Bluetooth. Disconnect the Bluetooth connection to use wired headphones.

Installing your Walkman in a peripheral device such as a cradle

You may need to use an adaptor to install your Walkman in a peripheral device such as a cradle. In this case, use the adaptor (Type A) supplied with the device.

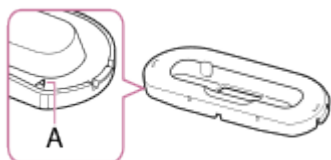

Related Topic

- [Turning the power on](#)

Notes on use

 
en-11(1)

Copyright 2014 Sony Corporation

Digital Media Player
NWZ-A17

Turning the power on

Turn on the power to start your Walkman.

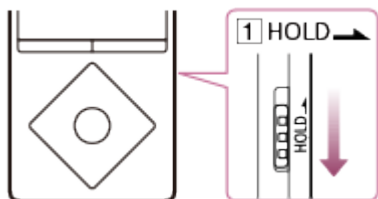

1. Slide the switch (1) to unlock your Walkman.
2. Press any button.

Hint

- If there is no operation, the screen will be turned off. To turn on the screen, press any button.
- Set the date and time before you start to use your Walkman.
- If there is no operation for an extended period, your Walkman will be turned off automatically. When you turn on the Walkman again, it will take a while before the power is on.

Related Topic

- [Parts and controls](#)

[Notes on use](#)

en-11(1)

 
Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Playing music

Play music imported to your Walkman.

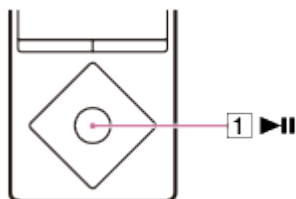

1. From the Home menu, select [Music].
2. Select the desired items until a song list appears, then select the desired song.
3. Playback starts and the music playback screen is displayed. To pause playback, press the button ().

Note

- If there is no operation for an extended period while paused, your Walkman will be turned off automatically. In this case, turn on the power before step 1 above.
- Depending on the way of transferring songs to your Walkman, songs might be played in different order from the song order on your computer. When you specify the song order on your Walkman, edit the playlists with a function of Media Go or iTunes and then transfer them to your Walkman.

Notes on use

en-11(1)

 
Copyright 2014 Sony Corporation



Digital Media Player
NWZ-A17

Listening to FM radio

Listen to FM radio on your Walkman. You cannot listen to FM radio without connecting headphones, as the cord of these headphones works as the antenna. Extend the cord as long as possible.

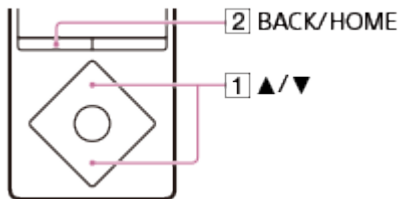

1. From the Home menu, select [FM Radio].
2. Press the button () to select the desired frequency.
To turn off FM radio, press the button ()

Note

- The sound quality settings are not applied while listening to FM radio.
- You cannot listen to FM radio while your Walkman holds Bluetooth connection.

[Notes on use](#)

en-11(1)



Copyright 2014 Sony Corporation





Digital Media Player
NWZ-A17

Connecting with a paired Bluetooth audio device

Connect your Walkman with a Bluetooth audio device if they are paired but not connected with each other. You will need to do this when the connection is lost, for example, by turning off either the Walkman or the Bluetooth audio device.

1. Turn on the Bluetooth audio device you want your Walkman to connect with and put the device in connection stand-by status.
Refer to the operating instructions supplied with the Bluetooth audio device for details.
2. From the Home menu of your Walkman, select  [Bluetooth].
3. Select [Connect to Audio Device].
If the Bluetooth audio device is not paired with your Walkman, pair it first.
4. Select the Bluetooth audio device to connect with.
The [Processing Connection] screen is displayed.
5. Confirm that the Bluetooth audio device is connected with your Walkman.
When the connection is made successfully,  is displayed in the information area of your Walkman and next to the icon of the connected Bluetooth audio device.

About the Bluetooth status icons

-  : Bluetooth function is on but no devices are connected.
-  : Bluetooth function is on and your Walkman is connected with other Bluetooth device(s).
- No icon: Bluetooth function is off.


Hint

- The behavior of your Walkman while connected with a Bluetooth audio device is as follows.
 - If you connect a USB charger (not supplied), your Walkman is charged while holding the Bluetooth connection.
 - If you make a USB connection, USB connection is prioritized.
- If multiple names for a Bluetooth audio device are displayed, check the BD address of the Bluetooth audio device you want to connect with. Refer to the operating instructions supplied with the Bluetooth audio device for details on BD address.



Disconnecting a Bluetooth audio device

Disconnect the connection between your Walkman and a Bluetooth audio device.

1. From the Home menu, select  [Bluetooth].
2. Select [Disconnect Audio Device].

Note

- Bluetooth connection is disconnected automatically in the following cases:
 - The remaining battery power of your Walkman is low.
 - The remaining battery power of your Walkman is depleted.
 - Your Walkman is connected to a computer via USB.
 - About 24 hours have passed without playing back any content such as music while your Walkman is holding a Bluetooth connection.
- When you end the Bluetooth connection using the Bluetooth audio device, your Walkman enters the connection standby mode. If you do not make another Bluetooth connection within 5 minutes after that, the Bluetooth function of the Walkman turns off automatically.
- A Bluetooth connection is held for 24 hours even when no content is played back during that time. However, the length of the time may be shorter depending on the Bluetooth audio device.

Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Listening to sound using a Bluetooth audio device

Once paired and connected, you can listen to the sound of your Walkman wirelessly through the Bluetooth audio device.

1. Confirm that the Bluetooth connection between the Bluetooth audio device and your Walkman is active.
 - is displayed in the information area of your Walkman.
2. Play music on your Walkman.

Hint

- You can change the setting so the Bluetooth audio device is automatically connected when you turn on your Walkman.
- The following operations are available with some Bluetooth audio devices. The available operations vary depending on the Bluetooth audio device you use.
 - Play/Pause
 - Fast forward/rewind
 - Go to the beginning of the next song
 - Go to the beginning of the current song
 - Skip to the previous/next folder
 - Adjust volume

Your Walkman may not be operated depending on the connection status.

- The behavior of your Walkman while connected with a Bluetooth audio device is as follows.
 - Sound is not emitted from the headphones connected to the headphone jack.
 - Operation sounds are not emitted from the Bluetooth audio device even with the operating sound setting set to on.
 - If you connect speakers to the WM-PORT jack, sound is emitted from the Bluetooth audio device but not from the speakers.

Note

- Sound is not emitted from the headphones (supplied) connected to the headphone jack or an accessory connected to the WM-PORT jack while a Bluetooth connection is active.
- You cannot listen to FM radio while a Bluetooth connection is active. Use the headphones to listen to FM radio.
- You cannot record while a Bluetooth connection is active.
- Sound may skip depending on the usage environment or the settings. Take the following measures to reduce sound skipping.
 - Place your Walkman and the Bluetooth audio device close together.
 - Set [Wireless Playback Quality] to [Prioritize Connection].

-
- Set [Dance/Karaoke/Language] to [Off].
- Set [DPC (Speed Control)] to [Off].

Notes on use

en-11(1)

Copyright 2014 Sony Corporation