

SONY

4-672-272-11 (1)

Read This First

Operating Instructions

1 Checking the package contents

2 Setting your Sony CLIÉ™ handheld

3 Basic operations of your Sony CLIÉ™ handheld

4 Using your CLIÉ™ handheld with your computer

5 Have a try

6 Using applications

Additional information

Sony CLIÉ™ handheld components

Personal Entertainment Organizer
PEG-TG50

CLIÉ™

© 2003 Sony Corporation

Bluetooth

MEMORY STICK

About this manual

This manual provides an overview of your CLIÉ™ handheld's features including information about setting up your CLIÉ™ handheld and what you can do with your CLIÉ™ handheld.

Checking the package contents

Page 11

Make sure that all the accessories are supplied in the package.

Setting your Sony CLIÉ™ handheld

Page 13

Be sure to charge your CLIÉ handheld before you start using it for the first time.

Basic operations of your Sony CLIÉ™ handheld

Page 21

Learn about the basic operations of your CLIÉ handheld.

Using your CLIÉ™ handheld with your computer

Page 29

Use your CLIÉ handheld with your computer.

Have a try

Page 37

Learn about your CLIÉ handheld's features.

Using applications

Page 60

Learn about the applications supplied with your CLIÉ handheld.

Additional information

Page 78

Explains the troubleshooting and notes on use, etc.


Sony CLIÉ™ handheld components

Page 88


Learn about the parts of your CLIÉ handheld and other accessories.

The following manuals are attached to your CLIÉ handheld.
Refer to the following together with this manual.


Before you start using (This manual)

	<p>READ THIS FIRST (Operating Instructions)</p> <p>Explains following:</p> <ul style="list-style-type: none"> • Setting your CLIÉ handheld and computer • Basic operation • What you can do with the applications
---	---


- When you want to be more familiar with the basic operation of the CLIÉ handheld
- When you want to change the CLIÉ setting

	<p>Handbook</p> <ul style="list-style-type: none"> • When using CLIÉ handheld for the first time The basic features and operations are explained in detail. • CLIÉ handheld advanced operations The convenient features and how to make full use of your CLIÉ handheld are explained in detail.
---	--

- When you want to be more familiar with how to use the supplied applications
- When you want to install the applications you like

	<p>CLIÉ Application Manual (HTML format: Start up on a computer)</p> <p>The manual explains about how to use the supplied applications in detail. This manual will be automatically installed in the computer when your connect your CLIÉ handheld to the computer. For details on using the manual, refer to "Using CLIÉ Application Manual" on page 60 in this manual.</p>
--	--

- When you face problems

	<p>Troubleshooting Q&A</p> <p>The manual helps in solving problems that you may face while using your CLIÉ handheld.</p>
---	---

Before use

Caution

IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING WITHOUT LIMITATION LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

On the supplied software

- Copyright laws prohibit reproducing the software or the software manual in whole or in part or renting the software without the permission of the copyright holder.
- In no event will SONY be liable for any financial damage or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this product.
- In the event a problem occurs with this software as a result of defective manufacturing, SONY will replace it at SONY's option or issue a refund. However, SONY bears no other responsibility.
- The software provided with this product cannot be used with equipment other than that which it is designated for use with.
- Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.
- The software library incorporated in CLIÉ handheld is based in part on the work of the Independent JPEG Group.

NOTES

- Sony does not support third-party add-on applications. If you are having a problem with a third-party application, please contact the developer or publisher of that software.
- The illustrations in this manual may differ from the actual software.
- Explanations in this manual assume that you are familiar with basic operations of Windows®. For how to use your computer and operating system, please refer to their respective manuals.

Program © 2002 Sony Corporation, © 2002 Palm, Inc., or its subsidiaries. All rights reserved.
Documentation © 2002 Sony Corporation

CAUTION

Please contact your nearest Sony dealer regarding any problems you are experiencing with your Sony product.

On the trademarks

Before using your CLIÉ handheld, be sure to read the accompanying End-User's License Agreement. Sony, CLIÉ, "Memory Stick", "Memory Stick Duo", "Memory Stick PRO", "MagicGate Memory Stick", Jog Dial, PictureGear Studio and their logos are trademarks of Sony Corporation. Palm OS, Graffiti, HotSync and the HotSync logo are registered trademarks of Palm, Inc. and its subsidiaries, and Palm, Palm Powered, Palm Desktop, the Palm logo, the Palm Powered logo and Palm OS5 logo are trademarks of Palm, Inc and its subsidiaries. Microsoft and Windows are registered trademarks of Microsoft Corporation. Pentium is registered trademarks of Intel Corporation. Intellisync is a trademark of Pumattech, Inc. Adobe and Acrobat are trademarks of Adobe Systems Incorporated. Bluetooth is a trademark that is owned by the proprietor and used by Sony under license. QuickTime and the QuickTime logo are trademarks of Apple Computer, Inc. NetFront is a trademark of ACCESS CO, Ltd. Picstel and the Picstel logo are trademarks of Picstel Technologies, Ltd. Contains Macromedia® Flash™ Player technology by Macromedia, Inc., Copyright © 1995-2001 Macromedia, Inc. All rights reserved. Macromedia, Flash and Macromedia Flash are trademarks or registered trademarks of Macromedia, Inc. in the United States and internationally. This product includes fonts owned by TypeBank Co., Ltd. under license. All other trademarks are trademarks of their respective owners.

WARNING

- In some situations or environments, the use of the Bluetooth™ technology might be restricted by the proprietor of the building or responsible representatives of the organization, for example on board of airplanes, in hospitals or in any other environment where the risk of interference with other devices or services is perceived or identified as harmful.
- If you are uncertain about the policy applying to the use of Bluetooth™ technology in a specific organization or environment, you are encouraged to first ask for authorization prior to switching it on.
- Consult your physician or the manufacturer of personal medical devices (pacemakers, hearing aids, etc.) regarding any restrictions on the use of Bluetooth™ technology.
- **The Bluetooth™ function equipped with CLIE handheld is valid only in those countries where CLIE handheld is sold.**
- Turn off your CLIE handheld to quit using the Bluetooth™ function.

Safety and Regulations

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

For customers in Australia, Hong Kong, Malaysia, Mexico, New Zealand, Singapore, Taiwan and Thailand

The socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty on this equipment.

WARNING

Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

For customers in the U.S.A. and Canada

Owner's Record

The model number and serial number are located on the back of the product. Record the model number and the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____
Serial No. _____

The socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty on this equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by rotating the equipment off and on, the user is encouraged to try to correct the interference using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you have a question about this product, call the Sony Customer Information Center at keep on next line 1-877-760-7669; or write to the Sony Customer Information Center at 12451 Gateway Boulevard, Fort Myers, FL 33913. The number below is for FCC-related matters only.

Declaration of Conformity

Trade Name: SONY
Model No.: PEG-TG50/U
Responsible Party: Sony Electronics Inc.
Address: 680 Kinderkamack Road, Oradell, NJ 07649 USA
Telephone No.: 201-930-6972
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit

<http://www.rbrcc.org/>



Caution: Do not handle damaged or leaking lithium-ion batteries.

Radio-Frequency Exposure Statement

Users are not permitted to make changes or modify the system in any way.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Le terme «IC:» avant le numéro d'homologation ne signifie seulement que les normes d'Industrie Canada ont été respectées.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, il doit être utilisé à l'intérieur et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal. Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence.

IMPORTANT NOTICE:

To comply with FCC RF exposure compliance requirements the antenna (s) must not be co-located or operating in conjunction with any other antenna or transmitter. Users are not permitted to modify this transmitter device. Any unauthorized modification made on this device could avoid the user's authority to operate the device.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website: www.hc-sc.gc.ca/rpb

L'installateur du présent matériel radio doit s'assurer que l'antenne est située ou pointée de manière à ce que cette dernière n'émette pas de champs radioélectriques supérieurs aux limites spécifiées par Santé Canada pour le grand public; consulter le Code de sécurité 6, disponible sur le site Web de Santé Canada, à l'adresse suivante: www.hc-sc.gc.ca/rpb

Recycling Lithium-Ion batteries

The following information for batteries recycle is ONLY intended for customers in the U.S.A. and Canada.

Lithium-Ion batteries are recyclable.

 
 
You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit the website (<http://www.rbr.org/>).

When you dispose of a CLIÉ handheld, remove the battery for recycling.

How to remove a rechargeable button battery

- 1 Remove the screw from the side of the CLIÉ handheld with a Phillips screwdriver.
- 2 Remove the battery cover.

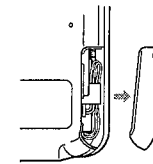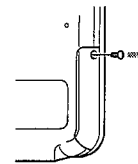

- 3 Remove the jack of the battery cord from your CLIÉ handheld.
- 4 Pull the ribbon attached to the battery.

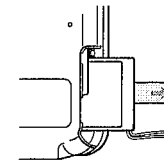 
 


Table of Contents

Checking the package contents	11
Setting your Sony CLIÉ™ handheld	13
Charging your CLIÉ handheld	13
Performing the initial settings after turning on	16
Basic operations of your Sony CLIÉ™ handheld	21
Start an application	21
Entering data	25
Restarting your Sony CLIÉ handheld	26
Using your CLIÉ™ handheld with your computer	29
Install the software on your computer	29
Connect the cradle to your computer	32
Enter a user name for your CLIÉ handheld	33
Synchronizing data between your CLIÉ handheld and computer (HotSync®)	35
Have a try	37
Managing schedules (Date Book)	37
Managing addresses and telephone numbers (Address)	40
Exchanging Date Book and Address data between your CLIÉ handheld and computer	42

Viewing computer documents on your CLIÉ handheld (PicSel Viewer for CLIE)	43
Recording a voice memo (Voice Recorder)	45
Playing back handwriting memos, voice memos or image files	47
Take image files or movie files created with other devices with your CLIÉ handheld	49
Take music with you	51
Using the Bluetooth™ function	53
Connecting to the Internet	59
Using applications	60
Using CLIÉ Application Manual	60
Installing applications you want on your CLIÉ handheld	62
Introducing add-on applications	64
Additional information	78
Preventing problems	78
Solving problems	79
Customer Support and Customer Registration	80
Notes on use	81
Specifications	84

Sony CLIÉ™ handheld components	88
Front panel	88
Side panel	90
Back panel	92
Upper panel	92

Inserting/removing "Memory Stick" media	93
Locating cradle components	100

INDEX	101
------------------------	------------

Notes on this manual

- Screen pictures in this manual may be different from the actual displays in the supplied software.
- Contents of this manual are written for users with knowledge of using Windows. For details about computer operation, refer to the manual for the computer.

About display (LCD)

The LCD of your CLIÉ handheld is designed with precision technology. However, some pixels may not work or may be permanently lit in some cases. Also, brightness of the display may be inconsistent depending on the angle of view. These are caused by the nature of the LCD and do not indicate a malfunction.

Please note that Sony does not guarantee for replacement or return in cases like those. Do not keep the LCD directed toward the sun for long time. It may cause a malfunction. Please be careful when you locate it outdoors or next to a window.

No guarantee for lost data or damaged data

Sony does not provide any guarantee for lost data or damaged data caused by improper operations.

Copyrights

Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

Continued on next page

Checking the package contents

 
Please check the accessories in the package before you start.

CLiÉ handheld (1)




For details on the protective cover, refer to page 99.


AC power adapter (1) (including AC cord)

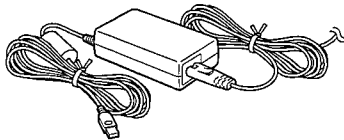


Installation CD-ROM

 

Cradle (1)

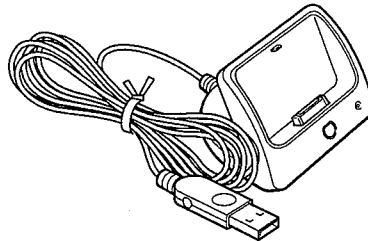 

Stylus (1)

 


The stylus is stored in your CLiÉ handheld at the factory.

Plug adapter (1)



 Plug adapter attachment (1) Strap (1)



Refer to the illustration below to attach the strap.

Read This First - Operating Instructions (1, this manual)

Troubleshooting Q&A (1)

Graffiti Card (1)

 
Software license agreement (1)

Other printed materials

Make sure that the package contains all of the listed accessories. If any item is missing, contact the Sony Customer Information Service Center or a Sony dealer.

Use the strap to avoid dropping your CLiÉ handheld

Attaching the strap

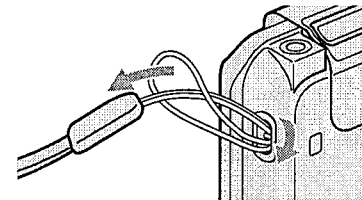

Checking the package contents

Continued on next page

 
Setting your Sony CLIÉ™ handheld

Perform the following before setting your CLIÉ handheld.

- 1 Charging your CLIÉ handheld
- 2 Performing the initial setting after turning on


Step 1: Charging your CLIÉ handheld

Before you use your CLIÉ handheld for the first time, be sure to charge the battery.

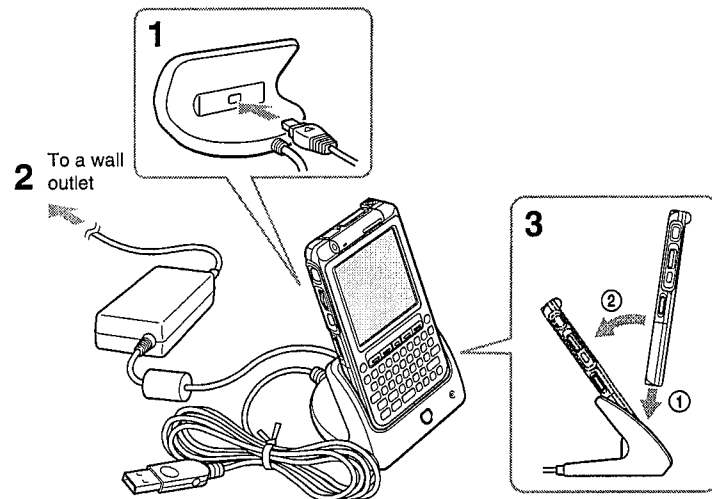


Continued on next page

- 1 Connect the AC adapter to the cradle's AC adapter connector.
- 2 Connect the AC adapter to a wall outlet.
- 3 Insert your CLIÉ handheld at an angle into the cradle and lay it back to fit into place.
The CHG LED indicator of your CLIÉ handheld and the Cradle LED turn on and charging starts.

Also, the Battery icon turns to .

It takes about five hours for your CLIÉ handheld to be fully charged for the first time.

The CHG LED turns off when charging is complete, but the Cradle LED stays on.

The Battery icon turns to  when you disconnect your CLIÉ handheld from the cradle.

Tip

Subsequent charges will require less time if you charge your CLIÉ handheld frequently.

Notes

 
- If the battery of your CLIÉ handheld is fully discharged, all data stored on the memory in your CLIÉ handheld will be lost.
- While charging your CLIÉ handheld, do not connect external devices, such as a computer, to the headphone jack of your CLIÉ handheld, as a malfunction may occur.

Charging your CLIÉ handheld without a cradle


You can charge your CLIÉ handheld using a plug adapter.

Attaching the plug adapter

Connect the AC power adapter to the DC IN connector of the plug adapter (①), then connect the plug adapter to the interface connector of your CLIÉ handheld (②).

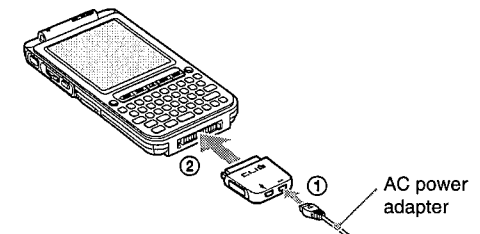


 Secondly, connect the AC cord to the AC power adapter, then plug into the wall outlet.

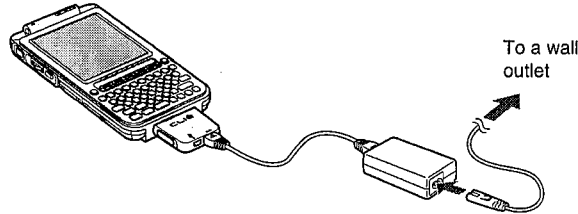

Removing the plug adapter

 
Remove the plug adapter (2) pushing the both side of the plug adapter (1).

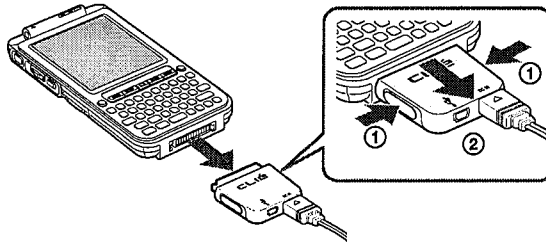

Using the supplied plug adapter attachment

Attaching the plug adapter attachment

 Follow the illustration to use the supplied plug adapter attachment.

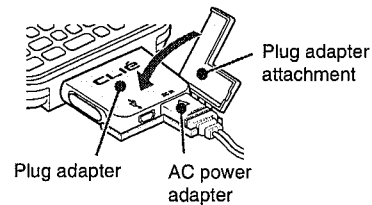


Setting your Sony CLIÉ™ handheld


Step 2: Performing the initial settings after turning on

The first time you turn on your CLIÉ handheld, you are required to make initial settings. Follow the on-screen instructions to configure the initial settings and to get accustomed to operations on your CLIÉ handheld.

 - 1 Slide down the POWER/HOLD switch.
Your CLIÉ handheld turns on, and the **Welcome** screen is displayed.

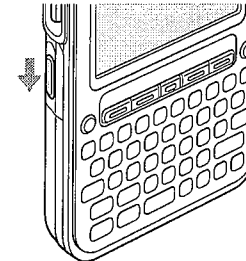

Slide down the POWER/HOLD switch

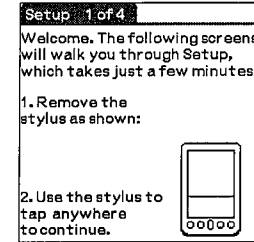 


Tip

If you cannot turn on your CLIÉ handheld

- Did you charge your CLIÉ handheld following the steps on page 13?
- ◆ For details, refer to the supplied manual "Troubleshooting Q&A."
- If you cannot turn on your CLIÉ handheld even after charging it, perform a soft reset (page 26).

 - 2 Take out the Stylus.
You can use the stylus to enter data or to select applications.

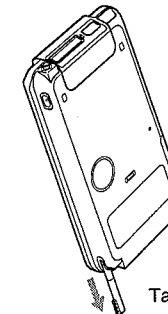

Take out the Stylus

Continued on next page

 
Notes

- Always use the point of the stylus for tapping or making strokes on the CLIE™ handheld screen. Never use a real pen, pencil, or other sharp object to write on the screen.
- When you put the stylus back in its holder, push it in until it clicks into place.


3 Press lightly on the screen with the stylus.

This action is called “tapping.”

The **Setup** screen for digitizer calibration is displayed.

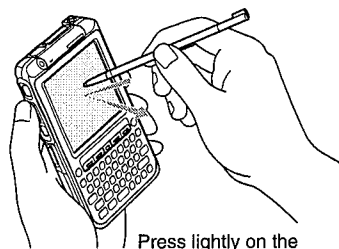

Press lightly on the screen (Tap)

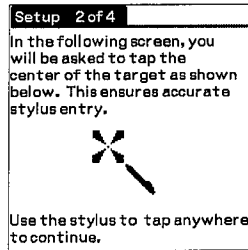 


4 Following the on-screen instruction, tap the center of the displayed mark.

Also tap the center of the following displayed targets in the lower right corner and the center of the screen.

Note

 If the digitizer is not configured correctly, the scroll bar may not operate properly, “tapping” may not work as expected, or other problems may occur. For re-configuring the digitizer, refer to “Customizing your Sony CLIE™ handheld (Preferences): Adjusting the Digitizer” in the “Handbook.”

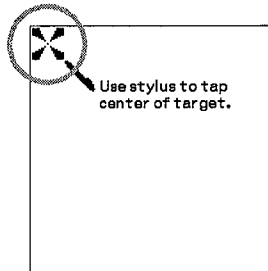

After calibration is completed, a screen for setting the time and date appears.



Setting your Sony CLIE™ handheld

 
5 Tap the **Set Time** box.

The **Set Time** screen is displayed.

Tip


You can reconfigure the date and time settings in the **Preferences** screen.

➤ For details, refer to “Customizing your Sony CLIE™ handheld (Preferences): Setting the Date & Time preferences” in the “Handbook.”

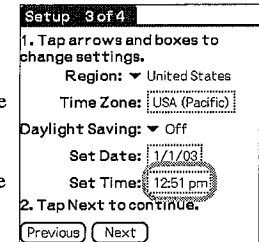


6 Tap the arrow ▲ or ▼ to set the current time.

 Tap each box to set the current hour and minute.




7 Tap **OK**.

 The current time is set and the **Setup** screen is displayed.



8 Tap the **Set Date** box.

 The **Set Date** screen is displayed.

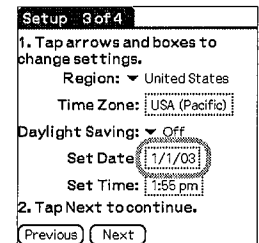


Continued on next page

- 9 Tap the arrow ◀ or ▶ next to the year to select the current year.



- 10 Tap the current month and then tap the current date. The **Set Date** screen closes.

 - 11 Tap the **Time Zone** box. The **Set Time Zone** screen is displayed.

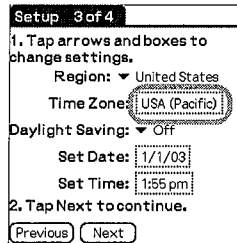


- 12 Tap the region to set the time zone and then tap **OK**.




Setting your Sony CLIE™ handheld


 
- 13 Tap the arrow ▼ next to **Daylight Saving** and select **On** or **Off**.

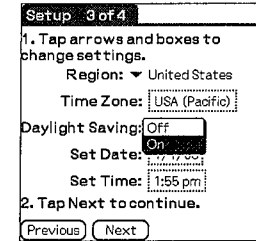


- 14 Tap **Next**.

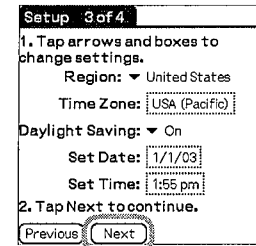 

- 15 Tap **Next** and **Done**.

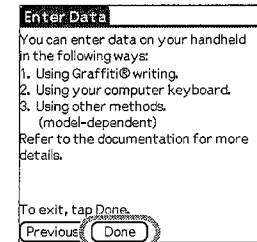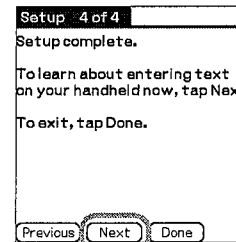  

 The initial settings are complete, and the CLIE Launcher screen is displayed.

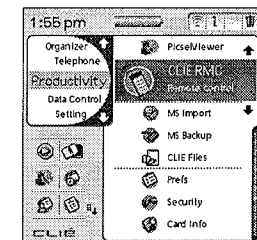

Initial settings are complete.

Continued on next page

Basic operations of your Sony CLIE™ handheld

Start an application

To work with the CLIE handheld, you need to start "Applications."
The following explains the basic operation to start an application.

 
- 1 Display the CLIE Launcher screen
- 2 Selecting an application
- 3 Quitting the application

The following shows how to start applications from the CLIE Launcher screen using the Jog Dial™ navigator.


 
Using the Jog Dial™ navigator

1 Display the CLIE Launcher screen

- 1 Press the Home  / Menu  button. The CLIE Launcher screen is displayed.

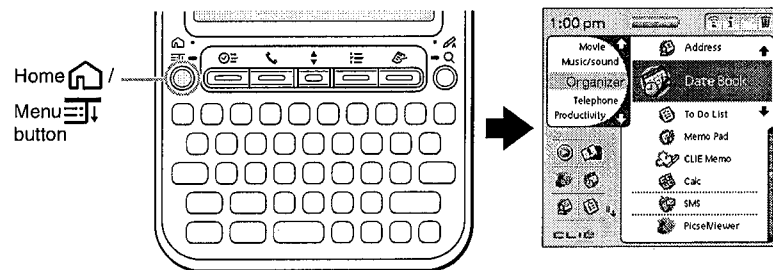

 
Tip

The Menu screen is displayed when you press and hold the Home  / Menu  button.

Continued on next page


2 Selecting an application

- 1 Rotate the Jog Dial™ navigator to select an application to start.

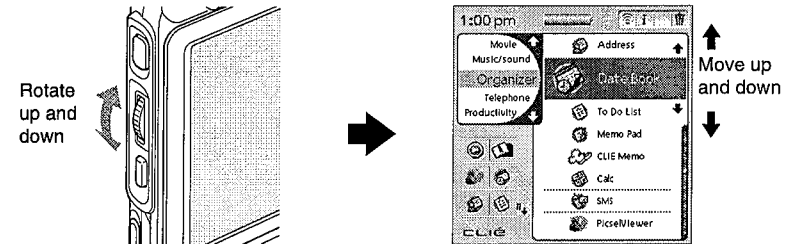

- 2 Press the Jog Dial™ navigator.

 
The selected application starts.

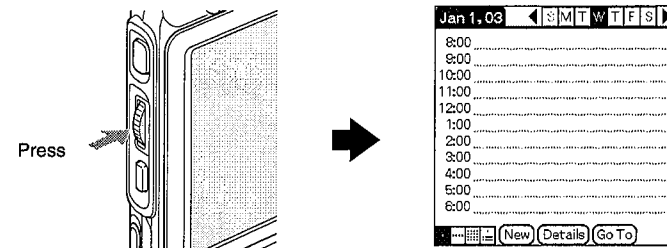

Tip

To select each group

 The group list is highlighted when you press the BACK button in the CLIE Launcher screen. You can also select an application by selecting the group first while rotating the Jog Dial™ navigator.

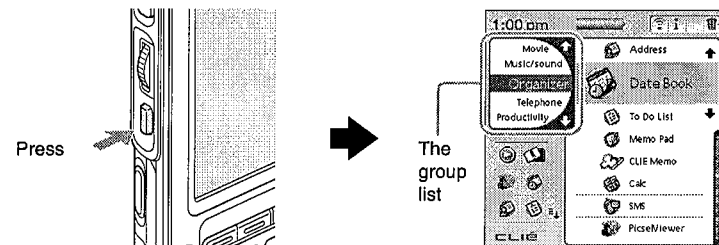

Basic operations of your Sony CLIE™ handheld

3 Quitting the application

You do not need to manually save data in the CLIE handheld like you do with the computer.

All the changes in the application that you are working on are automatically saved, and the last screen you worked on is displayed when you restart the application.

Display the CLIE Launcher screen to switch to another application while you are working on an application.

You can select one of the two methods to display the CLIE Launcher screen as follows.

Return to the CLIE Launcher screen by pressing the Home /Menu button.

Return to the CLIE Launcher screen by pressing and holding the BACK button.

Tip

You can switch the application to another application by pressing the Application button.

Note

For some applications, you need to operate Save.

For details, refer to the "CLIE Application Manual" installed on your computer.

 
About other ways to start an application

You can also start an application with the supplied stylus or application buttons.

Using the stylus

Start the application by pressing the screen directly with the supplied stylus.


1 Tap the \updownarrow on the CLIE Launcher screen to display the application you want.

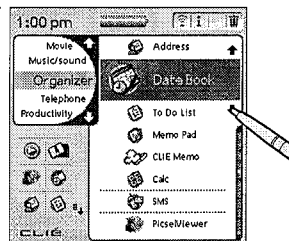

Continued on next page

Basic operations of your Sony CLIE™ handheld

 2 Tap the application icon.
The selected application starts.

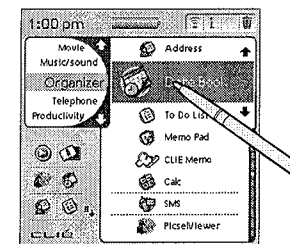


Pressing the application buttons

You can also start the applications by pressing the application buttons.

The application buttons are set as follows at the default;

 \checkmark Date Book, Phone Address, List To Do, Memo Memo

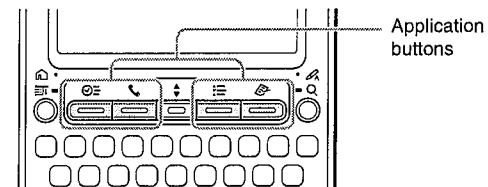

Tip

- You can also start an application by pressing one of the application buttons even when your CLIE handheld is off.
- You can assign your favorite applications to the application buttons.
 - For details, refer to "Customizing your Sony CLIE™ handheld (Preferences): Assigning applications to application buttons"

Entering data

Entering data

There are four ways to enter data on your CLIÉ handheld. Select the one that best suits you.

● Hardware keyboard (page 94)

You can enter data using the hardware keyboard in the same way as with the keyboard of your computer. This is useful when you want to enter lots of data.

● On-screen keyboard

You can enter data by tapping the keyboard that appears on the screen.

➤ For details on entering data using the on-screen keyboard, refer to "Entering data on your Sony CLIÉ™ handheld: Practicing entering data using the on-screen keyboard" in the "Handbook."

● Graffiti®

You can enter data using an exclusive input system called Graffiti®. Once you get used to writing with Graffiti®, you will find that it is much faster than using the on-screen keyboard.

➤ For details on using Graffiti®, refer to "Entering data on your Sony CLIÉ™ handheld: Using Graffiti® writing to enter data" in the "Handbook."

● HotSync with a computer

You can enter data using your computer keyboard with a HotSync® operation. Text data is transferred from your computer to your CLIÉ handheld by a HotSync® operation using the Palm™ Desktop for CLIÉ software.

➤ For details, refer to the Help menu in the Palm™ Desktop for CLIÉ software.



Basic operations of your Sony CLIÉ™ handheld

Restarting your Sony CLIÉ handheld

 
Normally, you do not need to reset your CLIÉ handheld. However, should your CLIÉ handheld not turn on or not respond, you can perform a soft reset to solve the problem.

Follow the procedure below to reset your CLIÉ handheld.

Performing a soft reset

All records and entries stored in your CLIÉ handheld are retained even after performing a soft reset.


- 1 Take out the stylus pin by unscrewing the metal barrel from the stylus quill.

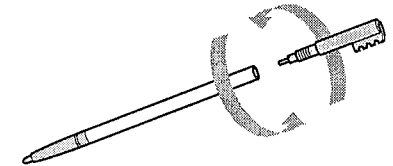

- 2 Use the stylus pin to gently press the RESET button.

The system shuts down and then restarts.

 After restarting, the system displays "palm powered," "CLIÉ," and "SONY," followed by the **Preferences** screen for setting the time and date.

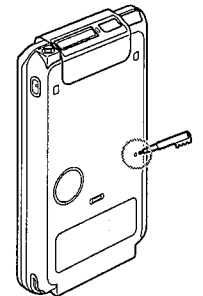

Notes

- After the RESET button is pressed, it takes a while until the **Preferences** screen is displayed. Be sure not to press the RESET button again while resetting.
- Do not press the RESET button with anything other than the stylus pin. It may cause a malfunction.

Performing a hard reset

If the soft reset does not solve the problem, you need to perform a hard reset to restart your CLIÉ handheld.

 
Notes

- All records and add-on applications stored in your CLIÉ handheld will be erased by performing a hard reset.
- Perform a hard reset only if a soft reset does not solve your problem. You can restore your CLIÉ handheld data if you have made a backup on your computer or "Memory Stick" media.
 - ✦ For details, refer to "Backing up your Sony CLIÉ™ handheld data" in the "Handbook."

- 1 Slide down the POWER/HOLD switch.
- 2 While sliding down the POWER/HOLD switch, press the RESET button gently with the stylus pin.

Note

Keep sliding down the POWER/HOLD switch.

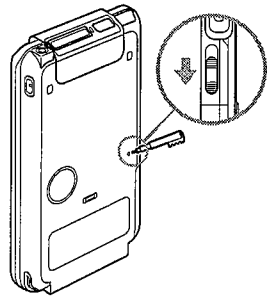


- 3 When the **palm powered** screen is displayed, release the POWER/HOLD switch after three seconds. A message warning that you are about to erase all the data stored on your CLIÉ handheld is displayed.



Basic operations of your Sony CLIÉ™ handheld

 - 4 Press the scroll button upward.

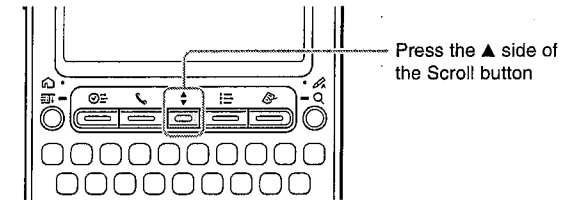

A hard reset is performed on your CLIÉ handheld. After restarting, the system displays "palm powered," "CLIÉ," and "SONY," followed by the **Welcome** screen. Refer to "Performing the initial settings after turning on" on page 16. After a hard reset, only the current date and time are retained. Formats, Preferences, and other settings are restored to the factory settings.

Notes

- After the RESET button is pressed, it takes a while until the **Welcome** screen is displayed. Be sure not to press the RESET button again while resetting.
- If the scroll button is not pressed for long enough, the hard reset may not be performed.

Continued on next page

Using your CLIÉ™ handheld with your computer

You can perform the following if you use your CLIÉ handheld with your computer.

- To have the latest data of schedule or address in common between your CLIÉ handheld and computer.
- To save the copy of backup data for your CLIÉ handheld in your computer.
- To take images or music in your computer with your CLIÉ handheld.
- To see how to use add-on applications in detail with the “CLIÉ Application Manual” installed on your computer.

Follow the procedure below prior to using your CLIÉ handheld with your computer.

- 1** Install the software on your computer
- 2** Connect the cradle to your computer
- 3** Enter a user name for your CLIÉ handheld

Step 1: Install the software on your computer

Do not connect the supplied cradle to your computer before installing the software. The software may not be installed properly.

The “Palm™ Desktop for CLIÉ” software stored on the supplied installation CD-ROM must be installed on your computer. The software is used for data transfer between your CLIÉ handheld and computer, and handling data such as Address Book on your computer.

➔ For details on the system required on a computer, refer to “System required on a computer” on page 86.



Using your CLIÉ™ handheld with your computer

Notes

- Do not simply copy the “Palm™ Desktop for CLIÉ” folder from the supplied installation CD-ROM to your computer. To install the software properly, follow the installation procedure described in this manual.
- If you use Windows 2000 Professional or Windows XP, log on with a User Name in the Administrators group before installing the software.
- If you own another CLIÉ handheld and the old version of “Palm™ Desktop for CLIÉ” has been already installed on your computer, follow the procedure below to upgrade to the new version.
 - * If you are using PEG-N710C Series or PEG-S300 Series, refer to the official Sony CLIÉ website (refer to the back cover of this manual for the URL).
 - ➔ For details, refer to “Exchanging data with another Sony CLIÉ™ handheld” in the “Handbook.”

- 1** Quit all applications running in Windows®.
- 2** Insert the supplied installation CD-ROM into the CD-ROM drive of your computer.
The “Installation Launcher” window is displayed.
- 3** Click the **install** button for the **Palm™ Desktop for CLIÉ** software.
The setup program starts and the Welcome screen is displayed.
- 4** Click **Next**.
The Palm™ Desktop for CLIÉ software installation begins.
Follow the on-screen instructions.
- 5** Select the software you will use to synchronize your CLIÉ handheld with your computer.
If you select “Synchronize with Palm Desktop for CLIÉ,” Intellisync Lite software will not be installed. If you select “Synchronize with Microsoft Outlook or Lotus Organizer,” the Palm™ Desktop for CLIÉ software and Intellisync Lite software will be installed.
- 6** Click **Next**.
The Setup Type window is displayed.
- 7** Select the setup type (**Complete** or **Custom**) and the destination folder (if **Custom** is chose).
- 8** Click **Next**.
- 9** Fill in the user name in the **Create User Account** screen.

Continued on next page

- 10** Click **Next**.
The **Connections** dialog box is displayed.
- 11** Select **USB or Serial Port**.
- 12** Click **Next**.
The **Ready to Install the Program** dialog box is displayed. Click **Install** to start installation.
- 13** Follow the on-screen instructions to finish installing the Palm Desktop for CLIE software.
- 14** Click **Finish**.
Installation of the Palm™ Desktop for CLIE software on your computer is completed.

 


Using your CLIE™ handheld with your computer

Step 2: Connect the cradle to your computer

When you have completed the Palm™ Desktop for CLIE software installation, connect the cradle to a USB port of your computer so you can use your CLIE handheld with your computer.

Connect the cradle to your computer

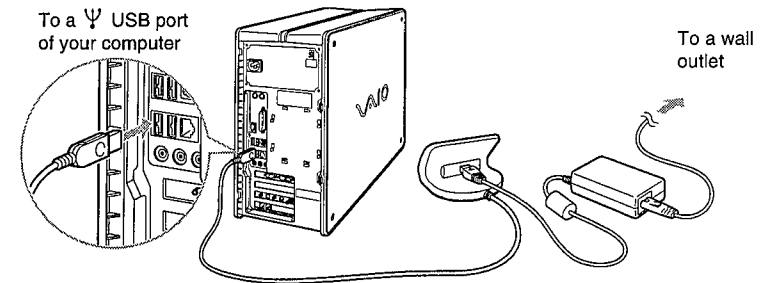


Note


Be sure to connect the cradle directly to a USB port of your computer. If the cradle is connected to a computer via another device, such as a USB hub, a HotSync® operation may not be performed properly.


Step 3: Enter a user name for your CLIÉ handheld

 - 1 Place your CLIÉ handheld in the cradle.

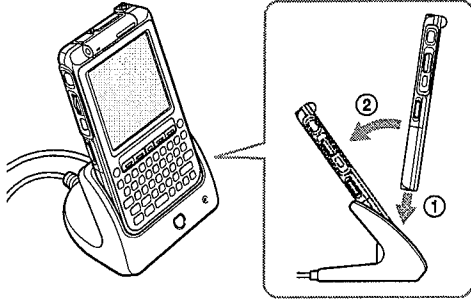

 - 2 Press the HotSync  button on the cradle.

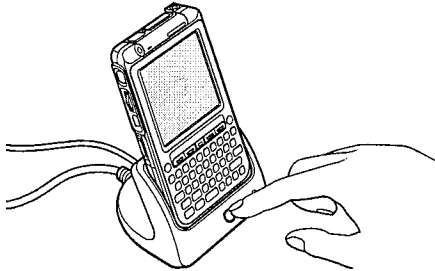

Press the HotSync  button

The HotSync® operation starts and the installation for the necessary software starts automatically.



Using your CLIÉ™ handheld with your computer

- 3 When the New User dialog box is displayed on your computer window, enter your user name.
You can enter any user name you prefer.

Note

If you have already used another CLIÉ handheld

Enter a user name that is different from the one you use for another CLIÉ handheld. If you set an identical user name to multiple CLIÉ handhelds, improper operation may occur.

Tip

When you import data from another CLIÉ handheld

Refer to "Exchanging data with another Sony CLIÉ™ handheld" in the "Handbook."

- 4 Click **OK** on the computer window.
A beep sounds and the HotSync® operation starts.
Your user name selected in step 3 is transferred to the CLIÉ handheld. When the setup is complete, "HotSync operation complete." will be displayed on your CLIÉ handheld.

Setup is completed!

Continued on next page

Synchronizing data between your CLIÉ handheld and computer (HotSync®)

What is a HotSync® operation?

 
A HotSync® operation is a one-step operation that allows you to synchronize data between your CLIÉ handheld and your computer, back up the data of your CLIÉ handheld on your computer, and install add-on applications.

➤ For details, refer to “Exchanging and updating data using a HotSync® operation (Other HotSync® operations)” in the “Handbook.”

Performing a HotSync® operation


The following procedure explains how to synchronize data between your CLIÉ handheld and computer, using “Date Book” as an example.

- 1 Turn on the computer.
- 2 Refer to the procedure on page 37 and enter data in “Date Book.”
- 3 Place your CLIÉ handheld in the cradle.

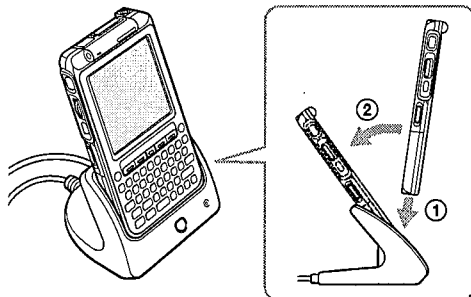


Using your CLIÉ™ handheld with your computer

 - 4 Press the HotSync button on the cradle. The HotSync operation between your CLIÉ handheld and computer starts.

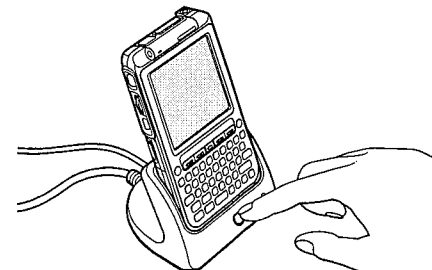


Press the HotSync button

 When the HotSync® operation is complete, the following screen is displayed.

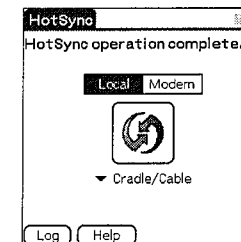


- 5 Double-click the “Palm™ Desktop for CLIÉ” icon on the Windows desktop.

 You can also click **Start**, select **Programs (All Programs in Windows XP)**, **Sony handheld**, and click **Palm Desktop for CLIÉ** to start the application. The Palm™ Desktop for CLIÉ software starts and the Date Book window is displayed. If you select the same date you entered the schedule for in step 2, you will see the entered schedule.

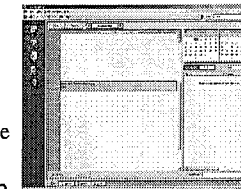

Click the other icons to change to the other information screens.

Click each icon at the left of the screen.

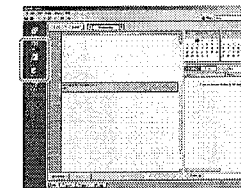 

Continued on next page