

## Telephone

### Sending/Receiving messages and data via a connected GSM mobile phone device

 
Application to be used  
**SMS** CLIÉ handheld

Summary

For sending/receiving messages from your CLIÉ handheld via a connected GSM device, such as a mobile phone.

Preparation for use: **Installed**

For details, refer to the "CLIÉ Application Manual" installed on your computer.

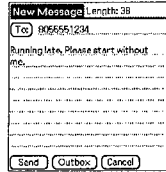

## Productivity

### Using as a remote control

Application to be used  
**CLIE Remote Commander**  
CLIÉ handheld

 
Keyword  
Beaming

Summary

For using your CLIÉ handheld as a remote control.

Preparation for use: **Installed**

For details, refer to the "CLIÉ Application Manual" installed on your computer.

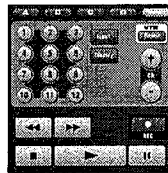

Using applications

### Viewing computer documents on your CLIÉ handheld

Application to be used  
**Picxel Viewer for CLIE** CLIÉ handheld

Keyword

 
doc format, xls format, ppt format, txt format, JPEG format, GIF format, PNG format, BMP format, PDF format, HTML format, MHTML format

Summary

For viewing computer documents such as Microsoft® Word/Excel/PowerPoint®/PDF data on your CLIÉ handheld.

Preparation for use: **Installed** **Requires a "Memory Stick"**

For details, refer to the "CLIÉ Application Manual" installed on your computer.

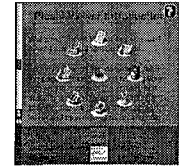

### Displaying the worldwide local time

Application to be used  
**World Alarm Clock** CLIÉ handheld

Summary

 
For displaying worldwide local times. You can also use the application as an alarm clock.

Preparation for use: **Must be installed**

Installation CD-ROM Menu

"CLIÉ Desktop" – "CLIÉ Add-ons"

For details, refer to the "CLIÉ Application Manual" installed on your computer.

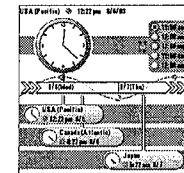

## Operating a digital still camera or camcorder from the CLIÉ handheld remotely

### Note

This function may not be used depending on where you live.

### Application to be used

**Remote Camera** CLIÉ handheld

### Summary

You can remotely control and capture images on a Bluetooth BIP compatible digital still camera (DSC-FX77)\* and camcorder (DCR-TRV80 or DCR-TRV80E)\* with using your CLIÉ handheld.

### Preparation for use: **Must be installed**

### Installation CD-ROM Menu

"CLIÉ Desktop" – "CLIÉ Add-ons"

⇒ For details, refer to the "CLIÉ Application Manual" installed on your computer.

\* They are not on sale in some location.



## Playing games with another CLIÉ handheld

### Application to be used

**Reversi** CLIÉ handheld

### Summary

 
For playing a game in which two players alternately place a black piece and a white piece to capture the opponent's pieces.

### Preparation for use: **Must be installed**

### Installation CD-ROM Menu

"CLIÉ Desktop" – "CLIÉ Add-ons"

⇒ For details, refer to the "CLIÉ Application Manual" installed on your computer.

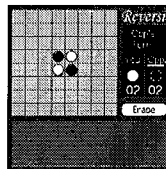


Using applications

## Data Control
 
### Using a "Memory Stick" in your CLIÉ handheld on a computer

#### Application to be used

**Memory Stick Import** CLIÉ handheld  
**Memory Stick Export** PC

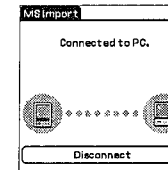

#### Summary

For installing application or copying data from your computer to a "Memory Stick" media in your CLIÉ handheld without using a HotSync® operation.

#### Preparation for use: **Requires a "Memory Stick"**

**Memory Stick Import** Installed

**Memory Stick Export** **Must be installed**

#### Installation CD-ROM Menu

 
"CLIÉ Utilities"

⇒ For details, refer to the "CLIÉ Application Manual" installed on your computer.

### Making a backup on a "Memory Stick" media

#### Application to be used

**Memory Stick Backup** CLIÉ handheld

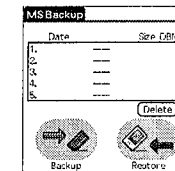

#### Summary

 
For making a backup of the application or data in a "Memory Stick" media.

#### Preparation for use: **Installed** **Requires a "Memory Stick"**

⇒ For details, refer to the "CLIÉ Application Manual" installed on your computer.

## Exchanging data between your CLIÉ handheld and "Memory Stick" media

Application to be used  
CLIE Files **CLIÉ handheld**

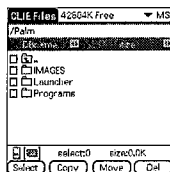

### Summary

For exchanging data (copy, move, delete) between your CLIÉ handheld and "Memory Stick" media inserted in the CLIÉ handheld or for editing data on your "Memory Stick" media.

Preparation for use: **Installed** **Requires a "Memory Stick"**

For details, refer to the "CLIÉ Application Manual" installed on your computer.

## Synchronizing data with Microsoft® Outlook/Lotus Organizer

Application to be used  
Intellisync Lite **PC**



### Summary

For exchanging the data between Microsoft Outlook/Lotus Organizer and Date Book, Address, To Do, etc., of the CLIÉ handheld.

Preparation for use: **Must be installed**  
**Needs to be connected to your computer**

### Installation CD-ROM Menu

Select **Palm Desktop for CLIÉ** from **CLIÉ Desktop**, and follow the on-screen instructions.

For details, refer to the "CLIÉ Application Manual" and Help files of "Intellisync Lite" installed on your computer.

Using applications

## Additional information

This section describes how to solve common problems you may encounter when using your CLIÉ handheld.

### Preventing problems

## Making a backup is recommended

We recommend that you make a backup of your data in case of any unexpected trouble. Backing up your data will ensure that it can be restored again on the CLIÉ handheld even when you have to perform a hard reset.

### Making a backup using the Memory Stick Backup application

You can make a backup on the "Memory Stick" media using the supplied Memory Stick Backup application. This is the most convenient way to make a backup.

"Memory Stick" media (optional) is required.

For details, refer to "Backing up your Sony CLIÉ™ handheld data" in the "Handbook."

### Making a backup using the HotSync® operation

The data of your CLIÉ handheld is backed up on your computer every time you perform a HotSync® operation. You will lose the data in your CLIÉ handheld when you perform a hard reset. But, if you make a backup with the HotSync® operation, you can restore any data previously synchronized with your computer during the next HotSync® operation.

#### Note

You cannot make a backup for some applications installed later or some data created with application after installing. Specially you cannot make backup of applications or data installed with beaming or "Memory Stick" media by synchronizing your computer to your CLIÉ handheld. Use "Memory Stick Backup" to make backup.

## Solving problems

Should you encounter problems, please follow the procedure below. Sony recommends that you make a note of displayed messages or alerts to find the key to solve the problem.

### Step 1 Refer to “Troubleshooting Q&A” or manuals for each application.

- Read “Troubleshooting Q&A” carefully.
- Double-click the icon of CLIÉ Info, select **Manuals** and read the details about the applications.

### Step 2 Refer to the Sony CLIÉ handheld Support website.

Double-click the CLIÉ Info icon and select **Support Information for CLIÉ handheld and Applications** on your computer.

#### Note

Thousands of third-party add-on applications are available for the Palm OS® platform. Sony does not support third-party applications. If you have a problem with a third-party application, contact the developer or publisher of that software.

Additional information

## Customer Support and Customer Registration

### ■ For customer support information

Refer to “Support Information for CLIÉ handheld and Applications.”

### ■ For online customer registration (only for customers in the U.S.A. and Canada)

Refer to “Support Information for CLIÉ handheld and Applications.”

## Notes on use

### About handling

- Make sure you do not scratch or damage your CLIÉ handheld's screen. Always use the supplied stylus to tap on the screen. Do not use a real pen, pencil, or other sharp object on the screen.
- Do not expose your CLIÉ handheld to rain or moisture. Should water enter the circuitry through the buttons and switches, your CLIÉ handheld may be damaged.
- Your CLIÉ handheld screen is made of glass. Do not drop or expose your CLIÉ handheld to external shock. Do not carry your CLIÉ handheld in your back pocket. If you sit down with your CLIÉ handheld in the back pocket, the CLIÉ handheld may break.
- Avoid using or storing your CLIÉ handheld in locations subject to:
  - extremely high temperature, such as inside a car left exposed to the sun, or near a heater.
  - direct sunlight
  - high humidity
  - excessive dust
- The rubber feet of the cradle may lose their adhesion if they become dirty. If this occurs, wipe the rubber feet with a soft damp cloth to restore their adhesion.

#### About cleaning your CLIÉ handheld

Clean your CLIÉ handheld with a soft, dry cloth.

#### About cleaning the Stylus

Tapping or dragging the screen with a dirty stylus may damage the screen surface.

Wipe the stylus with a dry cloth when it gets dirty.



Additional information

## Battery considerations

### Battery safety

To prevent a battery from leaking, heating up, catching fire, bursting, etc., be sure to follow the cautions below:

- Do not charge the battery in any other way than specified in this manual.
- Do not throw the battery into fire, short-circuit it, take it apart, or heat it in an oven such as a microwave.
- Do not charge the battery near fire or in direct, bright sunlight, or do not leave it in a car.
- Do not subject your CLIÉ handheld to excessive shock. Take care not to drop your CLIÉ handheld, give pressure to it with a sharp object, or place any heavy objects on it to prevent a malfunction.
- If you touch an electric leakage or have it in your eyes, bathe with clean water immediately, and consult your doctor.

### Charging

- It takes approximately 5 hours to charge your CLIÉ handheld when the battery is empty.
- If you charge your CLIÉ handheld every day, it takes only a few minutes to charge the battery.
- You can operate your CLIÉ handheld while it is being charged.
- Data stored in your CLIÉ handheld is retained by the battery. If the battery of your CLIÉ handheld is fully discharged, all data stored on the memory in your CLIÉ handheld will be lost. Sony recommends that you charge your CLIÉ handheld frequently.

### About the battery life

- With a fully-charged battery, you can use your CLIÉ handheld for approximately 11 days with a 30-minute operation each day, such as using **Date Book** without the backlight, if you do not use the audio playback function.
- You can play music continuously for about 3 hours with the backlight on at the maximum level when the HOLD mode is not set.
- You can play music continuously for about 4.5 hours when the HOLD mode is set.
- Battery life varies depending on the conditions and environment where you use your CLIÉ handheld, or applications used.
  - ➔ For details about battery life, refer to "Specifications" on page 84 in this manual.

## Conserving the battery

- Turn off the backlight under good lighting conditions.
  - For details, refer to “On POWER/HOLD switch” on page 91.
- Change the automatic power-off time setting so that your CLIE handheld will automatically turn off after a short period of inactivity.
  - For details, refer to “Customizing your Sony CLIE™ handheld (Preferences): Setting the automatic power-off time” in the “Handbook.”
- If you play audio files with **Audio Player**, the battery runs out faster.
- When your CLIE handheld is turned off, avoid using the Bluetooth™ Wake Up function if your CLIE handheld does not need to be detected by another Bluetooth™ compatible device.
  - For details, refer to “Customizing your Sony CLIE™ handheld (Preferences)”: “Setting the Bluetooth™ function”: “Viewing/Customizing Bluetooth™ information” in the “Handbook.”

## Using peripheral devices


If the caution message that warns of low battery-remaining is displayed while you use peripheral devices with your CLIE handheld, stop using them immediately and charge your CLIE handheld. If you continue operating, data in your CLIE handheld’s memory may be lost.

## When battery charge gets low

- When battery charge gets low, a caution message appears on the screen, and operations for “Memory Stick” media or backlight adjustment become unavailable.

If this occurs, perform a HotSync® operation to make a backup of all the data of your CLIE handheld to your computer. Then charge your CLIE handheld using the cradle to prevent accidental data loss.
- If your CLIE handheld does not turn on when you slide down the POWER/HOLD switch, charge your CLIE handheld immediately.
- The remaining battery indicator does not always reflect the actual battery power remaining. To prevent the battery running out accidentally, charge it frequently even when it is not fully discharged.
- You do not have to replace batteries. When the Battery Remain icon reads at zero, connect your CLIE handheld to the USB cable and start charging immediately. Never disassemble your CLIE handheld to take out the battery.

## Do not let the remaining battery indicator read 0

If you leave your CLIE handheld in an uncharged state (the remaining battery indicator reads 0 ) , all of the stored data will be erased. Sony recommends that you charge your CLIE handheld frequently.

## Others

Your CLIE handheld may get warm if turned on for a long period. This is not malfunction.



Additional information

## Specifications

### OS

Palm OS® 5 (ver.5.0)

### CPU

PXA250 200 MHz

### Memory

16 MB (RAM)

User memory range:  
approx. 11 MB

### External input/output

Interface connector

IrDA (1.2)

IR port for AV control

“Memory Stick” slot

Bluetooth

### Display

TFT color display with backlight,  
320 × 320 dots, 65,536 colors

### Other functions

FM synthesizer

16 chords

IMA ADPCM sound (monaural)

Monaural Speaker

Monaural Microphone

### Dimensions (excluding projections)

Approx. 2 7/8 × 5 × 1/2 inches  
(without the cover)

(71.6 × 126 × 12.5 mm) (w/h/d)

Approx. 2 7/8 × 5 × 21/32 inches  
(with the cover)

(71.6 × 126 × 16.2 mm) (w/h/d)

### Weight

Approx. 5.6 oz (158 g)

(without the cover)

(including the supplied stylus)

Approx. 6.5 oz (184 g) (with the cover)

### Operating temperature

41 °F to 95 °F (5 °C to 35 °C)

### Audio frequency response

20 Hz to 20,000 Hz

### Audio recording format

ATRAC3

MP3 (32~320 kbps)

### Sampling frequency

44.1 kHz

### Output

Headphone: Stereo mini-jack

### Voice encoding/decoding format

IMA ADPCM (1ch, 4bit)

SP mode (22.05 kHz),

LP mode (8 kHz)

### Picture size (When viewing)

On the CLIE handheld display

Image file: Approx. 320 × 320 dots

Movie file: Approx. 320 × 240 dots

### Formats (When viewing)

Image file: JPEG (DCF format)

Movie file: Movie Player format,  
MPEG Movie format

## Power requirements

AC power adapter (supplied):  
DC 5.2 V (dedicated connector)  
(Use an appropriate AC cord from the supplied AC cords)

Battery:  
Lithium-ion battery (removable)

## Battery life

Operating PIMs:  
11 days  
(when PIMs, such as Date Book, are operated for 30 minutes per day with the backlight off)  
6 days  
(when PIMs, such as Date Book, are operated for 30 minutes per day with the backlight on)

Playing audio files  
(in continuous mode):  
Approx. 4.5 hours  
(when playing audio files in the HOLD mode)  
Approx. 3 hours  
(when playing audio files with the HOLD mode released and maximum backlight)

Viewing movie files  
(in continuous mode):  
Approx. 3 hours  
(when viewing movie files with the backlight off)  
Approx. 2 hours  
(when viewing movie files with the backlight on)

Recording voice memos  
(in continuous mode):  
Approx. 6.5 hours  
(when recording voice memos in the HOLD mode)  
Approx. 2.5 hours  
(when recording voice memos with the HOLD mode released and maximum backlight)

\* The battery life span varies depending on the temperature and conditions of use.

## Maximum recording time

ATRAC3 format  
(when using a 128MB "MagicGate Memory Stick" media, sold separately)

Approx. 120 minutes  
(bit rate: 132 kbps)  
Approx. 160 minutes  
(bit rate: 105 kbps)  
Approx. 240 minutes  
(bit rate: 66 kbps)

MP3 format  
(when using a 128MB "Memory Stick" media, sold separately)

Approx. 65 minutes  
(bit rate: 256 kbps)  
Approx. 130 minutes  
(bit rate: 128 kbps)  
Approx. 170 minutes  
(bit rate: 96 kbps)

## Maximum audio recording time

(when using a 128MB "Memory Stick" media, sold separately)  
SP mode: Approx. 190 minutes  
LP mode: Approx. 520 minutes

## Bluetooth function

### Communication method

Bluetooth standard Ver. 1.1

### Output

Bluetooth standard Power Class 2

### Communication range <sup>1)</sup>

Line of sight approx. 10 m

### Supported Bluetooth profiles <sup>2)</sup>

Serial Port Profile  
Dial-up Networking Profile  
LAN Access Profile  
Object Push Profile  
Basic Imaging Profile

### Frequency band

2.4 GHz band  
(2.4000 GHz - 2.4835 GHz)

<sup>1)</sup> The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, interference, radio wave conditions, reception sensitivity or antenna performance, and the operating system or software application, etc.

<sup>2)</sup> Bluetooth standard profiles specify the usage purpose for Bluetooth devices communicating with each other.

## System required on a computer

You need one of the following systems installed on your computer to be able to use the Palm™ Desktop for CLIE software and software supplied on the installation CD-ROM:

- OS: Microsoft Windows 98 Second Edition, Windows Millennium Edition, Windows 2000 Professional, Windows XP Home Edition, Windows XP Professional
- CPU: Pentium II 400MHz or more (Pentium III 500MHz or more is recommended)
- RAM: 96MB or more (128MB or more is recommended, 256MB or more is recommended for Windows XP)
- Hard drive space: 200MB (350MB or more is recommended)\*  
\* Requires 100MB or more to print out using the PictureGear Studio software.
- Display: High Color or more, 800 × 600 dots or more is recommended
- CD-ROM drive
- USB port
- Pointing device such as a mouse or touchpad

Design and specifications are subject to change without notice.

 


Additional information

# Sony CLIÉ™ handheld components

Each part of the CLIÉ handheld and the supplied accessories is explained in the following.

## Front panel

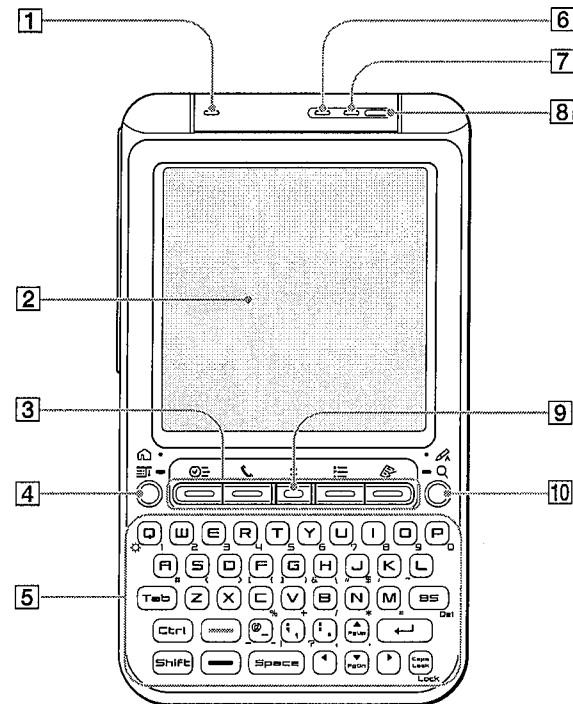



**1 Bluetooth LED**

(Page 55)

**2 Screen**

(Page 97)

**3 Application Buttons**

(Page 24)

Even when your CLIE handheld is turned off, pressing an application button turns on your CLIE handheld to start an application.

**4 Home /Menu Buttons**

(Page 21)

Press once to display the CLIE Launcher screen. Press and hold to display the menu of the application in use.

**5 Hardware Keyboard**

(Page 94)

**6 CHG LED**

(Page 14)

Lights or blinks when turning on. The LED indicator shows the status of your CLIE handheld by its color.

**Lights green:** The power is on. (It also lights on in the HOLD mode)

**Lights orange:** The battery is being charged.

**Blinks orange:** Alarm function that notifies you at a preset time if you have made an alarm setting in an application, such as Date Book.

**OFF:** The power is off.

**7 REC LED**

(Page 45)

Lights when you are recording a voice memo.

**8 Microphone**

(Page 45)

**9 Scroll Button**

Displays text and other information that extends beyond the area of the screen.

Pushing the ▼ side of the scroll button scrolls down to display information below the current viewing area, and pushing the ▲ side of the scroll button scrolls up to display the information above the current viewing area.

 
Depending on the application, unique features are assigned.

☛ For details, refer to the explanation of each application in the "CLIE Application Manual" installed on your computer.

**10 Text Input /Find button**

Press once to display the Graffiti area. Press and hold to display the Find screen.

## Side panel

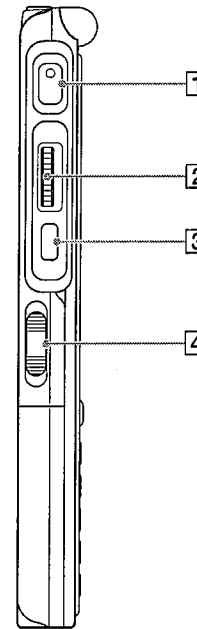

**1 REC Button**

(Page 45)

Press the button to record sound. Press again to stop recording.

**2 Jog Dial™ navigator**

(Page 22)

Use to select and run applications or items. Depending on the application you see, specific functions are assigned to the Jog Dial™ navigator.

**3 BACK Button**

Cancels the selection of an item and cancels the operation. Depending on the application, unique features such as restoring to the previous screen are assigned.

**4 POWER/HOLD Switch**

(Pages 16, 91)

Switches on and off, and sets your CLIE handheld to HOLD mode.



Sony CLIE™ handheld components

## On POWER/HOLD switch

### Turning on/off your CLIÉ handheld

 
#### Slide down the POWER/HOLD switch

(It returns to the center position when you release your finger)

Your CLIÉ handheld turns on and the last screen you viewed is displayed.

When your CLIÉ handheld turns on, the CHG LED indicator lights green.

Slide down the POWER/HOLD switch to turn off.

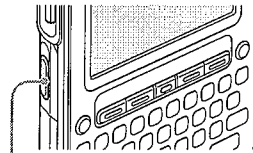

POWER/HOLD Switch

### Turning on/off the backlight of the LCD

 
Slide down the POWER/HOLD switch for more than 2 seconds.

### Turning on/off the HOLD mode

#### Slide up the POWER/HOLD switch


It avoids pressing buttons or tapping the screen wrongly. If you slide the POWER/HOLD switch to set HOLD mode while turning on, the screen turns to off even when operating.

If you slide back the POWER/HOLD switch to the center position, the HOLD mode is released.

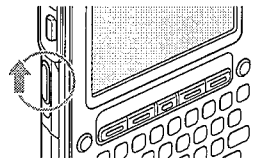

Sony CLIÉ™ handheld components

## Back panel

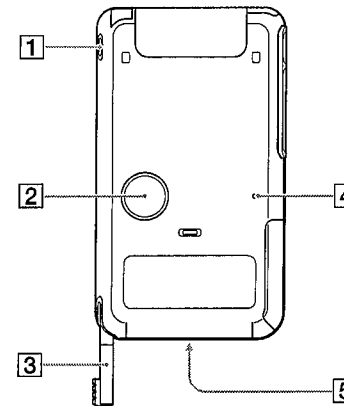 

### 1 Strap Hook

### 2 Speaker

### 3 Stylus

(Page 23)

A pen to operate your CLIÉ handheld by touching the screen with it.

### 4 Reset Button

(Page 26)


Press to restart your CLIÉ handheld.

### 5 Interface Connector

(Page 14)

Connects the cradle or mobile communication adapter (option).
 
## Upper panel

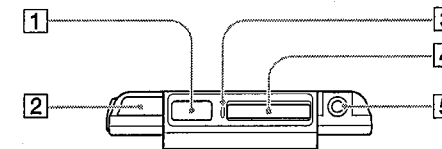

### 1 Bluetooth Antenna

(Page 55)

### 2 Beaming Port

You can beam data between your CLIÉ handheld and another CLIÉ handheld or Palm OS® PDA.

➤ For details, refer to "Beaming" in the "Handbook."

#### Tip

You can also use your CLIÉ handheld as a remote control with the CLIÉ Remote Commander software.

➤ For details, refer to the "CLIÉ Application Manual" installed on your computer.

### 3 "Memory Stick" LED

Blinks orange while your CLIÉ handheld is writing to or reading data from "Memory Stick" media.

### 4 "Memory Stick" Slot

 
Insert "Memory Stick" media into this slot.

### 5 Headphone Jack

For headphones with a  $\phi 3.5$  stereo mini jack (commercially available)

# Inserting/removing "Memory Stick" media

## Inserting "Memory Stick" media

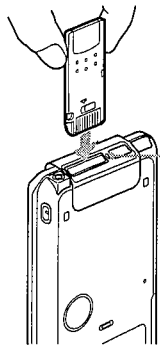


**"Memory Stick" LED**  
The "Memory Stick" LED blinks orange while your CLIÉ handheld is writing data to or reading data from "Memory Stick" media.


**Note**

 Insert "Memory Stick" media in the right direction. If "Memory Stick" media is forcibly inserted in the wrong direction, the "Memory Stick" slot may be damaged.

## Removing "Memory Stick" media

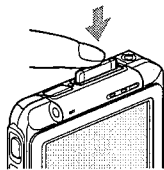

Push "Memory Stick" media in

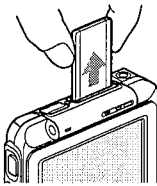 

Pull "Memory Stick" media out


**Note**

 Make sure that your CLIÉ handheld is not writing data to or reading data from "Memory Stick" media (the "Memory Stick" LED is not blinking) before removing it. If you remove "Memory Stick" media while the "Memory Stick" LED is blinking, recorded data may be deleted or damaged.



Sony CLIÉ™ handheld components

# Hardware Keyboard

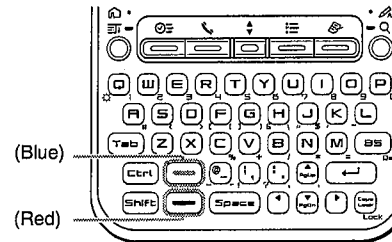

You can use the hardware keyboard in the same way as with the keyboard of your computer. This is useful when you want to enter lots of data.

## Input commands list

You can carry out commands using the hardware keys in combination.

### Key combinations

Example: Ctrl+C → Hold down the Ctrl key and press the key of the character C.

### Basic operations

Combination	Function
(blue) + blue character	To type the characters in blue.
(red) + red character	To type the characters in red.
<b>Caps Lock</b>	To type in capital continuously. (To return to normal typing, press Caps Lock again)
(blue) + <b>Caps Lock</b>	To type the characters in blue continuously. (Repeat to return to normal typing)

### Edit

Combination	Function
<b>Ctrl + C</b>	Copy the selected text.
<b>Ctrl + D</b>	Delete the selected text.
<b>Ctrl + V</b>	Paste the selected text.
<b>Ctrl + X</b>	Cut the selected text.
<b>Ctrl + ►/◄</b>	Select until the last/first letter of the word.
<b>Shift + ►/◄</b>	Select a continuing/preceding text.


## Functions

Combination	Function
<b>Ctrl + G</b>	Show/hide the silkscreen. (model-independent)*
<b>Ctrl + H</b>	Go to the Home screen.
<b>Ctrl + L</b>	Turn the backlight on/off.
<b>Ctrl + M</b>	Display the menu.
<b>Ctrl + O</b>	Go to the previous field.
<b>Ctrl + P</b>	Go to the next field.
<b>Ctrl + R</b>	Perform a full-screen pen stroke.**

\* This function does not work on your CLIE handheld.

\*\* You can change this function by selecting "Prefs" → **Buttons** → **Pen**.

## Dialog

Combination	Function
<b>Ctrl + A</b>	Display <b>Adjust Volume</b> dialog.
<b>Ctrl + B</b>	Display <b>Battery Information</b> dialog.
<b>Ctrl + E</b>	Display <b>Media Info</b> dialog.
<b>Ctrl + F</b>	Display <b>Find</b> dialog.
<b>Ctrl + K</b>	Display <b>Keyboard Help</b> dialog.
<b>Ctrl + T</b>	Display the command tool bar.
 <b>(red) + Q</b>	Display <b>Adjust Brightness</b> dialog.

## Button operation

Combination	Function
<b>Ctrl + ▲/▼</b>	Same as Jog Dial Up/Down.
<b>Ctrl + Enter</b>	Same as pressing Jog Dial.
<b>Ctrl + Enter (Long Push)</b>	Same as holding down the Jog Dial.
<b>Ctrl + BS</b>	Same as pressing the BACK button.
<b>Ctrl + BS (Long Push)</b>	Same as holding down the BACK button.

## More

### Combination/Function

If Caps Lock is enabled, holding down the Shift key while typing will enter normal characters.


 
If Lock (blue) is enabled, holding down the blue key while typing will enter normal character.


If Lock (blue) is enabled, holding down the Shift key while typing will enter uppercase character.



## About the screen
 
### Tip

If a different screen is displayed, press the Home  /Menu  button.

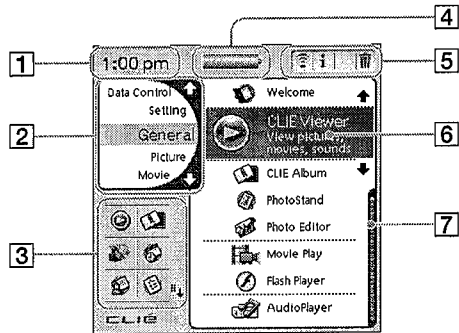

### 1 Time Indicator

Displays the current time. To change the display format, tap **Time** at the **Formats** in the **Preferences**.

✦ For details, refer to “Customizing your Sony CLIÉ™ handheld (Preferences): Setting the Date & Time preferences” in the “Handbook.”


### 2 CLIE Launcher Group List

The list of CLIE Launcher groups is displayed.


### 3 Favorite Application (shortcuts)

You can create shortcuts to favorite applications.

### 4 Battery Indicator

This icon indicates the remaining battery power of your CLIÉ handheld. When you tap the icon, it displays the remaining battery power of your CLIÉ handheld as a percentage, and free memory space in your CLIÉ handheld or “Memory Stick” media. When you are charging the battery, the  icon is displayed.

 
Also, hold down the Ctrl Key and press the B key to display the **Battery Information** dialog.



Power: Power used  
 Status: Battery status  
 Remain: Remaining charge of the battery  
 (This is not displayed while charging.)  
 Tap the **Limits** to display the **Battery Limits** screen.

### 5 Application Manager Icons

You can manage your applications with the application manager icons. The following are featured as standard functions.

 : Beam or Send

 : Info

 : Delete

✦ For details, refer to “Sony CLIÉ™ handheld basic operations: Using “CLIE Launcher”: Application manager icon” in the “Handbook.”

### Tip

Application manager functions may be added when you install certain applications.

### 6 Application Icons

(Page 24)

Tap an icon to start an application.

### 7 Position Indicator



Sony CLIÉ™ handheld components

### Tip

When a screen such as described below is displayed Tap the Hint icon to display the tip.

 


## Protective cover

you can remove the protective cover as follows.

### Removing the protective cover

- 1 Push ① with your left hand.
- 2 Remove the cover in the direction ② pulling the other side of ①.

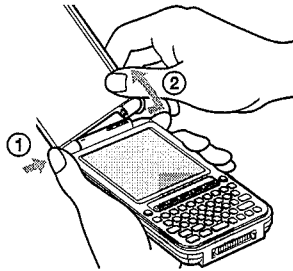


### Attaching the protective cover

- 1 Fit the projection on the left of the cover to the hole in your CLIÉ handheld.
- 2 Attach the cover in the direction ② pushing the projection on the right of the cover into the hole of your CLIÉ handheld.

#### Note

 
Do not force to attach the cover without pushing the projection. The projection may be broken.

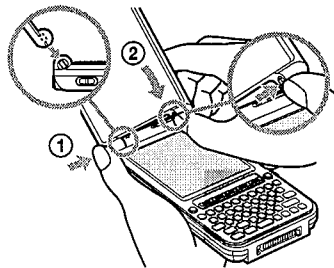


Sony CLIÉ™ handheld components

#### Notes

 
- Do not open the protective cover too far. Damage may occur.



 - Do not carry your CLIÉ handheld by the protective cover only. Damage may occur.

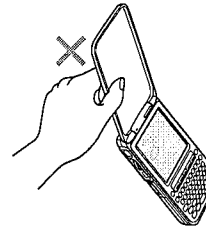

## Locating cradle components

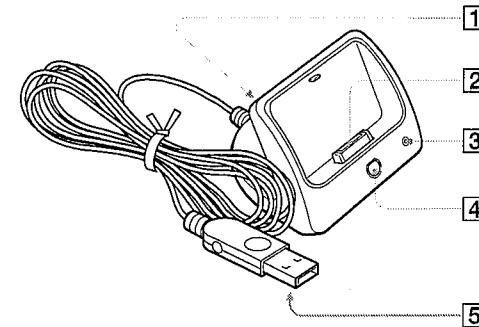 

1 **AC Adapter Connector**  
(Page 14)

2 **Interface Connector** (Page 14)

3 **Cradle LED** (Page 14)

4 **HotSync Button** (Pages 33, 36)

5 **USB Connector** (Page 32)

# INDEX

## A

AC power adapter	11
Add-On applications	62
Address	40, 71
Applications	
Installing	62
Quitting	23
Starting	21
Using CLIÉ Application Manual	60
Audio Player	68

## B

Backup	78
Basic Operations	21
Battery considerations	82

## C

Calculator	72
CLIE Album	64
CLIE Files	77
CLIE Mail	70
CLIE Memo	72
CLIE Remote Commander	73
CLIE Viewer	64
Selecting/Deleting Files	48
Components	88
Connect the cradle to your computer	32
Connecting to the Internet	59
Cradle	100

## D

Date Book	37, 71
-----------	--------

## E

Entering data	25
Exchanging Date Book and Address data	42

## G

Giga Pocket Plugin	68
--------------------	----

## H

Hardware keyboard	94
Have a try	
Connecting to the Internet	59
Exchanging Date Book and Address data between your CLIÉ handheld and computer	42
Managing addresses and telephone numbers	40
Managing schedules	37
Playing back handwriting memos, voice memos or image files	47
Recording a voice memo	45
Take image files or movie files created with other devices with your CLIÉ handheld	49
Take music with you	51
Using the Bluetooth™ function	53
Viewing computer documents on your CLIÉ handheld	43
HotSync®	33, 35

## I

Image Converter	66
Initial settings	16
Input commands	94
Intellisync Lite	77

## L

Listening to music	52
--------------------	----

## M

Macromedia Flash Player 5	67
Managing addresses and telephone numbers	40
Managing Schedules	37
Memo Pad	72
"Memory Stick"	49
Memory Stick Backup	76
Memory Stick Export	76
Memory Stick Import	76
"Memory Stick" LED	93
"Memory Stick" Slot	
Inserting a "Memory Stick" media	93
Removing a "Memory Stick" media	93
Movie files	49
Movie Player	67

## N

NetFront v3.0 for CLIE	71
------------------------	----

## P

Palm™ Desktop for CLIÉ	29
Photo Editor	65
PhotoStand	65
Picstel Viewer for CLIE	74
PictureGear Studio	66

## R

Remote Camera	75
Restarting	26
Hard reset	27
Soft reset	26
Reversi	75

## S

Set date	18
Set time	18
Setting up	13
SMS	73
SonicStage	69
Sound Converter 2	70
Sound Utility	69
Specifications	84
Stylus	16

## T

Tapping	17
Time zone	19
To Do List	72

## U

USB port	32
Using applications	60
Using Voice Recorder	45

 
## V

Viewing computer documents	43
Viewing image files	49
Voice Recorder	69

## W

WARNING	5
World Alarm Clock	74


Continued on next page  
\*\*\*\*\*

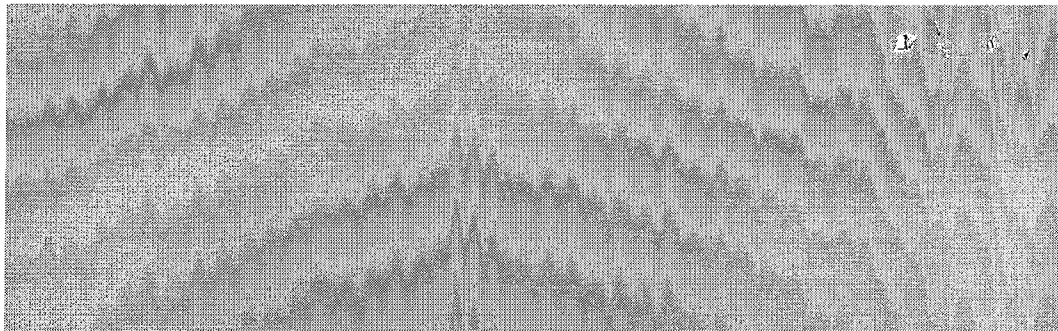

For the latest information on support  
and accessories,  
check our official Sony CLIE website

For customers in the U.S.A. and Canada  
**<http://www.sony.com/clie/>**

 For customers in Australia, Hong Kong, Malaysia,  
Mexico, New Zealand, Singapore, Taiwan and Thailand  
**<http://vaio-online.sony.com/clie/>**

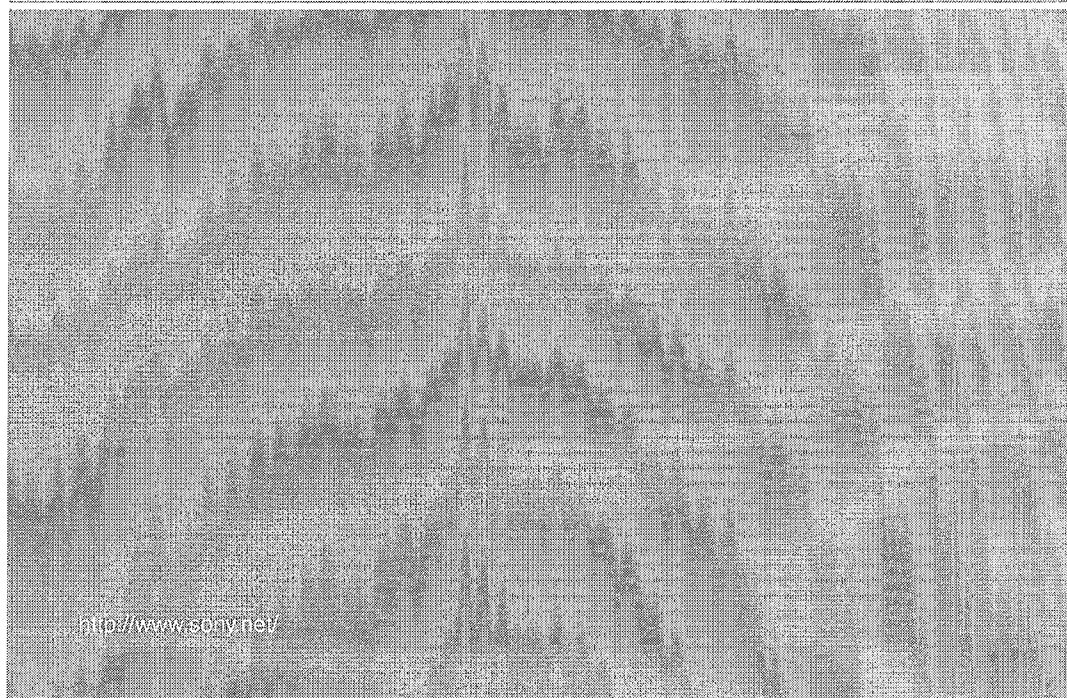

Contents of this manual are printed on chlorine-free  
paper using VOC (Volatile Organic Compound)-free  
vegetable-oil-based ink.

<http://www.sony.net>