 


# CLIE™ handheld components

 
This chapter explains each part of your CLIE handheld and the supplied accessories.

## Front panel

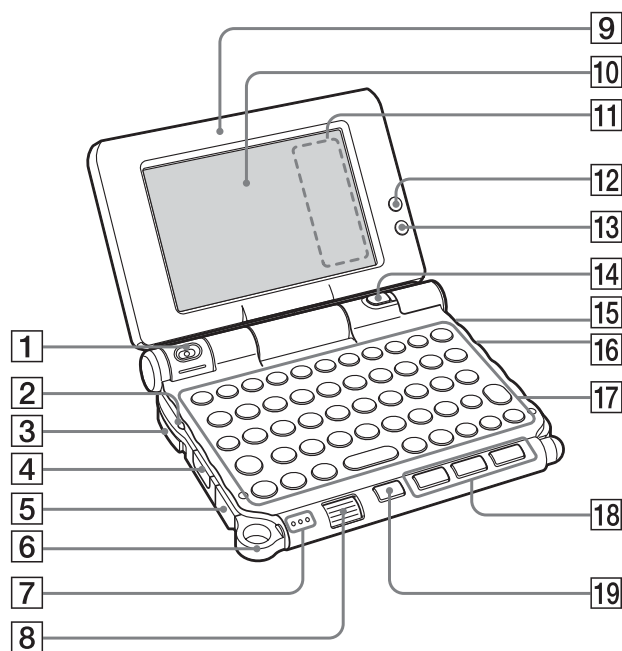

- 1 Camera Lens**  
(Pages 48, 50)
- 2 POWER LED**  
(Page 9)  
Lights or blinks when turned on. The LED shows the status of your CLIE handheld by its color.  
**Lights green:** The power is on. (It also lights in HOLD mode)  
**Blinks green:** Blinks a few moments when you operate any button on your CLIE handheld in HOLD mode.  
**Lights orange:** The battery is being charged.  
**Blinks orange:** Alarm function that notifies you at a preset time if you have set an alarm in an application, such as **Date Book**.  
**OFF:** The power is off.
- 3 POWER/HOLD Switch**  
(Pages 11, 101)  
Turns your CLIE handheld on and off, and sets your CLIE handheld to HOLD mode.
- 4 IR Port**  
(Page 103)  
You can beam data between your CLIE handheld and another CLIE handheld or Palm OS<sup>®</sup> PDA.
- 5 USB connector (Page 19)**  
For connecting the supplied USB cable.
- 6 Strap Ring**
- 7 Microphone**  
(Page 53)  
Use this to record sounds.
- 8 Jog Dial™ navigator**  
(Page 26)  
Use to select and run applications or items. Depending on the application, unique features are assigned.
- 9 Display Panel**  
(Page 9)
- 10 Screen**  
(Page 106)
- 11 Silk Screen Area**  
(Page 108)
- 12 Wireless LAN LED (for PEG-UX50 only)**  
(Page 42)
- 13 Bluetooth LED**  
(Page 68)
- 14 CAPTURE/REC Button**  
Press the CAPTURE/REC button to take pictures, record movies (Pages 48, 51) or to record voice memos (Page 53).
- 15 REC LED**  
(Page 53)  
Lights when you are recording a voice memo.
- 16 "Memory Stick" LED**  
(Page 102)  
Blinks orange while your CLIE handheld is writing data to, or reading data from a "Memory Stick" media.
- 17 Hardware Keyboard**  
(Page 103)
- 18 Application Buttons**  
(Page 28)  
Even when your CLIE handheld is turned off, pressing an application button turns on your CLIE handheld and starts that application.
- 19 BACK Button**  
Cancels the selection of an item or an operation. Depending on the application, unique features such as restoring to the previous screen are assigned.

## Back panel

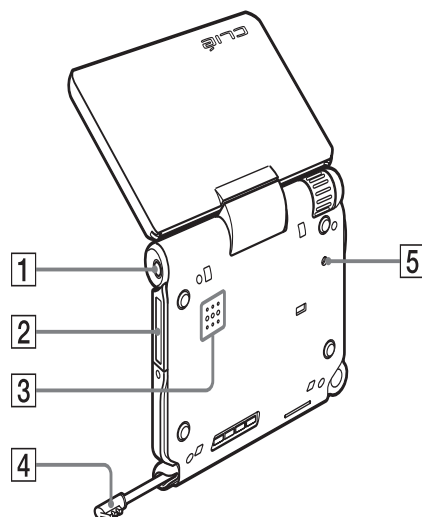

**1 Headphone Jack**

For connecting stereo mini-jack headphones sold separately.

**2 "Memory Stick" Slot**

(Page 102)  
Insert a "Memory Stick" media into this slot.

**3 Speaker**

**4 Stylus**

(Page 11)  
A pointed tool to operate your CLIÉ handheld by touching the screen with it.

**5 RESET Button**

 
(Pages 32, 33)  
Press to restart your CLIÉ handheld.

## POWER/HOLD switch

### Turning on/off your CLIÉ handheld

#### Slide down the POWER/HOLD switch

The POWER/HOLD switch will return to the center position after being released. Your CLIÉ handheld powers on, the last screen viewed is displayed, and the POWER LED lights green. To turn off your CLIÉ handheld, slide down the POWER/HOLD switch again and then release.

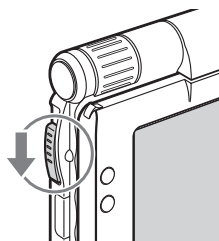

POWER/HOLD Switch


### Turning on/off the LCD backlight

 Slide down the POWER/HOLD switch and hold it for more than two seconds.

### Turning on/off the HOLD mode


#### Slide up the POWER/HOLD switch

Putting your CLIÉ handheld in HOLD mode deactivates the touch screen. If you put the POWER/HOLD switch into the HOLD position while the power is on, the screen display turns off, even during an operation. To release the HOLD mode, slide up the POWER/HOLD switch again and then release.

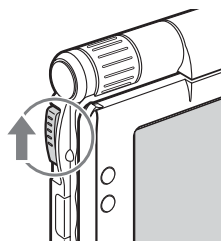

## Using "Memory Stick" media

 
### Inserting "Memory Stick" media

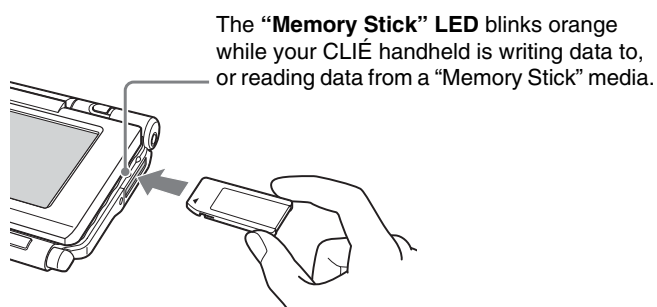

#### Note

Insert a "Memory Stick" media in the right direction. If you forcibly insert a "Memory Stick" media in the wrong direction, the "Memory Stick" slot may be damaged.
 
### Removing "Memory Stick" media

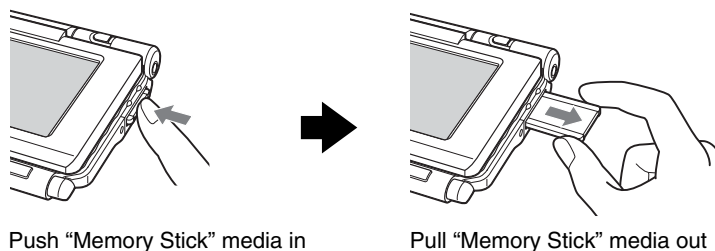


#### Note

Make sure that your CLIÉ handheld is not writing files/data to, or reading files/data from, a "Memory Stick" media before removing it. (The "Memory Stick" LED blinks when it is reading or writing files/data.) If you remove a "Memory Stick" media while the "Memory Stick" LED is blinking, recorded files/data may be deleted or damaged.

## IR port

You can beam data or applications between your CLIÉ handheld and another CLIÉ handheld or Palm OS® PDA.

 ➔ For details, refer to “Beaming” in the supplied “Handbook”.

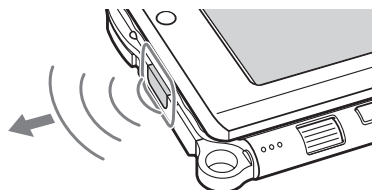


\* Move your CLIÉ handheld gradually to find the most sensitive direction.

## Hardware Keyboard

 You can use the hardware keyboard in the same way as you would use the keyboard of your computer.

For details about the key arrangement, check your CLIÉ handheld.

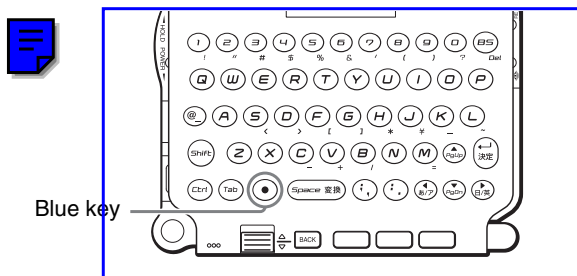

### Input commands

You can perform commands using the hardware keys in combination.

### Key combinations

Example: Ctrl + C → Hold down the Ctrl key and press the character C key.

#### Basic operations

Combination	Function
Ⓞ (Blue) + blue character	Types the characters in blue. To type them continuously, press Ⓞ (Blue) twice to lock the shift, and press it again to unlock.
Shift	Types capital letters. To type capital letters continuously, press the Shift key twice to lock the shift, and press it again to unlock.

*Continued on next page*

**Edit**

Combination	Function
<b>Ctrl + C</b>	Copies the selected text.
<b>Ctrl + D</b>	Deletes the selected text.
<b>Ctrl + V</b>	Pastes the selected text.
<b>Ctrl + X</b>	Cuts the selected text.
<b>Ctrl + Right/Left</b>	Selects until the last/first letter of the word.
<b>Shift + Right/Left</b>	Selects a continuing/preceding text.

**Functions**

Combination	Function
<b>Ctrl + G</b>	Shows/hides the silk screen area.
<b>Ctrl + H</b>	Goes to the CLIE 3D Launcher.
<b>Ctrl + L</b>	Turns the backlight on/off.
<b>Ctrl + M</b>	Displays the menu.
<b>Ctrl + O</b>	Goes to the previous field.
<b>Ctrl + P</b>	Goes to the next field.
<b>Ctrl + R</b>	Performs a full-screen pen stroke.*

\* You can change this function by selecting **Preferences** and tapping [Buttons] - [Pen].


**Dialogs**

Combination	Function
<b>Ctrl + A</b>	Displays the <b>Adjust Volume</b> dialog box.
<b>Ctrl + B</b>	Displays the <b>Battery Information</b> dialog box.
<b>Ctrl + E</b>	Displays the <b>Media Info</b> dialog box.
<b>Ctrl + F</b>	Displays the <b>Find</b> dialog box.
<b>Ctrl + K</b>	Displays the <b>Keyboard Help</b> dialog box.
<b>Ctrl + T</b>	Displays the command tool bar.

 
### Button operations

Combination	Function
<b>Ctrl + Up/Down</b>	Same as Jog Dial Up/Down.
<b>Ctrl + Enter</b>	Same as pressing Jog Dial.
<b>Ctrl + Enter (Long Push)</b>	Same as holding down the Jog Dial.
<b>Ctrl + BS</b>	Same as pressing the BACK button.
<b>Ctrl + BS (Long Push)</b>	Same as holding down the BACK button.

### More

Combination	Function
<b>Ctrl +  (Blue) + S</b>	Turns off your CLIE handheld using Power Saving mode.


#### Tip


When you use a Palm OS application that assigns a function to the scroll buttons, the same function can be performed by using a key combination,  (Blue) + Up/Down.



## Locating the components of the CLIE 3D Launcher
 
### Tip

If a different screen is displayed, tap  (Home).

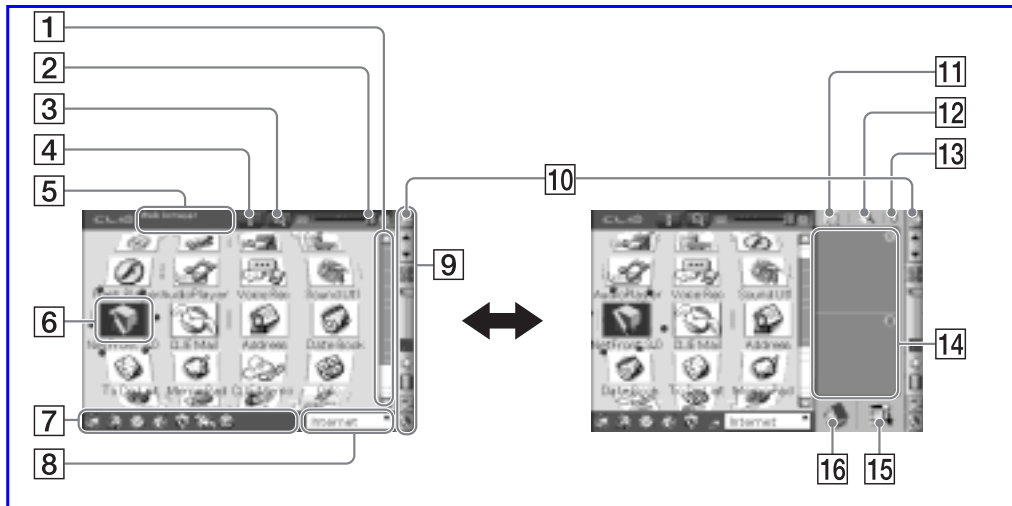

**1 Scroll Bar**

**2 3D Adjust Bar**

Scroll the bar with the stylus to adjust the 3D degree.

**3 Resize Application Icon**

Tap to change application icons to small or large.

**4 Information Icon**

Tap to display the information for a selected application icon.

**5 Application Summary Area**

Description of a selected application is displayed here

**6 Application Icons**

**7 Favorite Applications (shortcuts)**

You can create shortcuts to favorite applications.

**8 CLIE 3D Launcher Groups List**

The list of CLIE 3D Launcher groups is displayed.

**9 Status Bar**

(page 108)

**10 Resize Icon**

If you tap this icon, the screen view will be switched.

**11 Calculator**

 
 
Tap to display the on-screen Calculator.

**12 Find Icon**

Tap to display the dialog box finding data or applications.

**13 Brightness Adjustment Icon**

Tap to display the dialog box for adjusting brightness.

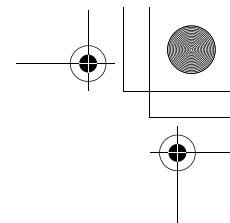

**14 Graffiti 2 Writing Area**

Write strokes of **Graffiti 2** here.  
**Decuma Input** can be launched from this area.

 
 
For details, refer to “Entering text on your CLIE™ handheld: Using Decuma Input to enter text” in the supplied “Handbook”.

**15 Menu Icon**

 
 
Tap to display menu of the current application.

**16 Home Icon**


Tap to display the CLIE 3D Launcher or Palm OS Standard Screen.



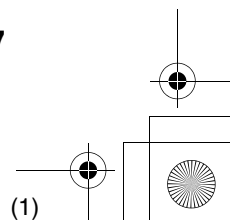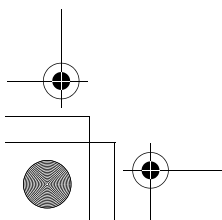


CLIE™ handheld components



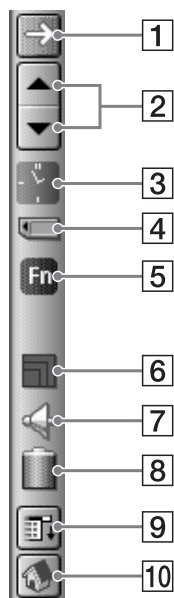 






## Status Bar

 


The status bar displays the following icons. Additional icons will be displayed according to the applications in use.

- 
- 1**  Tap this icon to show or hide the silk screen area.
- 
- 2**  Tap of scroll up/down the screen or select items of an application in use.
- 
- 3**  Displays the current time. To change the display format, select **Preferences**, and tap [Formats]-[Time].  
 ➔ For details, refer to “Customizing your CLIÉ™ handheld (Preferences): Setting up the Date & Time preferences” in the supplied “Handbook”.
-




 


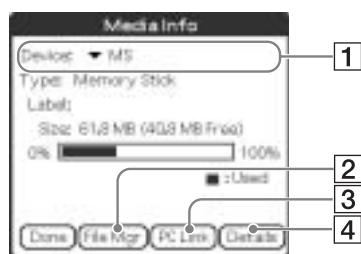



- 4  Each icon indicates the information on the “Memory Stick” media inserted into your CLIE handheld.
-  “Memory Stick” media is inserted
  -  “Memory Stick” media is not inserted
  -  “Memory Stick” media is write-protected
  -  “Memory Stick” media is not read correctly
  -  “Memory Stick” media is reading
  -  A “Memory Stick” compatible device is inserted

Tap the icon to display the **Media Info** dialog box when “Memory Stick” media is inserted.



 
- 1 Media type  
(You can choose another device from the ▼ list.)
- 2 Tap to display **CLIE Files**.
- 3 Tap to display **Data Import**.
- 4 Tap to display the **Device Detail** dialog box for information on the device or driver.


From the **Media Info** dialog box, tap  (Menu) and then tap [Preferences] from [Option] to select operations for “Memory Stick” media.



- 5  Displayed when  (Blue) is pressed while an application such as **Date Book** is open.  will be displayed when  (Blue) is pressed twice to lock the sift. Also,  is displayed when the Shift key is pressed, and  will be displayed when it is pressed twice to lock the sift.  
➔ For details, refer to “Hardware Keyboard” on page 103.
- 6  Displays the reception level for the wireless LAN when your CLIE handheld is connected to the Wireless LAN. The reception levels are:  (level 1),  (level 2), and  (level 3)

Continued on next page

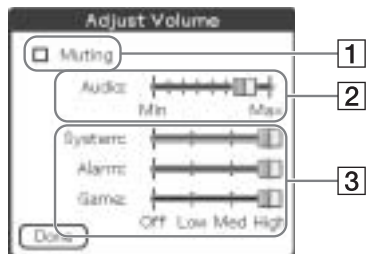**7**  Tap to display the **Adjust Volume** dialog box.



- 1** Turns off the sound of your CLIE handheld. When Muting mode is selected,  is displayed in the status bar.
- 2** Adjusts the volume level for playing back audio files or movie files.
- 3** Adjusts the volume level for System sound, Alarm sound, and Game sound. This affects the [General] settings in **Preferences**.
  - ➔ For details, refer to “Customizing your CLIE™ handheld (Preferences): Setting sounds” in the supplied “Handbook.”

**8**  Displays the battery’s remaining charge.  is displayed while the battery is being charged. Tap to display the **Battery Information** dialog box.



Power: Power used  
 Status: Battery status  
 Remain: Remaining charge of the battery  
 (This is not displayed while charging.)


Tap [Limits] to display the **Battery Limits** dialog box.

**9**  Tap to display the menus of the current application.

**10**  Tap to display the CLIE 3D Launcher or Palm OS Standard Screen.


**Tip**

 **When a screen like this is displayed**

Tap the  icon to display tips and helpful advice.



## Locating Charger Cradle components

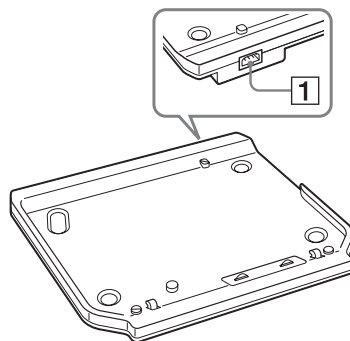

- 1 AC Power Adapter Connector**  
(Page 8)

CLIE™ handheld components

## INDEX

### A

- AC power adapter . . . . . 6, 8
- Address Book . . . . . 61, 81
- Applications
  - Quitting . . . . . 27
  - Starting . . . . . 25
  - Using the CLIE Application Manual . . 72
- Audio Player . . . . . 58, 79

### B

- Backup . . . . . 85
- Basic Operations . . . . . 24
- Battery considerations . . . . . 90

### C

- Calculator . . . . . 82
- Carrying style . . . . . 9
- Charger Cradle . . . . . 8, 111
- CLIE Album . . . . . 56, 75
- CLIE Camera . . . . . 74
- CLIE Files . . . . . 83
- CLIE Mail . . . . . 80
- CLIE Memo . . . . . 82
- CLIE Viewer . . . . . 55, 74
- Components . . . . . 98

### D

- Data Export . . . . . 65, 84
- Data Import . . . . . 65, 84
- Date Book . . . . . 59, 81
- Decuma Input . . . . . 29
- Display panel . . . . . 9

### E

- Entering text . . . . . 29
- Exchanging Date Book and Address Book data . . . . . 63

### G

- Giga Pocket Plugin . . . . . 78
- Graffiti<sup>®</sup> 2 . . . . . 29

### H

- Hardware keyboard . . . . . 103
- Have a try
  - Exchanging Date Book and Address Book data between your CLIE handheld and computer . . . . . 63
  - Listening to music . . . . . 57
  - Managing addresses and telephone numbers . . . . . 61
  - Managing **schedule events** . . . . . 59
  - Recording a voice memo . . . . . 53
  - Using the Bluetooth<sup>®</sup> function . . . . 66
  - Viewing computer documents on your CLIE handheld . . . . . 64
  - Viewing handwritten memos and image files, and playing back voice memos . . 55
- HotSync<sup>®</sup> operation . . . . . 21

### I

- Image Converter . . . . . 76
- Image Files
  - Enjoying . . . . . 49
  - Taking pictures . . . . . 47
- Initial screen . . . . . 106
- Initial setup . . . . . 9
- Input commands . . . . . 103
- Intellisync Lite . . . . . 17, 84

IR port. . . . . 103

## M

Macromedia Flash Player 5. . . . . 78  
 Managing addresses and telephone numbers . . . . . 61  
 Managing **schedule events** . . . . . 59  
 Memo Pad . . . . . 81  
 "Memory Stick" LED. . . . . 102  
 "Memory Stick" Slot. . . . . 102  
 Movie Player. . . . . 77  
 Movie Recorder . . . . . 77  
 Movies  
   Enjoying . . . . . 52  
   Recording movies . . . . . 50

## N

NetFront v3.0 for CLIE . . . . . 80

## O

Opened style. . . . . 9  
 Operating style. . . . . 9

## P

Palm™ Desktop for CLIE . . . . . 16  
 Photo Editor . . . . . 56, 76  
 PhotoStand. . . . . 56, 75  
 Picstel Viewer for CLIE . . . . . 64, 83  
 PictureGear Studio . . . . . 76  
 Playing back music data. . . . . 58

## R

Recording a voice memo . . . . . 53  
 Remote Camera . . . . . 75  
 Restarting . . . . . 32  
   Hard reset . . . . . 33  
   Soft reset . . . . . 32

## S

Set date. . . . . 13  
 Set time. . . . . 13  
 Setting up . . . . . 8  
 SMS. . . . . 82  
 SonicStage . . . . . 57, 80  
 Sound Utility. . . . . 79  
 Specifications . . . . . 93  
 Status bar . . . . . 108  
 Stylus . . . . . 11

## T

Tapping. . . . . 12  
 Time zone . . . . . 14  
 To Do List . . . . . 81  
 Turned style . . . . . 10

## U

USB cable . . . . . 19  
 USB port . . . . . 19  
 Using applications. . . . . 72

## V

Viewing computer documents . . . . . 64  
 Voice Recorder . . . . . 53, 79

## W

World Alarm Clock . . . . . 83





### On the trademarks

Before using your CLIE handheld, be sure to read the accompanying End-User's License Agreement.

Sony, CLIE, "Memory Stick", "Memory Stick Duo", "Memory Stick PRO", "MagicGate Memory Stick", Jog Dial, PictureGear Studio and their logos are trademarks of Sony Corporation.

Palm, Palm Powered, the Palm logo, the Palm Powered logo, Palm OS, Graffiti 2 powered by Jot®, HotSync and the HotSync logo are trademarks of PalmSource, Inc.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Pentium is registered trademarks of Intel Corporation.

Intellisync is a trademark of Pumatech, Inc.

Adobe and Acrobat are trademarks of Adobe Systems Incorporated.

QuickTime and the QuickTime logo are trademarks of Apple Computer, Inc.

NetFront is a trademark of ACCESS CO, Ltd.

Picisel and the Picisel logo are trademarks of Picisel Technologies, Ltd.

Contains Macromedia® Flash™ Player software by Macromedia, Inc.  
Copyright © 1995-2003 Macromedia, Inc.

Macromedia and Flash are trademarks or registered trademarks of Macromedia, Inc. in the United States and internationally.

 
 
 
 
 
 
Decuma is a trademark of Decuma AB in the United States and other countries.

This product includes fonts owned by TypeBank Co., Ltd. under license.

CompactFlash is a U.S. registered trademark of SanDisk Corporation.

Bluetooth is a registered trademark that is owned by the proprietor and used by Sony under license.

All other trademarks are trademarks of their respective owners.

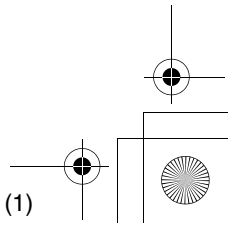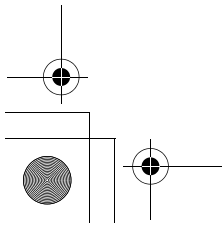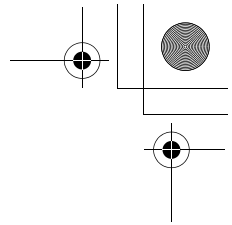

For the latest information on support  
and accessories,  
check our official Sony CLIÉ website

For customers in the U.S.A. and Canada  
**<http://www.sony.com/clie/>**

For customers in Australia, Hong Kong, Malaysia,  
Mexico, New Zealand, Singapore, Taiwan and Thailand  
**<http://vaio-online.sony.com/clie/>**

<http://www.sony.net/>