



Digital Music Player
NWZ-WS613/WS615



Use this manual when you have troubles or when you need to know how to use your WALKMAN®.

This “Help Guide” is an excerpted version that contains basic operations only. For details on other operations, see the full version by clicking the banner below. An Internet connection is required to see the full version.

[“Help Guide” \(Full\)](#)

For complete information on this Walkman, see the online “Help Guide” (Full).

How to Use

[Getting Started](#)



[Basic Operations](#)



[Music](#)



[Connecting with the Smartphone](#)



[Using with the Smartphone](#)



List of Topic

 
[How to Use](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



How to Use

Digital Music Player
NWZ-WS613/WS615

Getting Started

Parts and Controls



Power/Charging



Notes on use

en-11(1)

Copyright 2014 Sony Corporation

SONY

Help Guide



How to Use

Digital Music Player
NWZ-WS613/WS615

Basic Operations

[Using Supplied Remote Commander](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation

SONY

Help Guide



How to Use

Digital Music Player
NWZ-WS613/WS615

Music

[Playing Music](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation

SONY

Help Guide



How to Use

Digital Music Player
NWZ-WS613/WS615

Connecting with the Smartphone

[Making a Bluetooth Connection with the Smartphone](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Using with the Smartphone

[Playing Music Saved on the Smartphone](#)



[Talking on the Smartphone](#)



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

How to Use

Getting Started

Parts and Controls

- [Parts and controls](#)

Power/Charging

- [Turning the power on](#)

Basic Operations

Using Supplied Remote Commander

- [Parts and controls of the Remote Commander](#)
- [Using the Remote Commander](#)

Music

Playing Music

- [Playing music](#)

Connecting with the Smartphone

Making a Bluetooth Connection with the Smartphone

- [Turning the Bluetooth function on/off](#)

Using with the Smartphone

Playing Music Saved on the Smartphone

- [Playing music on the smartphone](#)

Talking on the Smartphone

- [Answering/hanging up a call](#)

[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Notes on use

June 2013

Before use

To make full use of this content, please read the following notes thoroughly. Please note that they are subject to change without prior notice.

Recommended system environment

The following system environments are recommended for displaying this content. You may not be able to view the content on other system environments.

For viewing on a computer

Recommended browser

- With Microsoft Windows
 - Microsoft Internet Explorer 8 or later
 - Mozilla Firefox: latest version
 - Google Chrome™ : latest version
- With Apple Mac OS
 - Apple Safari Ver. 5 or later
 - Mozilla Firefox: latest version
 - Google Chrome : latest version

For viewing on a smartphone or tablet

Basic operation has been confirmed on the standard browser for the noted devices running the following operating systems.

- Android™ 2.3 or later: Xperia series, Walkman running Android
- iOS 4 or later: iPhone, iPod touch, iPad

JavaScript

JavaScript is used with this content for viewing convenience. If JavaScript is disabled in your web browser settings, the content may not operate properly or it may not be displayed correctly.

Style Sheets

Cascading Style Sheets are used in designing this content. Page layout may not be as intended if you view the content with style sheets disabled or on a web browser that is not compatible with style sheets. However, operation will not be affected.

Cookies

This content uses cookies. To use services incorporating cookies, you need to set your browser to allow cookies.

Handling of personal information obtained from websites

Sony may use cookies, web beacons or similar technologies to make statistical analysis of customers' usage of this content while preserving anonymity.

Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Parts and Controls

[Parts and controls](#)

This section introduces the functions of buttons, jacks, and other parts of your Walkman.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Power/Charging

Turning the power on

Turn on the power to start your Walkman.



Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Using Supplied Remote Commander

[Parts and controls of the Remote Commander](#)

This section explains the functions of buttons and other parts of the Remote Commander (supplied).



[Using the Remote Commander](#)

Use the Remote Commander (supplied) to operate your Walkman wirelessly.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Playing Music

Playing music

Play music that you imported from your computer to your Walkman.



Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Making a Bluetooth Connection with the Smartphone

[Turning the Bluetooth function on/off](#)

Turn on the Bluetooth function when you make a Bluetooth connection.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Playing Music Saved on the Smartphone

[Playing music on the smartphone](#)

Play music on your smartphone that is connected with your Walkman via the Bluetooth connection.



[Notes on use](#)

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player
NWZ-WS613/WS615

Talking on the Smartphone

[Answering/hanging up a call](#)

You can answer and hang up a phone call to your smartphone that is connected with your Walkman via the active Bluetooth connection.



[Notes on use](#)

 
en-11(1)

Copyright 2014 Sony Corporation


 Digital Music Player
 NWZ-WS613/WS615

Parts and controls

This section explains the functions of buttons, jacks, and other parts of your Walkman.

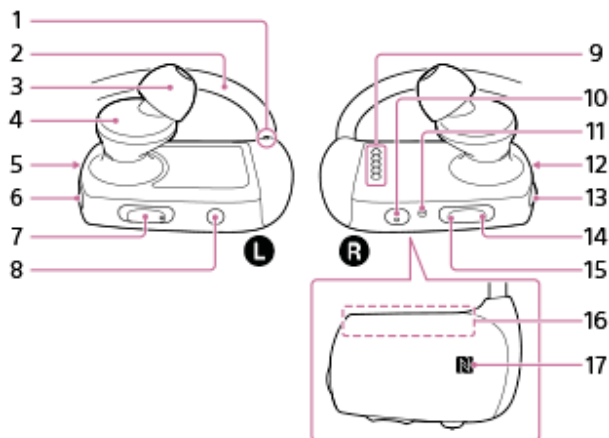

1. Tactile dot
There is a tactile dot on the left part of your Walkman. Use it to distinguish left from right when you operate it.
2. Neckband
3. Earbud
4. Headphone section
5. Bluetooth lamp
6. (Bluetooth) button
Press and hold for 2 seconds to turn the Bluetooth function on or off.
Press and hold for 7 seconds while the Bluetooth function is turned off to pair with a Bluetooth device.
7. VOL (Volume) + (*1)/- button
Press to adjust the music playback, ringtone, and call volumes.
8. MODE button
Press to switch the playback mode (All Song/Repeat/Shuffle).
Press and hold for longer than 1 second to switch the playback filter (Folder/Playlist/Album).
9. Terminals
10. (Call/Play) button (*1)
Press to start/pause playback or to answer/hang up a call.
Press and hold for 2 seconds to switch the sound source (Walkman/Bluetooth device) or to reject an incoming call.
Press and hold for 15 seconds to enter the formatting mode.

11. RESET button
Press the RESET button with a pen or a paper clip, etc., to reset your Walkman.
12. OPR (Operation) lamp
13. ⏻ (Power) button
Press and hold for 2.5 seconds to turn your Walkman on or off.
14. ⏮ (Previous) button
Press to skip to the previous song.
Press and hold for longer than 2 seconds to skip to the beginning of the previous folder.
15. ⏭ (Next) button
Press to skip to the next song.
Press and hold for longer than 2 seconds to skip to the beginning of the next folder.
16. Built-in Bluetooth antenna
Do not cover the antenna part with your hands or other object when a Bluetooth connection is active. Doing so may interrupt the connection.
17. N-mark
Touch a Bluetooth device equipped with the NFC feature to this mark to connect it to your Walkman.

(*1) There is a tactile dot. Use it to help with button operations.

Related Topic

● [Turning the power on](#)

Notes on use

 
en-11(1)

Copyright 2014 Sony Corporation

Digital Music Player
NWZ-WS613/WS615

Turning the power on

Turn on the power to start your Walkman.

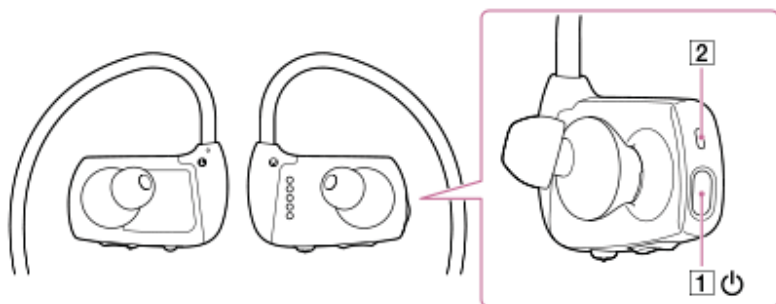

1. Press and hold the button (1) on the right (R) side of your Walkman for 2.5 seconds.
Your Walkman turns on and a startup sound will be heard. The lamp (2) blinks in orange quickly while the Walkman is turned on.

Hint

- If there is no operation for an extended period, the lamp (2) turns off and your Walkman will be turned off automatically. In that case, press and hold the button (1) to turn on the Walkman.

Related Topic

[Parts and controls](#)

Notes on use

 
en-11(1)






Copyright 2014 Sony Corporation

Digital Music Player
NWZ-WS613/WS615

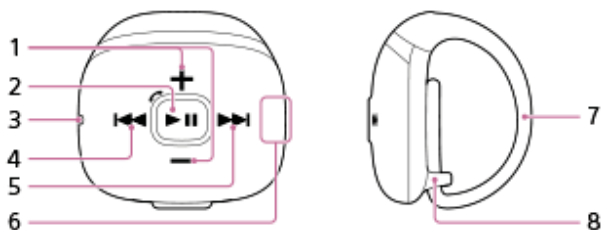Parts and controls of the Remote Commander

 This section explains the functions of buttons and other parts of the Remote Commander (supplied).



1. VOL (Volume) +/- button
Press to adjust the music playback, ringtone, and call volumes.
2.  /  /  button
Press to start/pause playback or to answer/hang up a call.
Press and hold for 2 seconds to switch the sound source (Walkman/Bluetooth device) or to reject an incoming call.
3. Lamp (blue/red)
4.  (Previous) button
Press to skip to the previous song.
Press and hold for longer than 2 seconds to skip to the beginning of the previous folder.
5.  (Next) button
Press to skip to the next song.
Press and hold for longer than 2 seconds to skip to the beginning of the next folder.
6. Antenna (aerial)
Antennas are built-in. Do not cover the antenna part with your hands or other object when a connection is active. Doing so may interrupt the connection.
7. Band
8. Band loop

Notes on use

en-11(1)

Copyright 2014 Sony Corporation

 


Digital Music Player
NWZ-WS613/WS615

Using the Remote Commander

The Remote Commander (supplied) employs the Bluetooth technology to operate your Walkman wirelessly. The Remote Commander and the Walkman are already paired at the factory, so just turn them on and they are ready to use without pairing.

The power of your Walkman has to be turned on before performing the procedures below.

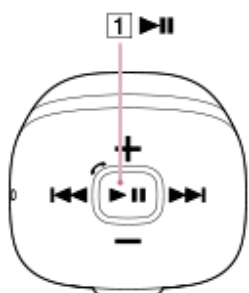

1. Press and hold the button (1) for 2 seconds to turn the Remote Commander on.
Your Walkman and the Remote Commander are automatically connected with each other.
2. Press the desired button of the Remote Commander to operate your Walkman.

[Notes on use](#)

 
en-11(1)

Copyright 2014 Sony Corporation

Digital Music Player
NWZ-WS613/WS615

Playing music

Play music imported to your Walkman.

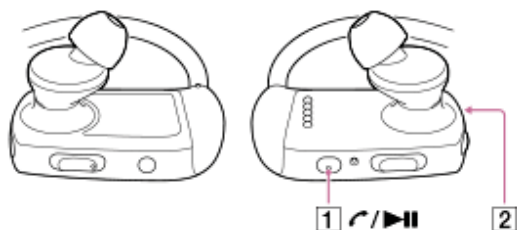

1. Press the button (1) on the right (R) side of your Walkman.
Press the button (1) again to pause playback.

Hint

- When playback of the last song is finished, your Walkman automatically restarts playback from the first song and continues in sequential order.

Note

- If there is no operation for an extended period while paused, the lamp (2) turns off and your Walkman will be turned off automatically. In that case, press and hold the button (1) to turning on and press the button (1) to start playback music.

 
[Notes on use](#)



Digital Music Player
NWZ-WS613/WS615

Turning the Bluetooth function on/off

Turn on the Bluetooth function of your Walkman and the smartphone when you pair them or connect the paired smartphone with the Walkman. Refer to the operating instructions supplied with the smartphone for details.

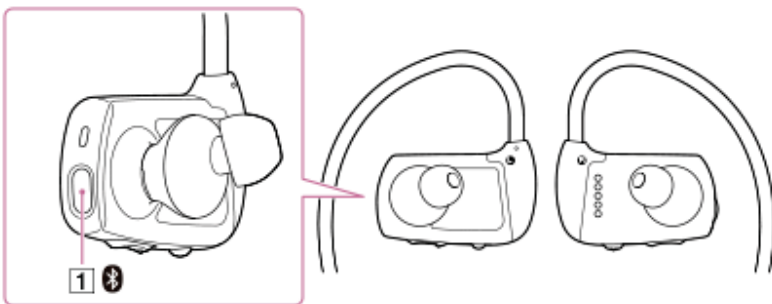


1. Press and hold the button (1) on the left (L) side of your Walkman for 2 seconds to turn the Bluetooth function on.
To turn off the Bluetooth function, press the button (1) again for 2 seconds.

Hint

- To reduce battery consumption, turn off the Bluetooth function when your Walkman is not connected with a smartphone.

Note

 - The Bluetooth communications antenna is built in to your Walkman. If you cover the antenna (2) with your hands or other objects while using Bluetooth communications, the communication quality may be affected.

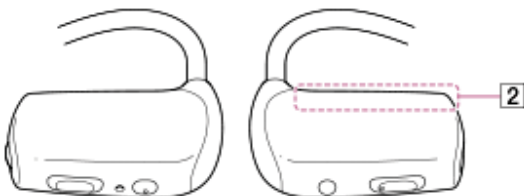


Notes on use

Digital Music Player
NWZ-WS613/WS615

Playing music on the smartphone

 Play music on your smartphone that is connected with your Walkman via the Bluetooth connection.

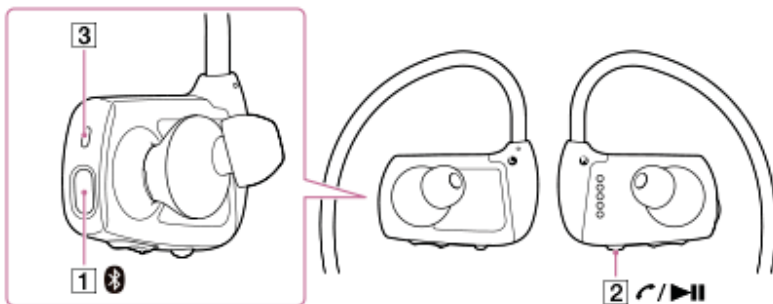

1. Press and hold the button (1) on the left (L) side of your Walkman for 2 seconds to turn the Bluetooth function on.
The lamp (3) on the left (L) side of your Walkman blinks in blue and the last connected smartphone is connected.
2. Press the button (2) to play the song.
Playback of the music on the smartphone starts.

Note

- Music may not be played through the operation on your Walkman depending on the smartphone you use. If this occurs, operate on the smartphone.

 
[Notes on use](#)



Digital Music Player
NWZ-WS613/WS615

Answering/hanging up a call

You can answer and hang up a phone call to your smartphone that is connected with your Walkman via the Bluetooth connection.

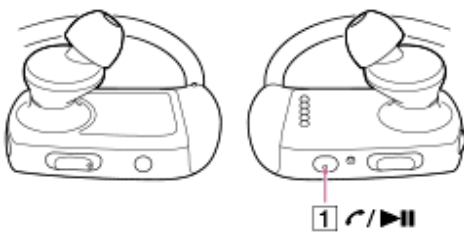

1. Press the button (1) on the right (R) side of your Walkman to answer a call.
2. Press the button (1) on the right (R) side of your Walkman to hang up the call.

Hint

- To reject an incoming call, press and hold the button (1) for 2 seconds while receiving a call.
- If you answer a call during music playback, playback is paused. Playback is resumed when you hang up the call.

Note

- Do not cover the microphone part (3) with your hands or other object when you talk on your Walkman.

Notes on use

en-11(1)

Copyright 2014 Sony Corporation



Digital Music Player NWZ-WS613/WS615

Important product information

Licence and trademark notice

Important product information

The following FCC statement applies only to the version of this model manufactured for sale in the USA.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The following FCC statement applies only to the version of this model manufactured for sale in the USA.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The following FCC statement applies only to the version of this model manufactured for sale in the USA.

If you have any questions about this product:

Visit: www.sony.com/walkmansupport

Contact: Sony Customer Information Service Center at 1-(866)-456-7669

Write: Sony Customer Information Service Center 12451 Gateway Blvd., Fort Myers, FL 33913

Declaration of Conformity

Trade Name:

SONY

Model No.:

NWZ-WS613 / WS615

Responsible Party:

Sony Electronics Inc.

Address:.

16530 Via Esprillo, San Diego, CA 92127 U.S.A

Telephone Number:

858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

Manufacturer: Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan

For EU product compliance: Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other European countries with separate collection systems)



This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these products and batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

Applicable accessories: USB Cradle

The ability to display the languages on supplied software will depend on the installed OS on your computer. For better results, please ensure that the installed OS is compatible with the desired language you want to display.

- We do not guarantee all the languages will be able to be displayed properly on the supplied software.
- User-created characters and some special characters may not be displayed.

For users in Canada

Listening for a Lifetime

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer, the Consumer Electronics Association (CEA)[®] and the American Speech-Language-Hearing Association (ASHA) want you to get the most out of your equipment by playing it at a safe level; a level that lets the sound come through clearly without annoying blaring or distortion and, most importantly, without damaging your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

TO ESTABLISH A SAFE LEVEL:

- Set your volume control to the lowest level where you can hear the music comfortably and clearly. Prolonged exposure to anything over 85 decibels can cause gradual hearing loss.
- Once you have established a sound level where you can hear the audio comfortably, clearly and without distortion, set the dial and leave it there.
- See if your music player has a volume limiter that allows you to set a safe listening level by establishing a maximum volume level on your

player. This is a great solution for parents to ensure their children listen at a safe level.

- Limit listening time to give your hearing “quiet breaks.”

BE SURE TO OBSERVE THE FOLLOWING GUIDELINES WHEN WEARING YOUR HEADPHONES OR EARBUDS:

- Do not turn up the volume so high that you can't hear sounds around you.
- Do not use headphones or earbuds while operating a motorized vehicle; it may create a traffic hazard and is illegal in many areas.

Used wisely, your new sound equipment will provide years of fun and enjoyment.

Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer, CEA and ASHA recommend that you avoid prolonged exposure to excessive noise. The following list of sound levels is included for your information so that you can better protect your hearing.

DECIBEL LEVEL EXAMPLES:

- 30 Whisper
- 40 Quiet room
- 50 Moderate rainfall
- 60 Normal conversation
- 70 Busy traffic, vacuum cleaner
- 80 Alarm clock

CONSTANT EXPOSURE TO THESE NOISES CAN BE DANGEROUS:

- 90 Lawn mower, motorcycle
- 100 Chain saw
- 110 Rock concert
- 120 Jet plane takeoff
- 130 Jackhammer
- 140 Firecrackers

This information courtesy of the American Speech-Language-Hearing Association (ASHA), the national professional, scientific and credentialing

association for more than 135,000 audiologists, speech-language pathologists, and speech, language and hearing scientists.

For information on protection against noise-induced hearing loss, call the ASHA Action Center (800-638-8255), Monday through Friday, 8:30 a.m. to 5 p.m. To find an audiologist in your area, visit www.asha.org/findpro. Parents can find helpful information about how to protect their children's hearing and how to teach them about safe listening at www.listentoyourbuds.org, an ASHA award-winning public education campaign sponsored in part by CEA.

A safety tip from the Consumer Electronics Association, 1919 South Eads Street, Arlington, VA 22202 and the American Speech-Language-Hearing Association, 2200 Research Boulevard, Rockville, MD 20850.

For customers who purchased the Tourist Model in Japan

The Bluetooth function designated for this product is applicable in Australia, Hong Kong, Indonesia, Malaysia, New Zealand, the Philippines, Singapore, South Africa, Taiwan, Thailand, the United Arab Emirates and Vietnam.

The following FCC/IC statement applies only to the version of this model manufactured for sale in the USA and Canada.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules.

This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.

The following IC statement applies only to the version of this model manufactured for sale in Canada.

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device

may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Licence and trademark notice

- WALKMAN and WALKMAN logo are registered trademarks of Sony Corporation.
- Microsoft, Windows, Windows Vista and Windows Media are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- IBM is a registered trademark of International Business Machines Corporation.
- Apple, Mac and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.



- Clear Phase and Clear Phase logo are trademarks of Sony Corporation.
- Clear Bass is a trademark of Sony Corporation.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.



- © 2013 CSR plc and its group companies. The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, TM and ® marks are not specified.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.