


Step 6

Setting the day and time

Set the day and time so that you can stamp day and time for the incoming messages. You will hear the recorded day and time when you play back messages. You can set the day and time only with the cordless handset. Make sure the base phone is not in use before you start the setting.

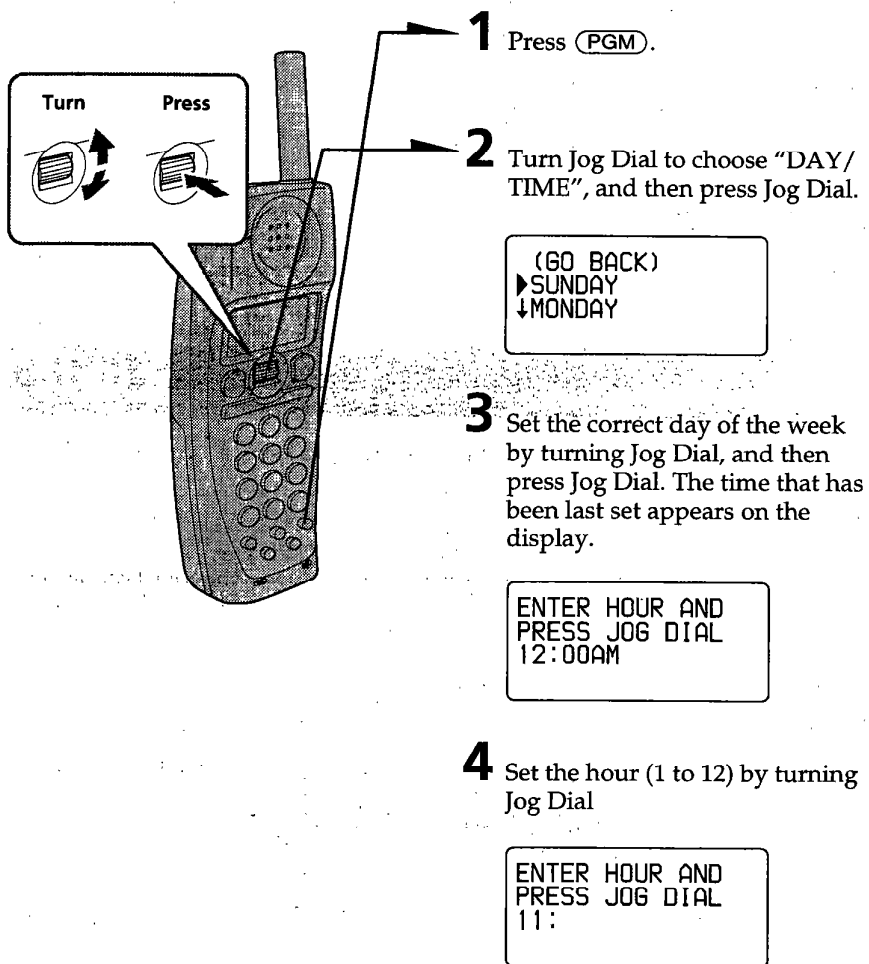

1 Press (PGM).

2 Turn Jog Dial to choose "DAY/TIME", and then press Jog Dial.

(GO BACK)
▶ SUNDAY
↓ MONDAY

3 Set the correct day of the week by turning Jog Dial, and then press Jog Dial. The time that has been last set appears on the display.

ENTER HOUR AND
PRESS JOG DIAL
12:00AM

4 Set the hour (1 to 12) by turning Jog Dial

ENTER HOUR AND
PRESS JOG DIAL
11:

continued

Getting Started 21^{US}

Step 6: Setting the day and time (continued)

5 Press Jog Dial.

ENTER MINUTE AND
PRESS JOG DIAL
11:00

6 Set the minute (00 to 59) by turning Jog Dial.

ENTER MINUTE AND
PRESS JOG DIAL
11:01

7 Press Jog Dial.

SELECT AM/PM AND
PRESS JOG DIAL
11:01AM

8 Select "AM" or "PM" by turning Jog Dial, and then press Jog Dial.

You hear a long confirmation beep. Then the phone starts counting time.

Notes

- Do not allow more than 60 seconds to elapse during the operation procedure.
- "SUN 12:00AM" on the display of the base phone flashes when the day and time is cleared due to a power interruption, or when you connect the base phone to the AC outlet for the first time.
- If the current day and time are not set, you will not hear a time stamp when you play back recorded messages.
- When "ERROR" appears on the display and five short error beeps are heard after Jog Dial is pressed in step 8, move the cordless handset closer to the base phone, make sure the base phone is not in use, and then start over the procedure.

Tip


When you select "(GO BACK)", you can return to the previous set display by pressing Jog Dial.

Setting up the EZ Access function

Many telephone companies and service providers nowadays offer low-rate long distance calls separate from your standard long distance provider. Such services are usually initiated by dialing an access number prior to the long distance call itself.

The EZ Access function enables you to dial the access number of these special long distance service companies by pressing just **(EZ ACCESS)**. After setting up the access number, you only need to press **(EZ ACCESS)** for dialing the access number of your special long distance carrier.

You can set up the EZ Access function both the base phone and the cordless handset, further more, you can set up an identical access number on each unit (base phone and cordless handset).

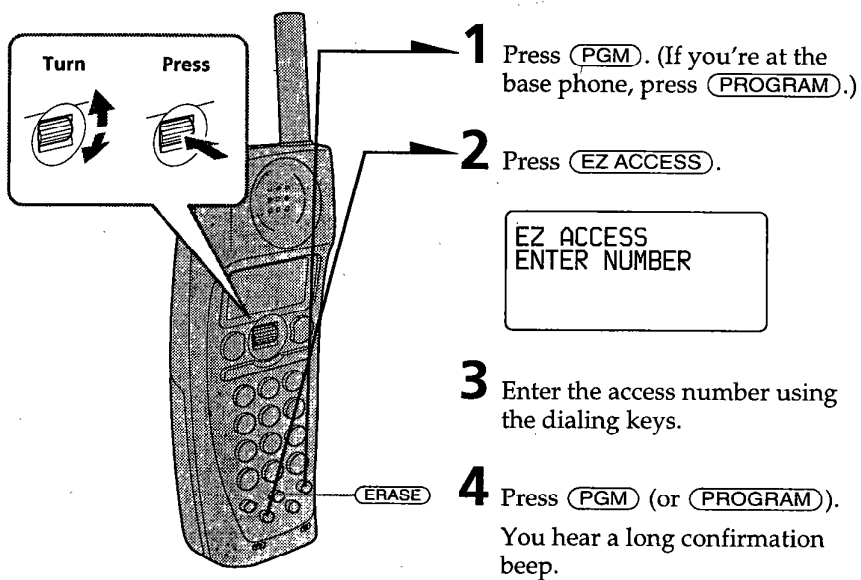

continued

予備機 →
92222 →
2支線付機。

Setting up the EZ Access function (continued)

Notes

- Do not allow more than 60 seconds to elapse during the operation procedure.
- You can register up to 32 digits as an access number.

Tip

When you select "(GO BACK)", you can return to the previous set display by pressing Jog Dial.

To change the access number

- 1 Perform steps 1 and 2 on page 23.

The current access number appears on the display.

- 2 Press (ERASE) to erase the current access number.
- 3 Enter a new access number using the dialing keys.
- 4 Press (PGM). (If you're at the base phone, press (PROGRAM).)

You hear a long confirmation beep.

To store a number to be dialed via Private Branch Exchange (PBX)

Before entering a phone number in step 5 on page 44, do as follows:


- 1 Enter the outside line access digit (e.g., 9).
- 2 Press (REDIAL/PAUSE).

Changing the language of the display

You can choose English or Spanish as the display language by following the procedure below.

You can select the display language both the base phone and the cordless handset, further more, you can select the display language on each unit (base phone and cordless handset).

To change the language from English to Spanish

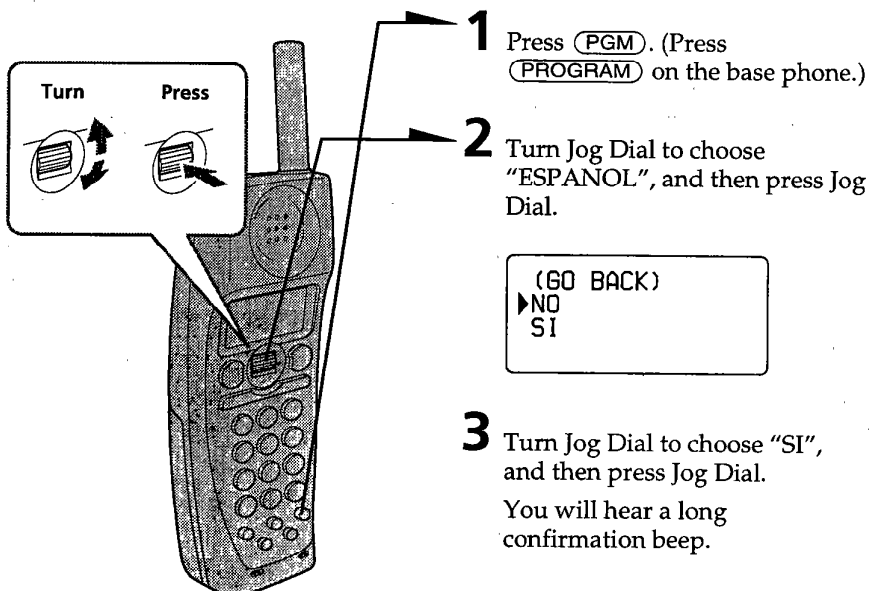

Note

Do not allow more than 60 seconds to elapse during the operation procedure.

continued

Changing the language of the display (continued)

To change the language from Spanish to EnglishSpanish

- 1 Press **(PGM)**. (Press **(PROGRAM)** on the base phone.)
- 2 Turn Jog Dial to choose "ENGLISH", and then press Jog Dial.

(REGRESAR)
▶ NO
YES



- 3 Turn Jog Dial to choose "YES", and then press Jog Dial.

You will hear a long confirmation beep.

子機と増設子機を
一箱に17
この位置に
17枚貼る。

Assigning a station number on the cordless handsets (supplied or additional)

Therefore, this phone system can be expanded to total four cordless handsets. The base phone station number is 0, and the supplied cordless handset station number is 1. You can enhance the system by adding up to three cordless handsets (not supplied). Station numbers from 2 through 4 will be automatically assigned to the cordless handsets in order of registration. Before you start assigning, set all the unit of the system in standby mode and place them close to each other (within a distance of 30 cm). Do the following procedure only on the additional cordless handset.

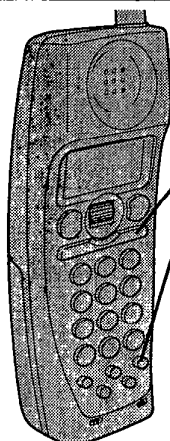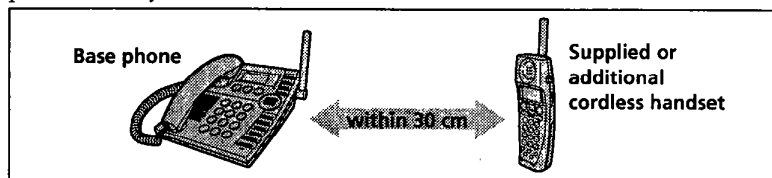

1 Press **(PGM)**.

2 Press **(INTERCOM)**.
You hear a confirmation beep.

ENTER SYSTEM ID
-

3 Enter the 10 digits system ID by pressing the dialing keys.
The system ID is shown on a sticker affixed to the bottom of the base phone.

4 Press **(PGM)**.

You hear a long confirmation beep and the assigned station number is displayed.

Notes


- Do not allow more than 60 seconds to elapse during the operation procedure.
- Once you add a cordless handset to the base phone system, you cannot change the station numbers, or cancel the additional registrations.
- When you press any button other than **(PGM)** to use an unregistered cordless handset, the message "PLEASE REGISTER THIS HANDSET" will appear on the display, and five short error beeps will be heard. You must first register the cordless handset you want to add to the system.
- If you try to register a cordless handset which you already have added to the system, the five short error beeps will be heard and the registration will be canceled.
- If the registration is unsuccessful, "ERROR" will appear on the display, and five short error beeps will be heard after **(PGM)** is pressed in step 4. Move the cordless handset closer to the base phone, and then start over the procedure.

Getting Started 27^{US}

Identifying the parts


Refer to the pages indicated in parentheses for details.

Base phone

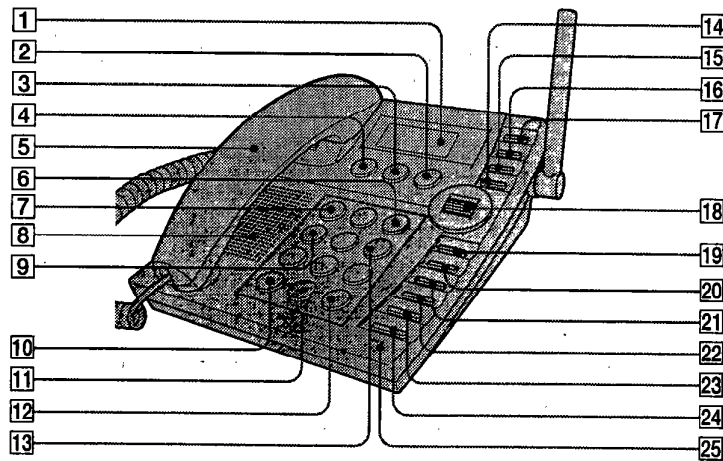

- | | |
|---|---|
| 1 Display window (p. 35, 68, 76) | 9 REVIEW button (p. 69)
Keep the button pressed for a playback review of the current message. |
| 2 MEMO REC button (p. 73)
Records a memo message. | 10 * TONE button (p. 33)
Allows you to switch temporarily to tone dialing. |
| 3 MESSAGE PLAY/STOP button (p. 68)
Plays back recorded messages. | 11 Dialing keys (p. 35) |
| 4 ANSWER ON/OFF button (p. 67, 68)
Turns the answering function on or off. Lights when the answering function is on, and flashes when a new message is recorded. | 12 # button (p. 83)
Used to change the number of digits of the phone number in the Caller ID list. |
| 5 Handset (p. 12, 35, 41) | 13 QUICK button (p. 69)
Keep the button pressed for quick playback of messages. |
| 6 ▶▶ SKIP button (p. 69)
Press to skip to the next message. | 14 ERASE button (p. 24, 71) |
| 7 ◀◀ REPEAT button (p. 69)
Press once to repeat the current message or twice to go back to the previous message. | 15 PROGRAM button (p. 23) |
| 8 Speaker | 16 VOL – button (p. 35, 69)
Adjusts the handset or speaker volume. |

28^{us} Getting Started

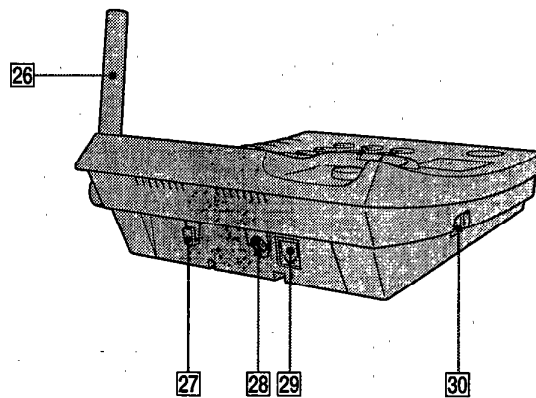


- 17 VOL + button** (p. 35, 69)
Adjusts the handset or speaker volume.
- 18 Jog Dial** (p. 21, 77)
- 19 EZ ACCESS button** (p. 23, 35)
Lets you make a long distance call with the registered access number.
- 20 REDIAL/PAUSE button** (p. 37)
Redials one of the last five numbers called / inserts a pause in the dialing sequence.
- 21 CALL WAITING/FLASH button** (p. 36, 85)
Switches to a second call if you have "call waiting" service, or lets you make a new call.
- 22 INTERCOM button** (p. 56)
Lets you talk between the base phone and cordless handset.
- 23 HOLD button** (p. 36)
Puts a call on hold.
- 24 SPEAKERPHONE button** (p. 35)
Lets you make or receive a call.
- 25 MIC (microphone)** (p. 60, 73)
- 26 Antenna** (p. 12, 86)
- 27 Hook for AC power adaptor cord** (p. 12, 86)
- 28 DC IN 9V jack** (p. 12, 86)
- 29 LINE (telephone line) jack** (p. 12, 86)
- 30 HANDSET jack** (p. 12)

continued


Getting Started **29**

Identifying the parts (continued)

Cordless handset

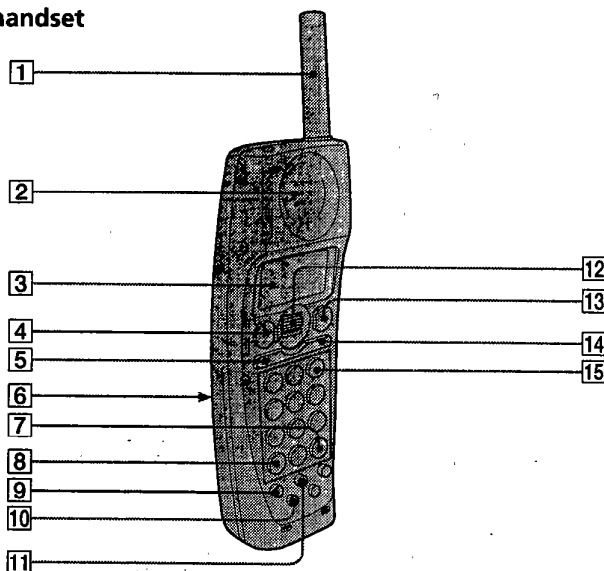

- 1 Antenna**
- 2 Speaker**
- 3 Display window** (p. 32, 76)
- 4 TALK button** (p. 32)
Lets you make or receive a call.
- 5 HOLD/PLAY BACK button**
(p. 33, 68, 72)
Puts a call on hold/plays back recorded messages.
- 6 Battery compartment** (p. 14)
- 7 # button** (p. 83)
Used to change the number of digits of the phone number in the Caller ID list.
- 8 * TONE button** (p. 33)
Allows you to switch temporarily to tone dialing.
- 9 CALL WAITING/FLASH button**
(p. 33, 85)
Switches to a second call if you have "call waiting" service, or lets you make a new call.
- 10 EZ ACCESS button** (p. 23, 33)
Lets you make a call with the registered access number.
- 11 ERASE button** (p. 18, 45, 71)
- 12 Jog Dial** (p. 17, 43, 77)
- 13 OFF button** (p. 32, 40)
Allows you to disconnect the call.
- 14 INTERCOM button** (p. 54, 55)
Lets you talk between the base phone and the cordless handset.
- 15 ►► SKIP button** (p. 69)
Press to skip to the next message.

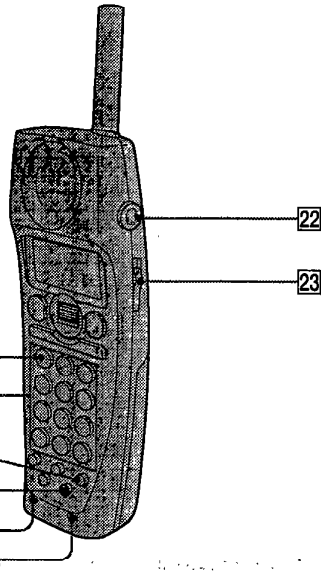


- 16** **◀ REPEAT button** (p. 69)
Press once to repeat the current message or twice to go back to the previous message.
- 17** **Dialing keys** (p. 32)
- 18** **PGM (program) button**
(p. 17, 43)
- 19** **REDIAL/PAUSE button**
(p. 24, 37)
Redials one of the last five numbers called/inserts a pause in the dialing sequence.
- 20** **RINGER**
- 21** **MIC (Microphone)**
- 22** **◻ (HEADSET) jack** (p. 33, 39, 87)
- 23** **VOL (volume) switch** (p. 33)
Adjust the cordless handset volume.

Getting Started **31**¹²³

Basics

Making calls

Making calls with the cordless handset

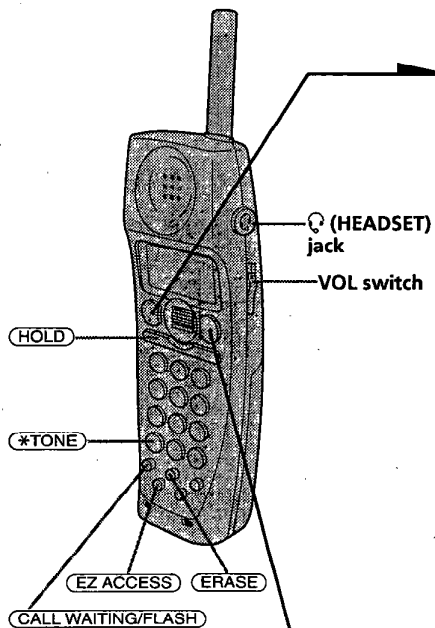

1 Pick up the cordless handset from the charger.

2 Press **TALK** and wait until "TALK" appears on the display and the display also shows the talk time in hours, minutes and seconds.

The dialing keys light up.

You then hear a dial tone.

"HANDSET 1 IN USE" appears on the display of the base phone when the cordless handset with the station number "1" is in use.

If you hear five short error beeps and "NO CONNECTION" appears on the display, move closer to the base phone.

3 Dial the phone number.

4 When you're done talking, press **OFF** or replace the cordless handset on the charger.


The display turns off.

To make a call after checking the phone number

You can dial the phone number before pressing **TALK** or **EZ ACCESS**. If you make a mistake when dialing the phone number, press **ERASE** to erase the number.

Making calls when the headset is connected


When a headset (optional) is connected to the (HEADSET) jack on the cordless handset, you can talk through the headset.

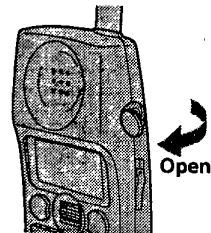

Making calls using the EZ Access function

To set up the access number, see "Setting up the EZ Access function" on page 23.

- 1 Pick up the cordless handset from the charger.
- 2 Dial the phone number (e.g., 1-201-123-4567, or 011-...).
- 3 Press (EZ ACCESS).
"TALK" appears on the display.

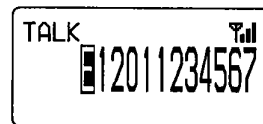

- 4 When you're done talking, press (OFF) or replace the cordless handset on the charger.

Note

When you have registered a phone number in (EZ ACCESS), skip step 2.

Additional tasks

To	Do this
Adjust the cordless handset volume	Set the VOL switch to H (high), M (middle) or L (low).
Put a call on hold	Press (HOLD). "HOLD" appears on the display. Press (HOLD) again or pick up the cordless handset from the charger (When Quick talk is set to "ON"; see page 40) to resume the conversation.
Switch to tone dialing temporarily	Press (*TONE) after you're connected. The line will remain in tone dialing until disconnected.
Switch to another call ("call waiting" service*)	Press (CALL WAITING/FLASH). Press (CALL WAITING/FLASH) again to return to the first caller.

* You need to subscribe to this service from your telephone company.

continued

Basics 33^{US}

Making calls (continued)

Notes

- When making a call on the cordless handset, "📶" appears on the display indicating the receiver sensitivity with the base phone. Three bars indicate a good reception, no bar indicates a bad reception. When calling from an area with poor reception, you may experience interference or the call may be disconnected, so try to use the cordless handset in areas that have a good reception.
- When you increase the sound volume, in some cases the back ground noise may be increased as well. You should adjust the volume accordingly.
- If the cordless handset beeps every second during a conversation and "📶" appears on the display, move closer to the base phone; otherwise, you will hear five short error beeps and "NO CONNECTION" will appear on the display, and the call will be disconnected after 30 seconds.
- While talking with an outside caller via the base phone, you cannot make a call with the cordless handset. If you press (TALK), "NO CONNECTION" appears on the display and you will hear five short error beeps.
- When the talk time exceeds 9:59:59, the display counts from 0:00:00 again.

If the battery becomes weak during a call

The cordless handset will beep twice per second, "BATTERY LOW" appears on the display. Finish your call and replace the cordless handset on the charger to charge the battery pack.

For optimum performance, charge the battery for a full 12 hours.

Note that during the initial charge time (approx. 10 minutes), "PLEASE WAIT..." and "BATTERY LOW" appear on the display and the cordless handset cannot be used.


After "BATTERY LOW" turns off, you **may** be able to use the cordless handset, but the battery duration will be **very short**; thus it is recommended that you **fully charge** the battery before next use.

Making calls with the base phone

Pick up the handset or press **(SPEAKERPHONE)** on the base phone. "TALK" or "SPEAKERPHONE" appears on the display and the display also shows the talk time in hours, minutes and seconds.

Dial the phone number.

When you're done talking, replace the handset in the cradle or press **(SPEAKERPHONE)** again.

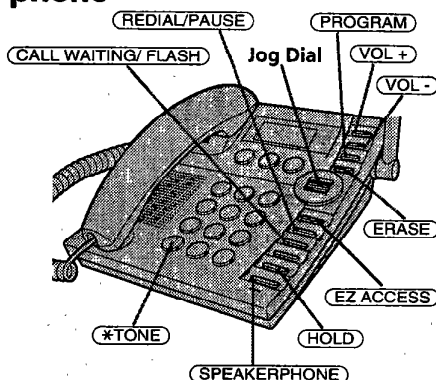

To make a call after checking the phone number

You can dial the phone number before picking up the handset or before pressing **(SPEAKERPHONE)**. If you make a mistake when dialing the phone number, press **(ERASE)** to erase the number.

Making calls using the EZ Access function

To set up the access number, see "Setting up the EZ Access function" on page 23.

- 1 Dial the phone number (e.g., 1-201-123-4567, or 011-...).
- 2 Press **(EZ ACCESS)**.
"SPEAKERPHONE" appears on the display.



- 3 When you're done talking, or press **(SPEAKERPHONE)** again.

Note

When you have registered a phone number in **(EZ ACCESS)**, skip step 2.

continued

Basics 35th

Making calls (continued)

Additional tasks

To	Do this
Adjust the handset or speakerphone volume	During phone conversation, press (VOL-) or (VOL+) . There are 3 steps for the handset volume level, and 7 steps for the speakerphone volume level.
Put a call on hold	Press (HOLD) . "HOLD" appears on the display. Press (HOLD) , (SPEAKERPHONE) , or pick up the handset from the base phone to resume the conversation.
Switch to tone dialing temporarily	Press (*TONE) after you're connected. The line will remain in tone dialing until disconnected.
Switch to another call ("call waiting" service*)	Press (CALL WAITING/FLASH) . Press (CALL WAITING/FLASH) again to return to the first caller.

* You need to subscribe to the service from your telephone company.

Notes

- While talking with an outside caller via the cordless handset, the display on the base phone shows "HANDSET 1 IN USE" when the cordless handset with the station number "1" is in use, and you cannot make a call with the base phone.
- When the talk time exceeds 9:59:59, the display counts from 0:00:00 again.

Tip


You can switch between phone conversations via the handset and those via the speakerphone, simply by picking up the handset while talking over the speakerphone, or by pressing **(SPEAKERPHONE)** while talking over the handset.

To obtain the best speakerphone performance

- You may not be able to hear the other party's voice in a noisy place. Therefore, use the speakerphone in a quiet room.
- Do not bring your hand or other object too close to the microphone or you will hear a shrill noise ("feedback").
- When the speaker volume is loud, or the base phone has been placed close to a wall, you may find that the volume drops suddenly. This is due to a circuit in the telephone designed to protect against feedback. In such cases, lower the speaker volume slightly.

Redialing

Both the base phone and the cordless handset can each individually store five dialed phone numbers.

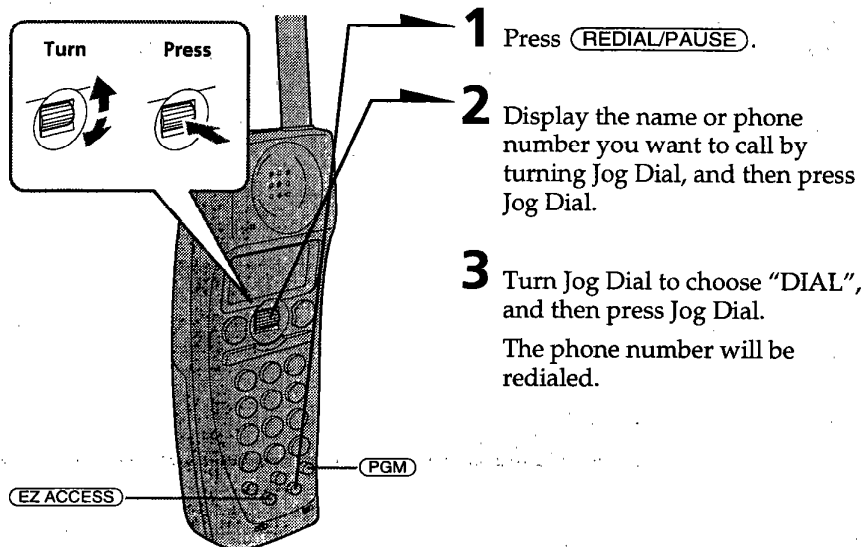

Notes

- The redial memory only registers up to 32 digits. Exceeding numbers will not be redialed.
- If an access number of the long distance call is registered in **EZ ACCESS**, the number cannot be stored for the redial button use. To redial long distance calls with **EZ ACCESS**, press **EZ ACCESS** instead of above step 3.

Tips

- Although the phone number displayed on the redial list is up to 15 digit, the redialing will be successful.
- If you redial the same number repeatedly, this number will only be counted as one number of the total five registered numbers that can be redialed.
- When dialing from a phone number with a registered name, that name will be displayed in the list in step 2.

continued

Basics 37^{US}

Making calls (continued)

To store the dialed phone number into the Phone Directory

- 1 Display the name or phone number you want to store by doing steps 1 and 2 on page 37.
- 2 Turn Jog Dial to choose "PROGRAM", and then press Jog Dial.
- 3 Enter the name by doing steps 3 and 4 on pages 43 to 44.
- 4 Press **(PGM)**. (If you're at the base phone, press **(PROGRAM)**.)
You hear a long confirmation beep, and the name and the number are stored.

Note

The dialed phone numbers of up to 20 digits can be stored in the Phone Directory.

To erase the dialed phone number one by one

- 1 Display the name or phone number you want to erase by doing steps 1 and 2 on page 37.
- 2 Turn Jog Dial to choose "ERASE REDIAL", and then press Jog Dial.
- 3 Turn Jog Dial to choose "YES", and then press Jog Dial.
You hear a long confirmation beep, and the number is erased.

To erase the entire dialed phone numbers at once

- 1 Press **(PGM)**. (If you're at the base phone, press **(PROGRAM)**.)
- 2 Turn Jog Dial to choose "MEMORY MANAGE", and then press Jog Dial.
- 3 Turn Jog Dial to choose "ERASE ALL RDL", and then press Jog Dial.
- 4 Turn Jog Dial to choose "ERASE REDIAL", and then press Jog Dial.
You hear a long confirmation beep, and the entire number are erased.