SONY

Operating Instructions


SRF-V1BT

FM/AM RADIO with Bluetooth SPEAKER


**Bluetooth**®





©2016 Sony Corporation Printed in China

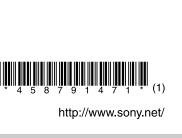


4-587-914-**71**(1)

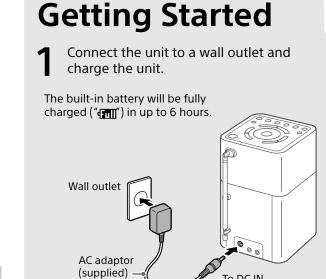

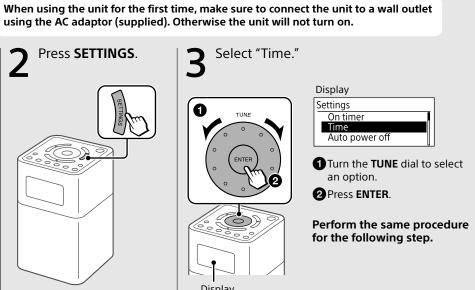


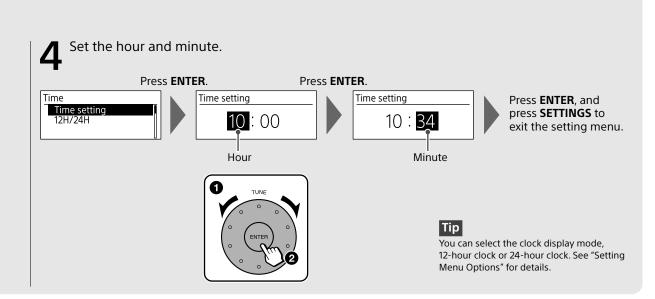





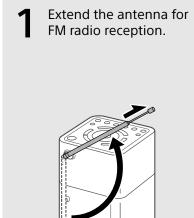



94.00мнz

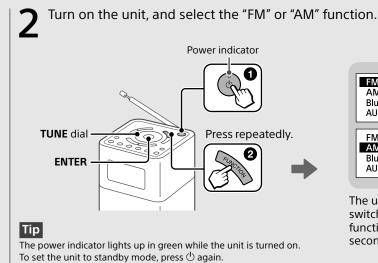


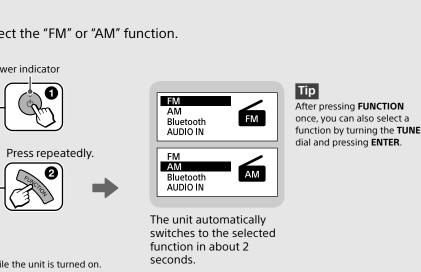

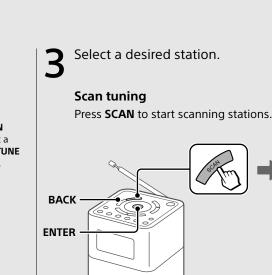

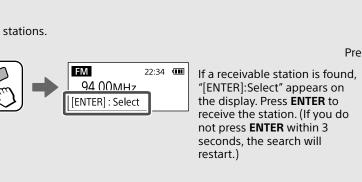

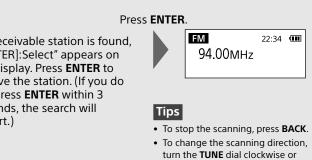


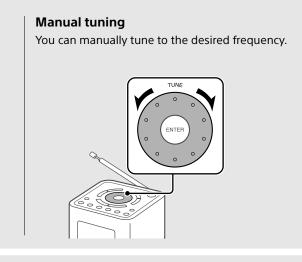


### **Presetting stations (5 FM and 5 AM)**


Tune to the station you want to preset. Follow the steps in "Listening to the Radio" above. 22:34



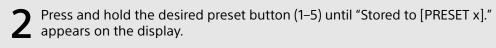


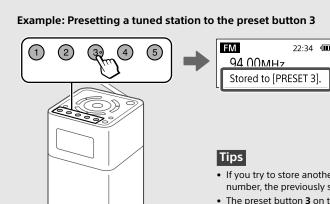



To improve FM/AM radio reception

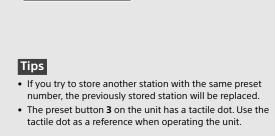


### Listening to a preset station

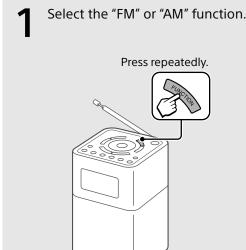


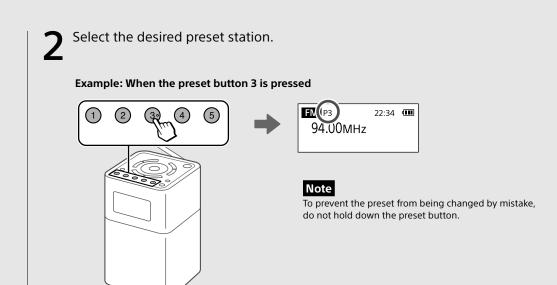


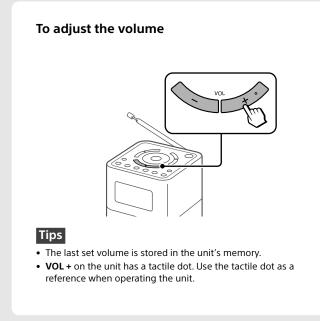

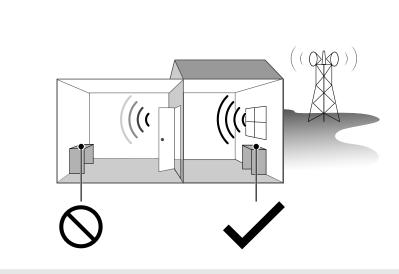




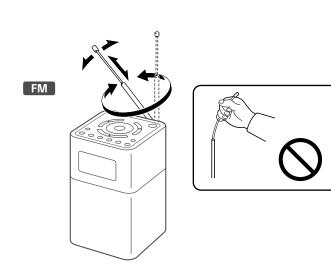


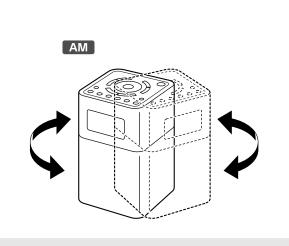








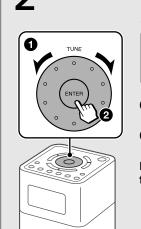


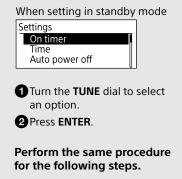


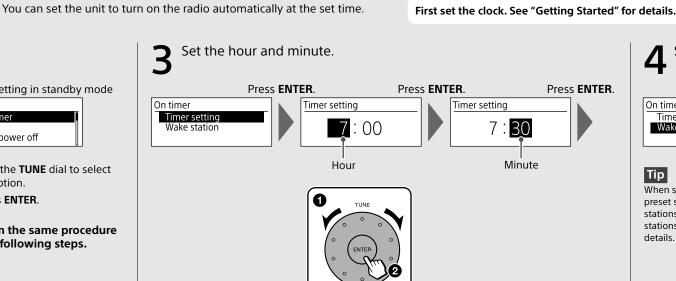

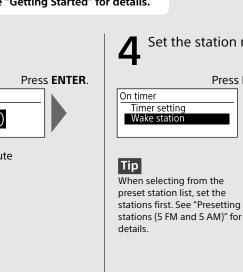

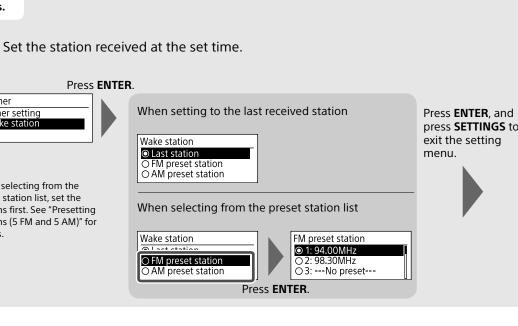


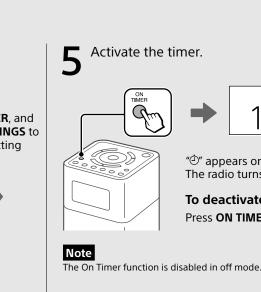

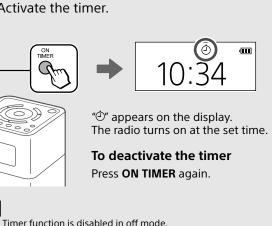

# **Listening to Music from a BLUETOOTH Device**


Using the BLUETOOTH connection, you can listen to music from wirelessly connected BLUETOOTH devices such as smartphones, tablets, PCs, etc.

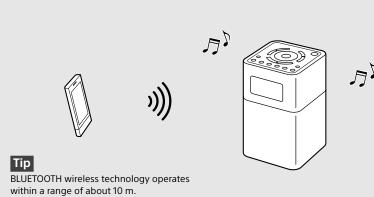

**Compatible BLUETOOTH devices** Compatibility requirements for the devices are as follows. Before using a device with this unit, check that it meets • Devices must support A2DP (Advanced Audio

Distribution Profile) and AVRCP (Audio/Video Remote • NFC capability (required only when using the NFC pairing function of the unit).

About the BLUETOOTH standby mode The BLUETOOTH standby mode enables the unit to turn on automatically by making a BLUETOOTH connection from a BLUETOOTH device. See "Setting Menu Options" for details.

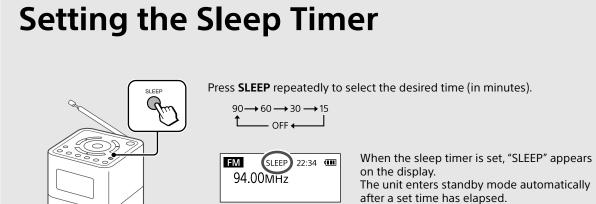

### **Connecting with a BLUETOOTH device**


If your BLUETOOTH device has an NFC function, this procedure is unnecessary. See "Connecting by One-touch (NFC)" below.


Turn on the unit, and select the "Bluetooth" function. Press repeatedly.

When using the unit for the first time (if there is no pairing information in the unit) The unit will automatically switch to pairing mode. In this case, proceed to step 3.

When connecting with the second and subsequent devices Proceed to step 2.



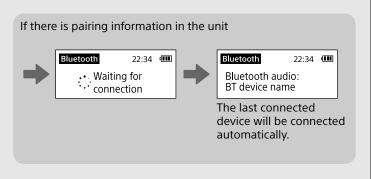

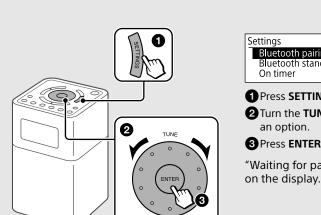



Select "Bluetooth pairing."




If your NFC-compatible smartphone has an OS

version that is older than Android 4.1.x,

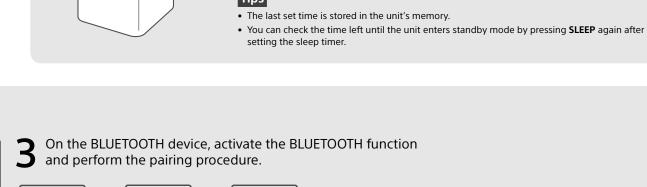

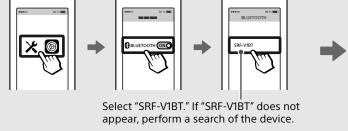

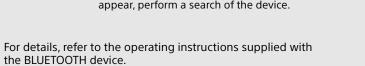

Bluetooth Bluetooth audio: When pairing is completed, the BLUETOOTH device's name will appear on the display.

> To terminate the BLUETOOTH connection Select the function other than the BLUETOOTH

# Connecting by One-touch (NFC)


Compatible smartphones Smartphones with the NFC function built-in (OS: Android™ 2.3.3 or later, excluding Android 3.x)


NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as smartphones and IC tags. Thanks to the NFC function, data communication – for example, BLUETOOTH pairing – can be achieved easily by simply touching NFC-compatible devices together (i.e., at the N-Mark symbol or location designated on each device).



Turn on the NFC function of

the BLUETOOTH device.

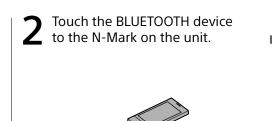

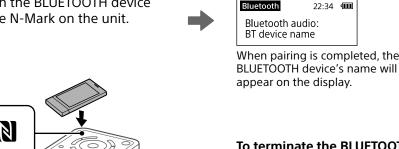

connection

N-Mark on the unit.

download and start the "NFC Easy Connect" application. "NFC Easy Connect" is a free application for Android smartphones that can be obtained from Google Play™. (The application may not To terminate the BLUETOOTH

# be available in some countries/regions.) Touch the BLUETOOTH device to the

### **Listening to music**

Start playback on the

BLUETOOTH device.


If you are prompted to enter a passkey, enter "0000."







## Listening to Music from an External Device

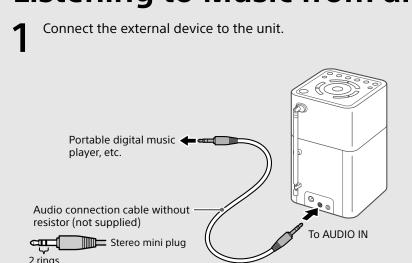

Turn on the unit, and select the "AUDIO IN" function. Press repeatedly The unit automatically switches to the selected function in about 2 seconds.

3 Start playback on the connected device and adjust the volume.

Start playback on the connected

### **Setting the Brightness of the Display**




Press repeatedly to select the desired brightness.  $High (default) \rightarrow Middle \rightarrow Low$ 

When the unit is powered by the built-in battery, the backlight of the display turns off in about half a minute after operation

### **Listening through Headphones**

Connect headphones that have a stereo or monaural\* mini plug (not supplied).

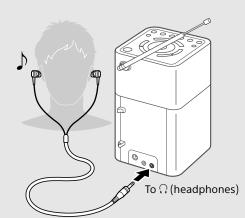


Use headphones with a stereo (3-pole) or monaural (2-pole) mini plug. No sound is heard when using other types of plugs.

Compatible plug types Other types of plugs

 When listening to stereo sound using monaural headphones, you will hear sound from the left channel only.

### **Setting to Off Mode**

You can set the unit to off mode to reduce the power consumption if you do not use the unit.

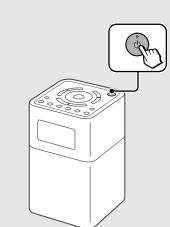


Press and hold 1 for about 2 seconds to set to off mode. The display turns off.

The On Timer function is disabled in off mode

When pressing (b) while the unit is turned on, the unit enters standby mode. In standby mode, the backlight of the display can be turned on if desired and the On Timer function is enabled.

### **Setting Menu Options**

#### **Basic Operations:**

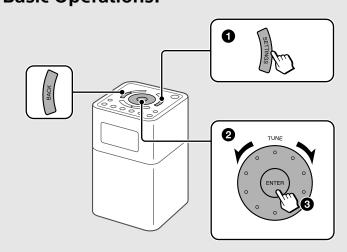

To go back to the upper menu level Press **BACK**.

to exit the setting menu Press **SETTINGS** again.

#### **BLUETOOTH options**

BLUETOOTH options can be set when the "Bluetooth" function is selected.

### Bluetooth pairing

See "Connecting with a BLUETOOTH

#### Bluetooth standby When the BLUETOOTH standby mode

is set to "On," the unit enters waiting mode for a BLUETOOTH connection even when the unit is in standby mode. When making a BLUETOOTH connection from a BLUETOOTH device, the unit turns on automatically.

• Set the BLUETOOTH standby mode to "Off" to reduce the power consumption when the unit is in standby mode • The power indicator lights up in umber while the unit is in standby mode, and when the

BLUETOOTH standby mode is turned on.

If the AC adaptor is unplugged, the BLUETOOTH standby mode is disabled.

### Other options

#### On timer

See "Setting the On Timer." Time setting: Sets the clock. See "Getting Started" for details. Sound **12H/24H:** Select the clock display

Time

mode, 12-hour clock or 24-hour clock.

Select "On" to activate the beep sound

The clock will be reset if the AC adaptor is

unplugged and the built-in battery is


when you operate the unit.

completely exhausted

Beep

You can adjust the sound level. Treble: Adjusts the level of highpitched sound.

Bass: Adjusts the level of low-pitched

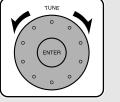

#### Auto power off

When "Auto power off" is set to "Enable (15min)," the unit enters standby mode automatically in about 15 minutes if there is no operation or audio signal output.

factory default settings. All settings, such as preset radio stations and the pairing registration information, will be

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers. tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles). To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus. Do not install the appliance in a

confined space, such as a bookcase or built-in cabinet Excessive sound pressure from

earphones and headphones can cause hearing loss.

Do not expose the batteries (battery

pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

The nameplate is located on the bottom exterior.

### Owner's Record

The model and serial numbers are located on the bottom of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. SRF-V1BT Serial No.

#### **Important Safety Instructions** 1) Read these instructions.

- 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions
- 5) Do not use this apparatus near 6) Clean only with dry cloth.

stoves, or other apparatus

- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8) Do not install near any heat sources such as radiators, heat registers,
- (including amplifiers) that produce 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety.
- electrician for replacement of the obsolete outlet. 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles,

If the provided plug does not fit

into your outlet, consult an

and the point where they exit from the apparatus. 11) Only use attachments/accessories specified by the manufacturer 12) Use only with the cart,

stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid

injury from tip-over. 13) Unplug this apparatus during

lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The following FCC/IC statement applies only to the version of this model manufactured for sale in the **USA** and Canada. Other versions may not comply with FCC/IC technical regulations.

### NOTE:

For United States customers. Not applicable in Canada, including in the province of Ouebec.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving

- antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation.

#### CAUTION You are cautioned that any changes or

modifications not expressly approved in this manual could void your authority to operate this equipment. This equipment must not be co-

located or operated in conjunction with any other antenna or transmitter. This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from

person's body (excluding extremities

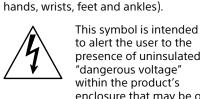

presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying

the appliance. This graphical symbol is located on the bottom of the unit.

Notice for the customers in Canada This device complies with Industry Canada licence-exempt RSS

standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

### **Precautions**

- Operate the unit only on the power sources specified in "Specifications." For AC operation, use only the supplied AC adaptor. Do not use any other type of AC adaptor
- Failure to use the supplied AC adaptor may cause the unit to malfunction, as the polarity of the plugs of other manufacturers may be different.



- When operating the unit on the built-in battery, it is recommended that you remove the AC adaptor from the wall outlet and the DC IN jack. Disconnect the plug of the external power source
- before operating the unit. • Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust or mechanical shock. Never leave in a car parked in the sun. • Do not expose the unit to strong
- impact or excessive force. A glass material is used for the display in some models. If the glass chips or cracks, it may cause injury. In that case, stop using the unit immediately and make sure not to touch the damaged parts. • Should any solid object or liquid fall into the unit, disconnect the AC
- adaptor, and have the unit checked by a qualified personnel before operating it any further. • Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-
- wound watches away from the unit to prevent possible damage from the magnetism. • To clean the casing, use a soft dry cloth. Do not use any type of solvent, such as alcohol or benzine, which may damage
- the finish • Do not operate the unit with wet hands since it may cause a short circuit. • Make sure not to splash water on the
- unit. This unit is not waterproof. • When you do not use the unit for a long time, charge the battery every 6
- Under certain circumstances, especially when the air is very dry, it is not uncommon to experience a discharge of static electricity, or shock, when your body comes in contact with another object, in this case the ear buds touching your ear(s). The energy from this natural discharge is extremely small and is not emitted by your

product but rather a natural

environmental occurrence. Listening with this unit at high volume may affect your hearing. For traffic safety, do not use this unit while driving

If you have any questions or problems concerning your unit, please consult your nearest Sony

### **Troubleshooting**

Should any problems persist after you have made the following checks, consult your nearest Sony dealer.

#### General Display is dim, or no indication is

displayed. • The unit is being used in extremely high or low temperatures or in a place with excessive moisture.

The volume cannot be turned up when the unit is powered by the built-in battery.

· When the remaining battery level gets low (when the battery icon is empty), the maximum volume level is limited to "22." Charge the unit by connecting the AC adaptor (supplied)

The volume level is low in the "Bluetooth" function or the "AUDIO IN" function compared with the volume level when listening to the radio.

• Adjust the volume on the connected

#### device. The unit enters standby mode automatically.

• By default, this unit is set to enter standby mode automatically after about 15 minutes of no operation or audio signal output. See "Auto power off" in "Setting Menu Options" for details.

### Radio

- Very weak or interrupted sound, or unsatisfactory reception. • If you are in a building, listen near a
  - Extend the antenna and adjust the length and the angle for best reception • If a mobile phone is placed close to the unit, a loud noise may be heard from the unit. Keep the phone away from

#### A desired station cannot be received when a preset button is pressed.

- Make sure you have selected the desired band (FM or AM) before you press the preset button. One station for each band can be set to each button. • You may have held down the preset
- button to which the station was assigned, causing the station to be replaced by a new one. Assign the desired station again. • Preset buttons cannot be used when the setting menu is displayed.

#### · If you have moved to another region, assign the new station to a preset

**BLUETOOTH** 

There is no sound. Make sure that this unit is not too far from the BLUETOOTH device, or that this unit is not receiving interference from a wireless LAN, another 2.4 GHz

wireless device, or a microwave oven

- Check that the BLUETOOTH connection was completed properly between this unit and the BLUETOOTH device. • Perform pairing again. (See
- "Connecting with a BLUETOOTH device.") Keep away from metal objects or • Make sure that the BLUETOOTH

function is activated on the

#### BLUETOOTH device. The sound skips or the correspondence distance is short.

- If a device that generates electromagnetic radiation, such as a wireless LAN, other BLUETOOTH device(s), or a microwave oven is nearby, move away if possible. Or use the device and the unit away from such sources.
- Remove any obstacle between this unit and the device or move the device and the unit away from the obstacle. • Locate this unit and the device as close
- to each other as possible. • Re-position this unit. • Try using the BLUETOOTH device in another position.

#### A connection cannot be established. Depending on the device to be

- connected, it may require some time to start communication • Perform pairing again. (See steps 2 and
  - 3 of "Connecting with a BLUETOOTH • To listen to music on a device that does not have a BLUETOOTH function, such as a PC without BLUETOOTH function,

connect the device to the AUDIO IN

jack on the unit. (See "Listening to

Music from an External Device" for details.) • A BLUETOOTH connection with two BLUETOOTH devices cannot be

#### established at the same time. Pairing fails.

- Bring the BLUETOOTH device closer to the unit. • Make sure that the BLUETOOTH function is activated on the BLUETOOTH device.
- If the BLUETOOTH connection cannot be established after pairing is completed, perform step 3 of "Connecting with a BLUETOOTH
- · Delete the model name of this unit from the BLUETOOTH device and perform pairing again. (See steps 2 and 3 of "Connecting with a BLUETOOTH

#### Pairing using the NFC function fails. • Try pairing manually. (See "Connecting with a BLUETOOTH device.") Some NFC-compatible smartphones may not

- be paired using the NFC function of this unit, depending on the features or specifications of the device. • Relaunch "NFC Easy Connect" and move the smartphone slowly over the
- N-Mark. Check that the smartphone meets the compatibility requirements. (See "Compatible smartphones" in "Connecting by One-touch (NFC).")

### If the unit still does not operate

Try pressing **RESET** on the bottom using a thin rod. The unit will restart, retaining the



If maintenance service is performed All user-configured settings, such as preset radio stations, the sleep timer, and the clock may be initialized Please note your settings in case you need to configure them again

### Messages

No preset No station in the selected band (FM or AM) has been preset to the pressed button.

# **Specifications**

**AUDIO POWER SPECIFICATIONS** POWER OUTPUT AND TOTAL HARMONIC DISTORTION (The United States model only) With 6-ohm loads, both channels driven from 150 Hz — 10.000 Hz: rated 1.5 W per channel-minimum RMS power, with no more than 10 %

#### operation. Operating temperature range

total harmonic distortion in AC

#### $5^{\circ}C - 35^{\circ}C (xx^{\circ}F - xx^{\circ}F)$ Time display

24-hour system or 12-hour system Frequency range

#### FM: 87.5 MHz - 108.0 MHz (0.1 MHz step) AM: 530 kHz – 1,710 kHz (10 kHz step)

Intermediate frequency

### FM: 128 kHz AM: 45 kHz

Speaker

Audio power output 2.5 W + 2.5 W (when the unit is

Approx. 45 mm (xx in) dia., 4  $\Omega$ ,

#### powered by the supplied AC adaptor) 1.5 W + 1.5 W (when the unit is powered by the built-in battery)

- BLUETOOTH Communication System **BLUETOOTH Specification version**
- Output **BLUETOOTH Specification Power** Class 2 Maximum communication range Line of sight approx. 10 m (33 feet)\*1
- Frequency band 2.4 GHz band (2.4000 GHz - 2.4835 GHz) Modulation method
- Compatible BLUETOOTH Profiles\*2 (Advanced Audio Distribution Profile) **AVRCP** (Audio/Video Remote Control Profile) Supported Codec\*3
- Transmission range (A2DP) 20 Hz - 20,000 Hz (Sampling frequency 44.1 kHz) \*1 The actual range will vary depending on factors such as obstacles between devices. static electricity, reception sensitivity,

antenna's performance, operating system

\*2 BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices. \*3 Codec: Audio signal compression and conversion format

software application, etc.

#### Input AUDIO IN jack (ø 3.5 mm (xx in), stereo mini jack)

\*4 Subband Codec

∩ (headphones) jack

#### (ø 3.5 mm (xx in), stereo mini jack) Power requirements Built-in lithium-ion rechargeable battery

### Power

#### DC 5.8 V 2.0 A (using the supplied AC adaptor connected to AC 120 V, 60 Hz power supply) or, using built-in lithium-ion battery

#### Usage life of lithium-ion battery BLUETOOTH: Approx. 32 hours\*

- FM: Approx. 31 hours\*1 AM: Approx. 15.5 hours\*1 \*1 When the specified music source is used and the volume level of the unit is set to the
- FM: 25 - AM: 30 BLUETOOTH: Approx. 15 hours\*2 FM: Approx. 25.5 hours\*2 AM: Approx. 15.5 hours\*2

\*2 When the specified music source is used and

### the volume level of the unit is set to **Power consumption**

- BLUETOOTH: 20

At the standby mode 0.6 W or less (when the brightness of the display is set high and the BLUETOOTH

#### standby mode is set to on) At the off mode 0.2 W or less

**Dimensions** Approx. 106 mm  $\times$  172 mm  $\times$  117 mm  $(xx in \times xx in \times xx in) (W/H/D)$ including projecting parts and

### controls

Approx. 880 g (xx lb xx oz) **Supplied accessories** AC adaptor (AC-E5820) (1) Warranty (1)

Design and specifications are

subject to change without notice.

#### **License and Trademark Notice** • The BLUETOOTH word mark and

logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. The N Mark is a trademark or

registered trademark of NFC Forum,

Inc. in the United States and in other

are those of their respective owners.

In this manual, ™ and ® marks are

countries. • Android™ and Google Play™ are trademarks of Google Inc. Other trademarks and trade names

# not specified.

For customers in the USA Please register this product on line at the following website.

http://www.sony.com/ productregistration Proper registration will enable us to send you periodic mailings about new product, services and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the

product needs adjustment or

modification. Thank you.

#### SONY® Portable Audio

LIMITED WARRANTY (U.S. Only) Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship for the time periods and as set forth below when purchased directly from Sony or a Sony Retailer. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive rem-

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Term: For a period of one (1) year from the original date of purchase of the product, Sony will, at its option, repair

or replace with new or refurbished product or parts, any product or parts determined to be defe

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the Sony authorized service facility specified. It is your responsibility to backup any data, software or other materials you may have stored or preserved on your unit. It is likely that such data, software, or other materials will be lost or reformatted during service and Sony will not be responsible for any such damage or loss. A dated purchase receipt from Sony or a Sony Retailer is required. For specific instructions on how to obtain warranty service for your

The Address of the Laredo Fulfillment Center is: Laredo, TX 78045 Visit Sony's Web Site:

www.sony.com/support Or call the Sony Customer Information Service Cente 1-800-222-SONY (7669) For an accessory or part not available from your authorized dealer, call: 1-800-488-SONY (7669

consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the Sony product or product purchased from other than Sony or a Sony Retailler. To determine if a retailer is part of the Sony Retailer Network, please contact Sony's Customer Service Call Center or go to <a href="https://www.sony.com/">www.sony.com/</a> support. This Limited Warranty does not cover Sony products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States. **LIMITATION ON DAMAGES:** SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replace-

ment product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited

Warranty gives you specific legal rights and you may have other rights which vary from state to state.

D455714606

SRF-V1BT [US] 4-587-914-71(1)

Initialize Select "OK" to initialize the unit to the