

秘 | CONFIDENTIAL

SONY[®]

4-540-985-11(1)

AV Center

Operating Instructions **GB**

Mode d'emploi **FR**

Manual de instrucciones **ES**

Owner's Record

The model and serial numbers are located on the bottom of the unit.

Record the serial number in the space provided below.

Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. XAV-68BT

Serial No. _____

To cancel the demonstration (Demo) display, see page 19.
Pour annuler l'affichage de démonstration (Demo), reportez-vous à la page 13.
Para cancelar la pantalla de demostración (Demostración), consulte la página 13.



Video CD



XAV-68BT

XAV-68BT
4-540-985-11(1)

Be sure to install this unit in the dashboard of the car for safety. For installation and connections, refer to the supplied "Installation/Connections" guide.

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation of the device.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

For the State of California, USA only

Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate
Perchlorate Material: Lithium battery contains perchlorate

Note on the lithium battery

Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

Warning if your car's ignition has no ACC position

After turning the ignition off, be sure to press and hold OFF on the unit until the display disappears. Otherwise, the display does not turn off and this causes battery drain.

Notes on BLUETOOTH function

Caution

IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

IMPORTANT NOTICE!

Safe and efficient use

Changes or modifications to this unit not expressly approved by Sony may void the user's authority to operate the equipment.

Please check for exceptions, due to national requirement or limitations, in usage of BLUETOOTH equipment before using this product.

Driving

Check the laws and regulations on the use of cellular phones and handsfree equipment in the areas where you drive.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Connecting to other devices

When connecting to any other device, please read its user guide for detailed safety instructions.

Radio frequency exposure

RF signals may affect improperly installed or inadequately shielded electronic systems in cars, such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems or air bag systems. For installation or service of this device, please consult with the manufacturer or its representative of your car. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to this device.

Consult with the manufacturer of your car to ensure that the use of your cellular phone in the car will not affect its electronic system.

Check regularly that all wireless device equipment in your car is mounted and operating properly.

Emergency calls

This BLUETOOTH car handsfree and the electronic device connected to the handsfree operate using radio signals, cellular, and landline networks as well as user-programmed function, which cannot guarantee connection under all conditions.

Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies).

Remember, in order to make or receive calls, the handsfree and the electronic device connected to the handsfree must be switched on in a service area with adequate cellular signal strength.

Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use.

Check with your local service provider.

Table of Contents

Warning	2
Guide to Parts and Controls	5

Getting Started

Resetting the Unit	7
Setting the Clock	7
Preparing a BLUETOOTH Device	7

Listening to the Radio

Listening to the Radio	8
Storing and Receiving Stations	9
Using Radio Data System (RDS)	9

Playback

Playing a Disc	10
Playing an iPod/USB Device	11
Playing a BLUETOOTH Device	12
Searching and Playing Tracks	12
Available Options	13
Picture EQ	13
Aspect	13
DVD Audio Level	13

Listening to Pandora®

Preparing for Pandora®	14
Streaming Pandora®	14
Available Operations in Pandora®	14

Handsfree Calling

Receiving a Call	15
Making a Call	15
Available Operations During a Call	15
Phonebook Management	16
Call Data Management	16
Phone Option Menu	16

Settings

General Settings	17
Touch Panel Adjust	18
Bluetooth Reset	18
Sound Settings	19
Sound Adjust	19
Screen Settings	19
Visual Settings	19

Additional Information


Auxiliary Audio/Video Equipment	20
Rear View Camera	21
Precautions	21
Maintenance	25

4GB

Specifications	26
Troubleshooting	28
Language Code List	33

Guide to Parts and Controls

Main unit

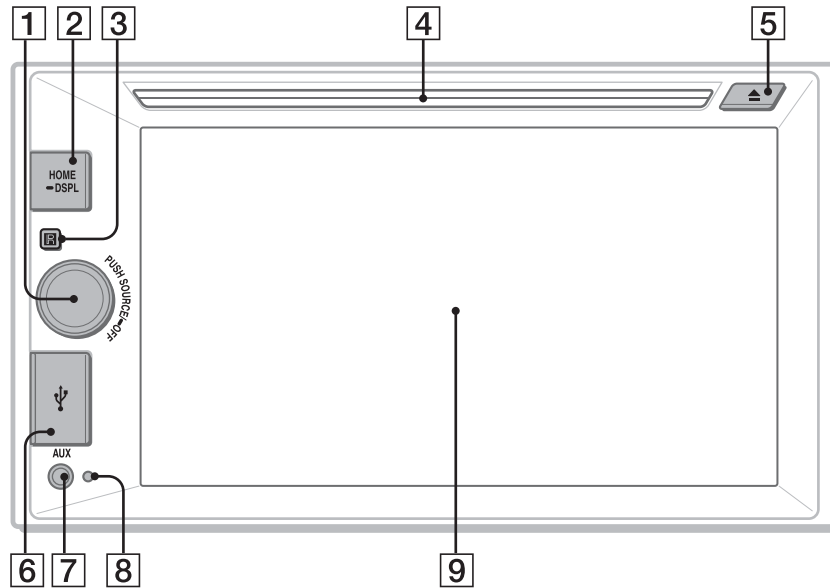


1 SOURCE

Turn on the power.
Change the source. Each press displays a selectable source in a popup on the current display.
-OFF
Press and hold for 1 second to exit the source. Press and hold for more than 2 seconds to turn off the unit. When the unit is turned off, remote commander operation is not available.

Volume control dial

Rotate to adjust the volume.

2 HOME

Open the HOME menu.
When pressed during disc, iPod or USB playback, playback is paused and there is no sound. To resume playback, touch .

-DSPL (display)

Press and hold to open the display menu. The monitor off function is set on the display menu. When the monitor off function is activated, the monitor is turned off. Touch anywhere on the display to turn back on.

3 Receptor for the remote commander

4 Disc slot

5 ▲ (disc eject)

6 USB port

Open the cover to connect a USB device.


7 AUX terminal

8 Reset button

9 Display/touch panel

RM-X170 remote commander

The remote commander can be used to operate the audio controls. For menu operations, use the touch panel.

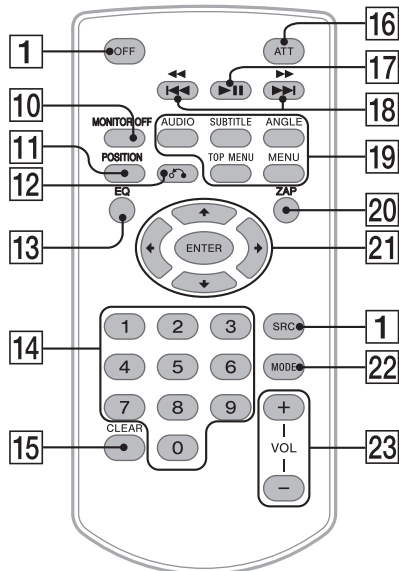

Remove the insulation film before use.




- 10 MONITOR OFF**
- 11 POSITION**
This button is not supported.
- 12 ↶ (return)**
Return to the previous display/return to the menu on a Video CD (VCD).
- 13 EQ (equalizer)**
Select an equalizer curve.
- 14 Number buttons (0 - 9)**
- 15 CLEAR**
- 16 ATT (attenuate)**
Attenuate the sound. To cancel, press again or press VOL +.
- 17 ▶|| (play/pause)**
- 18 ◀◀◀/▶▶▶ (previous/next)**
- 19 DVD playback setting buttons**
- 20 ZAP (zappin)** (page 9)


- 21 ◀/▶/↶/↷ (cursor)/ENTER**
- 22 MODE**
Select the radio band.
- 23 VOL (volume) +/-**

Screen displays

Playback screen:

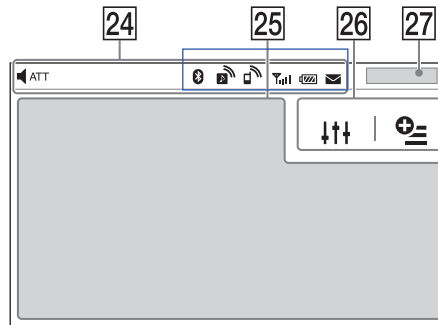

Home screen:

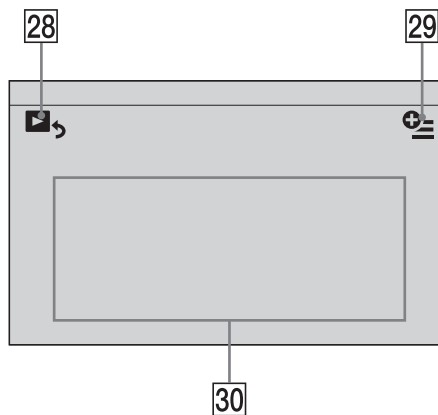

- 24 Indications**

- ◀ ATT
Lights up when the sound is attenuated.

- 📶
Lights up when the BLUETOOTH signal is on.

- 📶
Lights up when a device is connected to the unit for audio streaming.
Flashes when the connection is in progress.



Lights up when a cellular phone is connected to the unit for handsfree calling.
Flashes when the connection is in progress.



Indicates the signal strength status of the connected cellular phone.



Indicates the remaining battery status of the connected cellular phone.



Lights up when a connected cellular phone has unread SMS message(s).

25 Application specific area

Display playback controls/indications or show the unit's status. Displayed items differ depending on the source.

26 Common area



Accesses the Sound Adjust settings menu directly (page 19).



Open the option menu. Option menu differs depending on the source.

27 Clock (page 7)

When the source selects [AUX Front], [AUX Rear] or [Rear Camera], the clock is not displayed.

28

Switch from the HOME screen to the playback screen.

29 (option)

Open the HOME option menu.
Press HOME, then touch .

[Icon View]

Selects the icon display: [Line View] or [Grid View].

To return to the home screen, touch .

30 Source select keys

Change the source.

Getting Started

Resetting the Unit

Before operating the unit for the first time, or after replacing the car battery or changing connections, you must reset the unit.

1 Press the reset button on the unit.

Use a pointed object, such as a ballpoint pen.

Note

Pressing the reset button will erase the clock setting and some stored contents.

Setting the Clock

1 Press HOME, then touch [Settings].

2 Touch , then touch [Clock Adjust].

The setting display appears.

3 Touch to set the hour and minute.

4 Touch [Set].

The setting is complete.

To activate/deactivate the CT function (page 9), touch [Clock Time].

Preparing a BLUETOOTH Device

You can enjoy music, or perform handsfree calling, by connecting a suitable BLUETOOTH device (cellular phone, audio device, etc.). For details on connecting a BLUETOOTH device, refer to the operating instructions supplied with the device. Before connecting, turn down the volume of this unit; otherwise, loud sound may result.

Pairing and connecting with a BLUETOOTH device

When connecting a BLUETOOTH device for the first time, mutual registration (called "pairing") is required. Pairing enables this unit and other devices to recognize each other.

1 Press HOME, then touch [Settings].

2 Touch .

3 Touch [Bluetooth Connection], then set the signal to [ON].

The BLUETOOTH signal of this unit is activated and appears on the status bar.

- 4** Touch [Pairing >].
The unit enters pairing standby mode.
- 5** Perform the pairing procedure on the BLUETOOTH device to detect this unit.
- 6** Select [Sony Car Audio] shown in the display of the BLUETOOTH device.
- 7** If passkey* input is required on the BLUETOOTH device, input [0000].
* Passkey may be called "passcode," "PIN code," "PIN number," "password," etc., depending on the BLUETOOTH device.
- 8** Select this unit on the BLUETOOTH device to establish the BLUETOOTH connection.
📶 or 📶 lights up when the connection is made.

Note

While connecting to a BLUETOOTH device, this unit cannot be detected by another device. To enable detection, terminate the current connection.

Connecting with a paired BLUETOOTH device

This chapter explains how to connect manually to registered BLUETOOTH devices.

- 1** Make sure that the BLUETOOTH signals both on this unit (page 18) and the BLUETOOTH device are activated.
📶 on the status bar indicates that the BLUETOOTH signal on this unit is on.
- 2** Operate the BLUETOOTH device to connect to this unit.
📶 or 📶 appears.

When the ignition is turned to on with the BLUETOOTH signal activated, this unit searches for the last-connected BLUETOOTH device, and connection is made automatically if possible.

Note

If this unit cannot detect the last-connected BLUETOOTH device, touch [Reconnect] to search for the last-paired device again.

If the problem is not solved, follow the pairing procedure.

To install the microphone

To capture your voice during handsfree calling, you need to install the microphone (supplied).


For details on how to connect the microphone, refer to the supplied "Installation/Connections" guide.

Listening to the Radio

Listening to the Radio

To listen to the radio, press HOME then touch [Tuner].

Reception controls/indications

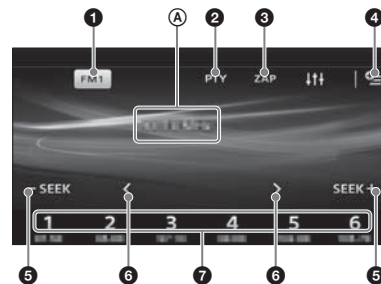

Reception controls (1 to 7)

- | | |
|----------|---|
| 1 | Current band icon
Opens the band list. |
| 2 | [PTY] (Program Types) (FM only)
Opens the PTY list (page 10). |
| 3 | [ZAP] (ZAPPIN™)
Helps to find a desired station by listening to preset stations for a few seconds. |
| 4 | ☰
Opens the tuner option menu. |
| 5 | - SEEK / SEEK +
Tunes in automatically. |
| 6 | < / >
Tunes in manually.
Touch and hold to continuously skip frequencies. |
| 7 | [1] to [6]
Selects a preset station.
Touch and hold to store the currently displayed frequency in that preset. |

Reception indications (A)


- A** Frequency

Storing and Receiving Stations

Caution

When tuning to stations while driving, use Best Tuning Memory (BTM) to prevent an accident.

Storing automatically (BTM)

- 1 Select the desired band ([FM1], [FM2], [FM3], [AM1], or [AM2]).
- 2 Touch .
- 3 Touch [BTM], then [Search].
The unit stores the first six available stations in presets ([1] to [6]).

Tuning

- 1 Touch the current band.
The band list appears.
- 2 Touch the desired band ([FM1], [FM2], [FM3], [AM1], or [AM2]).
- 3 Perform tuning.
To tune automatically
Touch **-SEEK / SEEK+**.
Scanning stops when the unit receives a station. Repeat this procedure until the desired station is received.
To tune manually
Touch **</>** repeatedly until the desired frequency is received.
To skip frequencies continuously, touch and hold **</>**.

Storing manually

- 1 While receiving the station that you want to store, press and hold the desired preset number ([1] to [6]).

Receiving stored stations

- 1 Select the band.
- 2 Touch the desired preset number ([1] to [6]).


Searching for the desired station from preset stations (Tuner Preset ZAPPIN)

Tuner Preset ZAPPIN helps you to find a desired station by listening to preset stations for a few seconds.

- 1 While listening to radio, touch [ZAP].
Tuner Preset ZAPPIN starts, and subsequent stations are received in sequence.
- 2 Touch [ZAP] again when the desired station is received.

Using Radio Data System (RDS)

Display items

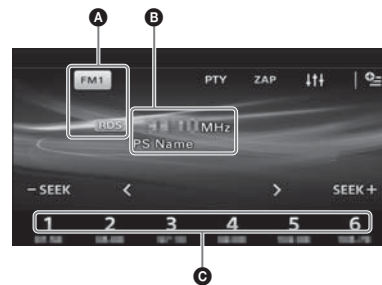

- A Band name, RDS*
- B Frequency, program service name
- C Preset number

* During RDS reception.

RDS services

This unit automatically provides RDS services as follows:

PTY (Program Types)

Displays the currently received program type. Also searches for a designated program type.

CT (Clock Time)

The CT data from the RDS transmission sets the clock.

Selecting program types (PTY)

- 1 During FM reception, touch [PTY].
To scroll the list, touch **▲/▼**.
- 2 Touch the desired program type.
The unit searches for a station broadcasting the selected program type.

To close the PTY list, touch **↵**.

Type of programs

News (News), **Information** (Information), **Sports** (Sports), **Talk** (Talk), **Rock** (Rock), **Classic Rock** (Classic Rock), **Adult Hits** (Adult Hits), **Soft Rock** (Soft Rock), **Top 40** (Top 40), **Country** (Country), **Oldies** (Oldies), **Soft** (Soft), **Nostalgia** (Nostalgia), **Jazz** (Jazz), **Classical** (Classical), **Rhythm and Blues** (Rhythm and Blues), **Soft R & B** (Soft Rhythm and Blues), **Foreign Language** (Foreign Language), **Religious Music** (Religious Music), **Religious Talk** (Religious Talk), **Personality** (Personality), **Public** (Public), **College** (College), **Weather** (Weather)

Note

You cannot use this function in countries/regions where no PTY data is available.

Playback

For playable discs or file types, see page 22.

Playing a Disc


Depending on the disc, some operations may be different or restricted. Refer to the operating instructions supplied with the disc.

- 1 Insert the disc (label side up), then playback starts.

If a DVD menu appears

Touch the desired item in the DVD menu. You can also use the menu control panel, which can be displayed by touching the screen anywhere except the DVD menu items. Touch $\blacktriangleleft/\blacktriangleright/\blacktriangleright$ to move the cursor, then touch [ENTER] to confirm.

Example of playback indications (DVD)

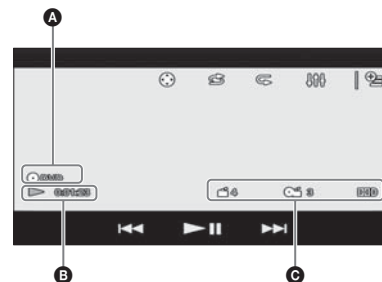

- A Current source icon, format
- B Playback status, elapsed playback time
- C Chapter/title number, audio format

Touch the display if the indications are not displayed.

For audio discs, some indications are always displayed during playback.

Using PBC (playback control) functions

The PBC menu interactively assists with operations while a PBC-compatible VCD is played.

- 1 Start playing a PBC-compatible VCD. The PBC menu appears.
- 2 Touch PBC . The menu control panel appears.
- 3 Touch the number keys to select the desired item, then touch [ENTER].

4 Follow the instructions in the menu for interactive operations.

To return to the previous display, touch .

To deactivate PBC functions, set [Video CD PBC] to [OFF] (page 20).


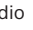
Notes

- During PBC playback, the track number, playback item, etc., do not appear on the playback display.
- Resume playback is unavailable during playback with PBC.

Configuring audio settings

To change the audio language/format

When playing a DVD Video, the audio language can be changed if the disc is recorded with multilingual tracks. You can also change the audio format when playing a disc recorded in multiple audio formats (e.g., Dolby Digital).

During playback, touch . Touch  repeatedly until the desired audio language/format appears.


Example: Dolby Digital 5.1 ch



If the same language is displayed two or more times, the disc is recorded in multiple audio formats.

To change the audio channel

When playing a VCD, you can listen to both left and right channels, right channel only or left channel only, via both right and left speakers.

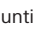During playback, touch  repeatedly until the desired audio channel appears. The options are indicated below.

[Stereo]: Standard stereo sound (default)

[Left]: Left channel sound (monaural)

[Right]: Right channel sound (monaural)

Playing an iPod/USB Device

In these Operating Instructions, "iPod" is used as a general reference for the iPod functions on the iPod and iPhone, unless otherwise specified by the text or illustrations.

For details on the compatibility of your iPod, see "About iPod" (page 24) or visit the support site on the back cover.

MSC (Mass Storage Class)-type USB devices (such as a USB flash drive, digital media player, Android phone) compliant with the USB standard can be used.

Depending on the digital media player or Android phone, setting the USB connection mode to MSC is required.

1 Reduce the volume on this unit.

If the device is turned off, turn it on.

2 Connect the iPod or the USB device to the USB port.

Playback starts automatically.

If an iPod/USB device is already connected, to start playback, press HOME, then touch [iPod/USB].

To stop playback

Press and hold OFF for 1 second.

To remove the device

Stop playback, then disconnect.

Do not disconnect during playback, as data in the device may be damaged.

Caution for iPhone

When you connect an iPhone via USB, telephone volume is controlled by the iPhone itself. In order to avoid sudden loud sound after a call, do not increase the volume on the unit during a call.


About resuming mode

When the iPod currently playing is connected to the dock connector, the mode of this unit changes to resuming mode and playback starts in the mode set by the iPod.

In resuming mode, repeat/shuffle play are not available.

Playing a BLUETOOTH Device

You can play contents on a connected device that supports BLUETOOTH A2DP (Advanced Audio Distribution Profile).

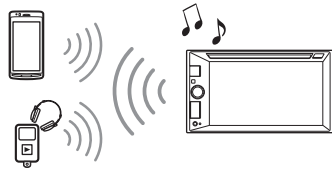

- 1 Make BLUETOOTH connection with the audio device (page 8).
- 2 Reduce the volume on this unit.
- 3 Press HOME, then touch [BT Audio].
- 4 Operate the audio device to start playback.
- 5 Adjust the volume on this unit.

Playback controls

If the BLUETOOTH device supports AVRCP (Audio Video Remote Control Profile), you can control playback via this unit in the same way as disc playback.

To match the volume level of the BLUETOOTH device to other sources

You can reduce the volume level differences between this unit and the BLUETOOTH device. During playback, touch . Select a level from -8 to +18.

Searching and Playing Tracks

Using repeat play and shuffle play

- 1 During playback, touch (repeat) or (shuffle) repeatedly until the desired option appears.

Repeat or shuffle play starts.

Available play modes differ depending on the selected sound source.

Note

Repeat play and shuffle play are not available for version 2.0 VCD with PBC function.

Searching for a file from the list screen


- 1 During disc or USB playback, touch . The list screen from the currently played item appears.



Furthermore, touch , , or to list up by the file type (audio/video/photo).

- 2 Touch the desired item. Playback starts.

Available Options

Various settings are available in each source by touching . The available items differ depending on the situation.

Picture EQ

Adjusts the picture to suit the interior brightness of the car. This setting is available only when the parking brake is set.





Source: USB (Xvid/Photo), Disc (DVD/VCD/Xvid/Photo), AUX (Available only when [AUX] is set to [Rear], and [AUX Input] is set to [Video] or [Auto].)

Option	Purpose
Dynamic (●), Standard, Theater, Sepia	To select the picture quality.

Aspect

This setting is available only when the parking brake is set.

Source: USB (Xvid/Photo), Disc (DVD/VCD/Xvid/Photo), AUX (Available only when [AUX] is set to [Rear], and [AUX Input] is set to [Video] or [Auto].)

Option	Purpose
Normal 	To display a picture with 4:3 aspect ratio (regular picture).
Wide 	To display a picture with 4:3 aspect ratio enlarged to the left and right edges of the screen, with overflowing parts of the top and bottom cut off to fill the screen.
Full (●) 	To display a picture with 16:9 aspect ratio.
Zoom 	To display a picture with 4:3 aspect ratio enlarged to the left and right edges of the screen.

DVD Audio Level

Source: Disc

Option	Purpose
-	Adjusts the audio output level between -10 and +10 for a DVD recorded in Dolby Digital format, to balance the volume level between discs.

Listening to Pandora®


Pandora® is available to stream music through your iPhone, Android™ and BlackBerry® phones. You can control Pandora® on a USB-connected iPhone or BLUETOOTH connected Android/BlackBerry phone from this unit.

The Pandora® service is not available in some countries/regions.

Preparing for Pandora®

- 1 Check the usable mobile device to visit the support site on the back cover.
- 2 Download the latest version of the Pandora® application to visit: www.pandora.com

Streaming Pandora®

- 1 Reduce the volume on this unit.
- 2 Connect this unit with the mobile device.
In the case of an iPhone, connect via USB.
In the case of Android/BlackBerry phone, connect via the BLUETOOTH function (page 7).
- 3 Press HOME, then touch [Pandora].
- 4 Launch the Pandora® application on the mobile device.
- 5 Touch , then [USB connection for iPhone] or [Bluetooth connection for Android or Blackberry].
Playback starts.

If the device number appears


Make sure that the same numbers are displayed (e.g., 123456) in this unit and the mobile device, then touch [OK] on this unit and confirm on the mobile device.

Available Operations in Pandora®


"Thumbs" feedback

"Thumbs Up" or "Thumbs Down" feedback allows you to personalize stations.

Thumbs Up


During playback, touch .


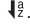
Thumbs Down


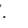
During playback, touch .

Using the station list

The station list allows you to easily select a desired station.


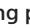
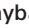
- 1 During playback, touch .
The station list appears.
- 2 Touch the desired station name.
Playback starts.

To change the sorting order, touch  or .

To scroll the list, touch /.


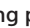
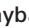
Bookmarking

The track or artist currently being played can be bookmarked and stored in your Pandora® account.

- 1 During playback, touch +, then + or + in [Bookmark].



Creating a station

A new station can be created based on the track or artist being played. It will be accessible from your Pandora® account immediately.

- 1 During playback, touch +, then + or + in [Station].

Deleting a station

Stations can be deleted from the station list in order to make room for new stations.

- 1 During playback, touch .
The station list appears.
- 2 In the station list, touch .
The delete mode will be activated and checkboxes will be shown next to station names.
- 3 Check the stations to be deleted and press [Delete].
A confirmation box will show [OK] to confirm deletion.
- 4 Touch [OK].

Handsfree Calling

Before handsfree calling, make sure that and are in the display. If the indications do not appear, perform the BLUETOOTH connection procedure (page 7).



Receiving a Call

- 1 Touch when a call is received. The phone call starts.

Note
The ringtone and talker's voice are output only from the front speakers.

To adjust the ringtone volume


The level of ringtone volume will be stored into memory, independently from the regular volume level.
Rotate the volume control dial while receiving a call.

To reject/end a call

Touch .

Making a Call

- 1 Press HOME, then touch [Phone].
- 2 Touch one of the icons on the BLUETOOTH phone display.

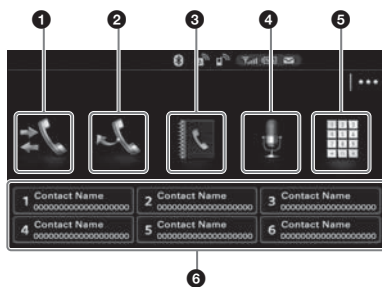

- 1 (call history)*1
Select a contact from the call history list. The unit stores the last 20 calls.

- 2 (redial)
Make a call automatically to the last contact you made.
- 3 (phonebook)*1
Select a contact from the name list/number list in the phonebook. To search the desired contact by alphabetical order in the name list, touch . For details on how to manage the phonebook data, see "Phonebook Management" (page 16).
- 4 (voice dial)*2*3
Say a voice tag stored on the cellular phone.
- 5 (phone number input)
Enter the phone number.
- 6 **Preset number**
Touch a preset number ([1] to [6]). The unit stores up to 6 contacts in the list. For details on how to store, see "Presetting phone numbers" (page 16).

*1 The cellular phone needs to support PBAP (Phone Book Access Profile).

*2 Do not use the voice dial function on the cellular phone while it is connected to this unit.

*3 Voice dial may not work depending on the recognition specification of the cellular phone. For details, visit the support site on the back cover.

- 3 Touch .

The call is made and the calling display appears until the other party answers.

Available Operations During a Call

To adjust the talker's voice volume

The level of the talker's voice volume will be stored into memory, independently from the regular volume level.
Rotate the volume control dial during a call.

To transfer the current call to the cellular phone

Touch .
To transfer back to handsfree calling, touch again.

Available options

During a handsfree call, press .

[Speech Quality] Reduces echo and noise during a call. For normal use, set to [Mode 1]. If the outgoing sound quality is unsatisfactory, set to [Mode 2].

[MIC Gain] Adjusts the microphone volume for the other party: [Low], [Middle], [High].

Phonebook Management

Note

Prior to disposal or changing ownership of your car with this unit still installed, be sure to erase all the phonebook data in this unit to prevent possible unauthorized access, by doing any of the following:

- Delete the phonebook data by initializing (page 18).
- Press the reset button.
- Disconnect the power supply lead.

Selecting phonebook data

You can access the phonebook data of a cellular phone to make a call.

- 1 Press **HOME**, then touch **[Phone]**.
The BLUETOOTH phone display appears.
- 2 Touch **☰**, then **[Phonebook Select]**.
- 3 Touch the desired item.

Deleting phonebook data

- 1 Press **HOME**, then touch **[Phone]**.
The BLUETOOTH phone display appears.
- 2 Touch **☰**.
The phonebook appears.
- 3 Touch **☰**.
The confirmation display appears.
- 4 Touch **[OK]**.
All phonebook data on this unit is deleted.

To delete an individual contact from the phonebook

Follow steps 1 to 2 above, then select the contact. To search the desired contact by alphabetical order, touch **🔍** then select alphabet. Touch **☰** → **[OK]**.

Call Data Management

Deleting call history

- 1 Press **HOME**, then touch **[Phone]**.
The BLUETOOTH phone display appears.
- 2 Touch **☰**.
The call history list appears.
- 3 Touch **☰**.
The confirmation display appears.
- 4 Touch **[OK]**.
All items in the call history are deleted.

Presetting phone numbers

- 1 Press **HOME**, then touch **[Phone]**.
The BLUETOOTH phone display appears.
- 2 Touch **☰**.
The phonebook appears.
- 3 Select the contact to store in the preset dial.
 - 1 In the name list, touch the name of the contact.
To search the desired contact by alphabetical order, touch **🔍**, then select alphabet.
 - 2 In the number list, touch the phone number.
The contact confirmation display appears.
- 4 Touch **[Preset]**, then the desired preset number ([1] to [6]).
The contact is stored to the selected preset number.

To change the registration of the preset dial

Follow the procedure above and overwrite a registered preset dial.

Phone Option Menu

- 1 Press **HOME**, then touch **[Phone]**.
- 2 Touch **☰**.
The phone option menu appears.

[Ringtone]

Uses the ringtone of this unit or the connected cellular phone: [Internal], [Cellular].

[Auto Answer]

- Answers an incoming call automatically.
- [OFF]: to not answer automatically.
 - [3 sec]: to answer automatically after 3 seconds.
 - [10 sec]: to answer automatically after 10 seconds.

[Phonebook Select]

Browses the phonebook data on cellular phone: [Cellular].

[Receive Phonebook]

Receives phonebook data from the connected cellular phone.
When receiving is complete, BLUETOOTH device name appears.

[Background Visualizer]

Sets background visualizer: [ON], [OFF].

Settings

Select [Settings] in the HOME menu when you need to change the settings of the unit.

"●" in the table below indicates the default setting.

- 1 Press HOME, then touch [Settings].
- 2 Touch one of the setup category icons.
 - ☰: General Settings (page 17)
 - 🎵: Sound Settings (page 19)
 - 📺: Screen Settings (page 19)
 - : Visual Settings (page 19)
- 3 Touch ▲/▼ to select the desired item.

To return to the previous display, touch ↩.

To switch from the HOME screen to the playback screen, touch ▶.

☰ General Settings**Language**

Unit status: Any status

Option	Purpose
English (●), Español, Русский	To select the display language.

Time Format

Unit status: Any status

Option	Purpose
12-hour (●), 24-hour	To change the time format.

Clock Time

Unit status: Any status

Option	Purpose
OFF (●), ON	To activate the CT function.

Clock Adjust

Unit status: Any status

Option	Purpose
-	To set the clock. (Available only when [Clock Time] is set to [OFF].)

Beep

Unit status: Any status

Option	Purpose
OFF, ON (●)	To activate the operation sound.

Dimmer

Unit status: Any status

Option	Purpose
OFF	To deactivate the dimmer.
Auto (●)	To dim the display automatically when you turn lights on. (Available only when the illumination control lead is connected.)
ON	To dim the display.

Dimmer Level

Unit status: Any status

Option	Purpose
(-5 - +5) ●: 0	To select the brightness level when the dimmer is activated.

Touch Panel Adjust

Unit status: Any status

Option	Purpose
-	To adjust the touch panel calibration if the touching position does not correspond with the proper item.

Output Color System

Unit status: No source selected

Option	Purpose
NTSC (●), PAL	To change the color system according to the connected monitor. (SECAM is not supported.)

Camera Input

Unit status: Any status

Option	Purpose
OFF	To deactivate the input.
Normal (●)	To display the picture from the rear view camera.
Reverse	To flip the picture from the rear view camera horizontally.

Steering Control

You can operate the unit with buttons on the steering wheel.

For safety, park your car before making this setting.

Unit status: Any status

Option	Purpose
User	To display the instruction and panel for steering wheel control.
External (●)	To deactivate steering wheel control. To use rotary commander control.

User Defined

This setting is available only when [Steering Control] is set to [User].

The steering button panel appears. Press and hold a button to be assigned to the steering wheel.

Then press and hold the respective button on the steering wheel.

Unit status: Any status

Option	Purpose
-	To display the instruction and control panel.

Note

This function may not be available on some vehicles.

Bluetooth Connection

Unit status: Any status

Option	Purpose
ON, OFF (●)	To activate the BLUETOOTH signal.

Bluetooth Reset

Unit status: Any status

Option	Purpose
-	To initialize all BLUETOOTH-related settings such as pairing information, call history, preset dial, history of connected BLUETOOTH devices, etc.

Sound Settings

Rear/Sub Out

Switches the audio output between the rear speakers and subwoofer.

Unit status: Any status

Option	Purpose
Rear	To output audio signals to the rear speakers (amplifier).
Subwoofer (●)	To output audio signals to the subwoofer.

Sound Adjust

Selects EQ3 and adjusts subwoofer level, balance/fader level or crossover filter.

Unit status: Any status

Option	Purpose
EQ3	
OFF (●), R&B, Pop, Rock, Hip-Hop, Dance, Country, Custom	To select the equalizer curve; customize the equalizer curve. When setting [Custom], selects the equalizer settings: [Low], [Mid], [High].
Subwoofer: (ATT, -10 - +10) ●: 0	To adjust the volume level of the subwoofer. (Available only when [Subwoofer] is set to [ON].)
Balance: (L 15 - 0 - R 15) ●: 0	To adjust the sound balance between left and right speakers.
Fader: (Front 15 - 0 - Rear 15) ●: 0	To adjust the sound balance between front and rear speakers.
HPF: 80 Hz, 100 Hz, 120 Hz, 140 Hz, 160 Hz, OFF (●)	To select the cut-off frequency of the front/rear speakers.
LPF: OFF (●), 80 Hz, 100 Hz, 120 Hz, 140 Hz, 160 Hz	To select the cut-off frequency of the subwoofer. (Available only when [Subwoofer] is set to [ON].)

Screen Settings

Demo

Unit status: Any status

Option	Purpose
OFF, ON (●)	To activate the demonstration.

Visual Settings

DVD Menu Language

Unit status: No source selected

Option	Purpose
English (●), Chinese, German, French, Italian, Spanish, Portuguese, Dutch, Danish, Swedish, Finnish, Norwegian, Russian, Other	To select the default language for the disc's menu.

DVD Audio Language

Unit status: No source selected

Option	Purpose
English (●), Chinese, German, French, Italian, Spanish, Portuguese, Dutch, Danish, Swedish, Finnish, Norwegian, Russian, Other	To select the default language for the soundtrack.

DVD Subtitle Language

Unit status: No source selected

Option	Purpose
English (●), Chinese, German, French, Italian, Spanish, Portuguese, Dutch, Danish, Swedish, Finnish, Norwegian, Russian, Other	To select the default subtitle language for DVD.

Monitor Type

Selects an aspect ratio suitable for the connected monitor.

(The screen aspect ratio of this unit also changes.) Depending on the disc, [Letterbox] may be selected automatically instead of [Pan Scan], and vice versa.

Unit status: No source selected

Option	Purpose
16:9 (●)	To display a wide picture. Suitable when connecting to a wide-screen monitor or a monitor with a wide mode function.



Letterbox	To display a wide picture with bands on the upper and lower positions of the screen. Suitable when connecting to a 4:3 screen monitor.
------------------	--



Pan Scan	To display a wide picture on the entire screen and automatically cut off the portions that do not fit.
-----------------	--

**Video CD PBC**

Unit status: No source selected

Option	Purpose
OFF, ON (●)	To play a VCD with PBC functions.

Additional Information**Auxiliary Audio/Video Equipment**


You can connect up to an optional device, such as a portable media player, game console, etc., to the AUX terminal on the unit.

Selecting an auxiliary device

- 1 Press HOME, then touch [AUX].
The AUX playback display appears.


Adjusting the volume level


Be sure to adjust the volume for the connected device before playback.

- 1 Reduce the volume on the unit.
- 2 Press HOME, then touch [AUX].
The AUX playback display appears.
- 3 Touch  to open the menu, then touch [Input Level].
- 4 Set your usual listening volume on the unit.
- 5 Touch -/+ repeatedly to adjust the level.
The level is adjustable in single steps, between -10 and +15.

Setting the type of device

By setting the type (video or audio) of each connected device, the background screen can be switched accordingly.

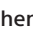- 1 Press HOME, then touch [AUX].
- 2 Touch [Front] or [Rear].
[Front] is available only for audio.
- 3 When selecting [Rear], touch  to open the menu, then touch [AUX Input].
- 4 Touch [Audio], [Video] or [Auto].
The default setting is [Auto].

To return to the previous display, touch .

Rear View Camera

By connecting the optional rear view camera to the CAMERA IN terminal, you can display the picture from the rear view camera.

The picture from the rear view camera appears when:

- the back lamp lights up (or the shift lever is set to the R (reverse) position).
- you press HOME then touch [Rear Camera].
- you press and hold DSPL then touch [Rear Camera].

Precautions

- Cool off the unit beforehand if your car has been parked in direct sunlight.
- Power antenna (aerial) extends automatically.

Moisture condensation

Should moisture condensation occur inside the unit, remove the disc and wait for about an hour for it to dry out; otherwise the unit will not operate properly.

To maintain high sound quality

Do not splash liquid onto the unit or discs.

Notes on safety

- Comply with your local traffic rules, laws and regulations.
- While driving
 - Do not watch or operate the unit, as it may lead to distraction and cause an accident. Park your car in a safe place to watch or operate the unit.
 - Do not use the setup feature or any other function which could divert your attention from the road.
 - **When backing up your car, be sure to look back and watch the surroundings carefully for your safety, even if the rear view camera is connected. Do not depend on the rear view camera exclusively.**
- While operating
 - Do not insert your hands, fingers or foreign object into the unit, as it may cause injury or damage to the unit.
 - Keep small articles out of the reach of children.
 - Be sure to fasten seatbelts to avoid injury in the event of a sudden movement of the car.

Preventing an accident

Pictures appear only after you park the car and set the parking brake.

If the car starts moving during video playback, the following caution is displayed and you cannot watch the video.

[Video blocked for your safety.]

The monitor connected to the REAR VIDEO OUT is active while the car is in motion.

You cannot watch the video, but you can hear audio.


Do not operate the unit or watch the monitor while driving.

Notes on installation

- We recommend this unit should be installed by a qualified technician or service personnel.
 - If you try to install this unit by yourself, refer to the supplied "Installation/Connections" guide and install the unit properly.
 - Improper installation may cause battery drain or a short circuit.
- If the unit does not work properly, check the connections first, referring to the supplied "Installation/Connections" guide. If everything is in order, check the fuse.
- Protect the unit surface from damage.
 - Do not expose the unit surface to chemicals, such as insecticide, hair spray, insect repellent, etc.
 - Do not leave rubber or plastic materials in contact with the unit for a long time. Otherwise, the finish of the unit may be impaired, or deformation may occur.
- When installing, be sure to fix securely.
- When installing, be sure to turn the ignition off. Installing the unit with the ignition on may cause battery drain or a short circuit.
- When installing, be sure not to damage any car parts such as pipes, tubes, fuel tank or wiring by using a drill, as it may cause a fire or an accident.

Notes on LCD panel

- Do not wet the LCD panel or expose it to liquids. This may cause a malfunction.

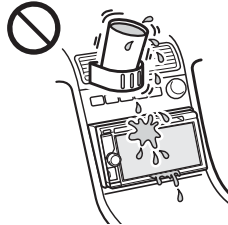

- Do not press on the LCD panel as doing so can distort the picture or cause a malfunction (i.e., the picture may become unclear, or the LCD panel may be damaged).
- Do not touch other than with the finger, as it may damage or break the LCD panel.
- Clean the LCD panel with a dry soft cloth. Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray.
- Do not use this unit outside the temperature range 5 – 45 °C (41 – 113 °F).
- If your car was parked in a cold or hot place, the picture may not be clear. However, the monitor is not damaged, and the picture will become clear after the temperature in your car becomes normal.
- Some stationary blue, red or green dots may appear on the monitor. These are called "bright spots," and can happen with any LCD. The LCD panel is precision-manufactured with more than 99.99% of its segments functional. However, it is possible that a small percentage (typically 0.01%) of the segments may not light up properly. This will not, however, interfere with your viewing.

Playable discs and file types

Discs

DVD*	DVD VIDEO DVD-R/DVD-R DL/DVD-RW (Video mode) DVD+R/DVD+R DL/DVD+RW
VCD	Video CD (Ver. 1.0/1.1/2.0)
CD	Audio CD CD-ROM/CD-R/CD-RW

* "DVD" may be used in these Operating Instructions as a general term for DVD VIDEOS, DVD-Rs/DVD-RWs, and DVD+Rs/DVD+RWs.

File types

For details on compression formats, see page 23.

Audio	MP3 file, WMA file, AAC file
Video	Xvid file, MPEG-4 file
Photo	jpeg file (.jpg)

Notes on discs

- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.
- Before playing, wipe the discs with a cleaning cloth from the center out. Do not use solvents such as benzene, thinner, commercially available cleaners.
- This unit is designed to play discs that conform to the Compact Disc (CD) standard. DualDiscs and some of the music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore, these discs may not be playable by this unit.
- **Discs that this unit CANNOT play**
 - Discs with labels, stickers, or sticky tape or paper attached. Doing so may cause a malfunction, or may ruin the disc.
 - Discs with non-standard shapes (e.g., heart, square, star). Attempting to do so may damage the unit.
 - 8 cm (3 1/4 in) discs.



Note on playback operations of DVDs and VCDs

Some playback operations of DVDs and VCDs may be intentionally set by software producers. Since this unit plays DVDs and VCDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VCDs.

Notes on DATA CDs, DATA DVDs and USB playback

- Some DATA CDs/DATA DVDs (depending on the equipment used for its recording, or the disc condition) may not play on this unit.
- Finalization is required for some discs (page 23).
- The unit is compatible with the following standards.
 - For DATA CDs
 - ISO 9660 level 1/level 2 format, Joliet/Romeo in the expansion format

For DATA DVDs

— UDF Bridge format (combined UDF and ISO 9660)

- The maximum number of:
 - folders (albums): 256 (including root and empty folders).
 - files (tracks/videos/photos) and folders contained in a disc: 2,000 (if a folder/file names contain many characters, this number may become less than 2,000).
 - displayable characters for a folder/file name: 32.
- Compatible codecs are MP3 (.mp3), WMA (.wma), AAC (.m4a), JPEG (.jpg), Xvid (.avi), and MPEG-4 (.mp4).
- DRM (Digital Rights Management) files may not be played.

Notes on finalizing discs

The following discs are required to be finalized to play on this unit.


- DVD-R/DVD-R DL (in video mode)
- DVD-RW in video mode
- DVD+R/DVD+R DL
- CD-R
- CD-RW

DVD+RW can be played without finalization. The disc is automatically finalized.

For details, refer to the manual supplied with the disc.

Playback order of MP3/WMA/AAC/Xvid/MPEG-4 files

Folders and files are arranged in ascending order of updated date and time.

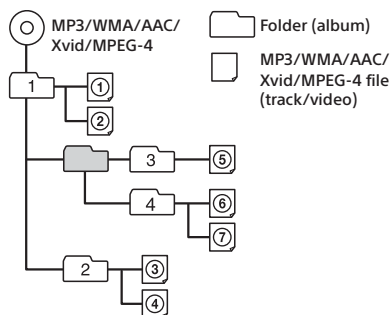

About WMA files

WMA*1 files meeting the following requirements can be played. Playback is not guaranteed for all WMA files meeting the requirements.

Codec

- Media File format: ASF file format
- File extension: .wma

- Bit rate: 48 to 192 kbps (Supports variable bit rate (VBR))*2
- Sampling frequency*3: 44.1 kHz

About MP3 files

MP3 files meeting the following requirements can be played. Playback is not guaranteed for all MP3 files meeting the requirements.

Codec

- Media File format: MP3 (MPEG-1 Layer3) file format
- File extension: .mp3
- Bit rate: 48 to 192 kbps (Supports variable bit rate (VBR))*2
- Sampling frequency*3: 32, 44.1, 48 kHz

About AAC files

AAC*4 files meeting the following requirements can be played. Playback is not guaranteed for all AAC files meeting the requirements.

Codec for Disc

- Media File format: MP4 file format
- File extension: .mp4, .m4a
- Bit rate: 40 to 320 kbps (Supports variable bit rate (VBR))
- Sampling frequency*3: 44.1, 48 kHz

Codec for MSC

- Media File format: MP4 file format
- File extension: .mp4, .m4a, .3gp
- Bit rate: 48 to 288 kbps (Supports variable bit rate (VBR))*2
- Sampling frequency*3: 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48 kHz

About MPEG-4 files

MPEG-4 files meeting the following requirements can be played. Playback is not guaranteed for all MPEG-4 files meeting the requirements.

Codec for Disc

- Media File format: MP4 file format
- File extension: .mp4
- Profile: Simple Profile
- Bit rate: Max. 10 Mbps on DVD, 7 Mbps on CD
- Frame rate: Max. 30 fps (30p/60i)
- Resolution: Max. 720 × 576 pixel

Codec for MSC

- Media File format: MP4 file format
- File extension: .mp4, .m4v
- Profile: Simple Profile
- Bit rate: Max. 12 Mbps
- Frame rate: Max. 30 fps (30p/60i)
- Resolution: Max. 1,280 × 720*5

- Media File format: MP4 file format
- File extension: .mp4, .m4v
- Profile: Advanced Simple Profile
- Bit rate: Max. 8 Mbps

- Frame rate: Max. 30 fps (30p/60i)
- Resolution: Max. 720 × 576*5

About Xvid files

Xvid files meeting the following requirements can be played. Playback is not be guaranteed for all Xvid files meeting the requirements.

Codec

- Media File format: Xvid file format
- File extension: .avi
- Profile: MPEG-4 Advanced Simple Profile
- Bit rate: Max. 8 Mbps
- Frame rate: Max. 30 fps (30p/60i)
- Resolution: Max. 720 × 576*5

About JPEG files

JPEG*6 files meeting the following requirements can be played. Playback is not be guaranteed for all JPEG files meeting the requirements.

Codec

- Media File format: Compatible with DCF 2.0/Exif 2.21 file format
- File extension: .jpg
- Profile: Baseline Profile
- Number of pixels: Max. 6,048 × 4,032 pixels (24,000,000 pixels)

- *1 Copyright protected WMA file cannot be played back.
- *2 Non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency.
- *3 Sampling frequency may not correspond to all encoders.
- *4 Copyright protected AAC-LC files cannot be played back.
- *5 These numbers indicate the maximum resolution of playable video, and do not indicate the player's display resolution. The display resolution is 800 × 480.
- *6 Some photo files cannot be played back, depending on their file formats.

About iPod

- You can connect to the following iPod models. Update your iPod devices to the latest software before use.

Compatible iPhone/iPod models.

Compatible Model	USB
iPhone 5s	○
iPhone 5c	○
iPhone 5	○
iPhone 4s	○
iPhone 4	○
iPhone 3GS	○
iPod touch (5th generation)	○
iPod touch (4th generation)	○
iPod touch (3rd generation)	○
iPod classic	○
iPod nano (7th generation)	○
iPod nano (6th generation)	○
iPod nano (5th generation)	○

- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

About BLUETOOTH function

What is BLUETOOTH technology?

- BLUETOOTH wireless technology is a short-range wireless technology that enables wireless data communication between digital devices, such as a cellular phone and a headset. BLUETOOTH wireless technology operates within a range of about 10 m (about 33 feet). Connecting two devices is common, but some devices can be connected to multiple devices at the same time.
- You do not need to use a cable for connection since BLUETOOTH technology is a wireless technology, neither is it necessary for the devices to face one another, such is the case with infrared technology. For example, you can use such a device in a bag or pocket.

- BLUETOOTH technology is an international standard supported by millions of companies all over the world, and employed by various companies worldwide.

On BLUETOOTH communication

- BLUETOOTH wireless technology operates within a range of about 10 m. Maximum communication range may vary depending on obstacles (person, metal, wall, etc.) or electromagnetic environment.
- The following conditions may affect the sensitivity of BLUETOOTH communication.
 - There is an obstacle such as a person, metal, or wall between this unit and BLUETOOTH device.
 - A device using 2.4 GHz frequency, such as a wireless LAN device, cordless telephone, or microwave oven, is in use near this unit.
- Because BLUETOOTH devices and wireless LAN (IEEE802.11b/g/n/ac) use the same frequency, microwave interference may occur and result in communication speed deterioration, noise, or invalid connection if this unit is used near a wireless LAN device. In such as case, perform the following.
 - Use this unit at least 10 m away from the wireless LAN device.
 - If this unit is used within 10 m of a wireless LAN device, turn off the wireless LAN device.
 - Install this unit and BLUETOOTH device as near to each other as possible.
- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident.
 - where inflammable gas is present, in a hospital, train, airplane, or petrol station
 - near automatic doors or a fire alarm
- This unit supports security capabilities that comply with the BLUETOOTH standard to provide a secure connection when the BLUETOOTH wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using BLUETOOTH wireless technology.
- We do not take any responsibility for the leakage of information during BLUETOOTH communication.
- Connection with all BLUETOOTH devices cannot be guaranteed.
 - A device featuring BLUETOOTH function is required to conform to the BLUETOOTH standard specified by BLUETOOTH SIG, and be authenticated.
 - Even if the connected device conforms to the above mentioned BLUETOOTH standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.

- While talking on the phone handsfree, noise may occur, depending on the device or communication environment.
- Depending on the device to be connected, it may require some time to start communication.

Others


- Using the BLUETOOTH device may not function on cellular phones, depending on radio wave conditions and location where the equipment is being used.
- If you experience discomfort after using the BLUETOOTH device, stop using the BLUETOOTH device immediately. Should any problem persist, consult your nearest Sony dealer.

If you have any questions or problems concerning your unit that are not covered in these Operating Instructions, consult your nearest Sony dealer.

Maintenance

Replacing the lithium battery of the remote commander

Under normal conditions, the battery will last approximately 1 year. (The service life may be shorter, depending on the conditions of use.) When the battery becomes weak, the range of the remote commander becomes shorter. Replace the battery with a new CR2025 lithium battery. Use of any other battery may present a risk of fire or explosion.

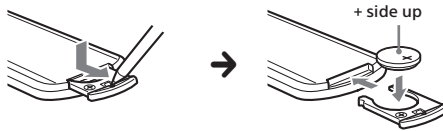

Notes on the lithium battery

- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.
- Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

WARNING

Battery may explode if mistreated.
Do not recharge, disassemble, or dispose of in fire.

Specifications

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC.

AUDIO POWER SPECIFICATIONS



CEA2006 Standard
Power Output: 17 Watts RMS x 4 at
4 Ohms < 1% THD+N
SN Ratio: 80 dBA
(reference: 1 Watt into 4 Ohms)

Monitor section

Display type: Wide LCD color monitor

Dimensions: 6.2 in

System: TFT active matrix

Number of pixels:

1,152,000 pixels (800 × 3 (RGB) × 480)

Color system:

PAL/NTSC/SECAM/PAL-M automatic select

Tuner section

FM

Tuning range: 87.5 – 107.9 MHz

Antenna (aerial) terminal:

External antenna (aerial) connector

Intermediate frequency: 150 kHz

Usable sensitivity: 10 dBf

Selectivity: 70 dB at 400 kHz

Signal-to-noise ratio: 70 dB (mono)

Separation at 1 kHz: 30 dB

Frequency response: 20 - 15,000 Hz

AM

Tuning range: 530 – 1,710 kHz

Antenna (aerial) terminal:

External antenna (aerial) connector

Intermediate frequency:

9,267.5 kHz or 9,257.5 kHz/5 kHz

Sensitivity: 44 µV

DVD/CD Player section

Signal-to-noise ratio: 80 dB

Frequency response: 20 – 20,000 Hz

Wow and flutter: Below measurable limit

Harmonic distortion: 0.05%

Region code: Labeled on the bottom of the unit

USB Player section

Interface: USB (Full-speed)

Maximum current: 1 A

Wireless Communication

Communication System:

BLUETOOTH Standard version 2.1 + EDR

Output:

BLUETOOTH Standard Power Class 2 (Max. +4 dBm)

Maximum communication range:

Line of sight approx. 10 m (33 ft)*1

Frequency band:

2.4 GHz band (2.4000 – 2.4835 GHz)

Modulation method: FHSS

Compatible BLUETOOTH Profiles*2:

A2DP (Advanced Audio Distribution Profile) 1.2
AVRCP (Audio Video Remote Control Profile) 1.4
HFP (Handsfree Profile) 1.6
PBAP (Phone Book Access Profile)
OPP (Object Push Profile)
SPP (Serial Port Profile)

*1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.

*2 BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

Power amplifier section

Outputs: Speaker outputs

Speaker impedance: 4 – 8 ohms

Maximum power output: 55 W × 4 (at 4 ohms)

General

Outputs:

Video output terminal (rear)
Audio output terminals (front, rear/sub switchable)
Power antenna (aerial)/Power amplifier control terminal (REM OUT)

Inputs:

Illumination control terminal
Remote controller input terminal
Antenna (aerial) input terminal
Microphone input terminal
Parking brake control terminal
Reverse input terminal
Camera input terminal
AUX audio input terminal (Front)
AUX Audio/Video input terminal (Rear)
USB port

Power requirements: 12 V DC car battery (negative ground (earth))

Dimensions: Approx. 178 mm × 101.5 mm × 169 mm (7 1/8 × 4 × 6 3/4 in) (w/h/d)

Mounting dimensions:

Approx. 178 mm × 100 mm × 165 mm (7 1/8 × 4 × 6 1/2 in) (w/h/d)

Mass: Approx. 1.6 kg (3 lb 9 oz)

Package contents:

- Main unit (1)
- Parts for installation and connections (1 set)
- Remote Commander (1): RM-X170
- Microphone (1)

Optional accessories/equipment:

- Mobile monitor: XVM-B62
- Rear View Camera: XA-R800C
- Mounting bracket: GMD-D100

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information.

Design and specifications are subject to change without notice.

Region code

The region system is used to protect software copyrights.

The region code is located on the bottom of the unit, and only DVDs labeled with an identical region code can be played on this unit.

DVDs labeled  can also be played.

If you try to play any other DVD, the message [Playback prohibited by region code.] will appear on the monitor screen. Depending on the DVD, no region code may be labeled even though playing the DVD is prohibited by area restrictions.

Copyrights

US and foreign patents licensed from Dolby Laboratories.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

"DVD VIDEO," "DVD-R," "DVD-RW," "DVD+R," and "DVD+RW" are trademarks.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

The "AAC" logo is a trademark of Dolby Laboratories.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO")

AND/OR

(ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE AND VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO DECODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR THE VC-1 STANDARD ("VC-1 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO AND/OR VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.

Google, Google Play and Android are trademarks of Google Inc.

BlackBerry® is the property of Research In Motion Limited and is registered and/or used in the U.S. and countries around the world. Used under license from Research In Motion Limited.

All other trademarks are trademarks of their respective owners.

Troubleshooting

If there are any problems with your unit/mobile device, make sure your car is parked in a safe place before examining any issues.

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures. For details on using the fuse and removing the unit from the dashboard, refer to the installation/connections manual supplied with this unit.

If the problem is not solved, visit the support site on the back cover.

General

No power is being supplied to the unit.

- Check the fuse.
- The connection is not correct.
 - Connect the yellow and red power supply leads.

There is no beep sound.

- An optional power amplifier is connected and you are not using the built-in amplifier.

The contents of the memory have been erased.

- The power supply lead or battery has been disconnected or it is not connected properly.

Stored stations and correct time are erased.

The fuse has blown.

The unit makes a noise when the position of the ignition is switched.

- The leads are not matched correctly with the car's accessory power connector.

The display disappears from/does not appear on the monitor.

- The dimmer is set to [ON] (page 18).
- The display disappears if you press and hold OFF.
 - Press OFF on the unit until the display appears.
- The monitor off function is activated (page 5).
 - Touch anywhere on the display to turn the display back on.

The display does not respond to your touch correctly.

- Touch one part of the display at a time. If two or more parts are touched simultaneously, the display will not operate correctly.
- Calibrate the touch panel of the display (page 18).
- Touch the pressure sensitive panel firmly.
- The rear monitor cannot be operated. Icons displayed on the rear monitor are disabled.

Menu items cannot be selected.

- Unavailable menu items are displayed in gray.

Radio reception

The stations cannot be received.

The sound is hampered by noises.

- The connection is not correct.
 - Connect the REM OUT lead (blue/white striped) or accessory power supply lead (red) to the power supply lead of a car's antenna (aerial) booster (only when your car has built-in radio antenna (aerial) in the rear/side glass).
 - Check the connection of the car antenna (aerial).
 - If the auto antenna (aerial) will not extend, check the connection of the power antenna (aerial) control lead.

Preset tuning is not possible.

- The broadcast signal is too weak.

RDS

PTY displays [PTY not found.].

- The current station is not an RDS station.
- RDS data has not been received.
- The station does not specify the program type.

Picture

There is no picture/picture noise occurs.

- A connection has not been made correctly.
- Check the connection between this unit and other equipment, and set the input selector of the equipment to the source corresponding to this unit.
- The disc is defective or dirty.
- Installation is not correct.
 - Install the unit at an angle of less than 45° in a sturdy part of the car.
- The parking cord (light green) is not connected to the parking brake switch cord, or the parking brake is not applied.

The picture does not fit in the screen.

- The aspect ratio is fixed on the DVD.

There is no picture/picture noise occurs in the rear monitor.

- A source/mode which is not connected is selected. If there is no input, no picture appears in the rear monitor.
- The color system setting is incorrect.
 - Set the color system to [PAL] or [NTSC] according to the connected monitor (page 18).
- The picture of the rear view camera is displayed on this unit.
 - No picture appears in the rear monitor if the picture of the rear view camera is displayed on this unit.

Sound

There is no sound/sound skips/sound cracks.


- A connection has not been made correctly.
- Check the connection between this unit and the connected equipment, and set the input selector of the equipment to the source corresponding to this unit.
- The disc is defective or dirty.
- Installation is not correct.
 - Install the unit at an angle of less than 45° in a sturdy part of the car.
- The MP3 file sampling rate is not 32, 44.1, or 48 kHz.
- The WMA file sampling rate is not 44.1 kHz.
- The AAC file sampling rate is not 44.1 or 48 kHz.
- The MP3 file bit rate is not 48 to 192 kbps.
- The WMA file bit rate is not 48 to 192 kbps.
- The AAC file bit rate is not 40 to 320 kbps.
- The unit is in pause/reverse/fast-forward mode.
- The settings for the outputs are not made correctly.
- The DVD output level is too low (page 13).
- The volume is too low.
- The ATT function is activated.
- The format is not supported (such as DTS).
 - Check if the format is supported by this unit (page 22).

Sound is noisy.

- Keep cords and cables away from each other.

Disc operation

The disc does not play.

- The disc is defective or dirty.
- The disc is not playable.
- The DVD is not playable due to the region code.
- The disc is not finalized (page 23).
- The disc format and file version are incompatible with this unit (page 22, 22).
- Press  to remove the disc.

MP3/WMA/AAC/Xvid/MPEG-4 files do not play.

- Recording was not performed according to the ISO 9660 level 1 or level 2 format or the Joliet or Romeo expansion format (DATA CD), or the UDF Bridge format (DATA DVD) (page 22).
- The file extension is incorrect (page 23).
- Files are not stored in MP3/WMA/AAC/Xvid/MPEG-4 format.
- If the disc contains multiple file types, only the selected file type (audio/video) can be played.
 - Select the appropriate file type using the list (page 12).

MP3/WMA/AAC/Xvid/MPEG-4 files take longer to play than others.

- The following discs take a longer time to start playback.

- a disc recorded with a complicated tree structure.
- a disc to which data can be added.

Certain functions cannot be performed.

- Depending on the disc, you may not be able to perform operations such as stop, search, or repeat/shuffle play. For details, refer to the manual supplied with the disc.

The soundtrack/subtitle language or angle cannot be changed.

- Use the DVD menu instead of the direct selection button on the remote commander (page 10).
- Multilingual tracks, multilingual subtitles, or multi-angles are not recorded on the DVD.
- The DVD prohibits changing.

The operation buttons do not function.

The disc will not eject.

- Press the reset button (page 5).

USB playback

Items cannot be played via a USB hub.

- Connect iPod/USB devices to this unit without USB hub.

Items cannot be played.

- Reconnect the USB device.

The USB device takes longer to play.

- The USB device contains large-sized files or files with a complicated tree structure.

The sound is intermittent.

- The sound may be intermittent at a high bit rate of more than 320 kbps.

BLUETOOTH function

The other BLUETOOTH device cannot detect this unit.

- Set [Signal] to [ON] (page 18).
- While connecting to a BLUETOOTH device, this unit cannot be detected by another device. Terminate the current connection and search for this unit from the other device. The disconnected device can be reconnected by selecting from the list of registered devices.

Connection is not possible.

- Check the pairing and connection procedures in the manual of the other device, etc., and perform the operation again.

The name of the detected device does not appear.

- Depending on the status of the other device, it may not be possible to obtain the name.

There is no ringtone.

- Raise the volume while receiving a call.
- Depending on the connecting device, the ringtone may not be sent properly.
 - Set [Ringtone] to [Internal] (page 16).

The talker's voice volume is low.

- Raise the volume during a call.

The other party says that the volume is too low or high.

- Adjust the [MIC Gain] level (page 15).

Echo or noise occurs during call conversations.

- Reduce the volume.
- [Speech Quality] is set to [Mode 1].
 - Set [Speech Quality] to [Mode 2] (page 15).
- If ambient noise other than the phone call sound is loud, try reducing this noise.
 - Shut the window if road noise is loud.
 - Lower the air conditioner if the air conditioner is loud.

The phone sound quality is poor.

- Phone sound quality depends on reception conditions of the cellular phone.
 - Move your car to a place where you can enhance the cellular phone's signal if the reception is poor.

The volume of the connected BLUETOOTH device is low or high.

- Volume level will differ depending on the BLUETOOTH device.
 - Reduce the volume level differences between this unit and the BLUETOOTH device (page 12).

The sound skips during audio streaming.

- Reduce the distance between the unit and the BLUETOOTH device.
- If the BLUETOOTH device is stored in a case which interrupts the signal, remove the case while using the device.
- Several BLUETOOTH devices or other devices which emit radio waves are used nearby.
 - Turn off the other devices.
 - Increase the distance between the unit and other devices.
- Playback sound stops momentarily when this unit is connecting to a cellular phone. This is not a malfunction.

You cannot control the connected BLUETOOTH device during audio streaming.

- Check that the connected BLUETOOTH device supports AVRCP.

Some functions do not work.

- Check that the connecting device supports the functions in question.

The name of the other party does not appear when a call is received.

- The other party is not stored in the phonebook.
 - Add the other party to the phonebook (page 16).

A call is answered unintentionally.

- The connecting phone is set to start a call automatically.
- [Auto Answer] of this unit is set to [3 sec] or [10 sec] (page 16).

Pairing failed due to time out.

- Depending on the connecting device, the time limit for pairing may be short. Try completing the pairing within the time by setting a single digit passkey.

The BLUETOOTH function cannot be operated.

- Exit the source by pressing and holding SOURCE for 1 second, then turn on the unit.

No sound is output from the car speakers during a handsfree call.

- If the sound is output from the cellular phone, set the cellular phone to output the sound from the car speakers.

Error displays/messages**Bluetooth Connection Error**

- An error has occurred between this unit and the BLUETOOTH phone.
 - Check the BLUETOOTH signal is set to on for this unit or the BLUETOOTH phone.
 - Try pairing again.
 - Reconnect the BLUETOOTH phone.

Bluetooth device is not found.

- The unit cannot detect a connectable BLUETOOTH device.
 - Check the BLUETOOTH setting of the connecting device.
- No device is in the list of registered BLUETOOTH devices.
 - Perform pairing with a BLUETOOTH device (page 7).

Busy now... Please try again.

- The unit is busy.
 - Wait for a moment and try again.

Call Data Error

- An error has occurred while accessing phonebook data via PBAP or call history from the BLUETOOTH phone.
 - Reconnect the BLUETOOTH phone.

Data Listing Error

- An error has occurred while displaying phonebook data via PBAP or call history from the BLUETOOTH phone.
 - Reconnect the BLUETOOTH phone.

Disc Error

- The unit cannot read the data due to some problem.
 - The data is damaged or corrupted.
 - The disc is corrupted.
 - The disc is incompatible with this unit.
 - The disc is not finalized.
 - The disc is dirty or inserted upside down.
 - Clean or insert the disc correctly.
 - A blank disc has been inserted.
 - The disc cannot play due to a problem.
 - Insert another disc.
 - The disc is not compatible with this unit.
 - Insert a compatible disc.
 - Press **▲** to remove the disc.

Error - Please select 'Bluetooth Reset' from the General Settings menu.

- A memory error has occurred.
 - Initialize the BLUETOOTH setting (page 18).

Handsfree device is not available.

- A cellular phone is not connected.
 - Connect a cellular phone (page 7).

Hubs not supported.

- USB hubs are not supported on this unit.

No Playable Data

- The disc does not contain playable data.
- The iPod has no playable data.
 - Load music data/files into the iPod.

Overcurrent Caution on USB

- The USB device is overloaded.
 - Disconnect the USB device, then change the source by pressing the SOURCE button.
 - Indicates that the USB device is out of order, or an unsupported device is connected.

Playback prohibited by region code.

- The DVD's region code differs from the unit's region code.

The sound in DTS format is not audible.

- Discs in DTS format are not supported. Sound is not output if the DTS format is selected.
 - DTS formatted discs are not playable on this unit. Use a compatible disc format (page 22).

USB device not supported

- For details on the compatibility of your USB device, visit the support site on the back cover.

- The character cannot be displayed with the unit.

For Pandora® operation:**Allow connection? Check number on mobile device.**

- Check the number on your mobile device. If the number is correct, touch [OK] to allow the connection.

API Version Error

- The API versions differ.
 - Select a source other than [Pandora], then select the Pandora® source again.

Application error on mobile device. Do not check the mobile device while driving.

- Check other operations on your mobile device, then launch the Pandora® application again.
- Select a source other than [Pandora], then select the Pandora® source again.

Bookmark Error

- Bookmarking a track or artist failed.
 - Try bookmarking again.

Cannot connect Pandora due to poor reception.

- The mobile network signal is poor.
 - Move to an area with better reception.

Cannot skip.

- Skip (next) is prohibited for the current content.
 - Wait until the commercial ends.
 - Pandora® limits the number of skips allowed. Wait until the next track begins, or select another station on the list.

Invalid Login

- The mobile device has not logged in to Pandora®.
 - Try logging in again.

No Station

- There is no station on your Pandora® account.
 - Create a station on your mobile device.
 - Select a source other than [Pandora], then select the Pandora® source again.

Pandora Error

- An error occurred while using Pandora®.
 - Disconnect, then reconnect the mobile device with this unit. (For a USB device, unplug and plug the device in again. For a BLUETOOTH device, disconnect and connect the device again.)
 - Launch the Pandora® application again from the mobile device.

Pandora original licensing restricted.

- Use of the service is being attempted outside the US.

- Pandora® service license has been granted in the US only.

Please disconnect and reconnect to sync device.

- An error has occurred between this unit and the mobile device.
 - Disconnect then reconnect the mobile device with this unit.
(For a USB device, unplug and plug the device in again. For a BLUETOOTH device, disconnect and connect the device again.)

Please launch Pandora application on mobile device.

- The Pandora® application has not been launched.
 - Launch Pandora® on your mobile device, then touch [Reconnect].

Server Error

- The Pandora® server may have a problem.
 - Select a source other than [Pandora], then select the Pandora® source again.

Station does not exist.

- The condition of the mobile device has changed between compiling the station list and selecting from the list.
 - Wait until the station list refreshes.

Thumbs Up/Down Error

- Thumbs Up/Down feedback failed.
 - Try Thumbs Up/Down again.

If these solutions do not help improve the situation, consult your nearest Sony dealer.
If you take the unit to be repaired because of disc playback trouble, bring the disc that was used at the time the problem began.

Language Code List

Language code list

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1183	Irish	1347	Maori	1507	Samoan
1028	Abkhazian	1186	Scots Gaelic	1349	Macedonian	1508	Shona
1032	Afrikaans	1194	Galician	1350	Malayalam	1509	Somali
1039	Amharic	1196	Guarani	1352	Mongolian	1511	Albanian
1044	Arabic	1203	Gujarati	1353	Moldavian	1512	Serbian
1045	Assamese	1209	Hausa	1356	Marathi	1513	Siswati
1051	Aymara	1217	Hindi	1357	Malay	1514	Sesotho
1052	Azerbaijani	1226	Croatian	1358	Maltese	1515	Sundanese
1053	Bashkir	1229	Hungarian	1363	Burmese	1516	Swedish
1057	Byelorussian	1233	Armenian	1365	Nauru	1517	Swahili
1059	Bulgarian	1235	Interlingua	1369	Nepali	1521	Tamil
1060	Bihari	1239	Interlingue	1376	Dutch	1525	Telugu
1061	Bislama	1245	Inupiak	1379	Norwegian	1527	Tajik
1066	Bengali; Bangla	1248	Indonesian	1393	Occitan	1528	Thai
		1253	Icelandic	1403	(Afan)Oromo	1529	Tigrinya
1067	Tibetan	1254	Italian	1408	Oriya	1531	Turkmen
1070	Breton	1257	Hebrew	1417	Punjabi	1532	Tagalog
1079	Catalan	1261	Japanese	1428	Polish	1534	Setswana
1093	Corsican	1269	Yiddish	1435	Pashto; Pushto	1535	Tonga
1097	Czech	1283	Javanese			1538	Turkish
1103	Welsh	1287	Georgian	1436	Portuguese	1539	Tsonga
1105	Danish	1297	Kazakh	1463	Quechua	1540	Tatar
1109	German	1298	Greenlandic	1481	Rhaeto- Romance	1543	Twi
1130	Bhutani	1299	Cambodian			1557	Ukrainian
1142	Greek	1300	Kannada	1482	Kirundi	1564	Urdu
1144	English	1301	Korean	1483	Romanian	1572	Uzbek
1145	Esperanto	1305	Kashmiri	1489	Russian	1581	Vietnamese
1149	Spanish	1307	Kurdish	1491	Kinyarwanda	1587	Volapük
1150	Estonian	1311	Kirghiz	1495	Sanskrit	1613	Wolof
1151	Basque	1313	Latin	1498	Sindhi	1632	Xhosa
1157	Persian	1326	Lingala	1501	Sangho	1665	Yoruba
1165	Finnish	1327	Laothian	1502	Serbo- Croatian	1684	Chinese
1166	Fiji	1332	Lithuanian			1697	Zulu
1171	Faroese	1334	Latvian;	1503	Singhalese		
1174	French		Lettish	1505	Slovak		
1181	Frisian	1345	Malagasy	1506	Slovenian	1703	Not specified

Support site

If you have any questions or for the latest support information on this product, please visit the web site below:

Site d'assistance

Si vous avez des questions ou si vous souhaitez consulter les toutes dernières informations techniques sur ce produit, rendez-vous sur le site Web suivant :

Sitio Web de soporte técnico en línea

Para resolver cualquier duda u obtener la información más reciente sobre el soporte técnico de este producto, visite el siguiente sitio Web:

<http://esupport.sony.com>
<http://www.sony.com/caraudio>

If you have any questions/problems regarding this product, try the following:

- 1 Read Troubleshooting in these Operating Instructions.**
- 2 Please contact (U.S.A. only);**
Call **1-800-222-7669**
URL **<http://www.SONY.com>**

<http://www.sony.net/>

©2014 Sony Corporation Printed in China



* 4 5 4 0 9 8 5 1 1 * (1)

XAV-68BT
4-540-985-11(1)