## SONY

## Startup Guide

# XPERIA™ Agent

XXXXX


For the detailed descriptions of how to use, see the user guide. http://www.xxxxxxxxxxxxx


# Preparing


### **Basic package**

- Xperia<sup>™</sup> Agent (main unit)
- AC adapter
- Power cord

## Names of parts

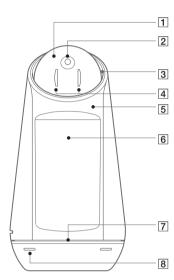

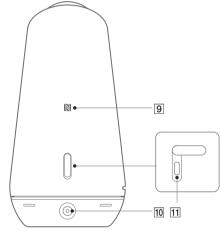

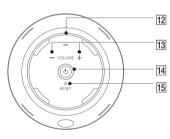

- 1 Head Switch
- 2 Camera
- 3 LED/Speaker
- 4 Agent eyes
- 5 Ambient light sensor 10 DC IN jack
- 6 Display (Touch screen)

9 N (NFC) mark


- 7 Microphone 12 Temperature & Humidity sensor 8 Human detect sensor
  - 13 Volume up/down key

11 USB Type-C<sup>™</sup> Jack

- 14 Power key
- 15 Reset Switch

## Turning the power on


- 1 Connect the power cord (included) to the AC adapter (included)
- 2 Connect the AC adapter to the DC IN jack of Xperia™ Agent
- **3** Firmly insert the power plug of power cord into an outlet

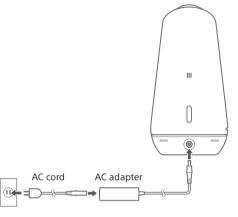

### **4** Press the power key of Xperia<sup>™</sup> Agent

The display lights and the wake-up screen appears.


When "ようこそ (Welcome)" screen appears, go to "Initial settings of Android".

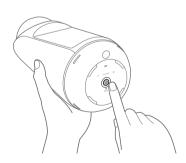

To power off, press and hold the power key.

## **Initial settings of Android**

**1** In the "ようこそ (Welcome)" screen, tap [開始 する (Start)]

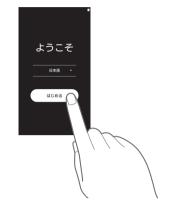

- To change the language, tap "日本語 (Japanese)" and then select a desired language.
- 2 In "重要なお知らせ (Important information)" screen, confirm the content and then tap [次へ (Next)]



#### **3** Follow the onscreen instructions to set up the following items

Wi-Fi

- Google account
- Xperia<sup>™</sup> services

**4** In "セットアップ完了! (Setup is complete)" screen, tap [終了 (Finish)]



The home screen appears. Go to "Initial settings of Xperia™ Agent" in "Settings" on the next page.



# Settings

## Initial settings of Xperia™ Agent

Register a name and face of user. Up to 10 users can be registered.

**1** In the home screen, tap "Xperia Agentを使い始める (Start using Xperia Agent)"



Xperia<sup>™</sup> Agent gives you a greeting. When Xperia<sup>™</sup> Agent says something, the LED blinks.



#### 2 Register your name

Following the Xperia<sup>™</sup> Agent's instruction, speak your name to register.

LED status changes from blinking to lighting when the Xperia<sup>™</sup> Agent hears your voice.







- If the name is not recognized correctly, speak "lie (No)" and your name again.
- To correct the name manually, tap [手動で修正する (Correct manually)] and then enter the name with the keyboard on the display.
- You can select [さん (san)], [ちゃん (chan)], [くん (kun)], [様 (sama)] or [(なし (None))] as the honorific. Tap (<) or (>) to toggle the option.

### 3 Register your face

Following the Xperia<sup>™</sup> Agent's instruction, register your face. Your profile photo will also be taken after the registration.



Tsugini kao wo touroku sasete kudasai. Kamera deno satsuei wo kyoka suru tameni "Kyoka suru" wo oshite kudasai. (Next, register your face. Press "許可する (Allow)" to shoot with the camera.)



Tap [許可する (Allow)]

Turn your face toward the camera



Kao ga ninshiki sareru to waku ga hyouji saremasu. (The frame appears when your face is recognized.)



OK desu. Hidari wo muite yokogao wo misete kudasai. (OK. Turn left to show your side face.)



Following the Xperia<sup>™</sup>
Agent's instruction,
turn your face direction







Center your face in the circle frame and tap [撮影する (Shoot)]



To reshoot the profile photo, answer "lie (No)" and then shoot again.

## $\boldsymbol{4}\,$ Register the next user / End the registration

- To register the other user in a row, tap [他の家族を登録する (Register other family member)] and then register his/her name and face.
- To end the user registration, tap [次へ(Next)].

# Using

## Checking how to use

Learn how to use the Xperia™ Agent through dialogue. You can set to notify you of weather forecast, news, etc. as a greeting message.

### 1 Check how to speak

Following the Xperia<sup>™</sup> Agent's instruction, speak to the Xperia<sup>™</sup> Agent.



### 2 Set the greeting message

Following the Xperia  $^{\!\top\!\!\!M}$  Agent's instruction, speak to the Xperia  $^{\!\top\!\!\!M}$  Agent.



Tenkiyohou ya koutsuu jouhou wo otodoke suru tame ni chiiki wo sitei site kudasai. Ichijouhou eno akusesu wo kyoka site kudasai. (Specify the area for weather forecast or traffic information. Allow to access location information.)



• If the area is not recognized correctly, tap [いいえ (No)] and then select a desired area following the onscreen instructions.

#### 3 Check other things that can be done

 
The Xperia<sup>™</sup> Agent introduces other things that can be done.



Saigo ni boku ga dekirukoto wo matomete shoukai shimasu. (Finally, I introduce the outline of other things I can do.)

#### Try to speak

Say "Hai, Ekusuperia (Hi, Xperia)" and then speak a greeting or question. The Xperia™ Agent will answer you.



Hai, Ekusuperia (Hi, Xperia)

Dou shimashita? (How can I help you?)

Ohayou, nyuusu oshiete. (Good morning. What's the news today?)

# Using

The Xperia<sup>™</sup> Agent can respond the following greetings.

- Ohayou (Good morning)
- Kon-nichiwa (Good afternoon)
- Konbanwa (Good evening)
- Oyasumi (Good night)
- Ittekimasu (See you later)
- Tadaima (I'm home)
- Bai bai (Bye-bye)
- Sayounara (Good bye)
- Yoroshiku ne (Nice to meet you)
- Onegai (Please)
- Gomen ne (Sorry)
- Arigatou (Thank you)
- Akemashite omedetou (A happy new year)
- Merii kurisumasu (Merry Christmas)