

Preparing the phone

Congratulations on your purchase of the Sony Ericsson T303. For additional phone content, go to www.sonyericsson.com/fun. Register now to get free online storage and special offers at www.sonyericsson.com/myphone. For product support, go to www.sonyericsson.com/support.

Instruction symbols

The following instruction symbols appear in this User guide:

- Use a navigation key or a selection key to scroll and select.

- Press the centre selection key.
- Press the navigation key to the left.
- Press the navigation key to the right.
- Press the navigation key up.
- Press the navigation key down.

Note

Tip

 
Warning

Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

To insert the SIM card and battery




- Remove the battery cover. Slide the SIM card into its holder with the contacts facing down.

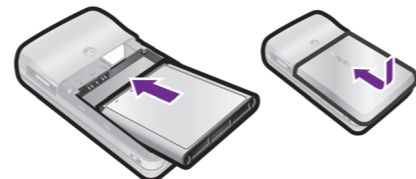

- Insert the battery with the label side up and the connectors facing each other. Replace the battery cover as shown in the picture.

Do not force the battery cover into place. Slide the battery cover carefully onto the phone and close it.

 To charge the battery

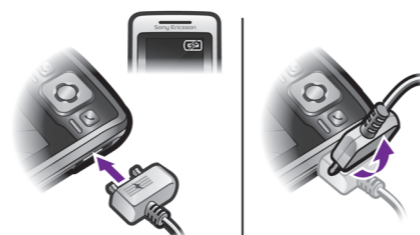

- The phone battery is partly charged when you buy it. Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to illuminate the screen.
- To remove the charger, tilt the plug upwards.

You can use the phone during charging. You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.

To turn on the phone

- Press and hold down **Power**.
- Enter your PIN if requested. To correct mistakes, press **Cancel**.
- Select **OK**.
- Select a language.
- Enter the time and date and select **Save**.

To turn off the phone

- Press and hold down **Power**.

Standby

After you have turned on the phone and entered your PIN, the name of your operator appears on the screen. This is called standby. You can now make and receive calls.

SIM and PIN

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger and remove the battery before you insert or remove the SIM card.

 
You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See *Contacts* on page 17.

PIN code

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.

If you enter the wrong PIN three times in a row, PIN blocked. To unblock, enter your PUK code provided by your network operator. To unblock it, you need to enter your PUK (Personal Unblocking Key).

Network coverage

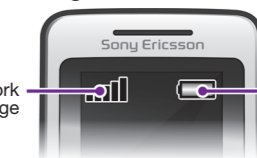


The network bars show the strength of the GSM network in your area. Try moving to another location if you have trouble calling and network coverage is poor. No network means you are not in range of a network.

- Good network coverage
- Average network coverage

Battery status

- The phone battery is fully charged
- The phone battery is empty
- The phone battery is being charged

 Phone overview

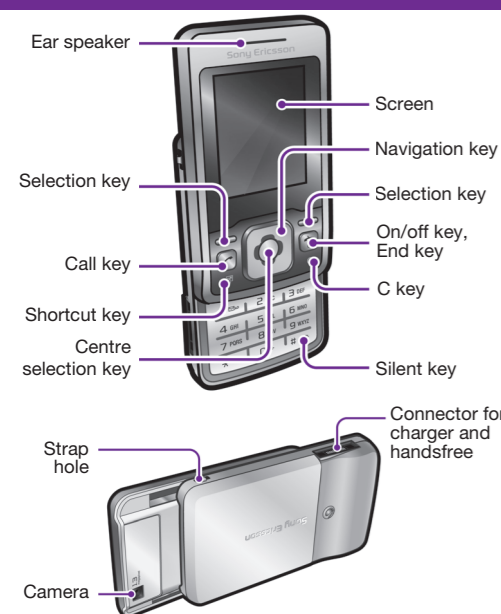

Menu overview

Organizer	File manager, Alarms, Calendar, Tasks, Notes, Timer, Stopwatch, Calculator
Internet	TrackID™, My Games, FM radio, Sound recorder
Entertainment	Write new, Inbox, Call voicemail, Drafts, Outbox, Sent messages, Saved msgs, Templates, Settings
Camera	Play view, Artists, Tracks, Playlists
Messaging	Write new, Inbox, Call voicemail, Drafts, Outbox, Sent messages, Saved msgs, Templates, Settings
Music player	Play view, Artists, Tracks, Playlists
Calls*	All Answered Dialed Missed
Contacts	New contact
Settings*	General Sounds & alerts Display Calls Connectivity

Some menus and icons in this document may vary depending on operator, network or subscription.
* You can use the navigation key to select tabs in sub menus.

Screen icons

These icons may appear on the screen.

Icon	Description
Battery icon	A completely green icon means the battery is fully charged
You have missed a call	
Ongoing call	
The phone is set to silent	
The keypad is locked	
You have received a new text message	
You have received a new picture message	
An alarm is activated	
The radio is playing	
The music player is playing	
A handsfree is connected	
The Bluetooth function is activated	
A Bluetooth handsfree is connected	
The loudspeaker is on	

Navigation

To navigate the menus

- From standby press **Menu** to select Menu.
- Press **Left**, **Right**, **Up**, **Down** to move through the menus.

To select items and actions shown on the screen

- Press either of the selection keys or **Center**.

To select a tab

- Go to the tab by pressing **Left** or **Right**.

To return to standby

- Press **Power**.

To operate the keypad lock

- To lock the keypad, close the slide.
- To unlock the keypad, open the slide.
- To unlock the keypad with closed slide, press any key, then select **Unlock** > **OK**.

Calls to the international emergency number 112 can still be made, even when the keypad is locked.



Calling

You must turn on the phone and be within range of a network.

To make a call

- From standby enter the area code and phone number.
- Press **Call**.

To activate the slide for answering and ending calls

- From standby select **Menu** > **Settings** > the **Calls** tab.
- Select **Open to answer** > **On** to activate answering.
- Select **Close to end call** > **On** to activate call ending.

To answer a call

- Press **Call** or open the slide.

To end a call

- Press **Call** or close the slide.

To reject a call

- Press **Call**.

To turn off the ringtone when receiving a call

- Press **Call** to turn off the ringtone without answering or rejecting the call.

To turn the loudspeaker on during a call

- Select **SpkrOn**.

Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.



To mute the microphone during a call

- Press and hold **Call** to turn the microphone on and off.

To change the ear speaker volume during a call

- Press **Up** or **Down**.

To make international calls

- From standby press and hold down **Call** until a + sign appears on the screen.
- Enter the country code, area code (without the first zero) and phone number.

Call list

You can view information about recent calls.

To call a number from the call list

- From standby press **Call**.
- Go between the tabs **All**, **Answered**, **Dialed** and **Missed**.
- Find the name or number and press **Call**.

To clear the call list

- From standby press **Call**.
- Select the **All** tab > **Options** > **Delete all**.

Messaging

Text messages (SMS)

You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself.

To set a service centre number

- From standby select **Menu** > **Messaging** > **Settings** > **Text message** > **Service centre**.
- If there is no number shown, enter the service number, including the international "+" sign and country code.
- Select **Save**.

To write and send a text message

- From standby press **Call**.
- Select **Text message**. Enter the message and select **Cont**.
- Select a recipient (**Enter phone no.** or **Contacts look-up**) and select **Send**.

See *Entering text* on page 24.

Received messages are saved in the **Inbox**.

To read or delete received messages in the Inbox

- From standby select **Menu** > **Messaging** > **Inbox**.
- Scroll to the message you want to read or delete.
- To read the message, select **View**. To delete the message, press **Call**.

Picture messages (MMS)

Picture messages can contain text, images and sounds.

You must set an MMS profile and the address of your message server. You can receive all the settings from your network operator or at www.sonyericsson.com/support.

To create and send a picture message

- From standby press **Call**.
- Select **Picture msg**.
- Press **Left** or **Right** to switch between writing text and adding items. Select **Options** to select writing options.
- When the message is ready, select **Cont**.
- Select a recipient (**Enter email addr.**, **Enter phone no.** or **Contacts look-up**) and select **Send**.

Sending and receiving pictures must have subscriptions that support picture messaging.

You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.

See *Entering text* on page 24.

To add a contact

- From standby press **Call**.
- Scroll to **New contact** and select **Add**.
- Scroll to **Name**: and select **Add**.
- Enter the name and select **OK**.
- Scroll to **New number**: and select **Add**.
- Enter the number and select **OK**.
- Select a number option.
- Navigate between tabs and fields and add information.
- Select **Save**.

You can enter the + sign and country code with all phonebook numbers. They can then be used abroad or at home. See *To make international calls* on page 14.

To call a contact

- From standby press **Call**.
- Scroll to the contact, or enter the first few letters of the contact with multitap (see *Entering text* on page 24).
- Press **Call**.

To edit a contact

- From standby press **Call**.
- Scroll to the contact and select **Options** > **Edit contact**.
- Navigate between the tabs, edit the information and select **Save**.

To delete a contact

- From standby press **Call**.
- Scroll to the contact and press **Call**.

To copy all contacts to the SIM card

- From standby press **Call**.
- Scroll to **New contact** and select **Options** > **Advanced** > **Copy to SIM** > **Copy all**.

Contacts memory

The number of entries you can save in Contacts depends on the capacity of your SIM card.

To check the Contacts memory status

- From standby press **Call**.
- Scroll to **New contact** and select **Options** > **Advanced** > **Memory status**.

Radio

To listen to the radio

- Connect the handsfree to the phone.
- From standby select **Menu** > **Entertainment** > **FM radio**.

To control the radio

- Press **Left** or **Right** to search for channels manually.
- Press **Up** or **Down** to change the volume.

To save a radio channel in the channels list

- Find the radio channel, then press and hold down **Call** - **Call** to save it on the corresponding position.

To listen to a radio channel saved in the channels list

- When the radio is playing, press **Call** - **Call** to listen to the radio channel on the corresponding position. You can view saved channels in **Options** > **Channels** > **Select position**.

To turn off the radio

- Select **Options** > **Turn off** or press **Call**.

To view radio options

- When the radio is playing, select **Options**.

To record radio

- Select **Options** > **Record radio** to start recording.
- Select **Save** to stop the recording. The recording is saved in **Menu** > **Organizer** > **File manager** > **My radio recs**.

This service is not available in all countries.

Music player

You can play music files saved in the phone memory. The music stops when you receive or make a call, and the playing resumes when the call has ended.

To play a music track

- From standby press **Call**.
- Scroll to **Tracks** and select **Open**.
- Scroll to the track and select **Play**.

To change the volume

- When music is playing, press **Up** or **Down**.

To create a playlist

- From standby press **Call**.
- Scroll to **Playlists** and select **Open**.
- Scroll to **New playlist** and select **Add**.
- Enter a name and select **OK**.
- Scroll to a track and select **Mark** to mark the tracks you want to add. To browse a folder, select **Open**.
- Select **Add**.

To minimize the music player on the screen

- When music is playing, select **Minim**.

To stop the music player when minimized

- From standby press **Call**.
- Select **Play view** > **Stop**.

Camera

Your phone has a digital camera to take pictures to save or send. Pictures taken with the camera are saved in **Menu** > **Organizer** > **File manager** > **Camera album**. The format is JPEG.

Pictures downloaded using picture messages, Internet or Bluetooth are saved in **Pictures**.

To start the camera and take a picture

- Open the slide.
- From standby press **Call**.
- Use **Left** and **Right** to zoom, **Up** and **Down** to change brightness, or select **Options** to view camera options.
- Select **TakePic** to take the picture.
- Select **Save** to save the picture or **Delete** to delete it.

To send a camera picture as a picture message (MMS)

- From standby select **Menu** > **Organizer** > **File manager** > **Camera album**.
- Highlight a picture and select **Options** > **Send** > **As picture msg**.
- Press **Call**, enter text and select **Cont**.
- Select a recipient (**Enter email addr.**, **Enter phone no.** or **Contacts look-up**) and select **Send**.

See *To send a camera picture using Bluetooth* on page 32.

More functions

Ringtones and themes

Themes are used to change the appearance of the screen.

To select volume, ringtone or vibrating alert

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab.
- 2 Select **Ring volume** to set the volume, or select **Ringtone** to choose a ringtone, or select **Vibrating alert** to set the vibrating alert.

To select a key sound

- From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Key sound** and select an option.

To select a theme

- From standby select **Menu** > **Settings** > the **Display** tab > **Themes** and select a theme.

To use a picture taken with camera as wallpaper

- From standby select **Menu** > **Settings** > the **Display** tab > **Wallpaper** and select a picture.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off.

To set an alarm

- 1 From standby select **Menu** > **Organizer** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time**; and select **Edit**. Enter a time and select **OK**.
- 4 Scroll to **Recurent**; and select **Edit**. Mark the days that you want the alarm to sound and select **Done**. If you do not select a day, the alarm will only sound on the next occasion.
- 5 Select **Save** to activate this alarm.

To set the signal for an alarm

- 1 From standby select **Menu** > **Organizer** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Select the **🔔** tab > **Alarm signal**; and select a signal.
- 4 Select **Save**.

! You need to keep a handsfree inserted to use the radio as an alarm signal. The handsfree works as an antenna, the signal will sound through the loudspeaker.

To silence the alarm

- 1 When the alarm sounds, select **Silent**.
- 2 To turn off the alarm, select **TurnOff**. To repeat the alarm, select **Snooze**.

TrackID™

TrackID™ is a music recognition service. Search for song titles, artists and album names. You must have correct Internet settings in your phone. See *Internet* on page 29.

🔦 For cost information contact your service provider.

To search for song information

- When you hear a song through a loudspeaker, from standby select **Menu** > **Entertainment** > **TrackID™**.

Entering text

There are two methods you can use to enter text: multitap or predictive text input.

🔦 By using predictive text input you only have to press each key once. Continue writing a word even if it appears to be wrong. The phone uses the dictionary to recognize the word when all letters are entered.

To enter text using multitap

- Press **(2)** – **(9)** repeatedly until the letter appears.
- Press **(=)** to add a space.
- Press **(=)** to enter punctuation marks.



To enter text using predictive text input

- For example, if you want to write the word "land", press **(5)**, **(2)**, **(6)**, **(3)**.
- If the word or punctuation mark is the one you want, press **(=)** to accept and add a space. To accept a word without adding a space, press **(=)**.
- If the word or punctuation mark is not the one you want, press **(=)** or **(=)** repeatedly to view alternative words.

To add a word to the dictionary

- 1 When you write the message, select **Options** > **Spell word**.
- 2 Enter the word using multitap and select **Insert**.

How to use the keys

- Press and hold down **(=)** to change the input method.
- Press **(=)** to shift between upper case and lower case letters.
- Press and hold down **(=)** to change the writing language.
- Press **(C)** to delete characters. To delete a whole word, press and hold down **(C)**.
- Press and hold down **(0)** – **(9)** to enter numbers.

Multiple calls

When call waiting is activated, you will hear a beep when you receive a second call.

To activate call waiting

- From standby select **Menu** > **Settings** > the **Calls** tab > **Manage calls** > **Call waiting** > **Activate**.

To answer a second call

- 1 When you hear a beep during a call, select **Answer**. Your ongoing call is put on hold.
- 2 Select **Options** > **Switch calls** to switch between the calls.

To reject a second call

- When you hear a beep during a call, select **Busy**.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used for emergency calls in any country, with or without the SIM card, if a GSM network is within range.

To make an emergency call

- From standby enter 112 (the international emergency number) and press **(=)**.

To view or edit your local emergency numbers

- From standby select **Menu** > **Contacts** > **New contact** > **Options** > **Special numbers** > **Emergency nos**.



Voicemail

Callers can leave a voicemail message when you cannot answer. Ask your operator for your voicemail number.

To enter your voicemail number

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Voicemail no**.
- 2 Enter the voicemail number and select **OK**.

To call your voicemail service

- From standby press and hold down **(=)**.

Calendar

To add an appointment in the Calendar

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Scroll to **New appointm**, and select **Add**.
- 4 Enter the information and confirm each entry.
- 5 Select **Save**.

To view or edit an appointment

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.
- 4 Select **OK** if you are done viewing, or select **Options** > **Edit** to edit the appointment.

Time and date

To set the time

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Time**.
- 2 Select **Format** and choose a time format.
- 3 Enter the time and select **Save**.

To set the date

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Date**.
- 2 Select **Format** and choose a date format.
- 3 Enter the date and select **Save**.

Language

You can select the language for the phone menus.

To change the phone language

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Language** > **Phone language**.
- 2 Select a language.

22

23

24

25

26

27

28

Internet

To browse the Internet, you need the correct settings in your phone. If settings are not in your phone, you can:

- Get them in a text message (SMS) from your network operator.
- On a computer, go to www.sonyericsson.com/support and request a text message with the settings.

To select an Internet profile

- From standby select **Menu** > **Settings** > the **Connectivity** tab > **Internet settings** > **Internet profiles**. Select a profile.

To start browsing the Internet

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Go** to and select an option.

To stop browsing the Internet

- Select **Options** > **Exit browser**.

File manager

You can use the file manager to handle files saved in the phone memory.

To view information about a file in the file manager

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Navigate to the file and select **Options** > **Information**.



To move a file to a folder in the file manager

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Find the file and select **Options** > **Manage file** > **Move**.
- 3 Navigate to the folder and select **Paste**.

To delete a file in the file manager

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Find the file and press **(C)** or select **Options** > **Delete**.

Mass storage

You can connect your phone to a computer with a USB cable to transfer files using USB Mass storage.

! Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during file transfer as this may corrupt the phone memory.

To use Mass storage

- 1 Turn on your phone and connect the USB cable to your phone and computer. The phone will shut down in this mode and restart when disconnected.
- 2 Select **Yes** in the phone to start the **Mass storage** session.
- 3 In the computer, open the phone folder to view files and folders in the phone.
- 4 Drag and drop files between the phone and the computer.
- 5 In the computer, remove the removable disk safely to exit the **Mass storage** session.

29

30

31

32

33

34

35

Troubleshooting

Some problems require that you call your service provider, but you can correct most problems yourself. Remove the SIM card before handing your phone in for repair. Go to www.sonyericsson.com/support for more information.

Memory capacity and speed

If you have not restarted the phone for a while, you may experience problems with its memory capacity and speed.

- You can restart the phone to improve its capacity.
- 1 Turn off the phone and remove the battery cover.
- 2 Remove the phone battery and then put it back in place.
- 3 Replace the battery cover and turn on the phone.

Master reset

If you experience problems with screen flickering, freezing, or navigation problems, you should reset the phone.

- From standby select **Menu** > **Settings** > the **General** tab > **Master reset** and select an option.

! Reset settings will reset all changes that you have made in your phone to default.

Reset all will delete all user data as contacts, messages, pictures and sounds in your phone.

www.sonyericsson.com

Sony Ericsson

Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden



1210-1909.1
Printed in XXXX

29

30

31

I cannot turn the phone on, what should I do?

Try charging the phone until it has finished charging. Connect the charger (make sure the power icon on the charger is facing upwards) and charge the phone for 2.5 hours. The battery icon on the screen may not appear until the phone has charged for 30 minutes.

What is my phone lock code?

A phone lock protects your phone against unauthorized use. If a different SIM card is inserted in the phone, the phone lock code has to be entered. The default phone lock code is 0000.

What do these error messages mean?

PIN blocked. To unblock, enter your PUK code provided by your network operator.

You have entered the wrong PIN code 3 times in a row. Unblock the SIM card with the PUK code provided by your operator. See *SIM card lock* on page 33.

Insert SIM

Your SIM card is not inserted correctly or may be damaged or dirty. Try the following:

- 1 Remove the SIM card.
- 2 Clean the connectors on the SIM card and phone with a cloth or a cotton bud. Check if the SIM card is damaged.
- 3 Insert the SIM card correctly in the phone.

Contact your network operator if you need a new SIM card.

We, Sony Ericsson Mobile Communications AB of Nya Vattenornet S-221 88 Lund, Sweden declare under our sole responsibility that our product **Sony Ericsson type AAB-1022171-BV** and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511;V9.0.2, EN 300 328;V1.7.1, EN 301 489-7;V1.3.1, EN 301 489-17;V1.2.1 and EN 60950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC. Lund, March 2008

Shoji Nemoto, Head of Product Business Unit GSM/UMTS
We fulfil the requirements of the R&TTE Directive (99/5/EC).

FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Sony Ericsson T303

GSM 900/1800/1900
This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved. © Sony Ericsson Mobile Communications AB, 2008
Publication number: 1210-1909.1

Please note: Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. Please read the *Important information* chapters before you use your mobile phone.

31

32

33

Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, reexport, or import Software. Software may not be downloaded, or otherwise imported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable. All other trademarks and copyrights are the property of their respective owners. Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. Sony is a trademark or registered trademark of Sony Corporation. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. The Predictive Text Technology is used under license from ZI Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under license. The Liquid Identity logo and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. TrackID™ is powered by Gracenote Mobile. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Content owners use Windows Media digital rights management technology (WM DRM) to protect their intellectual property, including copyrights. This device uses WM DRM software to access WM DRM-protected content. If the WM DRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WM DRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WM DRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

34

35

Sony Ericsson

Important information

Sony Ericsson Consumer Web site

On www.sonyericsson.com/support there is a support section where help and tips are on a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners

When you purchase your product under the warranty conditions in this User guide. On www.sonyericsson.com, you will find the latest support tools and information. For operator-specific services and features, please contact your network operator. You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes and/or a toll-free number). If you are unable to reach your dealer, you need service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to how to properly function, have the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May contain mercury. Do not dispose of in household waste.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not use for smoking or to lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic device or disable the radio transmitting functionality if the device when used causes interference to other electronic equipment.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- Do not use cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subjected to pressure.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

Children
Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that can become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may increase increased safety risks.

Battery

New rechargeable batteries can have short-term reduced capacity. Fully charge the battery before initial use. For use intended purpose only. Charge the battery in temperatures between +0°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before inserting the battery. Performance depends on temperature, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm (6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your mobile phone is compatible with the vehicle. Performance depends on temperature, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

GPS/Location based functions

Some personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your radio, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand or other objects that could obstruct or block the antenna.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic testing and through evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value. Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone must be tested with a minimum of 15 mm from the body. For ear-to-ear use, any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to: www.sonyericsson.com/health.

Malware

Malware (short for malicious software) is software that can harm your mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or clicking on messages from unknown sources, using trustworthy sources to access the Internet, and only downloading content to your mobile phone from known, reliable sources. Accessories

Only Sony Ericsson branded original accessories and certified service partners.

Some personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Accessibility/Accessibility Features

US, compatible with Sony Ericsson phones may offer compatibility with TTY (Text Telephone) with necessary accessory). For more information call The Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information. Never use municipal waste.

Memory card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use. The memory card is formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact your service support.

WARNING: If your device requires an Adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not touch the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check your device regularly for correct memory card connection.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any data loss or corruption you store on the memory card.
- Corroded data may be damaged or lost when you remove the memory card or memory card adapter, or turn off the power while formatting, reading or writing data, or when you use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Some personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Some personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

End User License Agreement

This wireless device, including without limitation any media delivered with the device, contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software"). As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device. You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any other material contained in the Product to be reproduced, modified, distributed, or used. All rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules. You are granted this license for a term of the useful life of this Device. You may terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect. Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material owned by a third party, such third party, under license to Sony Ericsson, reserves all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules. The validity, construction and performance of this license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 89 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty. The Limited Warranty is the original accessory delivered with your mobile phone (hereinafter referred to as "Product"). Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com for further information.

Our warranty
Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of two (2) years as from the original date of purchase of the Product by the consumer, or the period of time specified in the following the original purchase date of the Product for all original accessories (such as the battery, charger or handset kit) which may be delivered with your mobile phone.

What we will do

During the warranty period, this Product fails to operate under normal use and is affected due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country/region where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions above. Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulations or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

ONSERE GARANTIE

NaMafgäbe der Bedingungen dieser eingeschränkten Garantie garantiert Sony Ericsson, dass dieses Produkt zum Zeitpunkt des Ersterwerbs frei von Konstruktions-, Material- und Fabrikfehlern ist. Diese Garantie gilt für zwei (2) Jahre ab Datum des Ersterwerbs dieses Produkts für das Mobiltelefon und für ein (1) Jahr ab Datum des Ersterwerbs dieses Produkts für alle Original-Zubehörkomponenten (z. B. Akku, Ladegerät oder Headset), die ggf. mit dem product geliefert wurden.

Wenn dieses Product während des Garantiezeitraums bei sachgemäßem Gebrauch und Service Konstruktions-, Material- oder Fertigungsfehler aufweist, wird ein Vertragshändler oder ein Servicepartner von Sony Ericsson in dem Land/der Region, in dem bzw. der Sie das Product erworben haben, das Product unter Berücksichtigung der beschriebenen Bedingungen nach eigenem Ermessen entweder reparieren oder ersetzen. Sony Ericsson und die Servicepartner behalten sich das Recht vor, eine Bearbeitungsgebühr in Rechnung zu stellen, wenn das Product nach Maßgabe der unten genannten Bedingungen keine Garantieansprüche begründet. Die Reparatur und Austausch dieses Sony Ericsson-Produkts können Ihre persönlichen Daten sowie heruntergeladene Dateien und andere Daten verloren gehen. Derzeit kann Sony Ericsson aufgrund anzuwendender Gesetze und Richtlinien sowie Fair Play-Prinzipien die Möglichkeit haben, die Identifizierung der Daten zu verweigern und sich sichern. Sony Ericsson übernimmt keinerlei Verantwortung für Datenverluste jedweder Art und leistet keinerlei Schadensersatz für solche Datenverluste. Sie sollten immer Sicherungskopien aller in einem Sony Ericsson-Product gespeicherten Daten (einschließlich persönlicher Dateien, Kalender, e-Mails und Kontakte) erstellen, bevor Sie das Sony Ericsson-Product für eine Reparatur oder einen Austausch aushändigen.

BEDINGUNGEN

1 Diese eingeschränkte Garantie gilt nur, wenn der Kaufbeleg mit Seriennummer* und Kaufdatum, der vom Sony Ericsson-Vertragshändler für den Ersterwerb ausgestellt wurde, zusammen mit dem zu reparierenden bzw. zu ersetzenden Produkt vorgelegt wird. Sony Ericsson behält sich das Recht vor, Garantieansprüche abzulehnen, wenn diese Informationen nach dem Kauf des Produkts entfallen oder geändert wurden. 2 Sony Ericsson ersetzt das Product repariert oder ersetzt, dem gilt der Garantieanspruch für den betreffenden Defekt bzw. das ersetzte Product für die verbleibende Dauer des ursprünglichen Garantiezeitraums bzw. für neunzig (90) Tage ab dem Reparaturdatum, je nachdem, welcher Zeitraum länger ist. Die Reparatur-, bzw. Ersatzanspruch können mit Funktion gleichwertigen, instand gesetzten Geräten erfüllt werden. Erstmals Bauteile oder Komponenten werden Eigentum von Sony Ericsson. 3 Diese Garantie gilt nicht für Fehler an Gerät, die entstehen sind durch normalen Verschleiß, falsche Benutzung oder Missbrauch, einschließlich, jedoch nicht beschränkt auf: unrichtige oder unvollständige Nutzung, unrichtige oder unvollständige Nutzung von Sony Ericsson zu Gebrauch und Wartung. Diese Garantie gilt auch nicht für Fehler am Gerät aufgrund von Unfällen bzw. Veränderungen und Anpassungen der Hardware und Software, höherer Gewalt und Schäden durch Kontakt mit Flüssigkeiten. 4 Ein Akku kann mehr als einundzwanzig (21) mal aufgeladen werden. Treiber findet ein gewisser Verschleiß statt, bei dem es sich nicht um einen Defekt handelt. Wenn die Gesprächs- oder Standby-Zeit deutlich kürzer wird, sollten Sie den Akku austauschen. Sony Ericsson empfiehlt die ausschließliche Verwendung von Akkus und Ladegeräten, die von Sony Ericsson freigegeben wurden.

22	23
----	----

autorizzato a trasferire tutti i diritti e gli obblighi relativi al Software a una terza parte, unicamente insieme al Dispositivo con cui è stato fornito il Software, purché l'altra parte accetti di mettere per iscritto il proprio vincolo a tali disposizioni. Questa licenza verrà accettata e il contratto di vendita del Dispositivo con cui è stato fornito il Software. La non osservanza dei termini e delle condizioni esposte in questa licenza costituisce al termine della stessa con effetto immediato. Sony Ericsson si sicuti fornitore e licenziatari terzi sono gli unici ed esclusivi responsabili e detentori di tutti i diritti, i titoli e gli interessi relativi al Software. Sony Ericsson ed un'eventuale terza parte, qualora il Software contenga materiale o codice di tale terza parte, verranno nominati beneficiari terzi di queste condizioni. La validità, l'interpretazione e l'adempimento di questa licenza saranno governate dalle leggi di Swetz. Quanto sopra verrà applicato nella misura massima consentita dai diritti del consumatore previsti dalla legge, quando applicabile.

Garanzia limitata

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) o relative affiliate forniscono la presente garanzia limitata per il telefono portatile i relativi accessori originali forniti insieme al telefono portatile (il seguito denominato "Prodotto"). La presente garanzia limitata è categorizzata a garanzia di Sony Ericsson. Il Prodotto sarà effettuato l'acquisto. In alternativa, è possibile rivolgersi a Sony Ericsson Call Center di competenza (potrebbero venire applicate le tariffe nazionali) o visitare il sito Web www.sonyericsson.com per ulteriori informazioni.

LA GARANZIA

In base alle condizioni della presente garanzia limitata, Sony Ericsson garantisce che il Prodotto al momento dell'acquisto è privo di difetti di costruzione o relativi al design e ai materiali impiegati. La presente garanzia limitata avrà una validità di due (2) anni a decorrere dalla data iniziale di acquisto del Prodotto per il telefono portatile e di un (1) anno a decorrere dalla data iniziale di acquisto del Prodotto per tutti gli accessori originali (come la batteria, il caricabatterie o il kit viva voce) che possono essere consegnati unitamente al telefono portatile.

RESPONSABILITÀ

SA durante il periodo di garanzia il Prodotto, in condizioni normali di utilizzo, dovesse presentare malfunzionamenti dovuti a difetti di design, costruzione o relativi ai materiali impiegati, i distributori autorizzati Sony Ericsson o i centri di assistenza partner del paese/ regione/ di acquisto del Prodotto procederanno, a propria discrezione, alla riparazione o al rimpiazzamento del Prodotto, o al rimpiazzamento del Prodotto con un prodotto equivalente o sostituito. Al momento, la legge applicabile, altre norme o restrizioni tecniche impediscono a Sony Ericsson di effettuare copie di backup di determinati contenuti scaricati. Si consiglia di effettuare sempre copie di backup dei contenuti scaricati.

Heiligkeit und Farben des Bildschirms verschiedener Telefone können geringfügig voneinander abweichen. Auf dem Bildschirm können sich kleine helle oder dunkle Punkte befinden. Diese Punkte werden als schadhafte Pixel bezeichnet. Es handelt sich um ein natürliches Erscheinungsbild. Eine Korrektur ist nicht möglich. Zwei schadhafte Pixel gelten als akzeptabel.

Die Bildwiedergabe von Fotos kann auf verschiedenen Telefonen unterschiedlich ausfallen. Dies ist ganz normal und gilt nicht als Defekt des Kameramoduls. 4 Da das Mobilfunknetz, in dem dieses Produkt betrieben wird, von einem von Sony Ericsson unabhängigen Anbieter bereitgestellt wird, ist Sony Ericsson nicht für Betrieb, Verfügbarkeit, Flüssendigkeit, Dienstgüte und Reichweite des betreffenden Systems verantwortlich. 5 Die Garantie erstreckt sich nicht auf Produktfehler, die durch Installationen, Modifikationen, Reparaturen oder Öffnung des Produkts durch nicht von Sony Ericsson autorisierte Personen verursacht werden. 6 Die Garantie erstreckt sich nicht auf Produktfehler, die durch den Einsatz von Zubehörkomponenten oder Peripheriegeräten verursacht wurden, bei denen es sich nicht um Originalzubehör von Sony Ericsson handelt, das für dieses Produkt entwickelt wurde.

Sony Ericsson schließt alle ausdrücklichen und konkludenten Garantien in Bezug auf Fehler des Produkts oder der Peripheriegeräte ab und gibt Ihnen, *trojanischen Pferd*, die Möglichkeit, das Produkt zu reparieren oder zu ersetzen. Wenn Sie dringend, dass Sie ggf. bei Verfügbarkeit geeignete Software zum Schutz vor Viren im Product und ggf. in angeschlossenen Peripheriegeräten installieren und regelmäßig aktualisieren, um das Gerät zu schützen. Solche Software kann Ihr Produkt und die Peripheriegeräte aber nie vollständig schützen. Deshalb schließt Sony Ericsson alle ausdrücklichen und konkludenten Garantien für den Fall aus, dass eine solche Antivirussoftware ihren Zweck nicht erfüllt.

7 Die Beschädigung der auf dem Gerät angebrachten Folie führt zum Erlöschen der Garantieansprüche. 8 **WICHTIG! AUSDRÜCKLICHEN GARANTIEEN, GLEICH OB SCHRIFTLICH ODER MÜNDLICH AUSGESPRECHEN, AUSSER DIESER GEDRUCKTEN ERKLÄRUNG ZUR EINGESCHRÄNKTEN GARANTIE. SÄMTLICHE KONKLUDENTEN GARANTIEEN, EINSCHLIESLICH, JEDDOCH OHNE BESCHRÄNKUNG AUF GARANTIEEN DER HANDELSÜBLICHKEIT UND DER EIGNUNG FÜR EINEN BESTIMMTEN ZWECK, GELTEN NIUR FÜR DIE DAUER DIESER EINGESCHRÄNKTEN GARANTIE. SONY ERICSSON UND DIE LICENZBEREITER SIND, SOWEIT EIN HAFTUNGSAUSSCHLUSS GESETZLICH ZULÄSSIG IST, IN KEINEM FALL HAFTBAR FÜR MITTELBARE ODER FOLGESCHÄDEN GLEICH WELCHER ART, EINSCHLIESLICH, JEDDOCH OHNE BESCHRÄNKUNG AUF ENTGANGENE GEWINNE UND WIRTSCHAFTLICHE NACHTEILE.**

In einigen Ländern/ Staaten ist der Ausschluss bzw. die Beschränkung von mittelbaren oder Folgeschäden bzw. die Beschränkung der Dauer konkludenter Garantien nicht zulässig. In diesem Fall gelten die vorstehenden Beschränkungen und Ausschlüsse nicht für Sie. Sony Ericsson ist nicht verpflichtet, die Rechte des Verbrauchers zu unterstützen, noch die Rechte des Verbrauchers gegen den Händler, die sich aus dem Kaufvertrag ergeben.

22	23
----	----

backup di tutte le informazioni salvate nei prodotti Sony Ericsson quali contenuti scaricati, dati dell'agenda e dei contatti prima di portare il Prodotto a un centro Sony Ericsson per la riparazione o la sostituzione.

CONDIZIONI

- La presente garanzia limitata è valida solo se il Prodotto da riparare o sostituire è accompagnato dall'originale della prova di acquisto rilasciata dal rivenditore autorizzato Sony Ericsson, per questo Prodotto, con l'indicazione della data e del numero di serie*. Sony Ericsson si riserva il diritto di non effettuare la riparazione in garanzia se queste informazioni risultassero cancellate o modificate dopo il primo acquisto del Prodotto dal rivenditore.

2 Qualora Sony Ericsson proceda alla riparazione o alla sostituzione del Prodotto, la riparazione del difetto in questione o il Prodotto sostituito godrà di un periodo di garanzia pari a quello del Prodotto originale. Per ulteriori informazioni, visitate il sito Web www.sonyericsson.com. 3 La presente garanzia non pregiudica i diritti del consumatore previsti dalla legge né i diritti del consumatore in materia di protezione dei dati personali derivanti dal contratto di vendita/acquisto.

LIMITI GEOGRAFICI DELLA GARANTIA

Se il Prodotto è stato acquistato in un paese membro dello Spazio economico europeo (SEE) o in Svizzera o nella Repubblica di Turchia e tale Prodotto era destinato alla vendita nel paese SEE o in Svizzera o in Turchia, in base alle condizioni di garanzia prevalenti nel paese in cui si richiede l'assistenza del Prodotto, a condizione che in tale paese venga venduto un Prodotto identico da un distributore Sony Ericsson autorizzato. Per sapere se il Prodotto di cui si dispone è commercializzato nel paese di residenza, contattare il Sony Ericsson Call Center del paese di residenza. Il presente garanzia non esclude però effettuare alcuni interventi in paesi diversi da quelli di acquisto originale, ad esempio nel caso in cui un componente interno o esterno del Prodotto sia diverso dai modelli equivalenti venduti in altri paesi. Si noti inoltre che talvolta potrebbe non essere possibile la riparazione di prodotti con carta SIM bloccata.

Tra i servizi di assistenza, il cliente può presentare le richieste ulteriori informazioni (come una scheda di garanzia o un modulo di reclamo).

LIMITI GEOGRAFICI DELLA GARANTIA

Se il Prodotto è stato acquistato in un paese membro dello Spazio economico europeo (SEE) o in Svizzera o nella Repubblica di Turchia e tale Prodotto era destinato alla vendita nel paese SEE o in Svizzera o in Turchia, in base alle condizioni di garanzia prevalenti nel paese in cui si richiede l'assistenza del Prodotto, a condizione che in tale paese venga venduto un Prodotto identico da un distributore Sony Ericsson autorizzato. Per sapere se il Prodotto di cui si dispone è commercializzato nel paese di residenza, contattare il Sony Ericsson Call Center del paese di residenza. Il presente garanzia non esclude però effettuare alcuni interventi in paesi diversi da quelli di acquisto originale, ad esempio nel caso in cui un componente interno o esterno del Prodotto sia diverso dai modelli equivalenti venduti in altri paesi. Si noti inoltre che talvolta potrebbe non essere possibile la riparazione di prodotti con carta SIM bloccata.

Tra i servizi di assistenza, il cliente può presentare le richieste ulteriori informazioni (come una scheda di garanzia o un modulo di reclamo).

WAARSCHOFFING:

- Als het apparaat een adaptor nodig heeft, wordt de adaptor van de handset of een ander product geleverd. Het apparaat wordt niet rechtstreeks zonder de verstaede adaptor plaatsen.

Voorzorgsmaatregelen voor gebruik van geheugenkaart

- Zorg ervoor dat de geheugenkaart niet vochtig wordt.
- Raak de terminaalansluitingen niet aan met uw handen of een metaal object.
- U mag de geheugenkaart niet stoten, buigen of laten vallen.
- Probeer de geheugenkaart niet uit elkaar te halen of te wijzigen in aan te brengen.
- Gebruik of bewaar de geheugenkaart niet in een vochtige of corrosierende omgeving of bij zeer hoge temperaturen, zoals een gesloten auto in de zomer, in direct zonlicht of bij te warmte inwendig.
- Duw niet hard op het uiteinde van de adaptor voor de geheugenkaart om buig di niet.
- Zorg ervoor dat er geen vuil, stof of andere ongewenste stoffen terechtkomen in de toegangspoort van de geheugenkaartadapter.
- Controleer of u de geheugenkaart juist hebt geplaatst.
- Plaats de geheugenkaart zo ver mogelijk in de benodigde geheugenkaartadapter.
- Gebruik de geheugenkaart niet in een omgeving met een sterke magnetische veld of statische lading.
- We adviseren u een back-up te maken van belangrijke gegevens. We zijn niet verantwoordelijk voor verlies of beschadiging van content die u op de geheugenkaart hebt opgeslagen.
- Opgeslagen gegevens kunnen worden beschadigd of kunnen verloren gaan wanneer u de geheugenkaart of geheugenkaartadapter verwijderd, de stroom uitschakelt of de formatoren, lezen of schrijven van gegevens of als u de geheugenkaart gebruikt op plaatsen met statische elektriciteit of hoge elektrische veldemissies.

Bescherming van persoonlijke gegevens

Wanneer persoonlijke gegevens voordat u het product weggeeft. Herstel de fabrieksinstellingen als u gegevens wilt verwijderen. Het verwijderen van gegevens kan de veiligheidsinstellingen van de geheugenkaart resetten en de inhoud van de geheugenkaart kan niet worden hersteld. Sony Ericsson kan niet garanderen dat niemand toegang kan krijgen tot uw gegevens, en is niet verantwoordelijk voor daaruitvolgende bekendmaking van genoemde gegevens, zelfs niet als een volledige reset is uitgevoerd.

Gebruikswaarschuwing

Vermijd geluidsoverbelasting die schadelijk kunnen zijn voor het oorgel.

Gebruiksrechtvoorzorgsmaat

Dit draadloze apparaat, inclusief maar niet beperkt tot alle media die bij het apparaat worden geleverd, (Apparaat) bevat software die het eigendom is van Sony Ericsson Mobile Communications AB en haar dochterondernemingen (Sony Ericsson) en de leveranciers en licentieverleners van Sony Ericsson (Software). Sony Ericsson verkoopt u als gebruiker van dit Apparaat een licentie van de Software, met overdraagbare, niet-toewijsbare rechten voor het gebruik van de Software, doch uitsluitend in combinatie met het apparaat waarop deze is geïnstalleerd of waarbij deze is geleverd. Niets in deze overeenkomst mag worden opgevat als een verkoop van de Software aan een gebruiker van dit Apparaat. U mag de broncode of onderdelen van de Software niet kopiëren, verspreiden, verspreiden, distribueren, decompilieren of reverse-engineering op te passen, of de broncode of onderdelen van de Software op andere wijze achterhalen. Om twijfel te voorkomen hebt

22	23
----	----

***GEOGRAFISCHER GELTUNGSBEREICH DER GARANTIE**

Wenn Sie das Produkt in einem Mitgliedsland des Europäischen Wirtschaftsraums (EWR), in der Schweiz oder in der Türkei erworben haben und das Produkt für den Verkauf in diesem Mitgliedsland, in der Schweiz oder in der Türkei vorgesehen war, können Sie die Garantieleistungen für das Produkt in jedem EWR-Land, in der Schweiz oder in der Türkei nach Maßgabe der im jeweiligen Land geltenden Garantiebedingungen in Anspruch nehmen. Diese Garantie erstreckt sich nicht auf Produktfehler, die durch Installationen, Modifikationen, Reparaturen oder Öffnung des Produkts durch nicht von Sony Ericsson autorisierte Personen verursacht werden. 6 Die Garantie erstreckt sich nicht auf Produktfehler, die durch den Einsatz von Zubehörkomponenten oder Peripheriegeräten verursacht wurden, bei denen es sich nicht um Originalzubehör von Sony Ericsson handelt, das für dieses Produkt entwickelt wurde.

Sony Ericsson schließt alle ausdrücklichen und konkludenten Garantien in Bezug auf Fehler des Produkts oder der Peripheriegeräte ab und gibt Ihnen, *trojanischen Pferd*, die Möglichkeit, das Produkt zu reparieren oder zu ersetzen. Wenn Sie dringend, dass Sie ggf. bei Verfügbarkeit geeignete Software zum Schutz vor Viren im Product und ggf. in angeschlossenen Peripheriegeräten installieren und regelmäßig aktualisieren, um das Gerät zu schützen. Solche Software kann Ihr Produkt und die Peripheriegeräte aber nie vollständig schützen. Deshalb schließt Sony Ericsson alle ausdrücklichen und konkludenten Garantien für den Fall aus, dass eine solche Antivirussoftware ihren Zweck nicht erfüllt.

7 Die Beschädigung der auf dem Gerät angebrachten Folie führt zum Erlöschen der Garantieansprüche. 8 **WICHTIG! AUSDRÜCKLICHEN GARANTIEEN, GLEICH OB SCHRIFTLICH ODER MÜNDLICH AUSGESPRECHEN, AUSSER DIESER GEDRUCKTEN ERKLÄRUNG ZUR EINGESCHRÄNKTEN GARANTIE. SÄMTLICHE KONKLUDENTEN GARANTIEEN, EINSCHLIESLICH, JEDDOCH OHNE BESCHRÄNKUNG AUF GARANTIEEN DER HANDELSÜBLICHKEIT UND DER EIGNUNG FÜR EINEN BESTIMMTEN ZWECK, GELTEN NIUR FÜR DIE DAUER DIESER EINGESCHRÄNKTEN GARANTIE. SONY ERICSSON UND DIE LICENZBEREITER SIND, SOWEIT EIN HAFTUNGSAUSSCHLUSS GESETZLICH ZULÄSSIG IST, IN KEINEM FALL HAFTBAR FÜR MITTELBARE ODER FOLGESCHÄDEN GLEICH WELCHER ART, EINSCHLIESLICH, JEDDOCH OHNE BESCHRÄNKUNG AUF ENTGANGENE GEWINNE UND WIRTSCHAFTLICHE NACHTEILE.**

Nel sito www.sonyericsson.com saranno disponibili gli strumenti e le informazioni di supporto più recenti. Per servizi e funzioni specifici del gestore, contattare il gestore di rete. E anche possibile contattare i nostri Call Center. Se il paese/regione di residenza non sono inclusi nell'elenco sopra, il cliente può presentare le richieste ulteriori informazioni (come una scheda di garanzia o un modulo di reclamo).

CONDIZIONI

- La presente garanzia limitata è valida solo se il Prodotto da riparare o sostituire è accompagnato dall'originale della prova di acquisto rilasciata dal rivenditore autorizzato Sony Ericsson, per questo Prodotto, con l'indicazione della data e del numero di serie*. Sony Ericsson si riserva il diritto di non effettuare la riparazione in garanzia se queste informazioni risultassero cancellate o modificate dopo il primo acquisto del Prodotto dal rivenditore.

2 Qualora Sony Ericsson proceda alla riparazione o alla sostituzione del Prodotto, la riparazione del difetto in questione o il Prodotto sostituito godrà di un periodo di garanzia pari a quello del Prodotto originale. Per ulteriori informazioni, visitate il sito Web www.sonyericsson.com. 3 La presente garanzia non pregiudica i diritti del consumatore previsti dalla legge né i diritti del consumatore in materia di protezione dei dati personali derivanti dal contratto di vendita/acquisto.

LIMITI GEOGRAFICI DELLA GARANTIA

Se il Prodotto è stato acquistato in un paese membro dello Spazio economico europeo (SEE) o in Svizzera o nella Repubblica di Turchia e tale Prodotto era destinato alla vendita nel paese SEE o in Svizzera o in Turchia, in base alle condizioni di garanzia prevalenti nel paese in cui si richiede l'assistenza del Prodotto, a condizione che in tale paese venga venduto un Prodotto identico da un distributore Sony Ericsson autorizzato. Per sapere se il Prodotto di cui si dispone è commercializzato nel paese di residenza, contattare il Sony Ericsson Call Center del paese di residenza. Il presente garanzia non esclude però effettuare alcuni interventi in paesi diversi da quelli di acquisto originale, ad esempio nel caso in cui un componente interno o esterno del Prodotto sia diverso dai modelli equivalenti venduti in altri paesi. Si noti inoltre che talvolta potrebbe non essere possibile la riparazione di prodotti con carta SIM bloccata.

Tra i servizi di assistenza, il cliente può presentare le richieste ulteriori informazioni (come una scheda di garanzia o un modulo di reclamo).

WAARSCHOFFING:

- Als het apparaat een adaptor nodig heeft, wordt de adaptor van de handset of een ander product geleverd. Het apparaat wordt niet rechtstreeks zonder de verstaede adaptor plaatsen.

Voorzorgsmaatregelen voor gebruik van geheugenkaart

- Zorg ervoor dat de geheugenkaart niet vochtig wordt.
- Raak de terminaalansluitingen niet aan met uw handen of een metaal object.
- U mag de geheugenkaart niet stoten, buigen of laten vallen.
- Probeer de geheugenkaart niet uit elkaar te halen of te wijzigen in aan te brengen.
- Gebruik of bewaar de geheugenkaart niet in een vochtige of corrosierende omgeving of bij zeer hoge temperaturen, zoals een gesloten auto in de zomer, in direct zonlicht of bij te warmte inwendig.
- Duw niet hard op het uiteinde van de adaptor voor de geheugenkaart om buig di niet.
- Zorg ervoor dat er geen vuil, stof of andere ongewenste stoffen terechtkomen in de toegangspoort van de geheugenkaartadapter.
- Controleer of u de geheugenkaart juist hebt geplaatst.
- Plaats de geheugenkaart zo ver mogelijk in de benodigde geheugenkaartadapter.
- Gebruik de geheugenkaart niet in een omgeving met een sterke magnetische veld of statische lading.
- We adviseren u een back-up te maken van belangrijke gegevens. We zijn niet verantwoordelijk voor verlies of beschadiging van content die u op de geheugenkaart hebt opgeslagen.
- Opgeslagen gegevens kunnen worden beschadigd of kunnen verloren gaan wanneer u de geheugenkaart of geheugenkaartadapter verwijderd, de stroom uitschakelt of de formatoren, lezen of schrijven van gegevens of als u de geheugenkaart gebruikt op plaatsen met statische elektriciteit of hoge elektrische veldemissies.

Bescherming van persoonlijke gegevens

Wanneer persoonlijke gegevens voordat u het product weggeeft. Herstel de fabrieksinstellingen als u gegevens wilt verwijderen. Het verwijderen van gegevens kan de veiligheidsinstellingen van de geheugenkaart resetten en de inhoud van de geheugenkaart kan niet worden hersteld. Sony Ericsson kan niet garanderen dat niemand toegang kan krijgen tot uw gegevens, en is niet verantwoordelijk voor daaruitvolgende bekendmaking van genoemde gegevens, zelfs niet als een volledige reset is uitgevoerd.

Gebruikswaarschuwing

Vermijd geluidsoverbelasting die schadelijk kunnen zijn voor het oorgel.

Gebruiksrechtvoorzorgsmaat

Dit draadloze apparaat, inclusief maar niet beperkt tot alle media die bij het apparaat worden geleverd, (Apparaat) bevat software die het eigendom is van Sony Ericsson Mobile Communications AB en haar dochterondernemingen (Sony Ericsson) en de leveranciers en licentieverleners van Sony Ericsson (Software). Sony Ericsson verkoopt u als gebruiker van dit Apparaat een licentie van de Software, met overdraagbare, niet-toewijsbare rechten voor het gebruik van de Software, doch uitsluitend in combinatie met het apparaat waarop deze is geïnstalleerd of waarbij deze is geleverd. Niets in deze overeenkomst mag worden opgevat als een verkoop van de Software aan een gebruiker van dit Apparaat. U mag de broncode of onderdelen van de Software niet kopiëren, verspreiden, verspreiden, distribueren, decompilieren of reverse-engineering op te passen, of de broncode of onderdelen van de Software op andere wijze achterhalen. Om twijfel te voorkomen hebt

22	23
----	----

u te allen tijde het recht alle rechten en plichten in verband met de Software over te dragen aan een derde partij, doch uitsluitend samen met het Apparaat waarop de Software hebt geïnstalleerd, met u de kaart moet rechtstreeks zonder de verstaede adaptor plaatsen.

Voorzorgsmaatregelen voor gebruik van geheugenkaart

- Zorg ervoor dat de geheugenkaart niet vochtig wordt.
- Raak de terminaalansluitingen niet aan met uw handen of een metaal object.
- U mag de geheugenkaart niet stoten, buigen of laten vallen.
- Probeer de geheugenkaart niet uit elkaar te halen of te wijzigen in aan te brengen.
- Gebruik of bewaar de geheugenkaart niet in een vochtige of corrosierende omgeving of bij zeer hoge temperaturen, zoals een gesloten auto in de zomer, in direct zonlicht of bij te warmte inwendig.
- Duw niet hard op het uiteinde van de adaptor voor de geheugenkaart om buig di niet.
- Zorg ervoor dat er geen vuil, stof of andere ongewenste stoffen terechtkomen in de toegangspoort van de geheugenkaartadapter.
- Controleer of u de geheugenkaart juist hebt geplaatst.
- Plaats de geheugenkaart zo ver mogelijk in de benodigde geheugenkaartadapter.
- Gebruik de geheugenkaart niet in een omgeving met een sterke magnetische veld of statische lading.
- We adviseren u een back-up te maken van belangrijke gegevens. We zijn niet verantwoordelijk voor verlies of beschadiging van content die u op de geheugenkaart hebt opgeslagen.
- Opgeslagen gegevens kunnen worden beschadigd of kunnen verloren gaan wanneer u de geheugenkaart of geheugenkaartadapter verwijderd, de stroom uitschakelt of de formatoren, lezen of schrijven van gegevens of als u de geheugenkaart gebruikt op plaatsen met statische elektriciteit of hoge elektrische veldemissies.

Bescherming van persoonlijke gegevens

Wanneer persoonlijke gegevens voordat u het product weggeeft. Herstel de fabrieksinstellingen als u gegevens wilt verwijderen. Het verwijderen van gegevens kan de veiligheidsinstellingen van de geheugenkaart resetten en de inhoud van de geheugenkaart kan niet worden hersteld. Sony Ericsson kan niet garanderen dat niemand toegang kan krijgen tot uw gegevens, en is niet verantwoordelijk voor daaruitvolgende bekendmaking van genoemde gegevens, zelfs niet als een volledige reset is uitgevoerd.

Gebruikswaarschuwing

Vermijd geluidsoverbelasting die schadelijk kunnen zijn voor het oorgel.

Gebruiksrechtvoorzorgsmaat

Dit draadloze apparaat, inclusief maar niet beperkt tot alle media die bij het apparaat worden geleverd, (Apparaat) bevat software die het eigendom is van Sony Ericsson Mobile Communications AB en haar dochterondernemingen (Sony Ericsson) en de leveranciers en licentieverleners van Sony Ericsson (Software). Sony Ericsson verkoopt u als gebruiker van dit Apparaat een licentie van de Software, met overdraagbare, niet-toewijsbare rechten voor het gebruik van de Software, doch uitsluitend in combinatie met het apparaat waarop deze is geïnstalleerd of waarbij deze is geleverd. Niets in deze overeenkomst mag worden opgevat als een verkoop van de Software aan een gebruiker van dit Apparaat. U mag de broncode of onderdelen van de Software niet kopiëren, verspreiden, verspreiden, distribueren, decompilieren of reverse-engineering op te passen, of de broncode of onderdelen van de Software op andere wijze achterhalen. Om twijfel te voorkomen hebt

22	23
----	----

***GEOGRAFISCHER GELTUNGSBEREICH DER GARANTIE**

Wenn Sie das Produkt in einem Mitgliedsland des Europäischen Wirtschaftsraums (EWR), in der Schweiz oder in der Türkei erworben haben und das Produkt für den Verkauf in diesem Mitgliedsland, in der Schweiz oder in der Türkei vorgesehen war, können Sie die Garantieleistungen für das Produkt in jedem EWR-Land, in der Schweiz oder in der Türkei nach Maßgabe der im jeweiligen Land geltenden Garantiebedingungen in Anspruch nehmen. Diese Garantie erstreckt sich nicht auf Produktfehler, die durch Installationen, Modifikationen, Reparaturen oder Öffnung des Produkts durch nicht von Sony Ericsson autorisierte Personen verursacht werden. 6 Die Garantie erstreckt sich nicht auf Produktfehler, die durch den Einsatz von Zubehörkomponenten oder Peripheriegeräten verursacht wurden, bei denen es sich nicht um Originalzubehör von Sony Ericsson handelt, das für dieses Produkt entwickelt wurde.

Sony Ericsson schließt alle ausdrücklichen und konkludenten Garantien in Bezug auf Fehler des Produkts oder der Peripheriegeräte ab und gibt Ihnen, *trojanischen Pferd*, die Möglichkeit, das Produkt zu reparieren oder zu ersetzen. Wenn Sie dringend, dass Sie ggf. bei Verfügbarkeit geeignete Software zum Schutz vor Viren im Product und ggf. in angeschlossenen Peripheriegeräten installieren und regelmäßig aktualisieren, um das Gerät zu schützen. Solche Software kann Ihr Produkt und die Peripheriegeräte aber nie vollständig schützen. Deshalb schließt Sony Ericsson alle ausdrücklichen und konkludenten Garantien für den Fall aus, dass eine solche Antivirussoftware ihren Zweck nicht erfüllt.

7 Die Beschädigung der auf dem Gerät angebrachten Folie führt zum Erlöschen der Garantieansprüche. 8 **WICHTIG! AUSDRÜCKLICHEN GARANTIEEN, GLEICH OB SCHRIFTLICH ODER MÜNDLICH AUSGESPRECHEN, AUSSER DIESER GEDRUCKTEN ERKLÄRUNG ZUR EINGESCHRÄNKTEN GARANTIE. SÄMTLICHE KONKLUDENTEN GARANTIEEN, EINSCHLIESLICH, JEDDOCH OHNE BESCHRÄNKUNG AUF GARANTIEEN DER HANDELSÜBLICHKEIT UND DER EIGNUNG FÜR EINEN BESTIMMTEN ZWECK, GELTEN NIUR FÜR DIE DAUER DIESER EINGESCHRÄNKTEN GARANTIE. SONY ERICSSON UND DIE LICENZBEREITER SIND, SOWEIT EIN HAFTUNGSAUSSCHLUSS GESETZLICH ZULÄSSIG IST, IN KEINEM FALL HAFTBAR FÜR MITTELBARE ODER FOLGESCHÄDEN GLEICH WELCHER ART, EINSCHLIESLICH, JEDDOCH OHNE BESCHRÄNKUNG AUF ENTGANGENE GEWINNE UND WIRTSCHAFTLICHE NACHTEILE.**

Nel sito www.sonyericsson.com saranno disponibili gli strumenti e le informazioni di supporto più recenti. Per servizi e funzioni specifici del gestore, contattare il gestore di rete. E anche possibile contattare i nostri Call Center. Se il paese/regione di residenza non sono inclusi nell'elenco sopra, il cliente può presentare le richieste ulteriori informazioni (come una scheda di garanzia o un modulo di reclamo).

CONDIZIONI

- La presente garanzia limitata è valida solo se il Prodotto da riparare o sostituire è accompagnato dall'originale della prova di acquisto rilasciata dal rivenditore autorizzato Sony Ericsson, per questo Prodotto, con l'indicazione della data e del numero di serie*. Sony Ericsson si riserva il diritto di non effettuare la riparazione in garanzia se queste informazioni risultassero cancellate o modificate dopo il primo acquisto del Prodotto dal rivenditore.

2 Qualora Sony Ericsson proceda alla riparazione o alla sostituzione del Prodotto, la riparazione del difetto in questione o il Prodotto sostituito godrà di un periodo di garanzia pari a quello del Prodotto originale. Per ulteriori informazioni, visitate il sito Web www.sonyericsson.com. 3 La presente garanzia non pregiudica i diritti del consumatore previsti dalla legge né i diritti del consumatore in materia di protezione dei dati personali derivanti dal contratto di vendita/acquisto.

LIMITI GEOGRAFICI DELLA GARANTIA

Se il Prodotto è stato acquistato in un paese membro dello Spazio economico europeo (SEE) o in Svizzera o nella Repubblica di Turchia e tale Prodotto era destinato alla vendita nel paese SEE o in Svizzera o in Turchia, in base alle condizioni di garanzia prevalenti nel paese in cui si richiede l'assistenza del Prodotto, a condizione che in tale paese venga venduto un Prodotto identico da un distributore Sony Ericsson autorizzato. Per sapere se il Prodotto di cui si dispone è commercializzato nel paese di residenza, contattare il Sony Ericsson Call Center del paese di residenza. Il presente garanzia non esclude però effettuare alcuni interventi in paesi diversi da quelli di acquisto originale, ad esempio nel caso in cui un componente interno o esterno del Prodotto sia diverso dai modelli equivalenti venduti in altri paesi. Si noti inoltre che talvolta potrebbe non essere possibile la riparazione di prodotti con carta SIM bloccata.

Tra i servizi di assistenza, il cliente può presentare le richieste ulteriori informazioni (come una scheda di garanzia o un modulo di reclamo).

WAARSCHOFFING:

- Als het apparaat een adaptor nodig heeft, wordt de adaptor van de handset of een ander product geleverd. Het apparaat wordt niet rechtstreeks zonder de verstaede adaptor plaatsen.

Voorzorgsmaatregelen voor gebruik van geheugenkaart

- Zorg ervoor dat de geheugenkaart niet vochtig wordt.
- Raak de terminaalansluitingen niet aan met uw handen of een metaal object.
- U mag de geheugenkaart niet stoten, buigen of laten vallen.
- Probeer de geheugenkaart niet uit elkaar te halen of te wijzigen in aan te brengen.
- Gebruik of bewaar de geheugenkaart niet in een vochtige of corrosierende omgeving of bij zeer hoge temperaturen, zoals een gesloten auto in de zomer, in direct zonlicht of bij te warmte inwendig.
- Duw niet hard op het uiteinde van de adaptor voor de geheugenkaart om buig di niet.
- Zorg ervoor dat er geen vuil, stof of andere ongewenste stoffen terechtkomen in de toegangspoort van de geheugenkaartadapter.
- Controleer of u de geheugenkaart juist hebt geplaatst.
- Plaats de geheugenkaart zo ver mogelijk in de benodigde geheugenkaartadapter.
- Gebruik de geheugenkaart niet in een omgeving met een sterke magnetische veld of statische lading.
- We adviseren u een back-up te maken van belangrijke gegevens. We zijn niet verantwoordelijk voor verlies of beschadiging van content die u op de geheugenkaart hebt opgeslagen.
- Opgeslagen gegevens kunnen worden beschadigd of kunnen verloren gaan wanneer u de geheugenkaart of geheugenkaartadapter verwijderd, de stroom uitschakelt of de formatoren, lezen of schrijven van gegevens of als u de geheugenkaart gebruikt op plaatsen met statische elektriciteit of hoge elektrische veldemissies.

Bescherming van persoonlijke gegevens

Wanneer persoonlijke gegevens voordat u het product weggeeft. Herstel de fabrieksinstellingen als u gegevens wilt verwijderen. Het verwijderen van gegevens kan de veiligheidsinstellingen van de geheugenkaart resetten en de inhoud van de geheugenkaart kan niet worden hersteld. Sony Ericsson kan niet garanderen dat niemand toegang kan krijgen tot uw gegevens, en is niet verantwoordelijk voor daaruitvolgende bekendmaking van genoemde gegevens, zelfs niet als een volledige reset is uitgevoerd.

Gebruikswaarschuwing

Vermijd geluidsoverbelasting die schadelijk kunnen zijn voor het oorgel.

Gebruiksrechtvoorzorgsmaat

Dit draadloze apparaat, inclusief maar niet beperkt tot alle media die bij het apparaat worden geleverd, (Apparaat) bevat software die het eigendom is van Sony Ericsson Mobile Communications AB en haar dochterondernemingen (Sony Ericsson) en de leveranciers en licentieverleners van Sony Ericsson (Software). Sony Ericsson verkoopt u als gebruiker van dit Apparaat een licentie van de Software, met overdraagbare, niet-toewijsbare rechten voor het gebruik van de Software, doch uitsluitend in combinatie met het apparaat waarop deze is geïnstalleerd of waarbij deze is geleverd. Niets in deze overeenkomst mag worden opgevat als een verkoop van de Software aan een gebruiker van dit Apparaat. U mag de broncode of onderdelen van de Software niet kopiëren, verspreiden, verspreiden, distribueren, decompilieren of reverse-engineering op te passen, of de broncode of onderdelen van de Software op andere wijze achterhalen. Om twijfel te voorkomen hebt

22	23
----	----

Maak altijd een kopie van alle informatie op uw Sony Ericsson-product, zoals downloads, de kalender en contacten, voordat u uw Sony Ericsson-product ter reparatie of vervanging aanbrengt.

Voorzorgsmaat

1 Deze beperkte garantie is alleen geldig indien de originele kwitantie voor dit product de door een geautoriseerde Sony Ericsson-dealer is afgegeven, met daarp de aankoopdatum en het serienummer*, wordt overlegd samen met het product dat moet worden gerepareerd of vervangen. Sony Ericsson behoudt zich het recht voor om onderhoud uit hoofde van de garantie te weigeren indien deze gegevens zijn verwijderd of gewijzigd na de oorspronkelijke aanschaf van het product bij de leverancier. 2 Als Sony Ericsson de mobiele telefoon repareert of vervangt, geldt de resterende garantieperiode of de periode gedurende negentig (90) dagen vanaf de datum van de reparatie, als dat langer is, voor de reparatie van het relevante defect of van het vervangende product. Reparatie of vervanging kan door middel van functioneel equivalente soortgelijke producten plaatsvinden. Vervangen onderdelen worden geleverd aan Sony Ericsson.

3 Deze garantie is niet van toepassing op tekortkomingen van het product ten gevolge van normale slijtage, misbruik (inclusief, maar niet beperkt tot, gebruik op een andere dan de normale en gebruikelijke wijze conform de instructies voor gebruik en onderhoud van het product), ongevallen, wijziging of aanpassing van software of andere medische apparaten. Indien nodig worden tests uitgevoerd.

4 Aangezien het cellulaire systeem waarop het product werkt, niet verstrekt door Sony Ericsson, is Sony Ericsson niet verantwoordelijk voor de werking, beschikbaarheid, dekking, service of het bereik van het systeem.

5 Deze garantie vervalt bij productschade die is veroorzaakt door installaties, aanpassingen of reparatie, of het openen van het product door een niet door Sony Ericsson bevestigde persoon.

6 De garantie vervalt bij productschade die is veroorzaakt door het gebruik van niet-originele Sony Ericsson-accessoires of onderdelen.

7 De garantie vervalt bij productschade die is veroorzaakt door het gebruik van niet-originele Sony Ericsson-accessoires of onderdelen. 8 Indien de garantie wordt geïnitieerd, worden downloads en andere informatie verloren gaan. Op dit moment is het voor Sony Ericsson wettelijk, via andere registratie of vanwege technische beperkingen onmogelijk om een kopie van bepaalde downloads te maken. Sony Ericsson is niet verantwoordelijk voor enige informatie die verloren gaat en biedt geen vergoeding voor een dergelijk verlies.

CONDIZIONI

- La presente garanzia limitata è valida solo se il Prodotto da riparare o sostituire è accompagnato dall'originale della prova di acquisto rilasciata dal rivenditore autorizzato Sony Ericsson, per questo Prodotto, con l'indicazione della data e del numero di serie*. Sony Ericsson si riserva il diritto di non effettuare la riparazione in garanzia se queste informazioni risultassero cancellate o modificate dopo il primo acquisto del Prodotto dal rivenditore.

2 Qualora Sony Ericsson proceda alla riparazione o alla sostituzione del Prodotto, la riparazione del difetto in questione o il Prodotto sostituito godrà di un periodo di garanzia pari a quello del Prodotto originale. Per ulteriori informazioni, visitate il sito Web www.sonyericsson.com. 3 La presente garanzia non pregiudica i diritti del consumatore previsti dalla legge né i diritti del consumatore in materia di protezione dei dati personali derivanti dal contratto di vendita/acquisto.

LIMITI GEOGRAFICI DELLA GARANTIA

Se il Prodotto è stato acquistato in un paese membro dello Spazio economico europeo (SEE) o in