

Preparing the phone

Congratulations on your purchase of the Sony Ericsson T303a. For additional phone content, go to www.sonyericsson.com/fun. Register now to get free online storage and special offers at www.sonyericsson.com/myphone. For product support, go to www.sonyericsson.com/support.

- Instruction symbols
- Use a navigation key or a selection key to scroll and select.
- Press the centre selection key.
- Press the navigation key to the left.
- Press the navigation key to the right.
- Press the navigation key up.
- Press the navigation key down.
- Note
- Tip
- Warning
- Indicates that a service or function is network- or subscription-dependent.

- To insert the SIM card and battery
1 Remove the battery cover. Slide the SIM card into its holder with the contacts facing down.
2 Insert the battery with the label side up and the connectors facing each other. Replace the battery cover as shown in the picture.
Do not force the battery cover into place. Slide the battery cover carefully onto the phone and close it.

- To charge the battery
1 The phone battery is partly charged when you buy it. Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to illuminate the screen.
2 To remove the charger, tilt the plug upwards.
You can use the phone during charging. You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.


- To turn on the phone
1 Press and hold down (power).
2 Enter your PIN if requested. To correct mistakes, press (cancel).
3 Select OK.
4 Select a language.
5 Enter the time and date and select Save.
To turn off the phone
- Press and hold down (power).

SIM and PIN

- SIM card
The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger and remove the battery before you insert or remove the SIM card.
You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See Contacts on page 17.
PIN code
You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.
If you enter the wrong PIN three times in a row, PIN blocked. To unblock, enter your PUK code provided by your network operator. appears. To unblock it, you need to enter your PUK (Personal Unblocking Key).

- Network coverage
The network bars show the strength of the GSM network in your area. Try moving to another location if you have trouble calling and network coverage is poor. No network means you are not in range of a network.
- Good network coverage
- Average network coverage
Battery status
- The phone battery is fully charged
- The phone battery is empty
- The phone battery is being charged

Phone overview

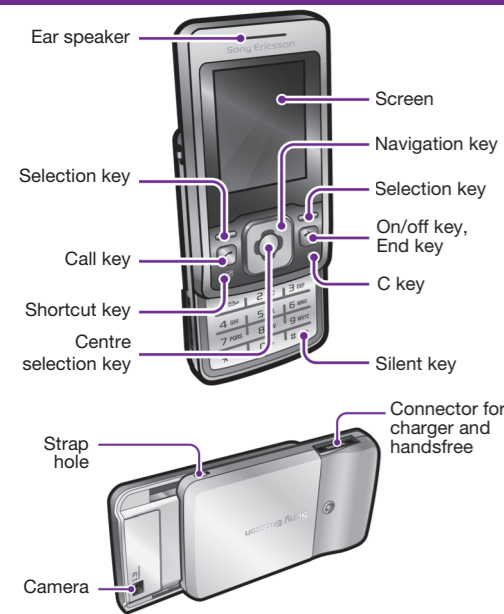

Menu overview

Table listing menu categories: Organizer (File manager, Alarms, Calendar, Tasks, Notes, Timer, Stopwatch, Calculator), Internet, Entertainment (TrackID™, My Games, FM radio, Sound recorder), Camera, Messaging (Write new, Inbox, Call voicemail, Drafts, Outbox, Sent messages, Saved msgs, Templates, Settings), Music player (Play view, Artists, Tracks, Playlists), Calls\*, Contacts (New contact), Settings\* (General, Sounds & alerts, Display, Calls, Connectivity).

Screen icons

Table listing screen icons and their descriptions: Battery icon (fully charged), Ongoing call, The phone is set to silent, The keypad is locked, New text message, New picture message, Alarm activated, Radio playing, Music player playing, Handsfree connected, Bluetooth activated, Bluetooth handsfree connected, Loudspeaker on.

Navigation

- To navigate the menus
1 From standby press (power) to select Menu.
2 Press (left), (right), (up), (down) to move through the menus.
To select items and actions shown on the screen
- Press either of the selection keys or (power).
To select a tab
- Go to the tab by pressing (left) or (right).
To return to standby
- Press (power).
To operate the keypad lock
- To lock the keypad, close the slide.
- To unlock the keypad, open the slide.
- To unlock the keypad with closed slide, press any key, then select Unlock > OK.
Calls to the international emergency number 112 can still be made, even when the keypad is locked.

Calling

- To make a call
1 From standby enter the area code and phone number.
2 Press (call).
To activate the slide for answering and ending calls
1 From standby select Menu > Settings > the Calls tab.
2 Select Open to answer > On to activate answering.
3 Select Close to end call > On to activate call ending.
To answer a call
- Press (call) or open the slide.
To end a call
- Press (power) or close the slide.
To reject a call
- Press (cancel).
To turn off the ringtone when receiving a call
- Press (power) to turn off the ringtone without answering or rejecting the call.
To turn the loudspeaker on during a call
- Select SprkOn.
Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

Messaging

- Text messages (SMS)
You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself.
To set a service centre number
1 From standby select Menu > Messaging > Settings > Text message > Service centre.
2 If there is no number shown, enter the service number, including the international "+" sign and country code.
3 Select Save.
To write and send a text message
1 From standby press (power).
2 Select Text message. Enter the message and select Cont.
3 Select a recipient (Enter phone no. or Contacts look-up) and select Send.
Received messages are saved in the Inbox.
To read or delete received messages in the Inbox
1 From standby select Menu > Messaging > Inbox.
2 Scroll to the message you want to read or delete.
3 To read the message, select View. To delete the message, press (cancel).

- Picture messages (MMS)
Picture messages can contain text, images and sounds.
You must set an MMS profile and the address of your message server. You can receive all the settings from your network operator or at www.sonyericsson.com/support.
To create and send a picture message
1 From standby press (power).
2 Select Picture msg.
3 Press (left) or (right) to switch between writing text and adding items. Select Options to select writing options.
4 When the message is ready, select Cont.
5 Select a recipient (Enter email addr., Enter phone no. or Contacts look-up) and select Send.
Sending and receiving pictures must have subscriptions that support picture messaging.

Contacts

- You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.
To edit a contact
1 From standby press (power).
2 Scroll to the contact and select Options > Edit contact.
3 Navigate between the tabs, edit the information and select Save.
To delete a contact
1 From standby press (power).
2 Scroll to the contact and press (cancel).
To copy all contacts to the SIM card
1 From standby press (power).
2 Scroll to New contact and select Options > Advanced > Copy to SIM > Copy all.
Contacts memory
The number of entries you can save in Contacts depends on the capacity of your SIM card.
To check the Contacts memory status
1 From standby press (power).
2 Scroll to New contact and select Options > Advanced > Memory status.
To call a contact
1 From standby press (power).
2 Scroll to the contact, or enter the first few letters of the contact with multitap (see Entering text on page 24).
3 Press (call).

Radio

- To listen to the radio
1 Connect the handsfree to the phone.
2 From standby select Menu > Entertainment > FM radio.
To control the radio
- Press (left) or (right) to search for channels manually.
- Press (power) or (right) to change the volume.
To save a radio channel in the channels list
- Find the radio channel, then press and hold down (power) - (right) to save it on the corresponding position.
To listen to a radio channel saved in the channels list
- When the radio is playing, press (power) - (right) to listen to the radio channel on the corresponding position. You can view saved channels in Options > Channels > Select position.
To turn off the radio
- Select Options > Turn off or press (cancel).
To view radio options
- When the radio is playing, select Options.
To record radio
1 Select Options > Record radio to start recording.
2 Select Save to stop the recording. The recording is saved in Menu > Organizer > File manager > My radio recs.
This service is not available in all countries.

Music player

- You can play music files saved in the phone memory. The music stops when you receive or make a call, and the playing resumes when the call has ended.
To play a music track
1 From standby press (power).
2 Scroll to Tracks and select Open.
3 Scroll to the track and select Play.
To change the volume
- When music is playing, press (left) or (right).
To create a playlist
1 From standby press (power).
2 Scroll to Playlists and select Open.
3 Scroll to New playlist and select Add.
4 Enter a name and select OK.
5 Scroll to a track and select Mark to mark the tracks you want to add. To browse a folder, select Open.
6 Select Add.
To minimize the music player on the screen
- When music is playing, select Minim.
To stop the music player when minimized
1 From standby press (power).
2 Select Play view > Stop.

Camera

- Your phone has a digital camera to take pictures to save or send. Pictures taken with the camera are saved in Menu > Organizer > File manager > Camera album. The format is JPEG.
Pictures downloaded using picture messages, Internet or Bluetooth are saved in Pictures.
To start the camera and take a picture
1 Open the slide.
2 From standby press (power).
3 Use (left) and (right) to zoom, (left) and (right) to change brightness, or select Options to view camera options.
4 Select TakePic to take the picture.
5 Select Save to save the picture or Delete to delete it.
To send a camera picture as a picture message (MMS)
1 From standby select Menu > Organizer > File manager > Camera album.
2 Highlight a picture and select Options > Send > As picture msg.
3 Press (power), enter text and select Cont.
4 Select a recipient (Enter email addr., Enter phone no. or Contacts look-up) and select Send.
See To send a camera picture using Bluetooth on page 32.





