

Sony Ericsson

J110/J120

Contents

Getting started	4
Calling	18
Contacts	26
Messaging	29
Radio (J120 only)	34
Settings	36
Extras	44
Troubleshooting	48
Important information	55
Index	72

Congratulations on your purchase of the Sony Ericsson J110 or J120. For additional phone content, go to www.sonyericsson.com/fun.

Register now to get free online storage and special offers at www.sonyericsson.com/myphone.

For product support, go to www.sonyericsson.com/support.

Sony Ericsson

GSM 900/1800, 850/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB or its local affiliated company at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

© **Sony Ericsson Mobile Communications AB, 2007**

Publication number: EN/LZT 108 9136 R1A

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your phone.

The Predictive Text Technology is used under license from Zi Corporation.

Sony is a trademark of Sony Corporation. Ericsson is a trademark of Telefonaktiebolaget LM Ericsson. The marbelized logo is a trademark or registered trademark of Sony Ericsson Mobile Communications AB.

Other product and company names may be the trademarks of their respective owners.

Sony Ericsson advises users to backup their personal data information.

All illustrations are for illustration only and may not accurately depict the actual phone.

Any rights not expressly granted herein are reserved.

Instruction symbols

Standard icons that appear in the User guide are:

- ▶ Use the navigation key to scroll and select.



Press the navigation key up.



Press the navigation key down.



Press the navigation key to the left.



Press the navigation key to the right.



See also page ...



Note



Indicates that a service or function is network- or subscription-dependent. Because of this, all menus may not be available in your phone. Consult your network operator for more information.

 
For more information, go to
www.sonyericsson.com/support.

Getting started

Assembly

You have to insert a SIM card and the battery.


To insert SIM card and battery

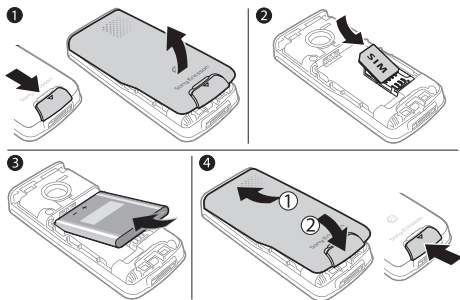




- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the contacts facing down.
- 3 Insert the battery with the label side up and the connectors facing each other.
- 4 Replace the battery cover as shown in the picture.

 Turning on the phone

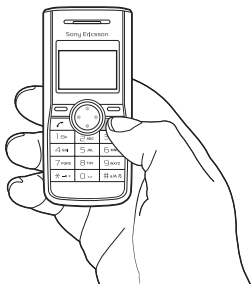To turn the phone on



 
- 1 Press and hold down .
- 2 Enter your PIN if requested. To correct mistakes, select Clear.
- 3 Select OK.
- 4 Select a language.
- 5 Enter the time and date and select OK.


 *If the screen turns dark when you enter your PIN, press the left  key to turn the screen light on.*

Standby

After you have turned the phone on and entered your PIN, the name of the network operator appears on the screen. This is called standby.

To make a call

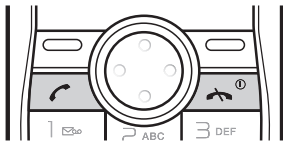

- 1 From standby enter the area code and phone number.
- 2 Press .

To end a call

- Press .

To answer a call

- Press .

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.



You can save contacts on the SIM card before removing it from your phone. Contacts may be saved in the phone memory ➤ 27 To copy a contact to the SIM card.

PIN

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *,

unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.



If you enter the wrong PIN three times in a row, PIN blocked. Enter PUK provided by your operator. appears. To unblock it, you need to enter your PUK (Personal Unblocking Key) ➤ 50 SIM card lock.

Phone model

You can check your phone model in the **Settings** menu.

To check the phone model

- From standby select **Menu** ► **Settings** ► **Phone status**.

 
Tips and information in the phone

Tips and information about a variety of functions are available in your phone. For example, in the **Calls** menu, you can select **Call tips** to view information about making calls.


Charging the battery

The phone battery is partly charged when you buy it.


To charge the battery

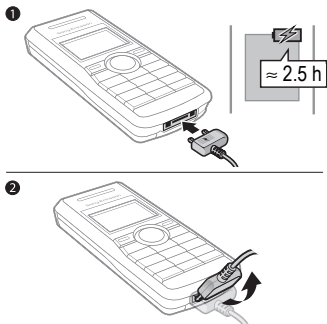

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 To remove the charger, tilt the plug upwards.

 *You can use the phone while it is charging. You can charge the battery at any time and for more or less 2.5 hours. You can interrupt the charging without damaging the battery.*

 Phone overview

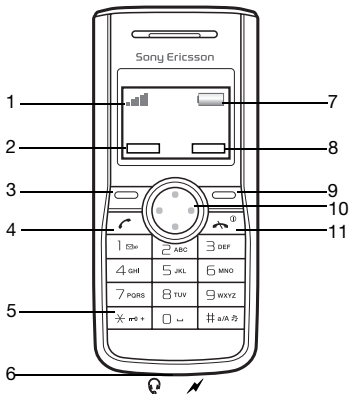


- | | | | |
|------|----------------------------|----|--|
| 1 | Strength of network signal | 6 | Stereo headset and battery charger connector |
| 2, 8 | Selection key options | 7 | Battery status |
| 3, 9 | Selection keys | 10 | Navigation key with shortcuts |
| 4 | Call key | 11 | End and on/off key |
| 5 | Keylock | | |





Phone menu

The menu name and an icon are shown.

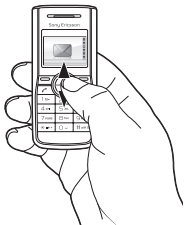 To navigate the menus

- 1 From standby select **Menu**.




- 2 Press  or  and select a menu.
- 3 To scroll through a sub menu, press  or .

To go back one step in the menu

- Select **Back**.

To select text on the screen

- Press .

To return to standby





- Press .

Shortcuts

J110






From standby you can use the navigation keys to go directly to a function:

- Press  to set the ringtone volume (J110 only).
- Press  to go to contacts.
- Press  to write a text message.
- Press  to set the alarm.

J120

 


From standby you can use the navigation keys to go directly to a function:

- Press **FM** to play the radio (J120 only).
- Press  to go to contacts.
- Press  to write a text message.
- Press  to set the alarm.

To lock the keypad

- Press **(*)#0+** and select **Lock**.

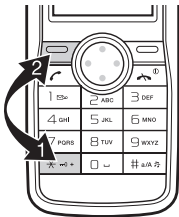

To unlock the keypad

- Press **(*)#0+** and select **Unlock**.



Calls to the international emergency number 112 can still be made, even when the keypad is locked.

To turn the screen light on

- Press **(☾)**.

To set the phone to silent

- Press and hold down **(# 00 2)**.

Phone language

➡ 49 Language.

Entering text

There are two methods you can use to enter text:

- Multitap
- Predictive text input

To change text input methods

- 1 When you write the message, select **Options** ► **Dictionary**.
- 2 Select an option.

To enter text using multitap

- Press **(2)** – **(9)** until the desired character appears.
- Press **(0↵)** to add a space.
- Press **(1⌘)** to enter full stops and commas.
- Press **(#↵↵)** to shift between capitals and lower case letters.
- Press **(*↵+)** to enter symbols, for example, the + sign.
- Press and hold down **(0↵)** – **(9)** to enter numbers.
- Select **Clear** to correct mistakes or go back one space.

Predictive text input

Predictive text input uses a dictionary to recognize the most commonly used words. You press each key only once, even if the letter you want is not the first letter on the key.

To enter text using predictive text input

- 1 For example, if you want to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**.
- 2 If the word shown is the one you want, press **(0↵)** to accept and add a space. To accept a word without adding a space, press **(↵)**. If the word shown is not the one you want, press **(↕)** or **(↕)** repeatedly to view alternative words. To accept a word and add a space, press **(0↵)**.
- 3 Continue writing your message. To enter full stops and commas, press **(1⌘)** and then **(↕)** or **(↕)** repeatedly.

To add words to the dictionary

- 1 When you write the message, select **Options ► My words ► New word**.
- 2 Enter the word using multitap.

To add items in a text message

- When you write the message, select **Options ► Add item**.

To add symbols in a text message

- When you write the message, select **Options ► Add symbol**.

To correct mistakes

- Select **Clear**.

To change writing language

- When you write the message, select **Options ► Writing lang..**







Writing tips

You can view tips and information about writing text.







To view writing tips

- When you write the message, select **Options ► Writing tips**.

Menu overview J110

	Messaging	Text message Inbox Sent messages Drafts	Saved msgs Delete msgs Messaging tips Settings
	Contacts	View contacts Add contact My number Voicemail Delete contacts	Speed dial Send contacts SIM contacts Contact tips Settings
	Calls	Call list Call timer Call tips Call settings	
	Settings	Phone status Sound & alerts Wallpaper Time and date Language Advanced	
	Extras	Alarm clock Reminders Timer Stopwatch Calculator My sounds Games	
	Alarm clock	Set alarm	










Menu overview J120


	Messaging	Text message Inbox Sent messages Drafts	Saved msgs Delete msgs Messaging tips Settings
	Contacts	View contacts Add contact My number Voicemail Delete contacts	Speed dial Send contacts SIM contacts Contact tips Settings
	Calls	Call list Call timer Call tips Call settings	
	Settings	Phone status Sound & alerts Wallpaper Time and date Language Advanced	
	Extras	Alarm clock Reminders Timer Stopwatch Calculator My sounds Games	
	Radio		

Icons

These icons appear on the screen to show status and new events.

Icon Description

-  Strength of the network signal ➔ *54 Networks.*
-  Battery status ➔ *4 Getting started.*
-  A charger is attached to your phone ➔ *8 Charging the battery.*
-  You have missed a call ➔ *18 Calling.*
-  You have received a new text or voice message* ➔ *29 Messaging.*
-  The phone is set to silent ➔ *12 To set the phone to silent.*
-  The keypad is locked ➔ *12 To lock the keypad.*
-  Divert calls is activated* ➔ *20 Diverting calls.*
-  The radio has been minimized and is playing in the background ➔ *38 Radio (J120 only).*

 For more information, go to www.sonyericsson.com/support.

 
**Some services may be operator-, network- and subscription-dependent.*


Calling

Making and receiving calls

You must turn on the phone and be within range of a network.

To make a call

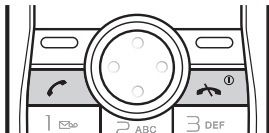

- 1 From standby enter the area code and phone number.
- 2 Press .


To end a call

- Press .

To answer a call

- Press .

To reject a call

- Press .

To view options during a call


- Select Options.

To mute the microphone during a call



- Select Options ► Turn off mic..


To turn the loudspeaker on during a call

- Select **Options** ► **Loudspeaker on**.

 

 *Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.*

To change the ear speaker volume during a call

- Press  or .

 *Do not hold the phone to your ear when using high ringtones. This could damage your hearing.*

To make international calls

- 1 From standby press  until a + sign appears on the screen.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .



To view a missed call

- When **Missed call** is displayed, select **View**.


Call list

You can view information about recent calls.

To call a number from the call list


- 1 From standby press .
- 2 Scroll to the name or number and press .

To delete a number from the call list


- 1 From standby press .
- 2 Scroll to the name or number and select **Options** ► **Delete** ► **Yes**.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a GSM network is within range.

 *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call


- From standby enter 112 (the international emergency number) and press .

To view your local emergency numbers

- From standby select **Menu ► Calls ► Call settings ► Emergency nos.**

Diverting calls

You can divert calls, for example, to an answering service.

 *When restricted dialling is used, some divert call options are not available ► 23 Restricted dialling.*

Divert call options

Standard options are:

- **Enter number** – enter the phone number you want to divert your calls to.
- **Div. to contact** – select a contact to divert your calls to.
- **Divert to voicem.** – divert your calls to your voicemail.

- **Get status** – select to check if divert calls is activated.

To divert calls

- 1 From standby select **Menu ▶ Calls ▶ Call settings ▶ Divert all calls ▶ Activate**.
- 2 Select an option.
- 3 Select **Save ▶ OK**.

To cancel a call divert

- From standby select **Menu ▶ Calls ▶ Call settings ▶ Divert all calls ▶ Deactivate ▶ OK**.

More than one call

You can handle more than one call at the same time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.


Call waiting

When call waiting is used, you hear a beep if you receive a second call.

To use call waiting

- 1 From standby select **Menu ▶ Calls ▶ Call settings ▶ Call waiting**.
- 2 Select an option.


To answer a second call

- During the call, press . Your ongoing call is put on hold.

To reject a second call

- During the call, select **Busy** and continue with the ongoing call.

To make a second call

- 1 During the call, select **Options ► Hold call**. Your ongoing call is put on hold.
- 2 Enter the number to call and press .

To switch between two calls

- During the call, select **Switch**.

To join two calls

- During the call, select **Options ► Join calls**.

To end both calls

- Press  twice.


Conference calls

With a conference call, you can have a joint conversation with three people.

To join two calls

- During the call, select **Options ► Join calls**.

To add a new participant

- 1 During the call, select **Options ► Hold call**. Your ongoing call is put on hold.
- 2 Enter the number to call and press .
- 3 Select **Options ► Join calls** to add the new participant.
- 4 Repeat this task to add more participants.

Restricted dialling

You can restrict outgoing and incoming calls when at home or abroad. You need a password from your service provider.



If you divert incoming calls, you cannot use some restricted dialling options.

Restricted dialling options

Standard options are:

- All outgoing – all calls from your phone.
- Outgoing intl – all international calls from your phone.
- Outg. intl roam. – all international calls from your phone except to your home country.
- All incoming – all calls to your phone.
- Inc. in roaming – all calls to your phone when you are abroad (when roaming).
- Change passw. – change your password for restricting calls.

To restrict calls

- 1 From standby select Menu ► Calls ► Call settings ► Restrict calls.
- 2 Select an option.
- 3 Enter your password and select OK.

To cancel all call restrictions

- 1 From standby select Menu ► Calls ► Call settings ► Restrict calls ► Deactivate all.
- 2 Enter your password and select OK.

Fixed dialling

Fixed dialling allows calls to be made only to certain numbers saved on the SIM card. The fixed numbers are protected by your PIN2.



When fixed dialling is used, you can still call the international emergency number 112.

Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456.



When fixed dialling is used, you may not be allowed to view or manage any phone numbers saved on the SIM card.

To use fixed dialling

- 1 From standby select **Menu** ► **Contacts** ► **Settings** ► **Fixed dialling** ► **Fixed no. list**.
- 2 Enter your PIN2 and select **OK**.

To save a fixed number

- 1 From standby select **Menu** ► **Contacts** ► **Settings** ► **Fixed dialling** ► **Fixed no. list**.
- 2 Enter your PIN2 and select **OK**.
- 3 Enter the information and select **OK**.

Call time

During a call, the duration of the call is shown. You can check the duration of your last call, all calls made from your phone and the total time.

To check the call time

- 1 From standby select **Menu** ► **Calls** ► **Call timer**.
- 2 Select an option.

To reset the call timer

- From standby select Menu ► Calls ► Call timer ► Total call time ► Yes.

Showing or hiding your phone number

You can show or hide your phone number when you make a call.

To hide your phone number

- 1 From standby select Menu ► Calls ► Call settings ► Hide/show no..
- 2 Select Hide number.

Call tips

You can view tips and information about calls.

To view call tips


- From standby select Menu ► Calls ► Call tips.

Contacts

You can save names and numbers in the phone memory or on the SIM card. Contacts are automatically saved in the phone memory. You can copy contacts from the phone memory to the SIM card.



To add a contact

- 1 From standby select **Menu** ► **Contacts** ► **Add contact**.
- 2 Enter the name and select **Continue**.
- 3 Enter the number and select **Save**.

 You can enter the + sign and country code with all phonebook numbers. They can then be used abroad or at home ► 19 To make international calls.

To call a contact



- 1 From standby press .
- 2 Scroll to, or enter the first few letters of the contact.
- 3 Press .

To edit a contact

- 1 From standby select **Contact**.
- 2 Scroll to the contact and select **Options** ► **Edit contact**.
- 3 Edit the information and select **Save**.

To delete a contact

- 1 From standby select **Contact**.
- 2 Scroll to the contact and select **Options** ► **Delete contact** ► **Yes**.

To copy a contact to the SIM card

- 1 From standby select **Contact**.
- 2 Scroll to the contact and select **Options** ► **Copy to SIM**.
- 3 Select an option.


Speed dialling

Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

- 1 From standby select **Menu** ► **Contacts** ► **Speed dial**.
- 2 Scroll to a position number and select **Add**.
- 3 Select a contact.

To speed dial

- 1 From standby enter the position number and select **Sp. dial**.
- 2 Press .

To delete speed dial numbers

- 1 From standby select **Menu** ► **Contacts** ► **Speed dial**.
- 2 Scroll to a position number and select **Delete**.

Memory status

The number of contacts you can save in the phone or on the SIM card depends on available memory.

To view the memory status

- From standby select **Menu** ► **Contacts** ► **Settings** ► **Memory status**.

My number

You can view and edit your own phone number. If your number is not saved on your SIM card, you can enter it yourself.

To view your own phone number

- From standby select **Menu** ▶ **Contacts** ▶ **My number**.


Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call. You can get your voicemail number from your network operator.

To enter your voicemail number

- 1 From standby select **Menu** ▶ **Calls** ▶ **Call settings** ▶ **Set up voicem.** ▶ **Voicemail no.:**
- 2 Enter the voicemail number and select **Save**.

To call your voicemail service

- From standby press and hold down .

Contacts tips

You can view tips and information about contacts.

To view contacts tips

- From standby select **Menu** ▶ **Contacts** ▶ **Contact tips**.

Messaging

Your phone supports various messaging services. Contact your service provider about the services you can use. For more information, go to www.sonyericsson.com/support.

Before you use messaging

You must have a service centre number. The number is supplied by your service provider and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To enter the service centre number

- 1 From standby select **Menu** ► **Messaging** ► **Settings** ► **Service centre**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, enter the service centre number, including the international “+” sign and country code.
- 3 Select **Save**.

Text messages


Text messages can be sent to a phone number or to a contact. Text messages can contain simple pictures, sound effects, animations, and melodies.

Writing and sending text messages

For information about entering text ► **12 Entering text**.

To write and send a text message



- 1 From standby press .
- 2 Select **Text message**.
- 3 Write the message and select **Options ► Send message**.
- 4 Select an option.
- 5 Select **Continue ► Send**.

To add a symbol to a text message

- 1 When you write the message, select **Options ► Add symbol**.
- 2 Select a symbol.

To add an item to a text message

- 1 When you write the message, select **Options ► Add item**.
- 2 Select an item.

To change writing language

- 1 When you write the message, select **Options ► Writing lang..**
- 2 Select a language.


To receive delivery reports for sent text messages

- 1 From standby select **Menu** ► **Messaging** ► **Settings** ► **Delivery report**.
- 2 Select an option.

Drafts

Text messages that you do not wish to send immediately can be saved in **Drafts**. Messages that fail to be sent are also saved in **Drafts**.

To write a text message and save it as a draft

- 1 From standby press .
- 2 Select **Text message**.
- 3 Write the message and select **Options** ► **Save in Drafts**.

Receiving text messages

You are notified when you receive a text message. Received messages are saved in **Inbox**.

To view a text message from standby

- When you receive a message, follow the instructions on the screen.

To view a text message from the inbox

- 1 From standby select **Menu** ► **Messaging** ► **Inbox**.
- 2 Scroll to a message and select **View**.

To reply to a text message

- 1 When you view the message, select **Options** ► **Reply**.
- 2 Write the message and select **Options** ► **Send message**.
- 3 Select an option.
- 4 Select **Send**.

To forward a text message

- 1 From standby select **Menu** ► **Messaging** ► **Inbox**.
- 2 Scroll to the message and select **View** ► **Forward** ► **Options** ► **Send message**.
- 3 Select an option.
- 4 Select **Send**.

Saving text messages

Text messages are automatically saved in **Inbox**. When **Inbox** is full, they are automatically saved on the SIM card. When both **Inbox** and the SIM card are full, you must delete messages to be able to receive new messages.

To save a text message on the SIM card

- 1 From standby select **Menu** ► **Messaging** ► **Inbox**.
- 2 Scroll to the message and select **View**.
- 3 Select **Options** ► **Save message**.

To save a phone number from a text message

- 1 When you view the message, select **Options** ► **Save number**.
- 2 Scroll to the number and select **Save**.
- 3 Enter a name for the contact and select **Continue** ► **Save**.

Deleting text messages

You can delete text messages one at a time or all the messages in a folder at the same time.

To delete a text message

- 1 From standby select **Menu** ► **Messaging** ► **Delete msgs**.
- 2 Scroll to a folder and select **One at a time**.
- 3 Scroll to the message and select **Delete**.

To delete all text messages in a folder

- 1 From standby select **Menu** ► **Messaging** ► **Delete msgs.**
- 2 Scroll to a folder and select **Delete all at once** ► **Yes.**

Picture messages (MMS)

Picture messages can contain text, pictures or camera pictures. They are sent via MMS (Multimedia Messaging Signatures) to a mobile phone.



Sending and receiving phones must have subscriptions that support picture messaging.

Before you start

If settings are not already in your phone ► **43 Settings.**

To create and send a picture message




- 1 From standby press **✉**.
- 2 Select **Picture message** ► **Options** and choose among the options to build your picture message.
- 3 When the message is ready, select ► **Options** ► **Send.**
- 4 Enter phone number or email address, or retrieve a number that has recently been used, or look-up from contacts, select **Send.**

To receive picture messages

When your phone has received new picture messages

- 1 Read now? Select **View**.
- 2 Scroll to the unread message and select **Read**.

 appears on the screen to remind you that you have unread picture messages.

Inbox and Outbox

Received messages are saved in **Inbox**. Messages that fail to be sent are saved in **Outbox**.

Draft

Messages that you do not wish to send immediately can be saved in **Drafts**.

To save a draft

When you write a message, select **Options** ► **Save**. The saved message can be found in **Drafts**.

To save an item in a received picture message

Scroll to the item and select **Options** ► **Save picture** or ► **Save melody**. Items are saved in corresponding folders in **My files**.

To view options when entering letters

When a picture message is displayed you can select among the following options:

- **Send** – to send your created picture message.
- **Save** – to save a draft of your created picture message.
- **Add text/Delete text** – to insert or delete text in a picture message.
- **Edit text** – to edit text in a draft.
- **Add picture** – to add a picture to your message.
- **Add sound/Delete sound** – to insert or delete an audio file in a picture message.
- **Add page** – to extend your picture message with another page.
- **Page timing** – to view the length of the picture message in minutes and seconds.
- **Preview** – to preview your created picture message before sending.
- **Delete page** – to delete an inserted page from a picture message. Only available if the message includes more than one page.
- **Next page** – to scroll to the next page. Only available if the message includes more than one page.
- **Previous page** – to scroll to the previous page. Only available if the message includes more than one page.

Automatic download

Select how to download your picture messages.

From standby select **Menu ▶ Message ▶ Settings**

▶ **Picture message** to select one of the following:

- **Msg download** – choose if the phone should ask you before downloading (**Always ask**), or if it should download automatically (**Always downl.**), if ask to download when not in home network (**Roaming**).
 - **Accept msgs** – decide whether commercial and anonymous messages should be accepted.
 - **Message server** – enter a message server or service centre address for MMS services.
- 3 **Internet profile** – to select the WAP profile to be used for MMS.

Messaging tips

You can view tips and information about messaging.

To view messaging tips

- From standby select **Menu ▶ Messaging ▶ Messaging tips**.



Area and cell information

Area and cell information are text messages, (for example, local traffic reports) that are sent to subscribers within a certain network area. Contact your service provider for more information.


To turn area information on

- 1 From standby select **Menu ▶ Messaging ▶ Settings ▶ Area information ▶ Subscriptions**.
- 2 Select **Options ▶ Enable subscr..**

To turn cell information on

- From standby select Menu ► Messaging ► Settings ► Cell info: ► Show info.


Radio (J120 only)

 *The radio is included in the J120 only.*

To listen to the radio



- 1 Connect the handsfree to the phone.
- 2 From standby press FM .

 *Do not use your phone as a radio in places where this is prohibited.*



To view radio options

- When you play the radio, select Options.

To search for radio channels

- Press  or .

To change the volume

- Press  or .

To minimize the radio

- When you play the radio, select Options ► Minimize.
The radio will continue playing in the background.



To return to the radio

- Press FM.



Saving radio channels

You can save up to 10 preset channels.

To save radio channels in positions 1 to 10

- When you have found a radio channel, press and hold down  – .

To select radio channels saved in positions 1 to 10

- When you play the radio, press  – .

To exit the radio

- Select Exit.

Radio tips

You can view tips and information about the radio.

To view radio tips

- From standby select Menu ► Radio ► Radio tips.

Imaging

Camera


Your phone has a digital camera to take pictures to save or send. Use a picture as a screen saver, wallpaper or add it to a contact.

Pictures taken with the camera are saved in **Camera pics**. The format is JPEG.

Pictures downloaded via Picture messages, Internet or via Infrared port are saved in **My files** ► **My pictures**.

To start the camera and take a picture



- 1 From standby press .
- 2 Hold the phone as shown in the illustration. You can see the subject on the phone screen.
- 3 Select **Take pic.** to take the picture.



A strong light source such as direct sunlight or a lamp can make the screen black out or the picture may be distorted.

To save a picture

- 1 Take a picture.
- 2 Select **Save**. The picture is saved in **Camera pics**.



When memory is full, items should be deleted from the memory first before possible to save the picture.

To discard a taken picture

- 1 Take a picture.
- 2 Select **Delete**.
- 3 **Delete picture?** appears. Select **Yes**.

To delete a picture from Camera pics

- 1 From standby select **Menu** ▶ **Camera** ▶ **Camera pics** ▶ **View**.
- 2 Scroll to a picture and select **Options** ▶ **Delete** ▶ **Yes**.

To delete a picture from My pictures

- 1 From standby select **Menu** ▶ **My files** ▶ **My pictures** ▶ **View**.
- 2 Scroll to a picture and select **Options** ▶ **Delete** ▶ **Yes**.

To send a picture from Camera pics

- 1 From standby select **Menu** ▶ **Camera** ▶ **Camera pics** ▶ **View**.
- 2 Scroll to a picture and select **Options** ▶ **Send message** ▶ **Options** ▶ **Send**.
- 3 Enter phone number or email address ▶ **OK** ▶ **Send**.



Sending and receiving phones must have subscriptions that support picture messaging. If settings are not already in your phone
➡ **43 Settings**.

To send a picture from My pictures

- 1 From standby select **Menu ▶ My files ▶ My pictures ▶ View.**
- 2 Scroll to a picture and select **Options ▶ Send message ▶ Options ▶ Send.**
- 3 Enter phone number or email address ▶ **OK ▶ Send.**

Wallpaper

If you set a picture as wallpaper, this picture is displayed in standby mode.

To use a picture taken with camera

- 1 From standby select **Menu ▶ Camera ▶ Camera pics ▶ View.**
- 2 Scroll to a picture and select **Options ▶ Set wallpaper.**

Options

- **Delete** – to delete the selected picture.
- **Send message** – to send the picture in a picture message.
- **Send via IR** – to exchange the picture with another device equipped with infrared.
- **Set wallpaper** – to set a picture as wallpaper.
- **Rename** – to rename the picture. The default naming for a picture is YY/MM/DD/HH/MM/SS.
- **Information** – view file format and file size of the picture.

Internet

Settings



You need the correct settings in your phone to use the Internet or messaging services.

Settings may be in your phone when you buy it. If not, contact your network operator, service provider or go to www.sonyericsson.com/support for more information.

To use the Internet, and send and receive picture and email

messages, you need the following:

- A phone subscription that supports data transmission.
- The correct settings in your phone.

Entering settings

If settings are not in your phone, you can:

- Receive settings in a text message (SMS) from your network operator.
- Use a PC to go to www.sonyericsson.com/support to request that a text message with the settings is sent to your phone.

To install settings

When the message appears, **New settings received:**

- Select **Yes** to install the new settings. If settings already exist in your phone you can either keep or replace them.
- Select **No** to cancel the installation.

After the installation ► *44 Internet menu.*

Internet menu

The Internet menu contain the following:

- **Homepage** – go to the predefined homepage.
- **Bookmarks** – go directly to a saved Web page.
- **Go to URL** – enter a Web address manually or retrieve one.
- **Edit bookmark** – edit the Web address of a saved bookmark.
- **Show pictures** – allow if images to be shown on Web pages.
- **Push access** – allow or reject reception of push messages.
- **Push inbox** – WAP Push notification messages are saved here.
- **Clear cache** – clear the internet browser cache memory.
- **Internet profile** – select the WAP profile to be used for Web browsing.

To select an Internet profile

- 1 From standby select **Menu** ► **Internet** ► **Internet profile**.
- 2 Select a profile to use.

To start browsing

From standby select **Menu** ► **Internet** ► **Go to URL** and enter a Web address or select an already used Web address.

To stop browsing

While browsing, select **Back** until you exit the Internet.

Options when browsing

While browsing select **Options**. The menu contains the following, but depends on the Web page you are visiting:


- **View** – open the marked Web address.
- **Bookmarks** – create, use or edit bookmarks to Web pages.
- **Go to URL** – enter a Web address manually or retrieve one.
- **Add bookmark** – add a new bookmark to the list.
- **Reload** – refresh the current Web page.
- **Homepage** – go to the predefined homepage.
- **Exit browser** – leave the Internet browser.

Infrared port

 
Use the infrared port to exchange information with another device equipped with infrared.

To activate the Infrared port

From standby select **Menu** ► **Settings** ► **Infrared port** ► **On**.

 *If set to On but not used, the Infrared port automatically turns off after 10 minutes.*

To connect two devices

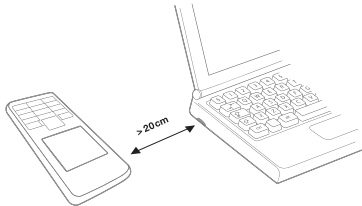

- 1 Turn on infrared in both devices.
- 2 Make sure the infrared port on your phone is facing the infrared port on the other device with a maximum distance of 20 cm.

To transfer items using infrared

- 1 Select an item to transfer.
- 2 Select **Options** ► **Send via IR**.

 
•


Settings

Sound and alerts

Your phone comes with a number of melodies which can be used as ringtones. You can also select to be alerted by the vibrating alert.


To set the ringtone volume (J110)

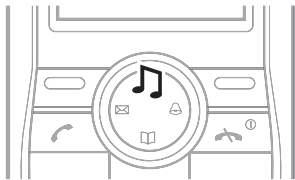

- 1 From standby press  .
- 2 Select an option.

To set the ringtone volume (J120)

- 1 From standby select Menu ► Settings ► Sound & alerts ► Ring volume.
- 2 Select an option.

 *Do not hold the phone to your ear when using high ringtones. This could damage your hearing.*

To set the ringtone

- 1 From standby select Menu ► Settings ► Sound & alerts ► Ringtone.
- 2 Select an option.

To set the vibrating alert

- 1 From standby select **Menu ▶ Settings ▶ Sound & alerts ▶ Vibration**.
- 2 Select an option.

To set the message alert sound

- 1 From standby select **Menu ▶ Settings ▶ Sound & alerts ▶ Message alert**.
- 2 Select an option.

To set the key sound

- 1 From standby select **Menu ▶ Settings ▶ Sound & alerts ▶ Key sound**.
- 2 Select an option.

To set the alarm sound

- 1 From standby select **Menu ▶ Settings ▶ Sound & alerts ▶ Alarm sound**.
- 2 Select an option.

Wallpaper

You can change the screen appearance by using wallpapers.

To select a wallpaper

- 1 From standby select **Menu ▶ Settings ▶ Wallpaper**.
- 2 Select an option.

Time and date

The time is shown when the phone is in standby. You can select between the 24-hour or 12-hour (am/pm) time format. You can also select different date formats.

To select the time format

- 1 From standby select **Menu ▶ Settings ▶ Time and date ▶ Format ▶ Time**.
- 2 Select an option.

To set the time

- 1 From standby select **Menu ▶ Settings ▶ Time and date ▶ Time**.
- 2 Enter the time and select **Save**.

To select the date format

- 1 From standby select **Menu ▶ Settings ▶ Time and date ▶ Format ▶ Date**.
- 2 Select an option.

To set the date

- 1 From standby select **Menu ▶ Settings ▶ Time and date ▶ Date**.
- 2 Enter the date and select **Save**.

Language

You can select the language for the phone menu. Most SIM cards automatically set the language used in the menu to the language of the country where you bought your SIM card. If this is not the case, the predefined language is English.



To change the phone language

- 1 From standby select **Menu ▶ Settings ▶ Language**.
- 2 Select an option.

Brightness

You can adjust the brightness of the screen.

To set the brightness

- 1 From standby select **Menu ▶ Settings ▶ Advanced ▶ Brightness**.
- 2 Press  or  to change the brightness.
- 3 Select **Save**.

Locks

Automatic keylock

Automatic keylock in standby means the keypad is locked a short while after you last press a key.

To turn the automatic keylock on

- 1 From standby select **Menu ▶ Settings ▶ Advanced ▶ Auto keylock**.
- 2 Select **On**.

SIM card lock

The SIM card lock protects your subscription, but not your phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card. Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone. If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message **PIN blocked. Enter PUK provided by your operator..** To unblock it, you need to enter your PUK (Personal

Unlocking Key). Your PIN and PUK are supplied by your network operator. You can edit your PIN and turn off your SIM card lock at any time.



If the message Wrong code. Attempts remaining: appears when you edit your PIN, you entered the PIN or PIN2 incorrectly.

To unblock your SIM card

- 1 When PIN blocked. Enter PUK provided by your operator. is displayed, enter your PUK and select OK.
- 2 Enter a new four- to eight-digit PIN and select OK.
- 3 Re-enter the new PIN to confirm and select OK.

To turn the SIM card lock on

- 1 From standby select Menu ► Settings ► Advanced ► Security ► SIM lock ► Protection ► On.
- 2 Enter your PIN and select OK.

To edit your PIN

- 1 From standby select Menu ► Settings ► Advanced ► Security ► SIM lock ► Change PIN.
- 2 Enter your PIN and select OK.
- 3 Enter a new four- to eight-digit PIN and select OK.
- 4 Re-enter the new PIN to confirm and select OK.

To edit your PIN2

- 1 From standby select Menu ► Settings ► Advanced ► Security ► SIM lock ► Change PIN2.
- 2 Enter your PIN2 and select OK.
- 3 Enter a new four- to eight-digit PIN and select OK.
- 4 Re-enter the new PIN to confirm and select OK.

Phone lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. You can change the phone lock code (which is 0000 by default) to any four-digit personal code.

Automatic phone lock

If the phone lock is set to **Automatic**, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.



It is important that you remember your code. If you should forget it, you have to hand in your phone to your local Sony Ericsson retailer.

To turn the phone lock on

- 1 From standby select **Menu** ▶ **Settings** ▶ **Advanced** ▶ **Security** ▶ **Phone lock** ▶ **Protection** ▶ **On**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

To edit your phone lock code

- 1 From standby select **Menu** ▶ **Settings** ▶ **Advanced** ▶ **Security** ▶ **Phone lock** ▶ **Change code**.
- 2 Enter the current code and select **OK**.
- 3 Enter a new code and select **OK**.
- 4 Re-enter the new code to confirm and select **OK**.

To unlock the phone

- 1 From standby select **Menu** ▶ **Settings** ▶ **Advanced** ▶ **Security** ▶ **Phone lock** ▶ **Protection** ▶ **Off**.
- 2 Enter your phone lock code and select **OK**.

IMEI number

You can keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone should be stolen.

To view your IMEI number

- From standby press , , , , .

Master reset

You can reset some of the settings in your phone by performing a master reset. Content, for example, contacts, pictures, messages and sounds will not be deleted.

To perform a master reset

- 1 From standby select **Menu** ► **Settings** ► **Advanced** ► **Master reset** ► **Reset settings**. Content will not be deleted.
- 2 Select **Continue**.

Reset all

You can reset all the settings in your phone to the way they were when you bought your phone. All content, for example, contacts, pictures, messages and sounds will be deleted.

To reset all settings

- 1 From standby select **Menu** ► **Settings** ► **Advanced** ► **Master reset** ► **Reset all**. Content will be deleted.
- 2 Select **Continue**.

Networks

When you turn on your phone, it automatically selects your home network. If your home network is not within range, you may use another network, provided your network operator allows it. You can select the network you want to use.

To select a network

- 1 From standby select Menu ► Calls ► Call settings ► Networks ► Select network.
- 2 Select an option.

To select a search mode for networks

 
- 1 From standby select Menu ► Calls ► Call settings ► Networks ► Search mode.
- 2 Select an option.


Extras

Alarms



You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is set to silent or turned off. When the alarm sounds you can silence it for 9 minutes or turn it off.

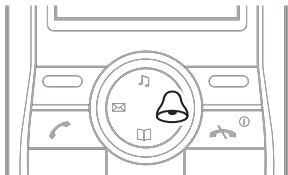To set the alarm



- 1 From standby press .
- 2 Enter the time and select **Save**.

To set the radio alarm (J120)

- 1 Connect the handsfree to the phone.
- 2 From standby select **Menu** ► **Extras** ► **Alarm clock** ► **Alarm signal** ► **Radio**.
- 3 Press .
- 4 From standby press .
- 5 Enter the time and select **Save**.

To set the alarm signal

- 1 From standby select **Menu** ► **Extras** ► **Alarm clock** ► **Alarm signal**.
- 2 Select an option.

To silence the alarm

- Press any key.


To silence the radio alarm (J120)

- Select **Snooze**.

To turn the alarm off

- When the alarm sounds, select **Turn off**.

To cancel the alarm

- 1 From standby press .
- 2 Select **Turn off**.

Reminders

You can set a reminder for important occasions.

To set a reminder

- 1 From standby select **Menu** ► **Extras** ► **Reminders** ► **Add**.
- 2 Enter a subject and select **Continue**.
- 3 Select an option.
- 4 Enter the date and select **Continue**.
- 5 Enter the time and select **Continue**.

Timer

Your phone has a timer that can be set to count down from 99 minutes and 59 seconds.

To set the timer

- 1 From standby select **Menu** ► **Extras** ► **Timer**.
- 2 Enter the minutes and seconds and select **Continue**.

Stopwatch



To use the stopwatch

- From standby select **Menu** ► **Extras** ► **Stopwatch** ► **Start**.

Calculator

Your phone has a calculator, which can add, subtract, divide and multiply.

To use the calculator

- 1 From standby select **Menu** ► **Extras** ► **Calculator**.
- 2 Press  or  to select **.** **÷** **x** **-** **+** **=**.
- 3 Press the number keys to enter digits.

My sounds

Your phone comes with a number of standard and polyphonic melodies.

To play a melody

- 1 From standby select **Menu** ► **Extras** ► **My sounds**.
- 2 Scroll to a melody and select **Options** ► **Play**.

To set a melody as the ringtone

- 1 From standby select **Menu** ► **Extras** ► **My sounds**.
- 2 Scroll to a melody and select **Options** ► **Set ringtone**.

 
Games

Your phone comes with a number of games. Information and game controls are given in help texts for each game.

To start a game

- 1 From standby select **Menu** ► **Extras** ► **Games**.
- 2 Select an option.

To end a game

- Press .

Troubleshooting

Some problems require that you call your network operator, but most of the problems you can easily correct yourself.

Remove the SIM card before you hand your phone in for repair.

Master reset

 
If you experience problems with your phone such as screen flickering or freezing, navigation problems, etc. you should reset the phone.

To perform a master reset

- 1 From standby select **Menu** ► **Settings** ► **Advanced** ► **Master reset** ► **Reset settings**. Content will not be deleted.
- 2 Select **Continue**.
 - *53 Master reset.*

Memory capacity and speed

If you have not restarted the phone for a while, you may experience problems with its memory capacity and speed. You can restart the phone to improve its capacity.

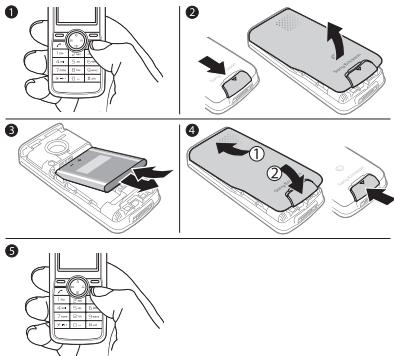

- 1 Turn the phone off.
- 2 Remove the battery cover.
- 3 Remove the phone battery and then put it back in place.
- 4 Replace the battery cover.
- 5 Turn the phone on.



 
Content and settings may be lost if you remove the battery before you turn off your phone.

Common questions

Q: I cannot turn the phone on.

A: Charge the phone until it has finished charging.

Make sure that the phone is charged. Attach the charger and charge the phone for 2.5 hours. The battery icon may not appear until the phone has charged for a few minutes.


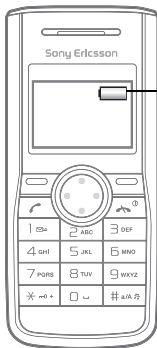


A green battery means the phone battery is fully charged. A white battery means the phone battery is empty.

Q: I cannot charge the phone.

A: Attach the charger properly.

  Look carefully at the picture to see how to attach the charger and charge the phone.

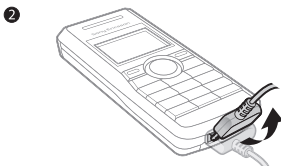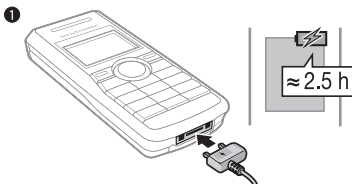

Q: How do I change phone language?

A: From standby select Menu ► Settings ► Language and select a language.

Q: What is my phone lock code?

A: The default phone lock code is 0000.

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. To change it to any four-digit personal code:

- 1 From standby select **Menu** ► **Settings** ► **Advanced** ► **Security** ► **Phone lock** ► **Change code**.
- 2 Enter the current code and select **OK**.
- 3 Enter a new code and select **OK**.
- 4 Re-enter the new code to confirm and select **OK**.

Q: How do I turn on and off predictive text input when I write a text message?

A: Press  repeatedly when you enter text.

Q: The phone turns itself off.

A: Use the automatic keylock.

If your phone turns itself off when being transported, something in your pocket or bag has probably activated the on/off key. Turn on the automatic keylock function ► *50 Locks*.

Q: How do I set up text messages?

A: Check the service centre number in the phone.

If the number to your service centre is not saved on your SIM card, you must specify the number yourself to be able to reply to received messages or send your own messages.

Your service centre number is usually supplied with your SIM card. If you cannot find your service centre number, contact your service provider. To enter the service centre number:

- 1 From standby select **Menu** ► **Messaging** ► **Settings** ► **Service centre**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, enter the service centre number, including the international “+” sign and country code.
- 3 Select **Save**.

Q: I have problems using text messages on my phone

A: Enter the correct text message settings.

If you have problems sending or receiving text messages on your phone, some of your phone settings are probably incorrect. The settings are different for different operators, contact your network operator for the correct service centre setting.

Error messages

Insert SIM card

There is no SIM card in the phone or you may have inserted it incorrectly. Insert a SIM card ► *4 To insert SIM card and battery.*

Insert correct SIM card

This error message is shown in two cases:

- The phone only works with certain SIM cards. Insert the correct SIM card.

- You entered your personal unblocking key code (PUK) incorrectly 10 times in a row. Contact your operator. To unblock ➡ *50 SIM card lock.*

Emerg. only

You are within range of a network, but you are not allowed to use it. Some network operators allow emergency calls to the international emergency number 112 ➡ *20 Emergency calls.*

No network

There is no network within range or the received signal is too weak. You have to move to get a signal that is strong enough.

Password error

You have entered your PIN or PIN2 incorrectly. Enter the correct PIN or PIN2 and select Yes ➡ *50 Locks.*

PIN blocked. Enter PUK provided by your operator. or PIN2 blocked. Enter PUK2 given by your operator..
You have entered your PIN or PIN2 incorrectly three times in a row. To unblock your codes ➡ *50 Locks.*

Fully locked

The phone is locked. To unlock the phone ➡ *50 Locks.*

Phone lock code:

Your phone comes with the phone lock code 0000. You can change it to any four-digit code ➡ *50 Locks.*

Important information

Sony Ericsson Consumer Web site

On www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local websites providing support.
- A global network of Call Centers.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in this User guide.

On www.sonyericsson.com, under the support section in the language of your choice, you will find the latest support tools and information, such as software updates, Knowledgebase, Phone setup and additional help when you require it.

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centers. See the phone number for the nearest Call Center in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. On www.sonyericsson.com you can always find the latest updates.)

In the unlikely event that your product needs service, please contact the dealer from whom it was purchased or one of our service partners. Save your original proof of purchase, you will need it if you need to claim warranty.

For a call to one of our Call Centers you will be charged according to national rates, including local taxes, unless the phone number is a toll-free number.

Argentina	800-333-7427 questions.AR@support.sonyericsson.com
Australia	1-300 650 050 questions.AU@support.sonyericsson.com
Austria	0810 200245 questions.AT@support.sonyericsson.com
Belgium	02-7451611 questions.BE@support.sonyericsson.com
Brazil	4001-0444 questions.BR@support.sonyericsson.com
Canada	1-866-766-9374 questions.CA@support.sonyericsson.com
Central Africa	+27 112589023 questions.CF@support.sonyericsson.com
Chile	123-0020-0656 questions.CL@support.sonyericsson.com
China	4008100000 questions.CN@support.sonyericsson.com
Colombia	18009122135 questions.CO@support.sonyericsson.com
Croatia	062 000 000 questions.HR@support.sonyericsson.com
Czech Republic	844 550 055 questions.CZ@support.sonyericsson.com
Denmark	33 31 28 28 questions.DK@support.sonyericsson.com
Finland	09-299 2000 questions.FI@support.sonyericsson.com
France	0 825 383 383 questions.FR@support.sonyericsson.com
Germany	0180 534 2020 questions.DE@support.sonyericsson.com
Greece	801-11-810-810 210-89 91 919 (from mobile) questions.GR@support.sonyericsson.com

Hong Kong	8203 8863 questions.HK@support.sonyericsson.com
Hungary	06 1 437 7300 questions.HU@support.sonyericsson.com
India	39011111 (Add STD code from a GSM connection) questions.IN@support.sonyericsson.com
Indonesia	021-2701388 questions.ID@support.sonyericsson.com
Ireland	1850 545 888 questions.IE@support.sonyericsson.com
Italy	06 48895206 questions.IT@support.sonyericsson.com
Lithuania	8 700 55030 questions.LT@support.sonyericsson.com
Malaysia	1-800-889900 questions.MY@support.sonyericsson.com
Mexico	001-95-888-821-8408 questions.MX@support.sonyericsson.com
Netherlands	0900 899 8318 questions.NL@support.sonyericsson.com
New Zealand	0800-100150 questions.NZ@support.sonyericsson.com
Norway	815 00 840 questions.NO@support.sonyericsson.com
Pakistan	111 22 55 73 Outside Karachi: (92-21) 111 22 55 73 questions.pk@support.sonyericsson.com
Philippines	+63 (02) 789 1860 questions.PH@support.sonyericsson.com
Poland	0 (prefix) 22 6916200 questions.PL@support.sonyericsson.com
Portugal	808 204 466 questions.PT@support.sonyericsson.com

Romania	(+4021) 401 0401 questions.RO@support.sonyericsson.com
Russia	8 (495) 787 0986 questions.RU@support.sonyericsson.com
Singapore	67440733 questions.SG@support.sonyericsson.com
Slovakia	02-5443 6443 questions.SK@support.sonyericsson.com
South Africa	0861 632222 questions.ZA@support.sonyericsson.com
Spain	902 180 576 questions.ES@support.sonyericsson.com
Sweden	013-24 45 00 questions.SE@support.sonyericsson.com
Switzerland	0848 824 040 questions.CH@support.sonyericsson.com
Taiwan	02-25625511 questions.TW@support.sonyericsson.com
Thailand	02-2483030 questions.TH@support.sonyericsson.com
Turkey	0212 47 37 777 questions.TR@support.sonyericsson.com
Ukraine	(+380) 44 590 1515 questions.UA@support.sonyericsson.com
United Arab Emirates	43 919880 questions.AE@support.sonyericsson.com
United Kingdom	08705 23 7237 questions.GB@support.sonyericsson.com
United States	1-866-766-9374 questions.US@support.sonyericsson.com
Venezuela	0-800-100-2250 questions.VE@support.sonyericsson.com

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.



These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.

Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- Always treat your product with care and keep it in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
- Do not use your product when in, or around aircraft, or areas showing the sign “turn off two-way radio”.
- Do not use your product in an area where a potentially explosive atmosphere exists.



- Do not place your product or install wireless equipment in the area above an air bag in your car.



CHILDREN

KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.



Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug does not fit into the outlet, have a proper outlet installed by a qualified electrician.

Use only Sony Ericsson branded original chargers intended for use with your mobile phone. Other chargers may not be designed to the same safety and performance standards.

Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous.

Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

Personal medical devices

Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Sony Ericsson handsfree solutions intended for use with your product.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna has been installed.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Antenna

This phone contains a built-in antenna. Use of antenna devices not marketed by Sony Ericsson specifically for this model could damage your mobile phone, reduce performance, and produce SAR levels above the established limits (see below).

Efficient use

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when it is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while it is operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

For phones sold in the US, before a phone model is available for sale to the public, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

A separate leaflet with SAR information about this mobile phone model is included with the material accompanying this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on: www.sonyericsson.com/health.

Accessible Solutions/Special Needs

For phones sold in the US, you can use your TTY terminal with your Sony Ericsson mobile phone (with the necessary accessory). For information on Accessible Solutions for individuals with special

needs call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or visit the Sony Ericsson Special Needs Center at www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment



This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Disposing of the battery



Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Protection of personal information

To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product. To delete personal data, perform a master reset and remove the memory card. **DELETION OF MATERIAL FROM THE PHONE MEMORY DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN**

IF A MASTER RESET HAS BEEN PERFORMED. If you are concerned about such potential disclosure retain your device or secure its permanent destruction.

Accessories

Sony Ericsson recommends use of Sony Ericsson original accessories for safe and efficient use of its products. Use of third-party accessories may decrease performance or pose a risk to your health or safety.

LOUDNESS WARNING:

Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. Sony Ericsson does not test use of third-party audio accessories with this mobile phone. Sony Ericsson recommends using only Sony Ericsson original audio accessories.

End User Licence Agreement

This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software").

As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect.

Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

The validity, construction and performance of this license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

OUR WARRANTY

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

WHAT WE WILL DO

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service

partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

CONDITIONS

- 1 The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sony Ericsson authorised dealer, specifying the date of purchase and serial number**, for this Product, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
- 3 This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any

failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in the appearance of the camera image may occur between phones. This is not uncommon in digital cameras and does not mean that the camera is defective in any way.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
- 7 Tampering with any of the seals on the Product will void the warranty.
- 8 **THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS**

LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

***EUROPEAN UNION (EU)**

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries. It may not be possible to repair SIM-locked Products.

** In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

FCC Statement for J110a (Type AAA-1042041-BV)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Declaration of Conformity J110i

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentorget

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAA 1002042-BV

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards 3GPP TS 51.010-1, EN 301489-7, EN 60950, following the provisions of Radio Equipment and Telecommunication Terminal Equipment directive **99/5/EC** with requirements covering EMC directive **89/336/EEC**, and Low Voltage directive **73/23/EEC**.

CE 0682

Lund, January 2007



Shoji Nemoto, Head of Product Business Group GSM/UMTS

We fulfil the requirements of the R&TTE Directive (**99/5/EC**).

Declaration of Conformity J120i

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentorget

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAA 1002041-BV

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards 3GPP TS 51.010-1, EN 301489-7, EN 60950, following the provisions of Radio Equipment and Telecommunication Terminal Equipment directive **99/5/EC** with requirements covering EMC directive **89/336/EEC**, and Low Voltage directive **73/23/EEC**.

CE 0682

Lund, January 2007



Shoji Nemoto, Head of Product Business Group GSM/UMTS

We fulfil the requirements of the R&TTE Directive (**99/5/EC**).

Index

A

- accessories 65
- alarms 44
- answering service 28
- area information 33
- assembling, phone 4
- automatic keylock 39

B

- battery 4
 - charging 8
 - inserting 8
 - use and care 8

C

- calculator 46
- call list 19
- call time 24
- calling 18
- calls
 - call tips 25
 - conference 22
 - diverting 20
 - emergency 20
 - international 19
 - missed 19
 - restricting 23
 - time 24
 - two calls at once 21
- contacts 26
 - tips 28

D

- date 37
- date format 38
- declaration of conformity 70, 71
- drafts 31

E

- emergency calls 20
- entering text
 - multitap 12
 - predictive text 12
- error messages 53

G

- games 46
- GSM frequencies 2

H

- handsfree 34
- hide your phone number 25

I

- icons 17
- IMEI number 42
- important information 55

K

- keys J110 11
- keys J120 11

L

- language 38

- writing 14
- locks
 - automatic keylock 39
 - phone lock 39
 - SIM card lock 39

M

- master reset 42
- memory status 27
- menu overview J110 15
- menu overview J120 16
- messaging
 - add item 30
 - add symbol 30
 - before you use 29
 - change language 30
 - deleting 32
 - delivery report 31
 - forwarding 32
 - messaging tips 33
 - receiving 31
 - replying 31
 - saving 32
 - sending 29
 - text messages 29
 - writing methods 12
 - writing tips 14
- microphone 18
- missed calls 19
- my number 28
- my sounds 46

N

- networks 43

P

- phone
 - language 12
 - menu 10
 - name 5
 - overview 9
- PIN 6
 - changing 40
 - entering 5
 - unlocking 7
- PUK 7, 40

R

- radio (J120) 34
- radio tips 35
- reminders 45
- reset 42
- ringtone 36

S

- safety guidelines 59
- screen
 - brightness 38
 - light 12
- service and support 55
- settings 36
- shortcuts J110 11
- shortcuts J120 11
- silent mode 12, 36
- SIM card 6

- locking 40
- unblocking 40
- SOS numbers 20
- speed dialling 27
- standby mode 5, 7
- stopwatch 46

T

- time 37
- time format 38
- troubleshooting 48
- turn the phone on 5

V

- vibrating alert 37
- voicemail 28
- volume
 - loudspeaker 19
 - ringtone 36

W

- wallpaper 37

www.sonyericsson.com



Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

LZT 108 9136 R1A

Printed in Country