

# Prepare the phone

**Congratulations** on your purchase of the Sony Ericsson T280a. For additional phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun). Register now to get free online storage and special offers at [www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone). For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

**Instruction symbols**  
The following instruction symbols appear in this User guide:

- > Use the navigation key to scroll and select.
- Press the navigation key up.
- Press the navigation key down.
- Press the navigation key to the left.
- Press the navigation key to the right.

- Note**
- Tip**
- Warning**

Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

## To insert the SIM card and battery

- 1 Remove the battery cover. Slide the SIM card into its holder with the contacts facing down.
- 2 Insert the battery with the label side up and the connectors facing each other. Replace the battery cover as shown in the picture.

**Do not force the battery cover into place. Slide the battery cover carefully onto the phone and close it.**

## Charge the battery

- 1 The phone battery is partly charged when you buy it. Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to illuminate the screen.
- 2 To remove the charger, tilt the plug upwards.

**You can use the phone during charging. You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.**

## Turn the phone on

- 1 Press and hold down .
- 2 Enter your PIN if requested. To correct mistakes, select **Delete**.
- 3 Select **OK**.
- 4 Select a language.
- 5 Enter the time and date and select **Save**.

**To turn the phone off**  
• Press and hold down .

**Standby**  
After you have turned the phone on and entered your PIN, the name of your operator appears on the screen. This is called standby. You can now make and receive calls.

# SIM and PIN

**SIM card**  
The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

**You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See [Contacts on page 17](#).**

**PIN code**  
You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.

**If you enter the wrong PIN three times in a row, PIN blocked. Enter PUK provided by your operator. To unblock it, you need to enter your PUK (Personal Unlocking Key).**

# Menu overview

	<b>Extras</b> Calendar, Timer, Stopwatch, Calculator, Games, My files
	<b>Internet</b> Homepage, Bookmarks, Go to URL, View, Advanced
	<b>FM Radio</b>
	<b>Camera</b> Take pic., Camera pics, Slide show, Settings
	<b>Messaging</b> Write new, Inbox, Call voicemail, Drafts, Sent messages, Saved msgs, Templates, Delete messages, Settings, Memory status
	<b>Alarms</b>
	<b>Calls</b> Call list, Time and cost, Call settings
	<b>Contacts</b> View contacts, Find contact, Add contact, My number, Voicemail, Delete contacts, Speed dial, Copy contacts, Send contacts, Settings
	<b>Settings</b> Sound & alerts, Wallpaper, Theme, Time and date, Language, Bluetooth, Select network, Internet settings, Advanced, Phone status

*Some menus and icons in this document may vary depending on operator, network or subscription.*

# Phone overview

Stereo handsfree and battery charger connector

Navigation key with shortcuts

Selection key

Call key

Keylock

Volume keys

End key, On/off key

## Network coverage

The network bars show the strength of the GSM network in your area. Try moving to another location if you have trouble calling and network coverage is poor. **No network** means you are not in range of a network.

= Good network coverage

= Average network coverage

**Battery status**

= The phone battery is fully charged

= The phone battery is empty

# Screen icons

These icons may appear on the screen.

Icon	Description
	Battery icon. A completely green icon means that the battery is fully charged
	You have missed a call
	Divert calls is activated
	The phone is set to silent
	The keypad is locked
	You have received a text message
	You have received a picture message
	An alarm is activated
	Ongoing call
	The loudspeaker is on
	The FM radio is playing
	The Bluetooth function is activated

# Shortcuts

From standby you can use the navigation keys to go directly to a function:

- Press to write a text or picture message.
- Press to go to the camera.
- Press to play the FM radio.
- Press to go to your contacts.

**To navigate the menus**

- 1 From standby select **Menu**.
- 2 Press , , or and select a menu.

**To go back one step in the menu**  
• Select **Back**.

**To return to standby**  
• Press .

**To lock the keypad**  
• Press and select **Lock keys**.

**To unlock the keypad**  
• Press and select **Unlock**.

**To set the phone to silent**  
• Press and hold down .

**To call your voicemail service**  
• Press and hold down .

# Calling

You must turn on the phone and be within range of a network.

**To make a call**

- 1 From standby enter the area code and phone number.
- 2 Press .

**To end a call**  
• Press .

**To answer a call**  
• Press .

**To reject a call**  
• Press .

**To turn off the ringtone when receiving a call**  
• Select **Silent** to turn off the ringtone without answering the call.

**To turn the loudspeaker on during a call**  
• Select **Options** > **Turn on speaker**.

**Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.**

**To change the ear speaker volume during a call**  
• Press or .

**To make international calls**

- 1 From standby press and hold down until a + sign appears on the screen.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

**To view a missed call**  
• When **Missed call** is displayed, select **Details**. To call back scroll to the number and press .

**Call list**  
You can view information about recent calls.

**To call a number from the call list**

- 1 From standby press .
- 2 Scroll to the name or number and press .

**To delete a number from the call list**

- 1 From standby press .
- 2 Scroll to the name or number and select **Options** > **Delete** > **Yes**.

**Calls to the international emergency number 112 can still be made, even when the keypad is locked.**

# Camera

Your phone has a digital camera to take pictures to save or send. Pictures taken with the camera are saved in **Menu** > **Camera** > **Camera pics**. The format is JPEG.

**Pictures downloaded using picture messages, Internet or Bluetooth are saved in **Extras** > **My files** > **My pictures**.**

**To start the camera and take a picture**

- 1 From standby press . You can see the subject on the phone screen.
- 2 Select **Take pic.** to take the picture.
- 3 Select **Save** or **Delete**.

**To delete a picture**

- 1 From standby select **Menu** > **Camera** > **Camera pics**.
- 2 Scroll to a picture and select **View**.
- 3 Select **Options** > **Delete** > **Yes**.

**To send a camera picture as picture message**

- 1 From standby select **Menu** > **Camera** > **Camera pics**.
- 2 Scroll to a picture and select **View**.
- 3 Select **Options** > **Send message** > **Options** > **Send message** > **To..**.
- 4 Select **Enter phone no.** or **Email address**.
- 5 Select **OK** > **Options** > **Send message**.

**See [To send an item using Bluetooth on page 31](#).**

# Messaging

**Text messages (SMS)**  
You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself. See [Troubleshooting on page 36](#).

**See [Entering text on page 23](#).**

**To write and send a text message**

- 1 From standby press .
- 2 Select **Text message**. Write the message and select **Options** > **Send message**.
- 3 Select an option.
- 4 Select **Send**.

**To view a received text message**

- 1 **new message Read now?** appears. Select **View**.
- 2 Select the unread message.

**To view messages saved in the inbox**  
• Select **Menu** > **Messaging** > **Inbox**.

**To get delivery status of a sent message**

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Delivery report**.
- 2 Select **On**. You will be notified when a message has been successfully delivered.

**Picture messages (MMS)**  
Picture messages can contain text, sound and images. They are sent using MMS to a mobile phone. You need the correct Internet settings in your phone to use this function. See [Internet on page 32](#).

**To create a picture message**

- 1 From standby press .
- 2 Select **Picture messages** > **Options** and select among the options to create the message.

**To send a picture message**

- 1 When the message is ready, select **Options** > **Send message** > **To..**.
- 2 Select **Enter phone no.** or **Email address**.
- 3 Select **OK** > **Options** > **Send message**.

**Sending and receiving phones must have subscriptions that support picture messaging.**

# Contacts

You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.

**See [Entering text on page 23](#).**

**To add a contact**

- 1 From standby select **Contacts** > **Add contact**.
- 2 Select **Save on SIM** or **Save in phone**.
- 3 Enter the name and select **Options** > **OK**.
- 4 Scroll to the icon below the name.
- 5 Enter the number and select **OK**.
- 6 Select **Save contact**.

**You can enter the + sign and country code with all phonebook numbers. They can then be used abroad or at home. See [To make international calls on page 13](#).**

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in the phone. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

**To select contacts view**

- 1 From standby select **Menu** > **Contacts** > **Settings** > **View Contacts**.
- 2 Select an option.

**To call a contact**

- 1 From standby press .
- 2 Scroll to, or enter the first few letters of the contact.
- 3 Press .

**To edit a contact**

- 1 From standby press .
- 2 Select a contact.
- 3 Select **Options** > **Edit**.
- 4 Edit the information and select **Options** > **Save contact**.

**To delete a contact**

- 1 From standby press .
- 2 Select a contact.
- 3 Select **Options** > **Delete contact**.

**To copy all contacts to the SIM card**  
• From standby select **Menu** > **Contacts** > **Copy contacts** > **Copy all to SIM**.

**To view your own phone number**  
• From standby select **Menu** > **Contacts** > **My number**.

**Contacts memory**  
The number of entries you can save in **Contacts** depends on the capacity of your SIM card.

**To check the Contacts memory status**  
• From standby select **Menu** > **Contacts** > **Settings** > **Memory status**.

**Speed dialling**  
Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 2-9.

**Position 1 is set to voicemail number.**

**To add contacts to speed dial numbers**

- 1 From standby select **Contacts** > **Speed dial**.
- 2 Select a position number.
- 3 Select a contact.

**To speed dial**  
• From standby enter the position number and press .

# FM radio

**To listen to the FM radio**

- 1 Connect the handsfree to the phone.
- 2 From standby press .

**To control the radio**

- Press or to search for FM radio channels.
- Press or to change the volume.

**To save an FM radio channel**  
• Press and hold down - . The FM radio channel is saved in **Options** > **Channels**. You can save up to 20 preset channels.

**To listen to a saved FM radio channel**  
• When the FM radio is on, press - .

**To exit the FM radio**  
• Select **Back** or press .

**To minimize the FM radio on the screen**

- Select **Options** > **Minimize**.
- Press to restore the FM radio on the screen.

**To turn the FM radio off when minimized**  
• Press and select **Back**.

**To view FM radio options**  
• When you play the FM radio, select **Options**.

# Calendar

**To add an appointment in the Calendar**

- 1 From standby select **Menu** > **Extras** > **Calendar**.
- 2 Scroll to a date and select **Options** > **Add a note**.
- 3 Enter your details and select **Options** > **OK**.
- 4 To confirm the date and time, select **OK**.
- 5 Select if you want a reminder signal:
  - **Reminder** - a reminder signal will sound in immediate connection with the note.
  - **Deactivate** - no reminder signal.

**To edit or delete a note**

- 1 From standby select **Menu** > **Extras** > **Calendar**.
- 2 Scroll to the day for the note and select **Options** > **View today**. If there is more than one note, scroll to the desired note.
- 3 Select **Options**.
- 4 Select to **Delete** or **Edit** the note.





