

## Turning on the phone

**Congratulations** on your purchase of the Sony Ericsson J132/J132a. For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### Instruction symbols

The following instruction symbols appear in this User guide:

> Use the navigation key to scroll and select.

⬇️ Press the navigation key up.

⬇️ Press the navigation key down.

⬅️ Press the navigation key to the left.

➡️ Press the navigation key to the right.

💡 Tip

! Note

⚠️ Warning

📶 Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

### To turn on the phone

- 1 Press and hold down .
- 2 Enter your PIN if requested. To correct mistakes, select Clear.
- 3 Select OK.
- 4 Select a language.
- 5 Enter the time and date and select OK.

💡 If the screen turns dark when you enter your PIN, press the left selection key to turn on the screen light.

### Standby

After you have turned on the phone and entered your PIN, the name of your operator appears on the screen. This view or screen is called standby. You can now make and receive calls.

### To turn off the phone

- Press and hold down .

### Phone model

You can check your phone model in the **Settings** menu.

### To check the phone model

- From standby select **Menu** > **Settings** > **Phone status**.

## Charging the battery

Your phone battery is partly charged when you buy it. It takes approximately 3 hours to fully charge the battery.

! It may take 30 minutes for the battery icon to appear on the screen.



### To charge the battery

- 1 Connect the charger to the phone. Press a key to view the charging status on the screen.
- 2 To remove the charger, pull the plug straight out.

💡 You can use the phone during charging. You can charge the battery for more or less than 3 hours. Interrupted charging will not damage the battery.

## SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

💡 You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See **Contacts** on page 20.

### PIN code (SIM card lock)

The PIN (Personal Identification Number) code is a SIM card lock that protects your subscription, but not the phone itself. If the card is locked, you have to enter the PIN code when you turn on your phone. To change your PIN code, see **SIM card lock** on page 34.

Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.

! If you enter the wrong PIN three times in a row, the following message appears: **PIN blocked. Enter PUK provided by your operator. To unlock your SIM card, see Troubleshooting** on page 36.

## Phone overview



## Menu overview

	<b>Messaging</b>	Text message, Inbox, Sent messages, Drafts, Saved messages, Delete messages, Messaging tips, Settings
	<b>SIM toolkit*</b>	* SIM card function. Menu is operator and subscription dependent.
	<b>Extras</b>	Alarm clock, Reminders, Birthdays, Calendar, Timer, Stopwatch, Calculator, Games, Torch
	<b>Contacts</b>	View contacts, Add contact, My number, Voicemail, Delete, Speed dial, SIM contacts, Service numbers, Contacts tips, Settings
	<b>Calls</b>	Call list, Call timer, Call tips, Call settings
	<b>Settings</b>	Phone status, Sounds & alerts, Wallpaper, Time and date, Language, Advanced
	<b>Radio</b>	

Some menus and icons described in this document may vary depending on operator, network or subscription.

## Screen icons

### Network coverage

The network bars show the strength of the GSM network. Move to another location if you have network problems. No network means you are out of range.

|||| = Good network coverage

|||... = Average network coverage

### Battery status

 = The phone battery is fully charged

 = The phone battery is empty

These icons may appear in your phone.

Icon	Description
	Battery charging, appears with battery icon.
	You have missed a call.
	The phone is set to silent.
	You have received a new text message.
	You have received a new voice message.
	Ongoing call.
	Divert calls is activated.
	An alarm is activated.
	The loudspeaker is on.
	Predictive text input is used (dictionary).
	The keypad is locked.
	The radio is playing in the background.

Some services may be operator-, network- and subscription-dependent.

## Shortcuts



From standby you can use the navigation keys to go directly to a function:

- To go to contacts, press .
- To write a text message, press .
- To set the alarm, press .
- To play the radio, press **FM**.

### To navigate the menus

- From standby select **Menu** and press , , , or .
- Select **Back** to go back one step in the menu.
- Press  to return to standby.
- Press  or  to move between tabs.

### To select actions on the screen

- Press one of the selection keys.

### To lock the keypad

- Press  and select **Lock**.

### To unlock the keypad

- Press  and select **Unlock**.

! Calls to the international emergency number can still be made, even when the keypad is locked.

### To set the phone to silent

- Press and hold down  to set silent mode on or off.

### To view call tips

- From standby select **Menu** > **Calls** > **Call tips**.

## Calling

Your phone must be on and within range of a network.

### To make a call

- 1 From standby enter the area code and phone number.
- 2 Press .

### To make an emergency call

- From standby enter the international emergency number, for example, 112 and press .

! You can make emergency calls without a SIM card and without entering a PIN. In some countries, other emergency numbers are promoted, for example, 911.

### To view your local emergency numbers

- From standby select **Menu** > **Calls** > **Call settings** > **Emergency nos.**

### To make an international call

- 1 From standby press  until a + sign appears.
- 2 Enter the country code, area code (without the first zero), phone number and press .

### To end a call

- Press .

### To answer a call

- When the phone rings, press .

### To reject a call

- Press .

### To view missed calls

- When **Missed call** is displayed, select **View**. To call back, scroll to a number and press .

### To turn on the loudspeaker during a call

- Select **Options** > **Turn on speaker**.

⚠️ Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

### To change the ear speaker volume during a call

- Press  or .

### To turn off the microphone during a call

- Select **Options** > **Turn off mic**. To resume, select **Options** > **Turn on mic**.

### To view options during a call

- Select **Options**.

### To hide your phone number when you make a call

- 1 From standby select **Menu** > **Calls** > **Call settings** > **Hide/show number**.
- 2 Select **Hide number**.

### Call list

You can view information about recent calls.

#### To call a number from the call list

- 1 From standby press .
- 2 Scroll to the name or number and press .

#### To add a number to contacts

- 1 From standby press .
- 2 Scroll to the number and select **Options** > **Save number**.
- 3 Enter the contact information and select **Continue** > **Save**.

#### To delete a number from the call list

- 1 From standby press .
- 2 Scroll to the number and select **Options** > **Delete** > **Yes**.

### Call time

During a call, the duration of the call is shown. You can check the duration of your calls.

#### To check the call time

- From standby select **Menu** > **Calls** > **Call timer**.

#### To reset the call timer

- From standby select **Menu** > **Calls** > **Call timer** > **Reset**.

## Messaging

### Text messages

You need a service centre number from your network operator to be able to send text messages. Text messages can contain simple pictures, sound effects, animations, and melodies.

💡 See **Entering text** on page 18 for instructions on how to enter text and numbers.

#### To view and set the service centre number

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Service centre**.
- 2 To change the number, select **Clear**. Enter the number including the international "+" prefix and country code.
- 3 Select **Save**.

#### To write and send a text message

- 1 From standby press .
- 2 Write the message and select **Options** > **Send message**.
- 3 Select an option.
- 4 Select **Continue** > **Send**.

#### To save a message in drafts

- When you write the message, select **Options** > **Save in Drafts**.

#### To add a symbol to a text message

- 1 When you write the message, select **Options** > **Add symbol**.
- 2 Select a symbol.

#### To add an item to a text message

- 1 When you write the message, select **Options** > **Add item**.
- 2 Select an item.

### Receiving text messages

You are notified when you receive a text message. Received messages are saved in **Inbox**. When **Inbox** is full, they are automatically saved on the SIM card. When both **Inbox** and the SIM card are full, you must delete messages to be able to receive new messages.

#### To view a text message from standby

- When you receive a message, follow the instructions on the screen.

#### To view and save a text message from the inbox

- 1 From standby select **Menu** > **Messaging** > **Inbox**.
- 2 Scroll to a message and select **View**. If you want to save the message on the SIM card, select **Options** > **Save message**.

#### To save a phone number from a text message

- 1 When you view the message, select **Options** > **Save number**.
- 2 Enter a name for the contact and select **Continue** > **Save**.

#### To reply to a text message

- 1 When you view the message, select **Options** > **Reply**.
- 2 Write the message and select **Options** > **Send message**.
- 3 Select **Send**.

#### To forward a text message

- 1 From standby select **Menu** > **Messaging** > **Inbox**.
- 2 Scroll to the message and select **View** > **Options** > **Forward** > **Options** > **Send message**.
- 3 Select an option.
- 4 Select **Send**.

#### To delete text messages

- 1 From standby select **Menu** > **Messaging** > **Delete messages**.
- 2 Scroll to and select a folder.
- 3 Select **Delete all at once** > **Yes** to delete all messages. To delete one message, select **One at a time** > **Delete** > **Yes**.

## Entering text

There are two input methods you can use to enter text; multitap or predictive text input.

💡 By using predictive text input you only have to press each key once. Continue writing a word even if it appears to be wrong. The phone uses the dictionary to recognize the word when all letters are entered.

#### To enter text using multitap (no dictionary)

- Press  -  until the letter appears.
- Press  to add a space.
- Press  to enter punctuation marks.

#### To enter text using predictive text input (dictionary)

- For example, to write the word "Land", press , , , .
- If the word or punctuation mark is the one you want, press  to accept and add a space. To accept without adding a space, press .
- If the word or punctuation mark is not the one you want, press  or  to view alternatives.

#### To change the text input method

- 1 When you write the message, select **Options** > **Dictionary**.
- 2 Select an option.

#### To use the keys

- Press  to enter symbols, for example, the + sign.
- Press  repeatedly to shift between upper case and lower case letters.
- Select **Clear** to delete characters.
- Press and hold down  -  to enter numbers.

#### To change writing language

- 1 Before inputting text, select **Options** > **Writing language**.
- 2 Select a language.

## Contacts

Contacts are automatically saved in the phone memory. You can copy contacts from the phone memory to the SIM card. The number of contacts you can save in the phone or on the SIM card depends on available memory.

💡 See **Entering text** on page 18 for instructions on how to enter text and numbers.

#### To add a contact

- 1 From standby select **Contacts** > **Add contact**.
- 2 Enter the name and select **Continue**.
- 3 Enter the number and select **Save**.

💡 Enter the + sign and country code with all phone numbers. They can then be used abroad or at home.

## More functions

### Speed dialling

You can select up to nine contacts that you can dial quickly by pressing numbers 1-9.

#### To add contacts to speed dial numbers

- 1 From standby select **Contacts > Speed dial**.
- 2 Scroll to a position number and select **Add**.
- 3 Select a contact.

#### To speed dial

- From standby enter the number (1-9) and press **[ ]**.

#### To delete speed dial numbers

- 1 From standby select **Contacts > Speed dial**.
- 2 Scroll to a position number and select **Delete > Yes**.

### Radio

! Do not use J132/J132a as a radio in places where this is prohibited.

#### To listen to the radio

- 1 Connect the handsfree to the phone.
- 2 From standby press **FM**.

#### To view radio options

- When you play the radio, select **Options**.

#### To manually search for radio channels

- 1 When you play the radio, select **Options > Manual search**.
- 2 Press **[ ]** or **[ ]**.

#### To save and preset a radio channel

- When you have found a radio channel, press and hold down **[ ]** - **[ ]** to save it in the corresponding position.

#### To select a preset radio channel

- When you play the radio, press the corresponding digit **[ ]** - **[ ]**.

#### To search for preset radio channels

- When you play the radio, press and hold down **[ ]** or **[ ]**.



#### To minimize the radio

- When you play the radio, select **Options > Minimise**. The radio will continue playing in the background. To return to the radio, press **FM**.

#### To change the volume

- When you play the radio, press **[ ]** or **[ ]**.

#### To exit the radio

- When you play the radio, select **Exit**.

#### To view radio tips

- When you play the radio, select **Options > Radio tips**.

### Language

#### To change the phone menu language

- From standby select **Menu > Settings > Language** and select a language.

### Time and date

#### To set the time and date

- 1 From standby select **Menu > Settings > Time and date**.
- 2 Select **Time** or **Date**.
- 3 Enter the time or date and select **Save**.

### Alarm

You can set a sound or the radio as an alarm signal. The alarm rings even if the phone is off or set to silent.

#### To set the alarm

- 1 From standby press **[ ]**.
- 2 Select **Set alarm**.
- 3 Enter the time and select **Save**.

#### To set the radio alarm

- 1 Connect the handsfree to the phone.
- 2 From standby press **[ ]**.
- 3 Select **Alarm signal > Radio**.
- 4 Select **Set alarm**.
- 5 Enter the time and select **Save**.

#### To turn off the sounding alarm

- Press any key to snooze the alarm for 9 minutes or select **Turn off** to turn the alarm off.

#### To set the alarm signal

- 1 From standby press **[ ]**.
- 2 Select **Alarm signal** and select an option.

#### To cancel the alarm

- 1 From standby press **[ ]**.
- 2 Select **Set alarm > Turn off**.

### Calendar

#### To view a calendar month

- From standby select **Menu > Extras > Calendar**. Use the navigation keys to view another date.

### Birthdays

#### To set a birthday reminder

- 1 From standby select **Menu > Extras > Birthdays > Add**.
- 2 Enter the name and select **Continue**.
- 3 Enter the date and select **Continue**.
- 4 Select a reminder option.

### Reminders

#### To set a reminder with an alarm

- 1 From standby select **Menu > Extras > Reminders > Add**.
- 2 Enter a subject and select **Continue**.
- 3 Select **Alarm on**.
- 4 Enter the date and select **Continue**.
- 5 Enter the time and select **Continue**.

### Calculator

#### To use the calculator

- 1 From standby select **Menu > Extras > Calculator**.
- 2 Press **[ ]** or **[ ]** to select **+ x - =**.

22

23

24

25

26

27

28

## Locks

### Timer

#### To use the timer

- 1 From standby select **Menu > Extras > Timer**.
- 2 Enter the hours, minutes and seconds and select **Start**.

### Stopwatch

#### To use the stopwatch

- From standby select **Menu > Extras > Stopwatch > Start**.

### Torch

You can use the screen as a torch in dark environments. The torch is effective for distances up to 0.75 metres (2.5 feet).

#### To use the screen as a torch

- 1 From standby press and hold down **[ ]**.
- 2 To turn off the torch, select **Back**.

### Wallpapers

Use wallpapers to change the appearance of the screen.

#### To set a picture wallpaper

- 1 From standby select **Menu > Settings > Wallpaper**.
- 2 Select **View**.
- 3 Scroll a picture and press **Select**.

### Games

Your phone comes with a number of games. Information and game controls are given in help texts for each game.

#### To start a game

- 1 From standby select **Menu > Extras > Games**.
- 2 Select a game.

#### To end a game

- Press **[ ]**.

### Ringtones, sounds and alerts

Your phone has melodies that can be used as ringtones.

#### To select a ringtone

- From standby select **Menu > Settings > Sounds & alerts > Ringtone** and select a ringtone.

#### To set the ring volume

- From standby select **Menu > Settings > Sounds & alerts > Ring volume** and select a volume.

#### To set the vibrating alert

- From standby select **Menu > Settings > Sounds & alerts > Vibration** and select an option.

#### To set sounds and alerts options

- 1 From standby select **Menu > Settings > Sounds & alerts**.
- 2 Select an option:
  - **Message alert** – select message notification.
  - **Key sound** – select a key press sound.
  - **Alarm sound** – select the alarm signal.

### Diverting calls

Divert calls, for example, to an answering service.

#### To divert calls

- 1 From standby select **Menu > Calls > Call settings > Divert all calls**.
- 2 Select a divert option.

#### To cancel a call divert

- From standby select **Menu > Calls > Call settings > Divert all calls > Deactivate**.

### Voicemail

Callers can leave a voicemail message when you cannot answer. You can get your voicemail number from your network operator.

#### To enter your voicemail number

- 1 From standby select **Menu > Calls > Call settings > Set up voicemail > Voicemail number**.
- 2 Enter the voicemail number and select **Save**.

#### To call your voicemail service

- From standby press and hold down **[ ]**.

### Multiple calls

When call waiting is activated, you can handle multiple calls. A short sound indicates a second call.

#### To activate call waiting

- From standby select **Menu > Calls > Call settings > Call waiting > Activate**.

#### To answer a second call

- Press **[ ]**. The ongoing call is put on hold.

#### To reject a second call

- Select **Busy** and continue with the ongoing call.

#### To make a second call

- 1 Select **Options > Hold call**. The ongoing call is put on hold.
- 2 Enter the number and press **[ ]**.

#### To switch between two calls

- Select **Switch**.

#### To join two calls

- Select **Options > Join calls**.

#### To end both calls

- Press **[ ]** twice.

### Automatic keylock

The keypad is locked after a short while.

#### To turn on the automatic keylock

- From standby select **Menu > Settings > Advanced > Auto keylock > On**.

### SIM card lock

- ! To unlock your SIM card, see *Troubleshooting on page 36*.

#### To turn on the SIM card lock

- 1 From standby select **Menu > Settings > Advanced > Security > SIM lock > Protection > On**.
- 2 Enter your PIN and select **OK**.

#### To edit your PIN

- 1 From standby select **Menu > Settings > Advanced > Security > SIM lock > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

### Phone lock

The phone lock protects the phone against unauthorized use. You can change the phone lock code (0000 by default) to any four-digit code.

- ! If the phone lock is set to **Automatic**, you only need to enter your phone lock code when you insert a different SIM card.

#### To set the phone lock

- 1 From standby select **Menu > Settings > Advanced > Security > Phone lock > Protection**.
- 2 Scroll to an option, enter your code and select **OK**.

#### To edit your phone lock code

- 1 From standby select **Menu > Settings > Advanced > Security > Phone lock > Change code**.
- 2 Enter the current code and select **OK**.
- 3 Enter a new code and select **OK**.
- 4 Re-enter the new code and select **OK**.

- ! If you forget your new code, you have to take your phone to your local Sony Ericsson retailer.

#### To unlock the phone

- Enter your code and select **OK**.

29

30

31

32

33

34

35

## Troubleshooting

You can correct most problems yourself. For more support go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support), see the *Important information guide* or contact your network operator.

- ! Remove the SIM card before handing your phone in for repair.

#### To reset the phone

- 1 Remove the battery cover and battery.
- 2 Put the battery and cover back in place and turn on the phone.

#### To perform a master reset

- 1 From standby select **Menu > Settings > Advanced > Master reset**.
- 2 Select **Reset settings** to delete your changes to settings or **Reset all** to delete your changes to settings, all contacts, messages, personal data and content.
- 3 Select **Continue**.

#### To unlock the SIM card

- 1 When **PIN blocked**. Enter **PUK** provided by your operator. is displayed, enter your **PUK** and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN to confirm and select **OK**.

- ! Your **PUK (Personal Unblocking Key)** and **PIN** code are supplied by your network operator.

### What do these error messages mean?

#### Insert SIM card

Try one or more of the following:

- Remove the SIM card and insert it correctly.
- Clean the connectors on the SIM card and phone with a soft brush, a cloth or a cotton bud.
- Check if the SIM card is damaged.

#### Insert correct SIM card

- Check that you are using the correct operator SIM card. If not, contact your network operator.

#### Wrong code

- Enter the correct PIN code. See *SIM card lock* on page 34.

#### Fully locked

- Unlock the phone. See *Phone lock* on page 35.

#### Password error

- Enter the correct PIN or PIN2 and select **Yes**. See *SIM card lock* on page 34.

#### Phone lock code:

- Enter the correct code. See *Phone lock* on page 35.

#### Codes do not match

- Confirm the new code by entering it twice.

#### Emerg. only

- Contact your network operator if the problem persists. You can only make emergency calls.

#### No network

- Move to get a signal that is strong enough or contact your network operator if the problem persists.

## Declaration of Conformity for J132

We, Sony Ericsson Mobile Communications AB of Nya Vattentornet SE-221 88 Lund, Sweden declare under our sole responsibility that our product

Sony Ericsson type AAA-1002092-BV

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 489-7:V1.3.1 and EN 60950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive 99/5/EC.

Lund, April 2008

Shoji Nemoto, Head of Product Business Group GSM/UMTS  
We fulfil the requirements of the R&TTE Directive (99/5/EC).

CE 0682

### FCC Statement for J132a (USA)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Industry Canada Statement for J132a

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



Sony Ericsson J132 (GSM 900/1800) / J132a (GSM 850/1900)

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB or its local affiliated company at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All illustrations are for illustration only and may not accurately depict the actual phone. All rights reserved.

© Sony Ericsson Mobile Communications AB, 2008

Please note: Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. Please read the *Important information* before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Sony is a trademark of Sony Corporation. Ericsson is a trademark of Telefonaktiebolaget LM Ericsson. The Liquid Identity logo is a trademark or registered trademark of Sony Ericsson Mobile Communications AB. The Predictive Text Technology is used under license from ZI Corporation. Other product and company names may be the trademarks of their respective owners.

Sony Ericsson advises users to backup their personal data information.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations and the U.S. sanctions programs administered by the U.S. Treasury Department's Office of Foreign Assets Control, and may be additionally subject to export or import regulations in other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limitation this product, including any software contained therein, may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, or an entity in, Cuba, Iraq, Iran, North Korea, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to any person or entity on the U.S. Treasury Department's list of Specially Designated Nationals or (iii) any person or entity on any other export prohibition list that may be maintained from time to time by the United States Government, including but not limited to the U.S. Commerce Department's Denied Persons List or Entity List, or the U.S. State Department's Nonproliferation Sanctions List.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

29

&lt;

## Sony Ericsson

### Important information

#### Sony Ericsson Consumer Web site

On [www.sonyericsson.com/support](http://www.sonyericsson.com/support) there is a support section where help and tips are on a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

#### Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners

When you purchase a Sony Ericsson mobile phone, you will find the latest support tools and information. For operator-specific services and features, please contact your network operator. You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes and/or a toll-free number). If you have any questions about the product, you need service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

#### Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to the proper function, have the product checked by a certified service partner before charging or using it.

#### Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May contain mercury. Do not dispose of in household waste.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not use for smoking or to lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic device or disable the radio transmitting functionality if the device interferes with medical equipment.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- Do not use cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subjected to pressure.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE.

WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL DAMAGES. EXTENT OF THESE DAMAGES SHALL BE LIMITED TO THE AMOUNT OF THE PURCHASE PRICE OF THE PRODUCT. SOME COUNTRIES/STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION OF THE DURATION OF IMPLIED WARRANTIES, SO THE PRECEDING LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

These warranty provisions do not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

#### \* GEOGRAPHICAL SCOPE OF THE WARRANTY

You have purchased your product in a country member of the European Economic Area (EEA) or in Switzerland, the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing of the Product, provided that an identical Product is sold in such country by an authorized Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center.

Please observe that certain services may not be possible elsewhere than in the country of original purchase due, for example, to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. In addition, \*\* In some countries/regions additional information (such as a valid warranty card) may be requested.

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

